



DIRECTION OF MOTOR

The position counter must count positively when the coil assembly is moved in the direction of the cable ext., as shown to the left diagram.

FBsrc = Option_Card_Feedback
 AuxFBType = 1_Vpp_Sin_Cos_Incremental_+_Halls
 AuxFBDivisor = 800 (Encoder dependent)
 CommOff = 120 Deg

KOLLMORGEN

S200 SynQNet
 LINEAR SYSTEM WIRING DIAGRAM

DR. BY	FL
CHECKED	
ENG.	
APPD.	
SIZE B FILE: S200 DDL Wiring Diagram 20070207.dwg SCALE: NONE SHEET: 1 of 1	
DATE: 2/7/2007	



A LEADS B
 BY 90°

