

# AKD<sup>®</sup>

## User Guide



**Edition: December 2014, Revision N**

Valid for Firmware version 1.13

Part Number 903-200006-00



Keep all manuals as a product component during the life span of the product.  
Pass all manuals to future users/owners of the product.

**KOLLMORGEN<sup>®</sup>**

*Because Motion Matters™*

**Record of Document Revisions:**

Revision	Remarks
...	For complete table of revision history see Record of document revisions (→ p. 1332).
12/2013, Rev L	AKD-C Display Codes (→ p. 37) added. Digital Input Mode 26: Suspend Motion (→ p. 109) added. Program Memory Space (pg 1) added. The AKD-C Central Power Supply (→ p. 31) and The AKD-N Family of Digital Drives (→ p. 33) added. DRV.MOTIONDISSOURCES (→ p. 671), FB1.LASTIDENTIFIED (→ p. 739), and VL.VFTHRESH (→ p. 1298) added. MOTOR.IDMAX, MOTOR.LDLL, MOTOR.LISAT, MOTOR.PHSADVK1, MOTOR.PHSADVK2, MOTOR.SUPPORTEDPARAMS, MOTOR.TEMPC added (see MOTOR Parameters (→ p. 962)). CPS Parameters (→ p. 525), NSD Parameters (→ p. 1079), and STRING Parameters (→ p. 1192), STRINGS Parameters (→ p. 1195) added. FAULT564.ACTION, FAULT565.ACTION (→ p. 715) added.
05/2014, Rev M	MOTORPHASE and MOTORPOLES parameters added to FB1 Parameters (→ p. 717), FB2 Parameters (→ p. 771), and FB3 Parameters (→ p. 786). FB3.DIR (→ p. 787) added. MT.FEEDRATE (→ p. 1049) added. Using Custom Units with Feedback 2 (→ p. 101) section added. Modes 15, 16, and 17 added to Encoder Emulation (→ p. 83). Homing modes 14 and 15 added (HOME.MODE (→ p. 863)).
12/2014, Rev N	Limitation for ECCN 3A225 Limitations for Induction Motors (→ p. 74). Fixed Stop (→ p. 167) added. Homing Mode 16: Find home input with dual edges (→ p. 162) added. Compare Engines (→ p. 124) and CMP Parameters (→ p. 497) added. Parameters DRV.CUSTOMIDENTIFIER (→ p. 607), DRV.FAULTDISPLAYMODE (→ p. 646), EIP.COMDMAP (→ p. 703), EIP.RSPMAP (→ p. 709), and FAULT570.ACTION (→ p. 716) added.

**Hardware Revision (HR)**

AKD-B/P-NA	AKD-B/P-NB	AKD-M	AKD-T-IC	Firmware/Workbench	KAS IDE	Export Classification	Remarks
A	-	-	-	from 1.3	-	3A225	Start revision, export control
C	-	-	-	from 1.5	-	3A225	STO certified, PROFINET RT released, export control
-	D	DB	DA	from 1.6	from 2.5	3A225	Control board revision 9, AKD PDMM Start revision, AKD BASIC-IC Start revision, export control
D	E	EB	EA	from 1.13	from 2.9	-	Hardware revision for export classification traceability purposes

**Trademarks**

- AKD is a registered trademark of Kollmorgen Corporation
- EnDat is a registered trademark of Dr. Johannes Heidenhain GmbH
- EtherCAT is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH
- Ethernet/IP is a registered trademark of ODVA, Inc.
- Ethernet/IP Communication Stack: copyright (c) 2009, Rockwell Automation
- sercos<sup>®</sup> is a registered trademark of sercos<sup>®</sup> international e.V.
- HIPERFACE is a registered trademark of Max Stegmann GmbH
- PROFINET is a registered trademark of PROFIBUS and PROFINET International (PI)
- SIMATIC is a registered trademark of SIEMENS AG
- Windows is a registered trademark of Microsoft Corporation

**Current patents**

- US Patent 5,162,798 (used in control card R/D)
- US Patent 5,646,496 (used in control card R/D and 1 Vp-p feedback interface)
- US Patent 6,118,241 (used in control card simple dynamic braking)
- US Patent 8,154,228 (Dynamic Braking For Electric Motors)
- US Patent 8,214,063 (Auto-tune of a Control System Based on Frequency Response)

Patents referring to fieldbus functions are listed in the matching fieldbus manual.

**Technical changes which improve the performance of the device may be made without prior notice.**

Printed in the United States of America

This document is the intellectual property of Kollmorgen. All rights reserved. No part of this work may be reproduced in any form (by photocopying, microfilm or any other method) or stored, processed, copied or distributed by electronic means without the written permission of Kollmorgen.

# 1 Table of Contents

---

<b>2</b>	<b>About the AKD User Guide</b>	<b>29</b>
2.1	About this User Guide	30
2.2	Abbreviations	30
<b>3</b>	<b>AKD Models</b>	<b>31</b>
3.1	CC Drive Models	31
3.2	The AKD-C Central Power Supply	31
3.3	The AKD-N Family of Digital Drives	33
<b>4</b>	<b>Initial Drive Setup</b>	<b>34</b>
4.1	Initial Drive Setup	35
4.2	Startup Display Codes	35
4.2.1	AKD Display Codes	36
4.2.2	AKD-C Display Codes	37
4.3	AKD Setup Wizard	38
<b>5</b>	<b>Connecting the Drive</b>	<b>40</b>
5.1	Connected and Disconnected States	41
5.2	Disconnected	41
5.3	Confirm Connection with the Device	41
5.4	Connect To Another Device	41
5.5	TwinCAT and WorkBench configuration	42
5.5.1	Find and Enter AmsNetId	44
5.6	Troubleshooting Connection and Communication Problems	44
5.6.1	Device Not Shown	44
5.6.2	Find and Enter IP Address	45
5.6.3	TwinCAT Drive Not Shown	45
<b>6</b>	<b>Communicating with the AKD</b>	<b>46</b>
<b>6.1</b>	<b>Communication View</b>	<b>47</b>
6.1.1	TCP/IP View	47
6.1.1.1	TCP/IP Communication Protocols	47
	IP Address	47
	MAC Address	47
6.1.2	EtherNet/IP View	48
<b>6.2</b>	<b>Setting the IP Address</b>	<b>48</b>
6.2.1	Overview	48
6.2.2	Identifying the Drive IP Address	48
6.2.2.1	Automatic (Dynamic) IP Addressing	48
6.2.2.2	Static IP Addressing — Rotary Switches	49
	Devices with Two Rotary Switches	49
	Devices with One Rotary Switch	49
6.2.2.3	Static IP Addressing — Software Assigned	50
6.2.2.4	Recovering communications with a device on an un-reachable IP address	50
<b>6.3</b>	<b>Rotary Switches</b>	<b>50</b>
6.3.1	Overview	50
6.3.2	Rotary Switch Functions in IP.MODE 0	51
6.3.3	Rotary Switch Functions in IP.MODE 0, 1, or 2	51

<b>6.4 Using the SD Card</b> .....	<b>52</b>
6.4.1 Overview .....	52
6.4.2 Save/Load with the SD Card .....	52
6.4.2.1 Save/Load from the Parameter Load/Save Screen: .....	52
6.4.2.2 Save/Load using SD.SAVE and SD.LOAD: .....	52
6.4.2.3 Save/Load using Rotary Switches: .....	53
6.4.2.4 Save from PC .....	53
<b>7 Using WorkBench</b> .....	<b>54</b>
7.1 Welcome Screen .....	55
7.2 Online .....	55
7.3 Offline .....	56
7.4 Device Overview .....	56
7.4.1 Online and Offline .....	57
7.4.1.1 Online Drive .....	57
7.4.1.2 Offline Drive .....	57
7.4.1.3 Switching Between Online and Offline .....	57
7.5 Watch .....	58
7.6 Settings .....	58
7.6.1 Navigation Tree .....	58
7.6.2 Settings View .....	58
<b>8 Configuring Drive Power</b> .....	<b>60</b>
8.1 Power .....	61
8.1.1 Drive Setup for Power and Bus .....	61
8.2 Operating Voltage .....	61
8.3 Direct DC Mains Operation .....	61
8.4 Regeneration .....	63
8.4.1 Overview .....	63
8.4.2 Regen Resistor Options .....	63
8.4.3 Calculating Motor Peak Energy and Regen Resistor Size .....	64
8.4.4 Selecting a Compatible Regen Resistor .....	66
8.4.5 Configuring Regen Parameter Values .....	67
<b>9 Configuring Motor Settings</b> .....	<b>69</b>
9.1 Motor .....	70
9.1.1 Overview .....	70
9.1.2 Motor Setup .....	70
9.1.3 Using the Motor View .....	70
9.1.4 Selecting a Motor .....	71
9.1.5 Configuring Custom Motors .....	71
9.1.5.1 Validating Motor Parameters .....	72
9.1.6 Motor Derating .....	72
9.1.7 Motor Temperature .....	74
9.2 ECCN 3A225 Limitations for Induction Motors .....	74
9.2.1 Limit enforcement and machine behavior .....	74
9.3 Feedback 1 .....	74
9.3.1 Overview .....	74
9.3.2 Using Feedback Options .....	75
9.3.2.1 Auto .....	75

9.3.2.2	None	75
9.3.2.3	Incremental Encoder	75
9.3.2.4	Sine Encoder	76
9.3.2.5	Endat 2.1, Endat 2.2	76
9.3.2.6	BiSS Analog	76
9.3.2.7	Hiperface, Hiperface DSL	76
9.3.2.8	Resolver	76
9.3.2.9	SFD, SFD3	76
9.3.2.10	Tamagawa	76
9.3.3	Initial Position Check	76
9.3.4	Wake and Shake Overview	76
9.3.4.1	Using Wake and Shake Mode 0 (WS.MODE 0)	77
	Overview	77
	Configuring WS	77
	Wake and Shake, More View	78
	Special Cases for WS	79
	Using WS: Advanced	79
	Troubleshooting WS	81
9.3.4.2	Using Wake and Shake Mode 1 (WS.MODE 1)	81
	Overview	81
	Configuring Wake and Shake	82
<b>9.4</b>	<b>Feedback 2</b>	<b>82</b>
9.4.1	Encoder Emulation	83
9.4.1.1	Overview	83
9.4.1.2	Using Encoder Emulation	83
9.4.1.3	Function Settings	83
9.4.1.4	Output Modes 1, 2, 6, 7, 8 and 9	83
9.4.1.5	Input Modes 3, 4, and 5 (deprecated)	85
9.4.1.6	Mode 10, Configure X9 for General Purpose I/O	85
9.4.1.7	Mode 11, Configure X9 for Endat 2.2	86
9.4.1.8	Output Modes 12, 13, and 14, Emulated Encoder Output with Z Pass Through	86
9.4.1.9	Output Modes 15, 16, and 17, Emulated Encoder Output from Stepper Control	87
9.4.1.10	Resolution	87
<b>9.5</b>	<b>Non-Plug and Play Feedback Devices</b>	<b>87</b>
9.5.1	Parameters	87
9.5.2	Calculations	87
	Current Loop	88
	Velocity Loop	88
	Slider Tuning	88
	Input - Motor Data	88
	Constants	88
	Output - Control Loop Gains	88
<b>9.6</b>	<b>Foldback</b>	<b>88</b>
9.6.1	Drive Foldback	88
9.6.2	Setting up motor foldback	89
9.6.3	Setting Fault and Warning Levels	89
9.6.4	Motor Peak Current Time	89

9.6.5 Motor Foldback Ramp .....	90
9.6.6 Motor Recovery .....	90
9.6.7 Overall Foldback .....	91
<b>9.7 Brake .....</b>	<b>91</b>
<b>9.8 Using Position Capture .....</b>	<b>92</b>
9.8.1 Overview .....	92
9.8.2 Configuring Position Capture .....	92
Setting the Capture Source (CAP0.FBSOURCE, CAP1.FBSOURCE (→ p. 1)) .....	92
Setting the Trigger Source (CAP0.TRIGGER, CAP1.TRIGGER (→ p. 1)) .....	93
Setting the Capture Mode (CAP0.MODE, CAP1.MODE (→ p. 1)) .....	93
Arming and Retrieving the Capture Value (CAP0.T, CAP1.T (→ p. 1)) .....	93
Setting the Capture Edge (CAP0.EDGE, CAP1.EDGE (→ p. 1)) .....	93
Setting the Pre-Condition Event: (CAP0.EVENT, CAP1.EVENT (→ p. 1)) .....	93
Setting up a Pre-Condition for complex capture .....	94
9.8.3 Kollmorgen Test Reports .....	94
<b>10 Using AKD in a Vertical Axis .....</b>	<b>95</b>
<b>11 Configuring with Linear Motors .....</b>	<b>97</b>
11.1 Connecting a DDL Motor to an AKD Drive .....	97
<b>12 Selecting Units for Your Application .....</b>	<b>99</b>
12.1 Selecting and Saving Units .....	100
12.2 Units Example .....	100
12.3 Using Custom Units with Feedback 2 .....	101
<b>13 Configuring General Drive Settings .....</b>	<b>103</b>
<b>13.1 Digital Inputs and Outputs .....</b>	<b>104</b>
13.1.1 Overview .....	104
13.1.2 Using Digital I/O .....	104
13.1.3 Digital Inputs .....	104
13.1.4 Digital Outputs .....	109
13.1.5 Digital Inputs (X7/X8) .....	112
13.1.5.1 Digital Inputs 1 and 2 .....	115
13.1.5.2 Digital Inputs 3 to 7 .....	115
13.1.5.3 Digital Input 8 (ENABLE) .....	115
13.1.6 Option Board I/Os .....	115
<b>13.2 Command Buffer .....</b>	<b>116</b>
13.2.1 Overview .....	116
13.2.2 Editing the Command Buffers .....	117
13.2.3 Behavior of the Command Buffer .....	119
13.2.4 Delays for the Buffer .....	119
<b>13.3 Analog Input .....</b>	<b>119</b>
<b>13.4 Analog Output .....</b>	<b>120</b>
<b>13.5 Electronic Gearing .....</b>	<b>121</b>
13.5.1 Overview .....	121
13.5.2 Limits .....	122
13.5.3 Determining Maximum Cable Length .....	122
<b>13.6 Limits .....</b>	<b>123</b>
13.6.1 Limits .....	124
<b>13.7 Compare Engines .....</b>	<b>124</b>

13.7.1 Configuring Position Compare .....	124
13.7.1.1 Order of Configuration .....	125
13.7.1.2 Setting Compare Sources (CMPx.SOURCE (→ p. 1)) .....	125
13.7.2 Setting Compare Setpoints (CMPx.SETPOINT (→ p. 1)) .....	126
<b>13.8 Programmable Limit Switch .....</b>	<b>126</b>
13.8.1 Overview .....	126
13.8.2 Using Programmable Limit Switches .....	127
13.8.3 Single Shot Mode .....	128
<b>13.9 Enable/Disable .....</b>	<b>129</b>
13.9.1 Enable Modes .....	129
Hardware Enable Mode .....	129
Software Enable Default .....	129
13.9.2 Disable Modes .....	130
13.9.3 Drive Status .....	130
13.9.4 Controlled Stop .....	131
13.9.5 More/Less Button .....	131
<b>13.10 Controlled Stop .....</b>	<b>132</b>
<b>13.11 Dynamic Braking .....</b>	<b>134</b>
13.11.1 Drive Regeneration .....	134
AKD-x00306 to AKD-x00606 .....	134
AKD-x01206 to AKD-x02406 and AKD-xzzz07 .....	134
<b>13.12 Emergency Stop .....</b>	<b>135</b>
13.12.1 Stop / Emergency Stop / Emergency Off .....	135
13.12.1.1 Stop .....	135
13.12.1.2 Emergency Stop .....	136
13.12.1.3 Emergency Off .....	136
<b>13.13 Safe Torque Off (STO) .....</b>	<b>136</b>
13.13.1 AKD-x003 up to AKD-x024 .....	136
13.13.2 AKD-x048 .....	136
13.13.3 AKD-C Global STO .....	136
13.13.4 STO Fault .....	137
13.13.5 Reading STO state .....	137
<b>13.14 Under Voltage Fault Behavior .....</b>	<b>137</b>
<b>14 Using Command Source and Operating Modes .....</b>	<b>138</b>
<b>14.1 Overview .....</b>	<b>139</b>
<b>14.2 Using Command Source and Operation Modes .....</b>	<b>139</b>
14.2.1 Command Source .....	139
14.2.1.1 Service .....	139
14.2.1.2 Fieldbus .....	139
14.2.1.3 Electronic Gearing .....	139
14.2.1.4 Analog .....	139
14.2.2 Operation Mode .....	139
<b>14.3 Current Loop .....</b>	<b>140</b>
14.3.1 Overview .....	140
14.3.2 Current Loop Gain .....	140
14.3.3 Current Loop Gain Scheduling .....	141
14.3.3.1 Using the Gain Scheduling View in WorkBench .....	141

Using the Terminal View for Gains Scheduling .....	142
<b>14.4 Velocity Loop .....</b>	<b>143</b>
14.4.1 Overview .....	143
14.4.2 Tabs in the Velocity Loop View .....	143
14.4.3 Velocity Loop Default Settings and Changes .....	144
Velocity Loop Changes Based on Slider Tuning .....	144
Velocity Loop Changes Based on PST .....	144
14.4.4 Biquad Filters .....	145
Generate a Biquad as a Lowpass at Frequency F .....	145
Generate a Biquad as a LeadLag at Frequency F, Gain G .....	145
Generate a Biquad as a Resonator at Frequency F, Gain G, Bandwidth Q .....	145
<b>14.5 Position Loop .....</b>	<b>145</b>
14.5.1 Overview .....	145
14.5.2 Tabs in the Position Loop View .....	145
14.5.3 Position Loop Default Behavior and Changes .....	146
Position Loop Changes Based on Slider Tuning .....	146
Position Loop Changes Based on PST .....	146
14.5.4 Modulo Position .....	146
14.5.4.1 Setting up the modulo axis in WorkBench .....	147
14.5.4.2 Setting up the modulo axis from the Terminal .....	147
14.5.4.3 Parameters affected by the modulo axis .....	148
14.5.4.4 Drive functions affected by modulo axis .....	148
14.5.4.5 Using the modulo position feature with multiturn encoders .....	148
<b>15 Creating Motion .....</b>	<b>150</b>
<b>15.1 Homing .....</b>	<b>151</b>
15.1.1 Overview .....	151
15.1.2 Using Homing .....	151
Home Default Window .....	151
Mode Selection: .....	152
Settings: .....	152
Controls: .....	152
15.1.3 Selecting and Using Homing Modes .....	153
Homing Mode 0: Home Using Current Position .....	153
Homing Mode 1: Find Limit Input .....	153
Homing Mode 2: Find Input Limit then Find Zero Angle .....	154
Homing Mode 3: Find Input Limit then Find Index .....	154
Homing Mode 4: Find Home Input .....	155
Homing Mode 5: Find Home Input then Find Zero Angle .....	156
Homing Mode 6: Find Home Input then Find Index .....	157
Homing Mode 7: Find Zero Angle .....	158
Homing mode 8: Move Until Position Error Exceeded .....	158
Homing Mode 9: Move Until Position Error Exceeded then Find Zero Angle .....	158
Homing Mode 10: Move Until Position Error Exceeded then Find Index .....	159
Homing Mode 11: Find Index Signal .....	160
Homing Mode 12: Homing to a home-switch, including mechanical stop detection .....	161
Homing Mode 13: Absolute Mode - Use Feedback Position .....	161

Homing Mode 14: Homing to a home-switch for rotary applications .....	161
Homing Mode 15: Find next feedback zero position .....	162
Homing Mode 16: Find home input with dual edges .....	162
15.1.4 Using Homing: Advanced .....	162
<b>15.2 Motion Tasks .....</b>	<b>162</b>
15.2.1 Overview .....	162
15.2.2 Motion Task Input Table .....	163
15.2.3 Using Motion Tasks .....	163
15.2.4 Motion Profiles .....	166
15.2.5 Motion Types .....	166
Absolute motion task .....	166
Motion task relative to command position (PL.CMD) .....	166
Motion task relative to previous target position .....	166
15.2.6 Using Motion Tasks: Advanced .....	167
Joining multiple tasks .....	167
Start Conditions .....	167
Blending .....	167
15.2.7 Fixed Stop .....	167
15.2.7.1 Overview .....	168
15.2.7.2 Configuring a Fixed Stop .....	168
15.2.8 Registration Moves .....	168
15.2.8.1 Configuring Registration Moves in WorkBench .....	169
15.2.8.2 Configuring Registration Moves from the Terminal View .....	169
<b>15.3 Service Motion .....</b>	<b>171</b>
<b>15.4 Motion Profile Table .....</b>	<b>172</b>
15.4.1 Grid .....	173
15.4.2 Graphical Representation .....	173
15.4.3 Control Buttons .....	174
15.4.3.1 Import Table Data .....	175
15.4.3.2 Importing data from Preset Table option .....	175
15.4.3.3 Importing data from an external CSV file .....	176
15.4.4 Creating Motion Profile Tables .....	176
15.4.4.1 Example of a motion profile table .....	176
15.4.4.2 Motion Profile Table Restrictions .....	177
15.4.4.3 Different methods of motion table motion tasking .....	178
General motion profile table explanations .....	178
15.4.4.4 Use of IL.KACCFF with Motion Tables .....	178
15.4.4.5 Profile Table Interpolation Motion Task .....	179
15.4.4.6 OneToOne interpolation motion task .....	179
15.4.4.7 Setting up a motion profile motion task .....	180
15.4.4.8 Drive reaction on impossible motion tasks .....	180
OneToOne interpolation limitations .....	180
15.4.4.9 Profile Table interpolation limitations .....	180
Starting from velocity 0 without change-on-the-fly to a following motion task .....	180
During a change on the fly condition .....	181
Movement to the same direction .....	181

Movement in different directions .....	182
<b>15.5 Jog Move .....</b>	<b>183</b>
<b>15.6 Drive Motion Status .....</b>	<b>183</b>
<b>16 Saving Your Drive Configuration .....</b>	<b>185</b>
<b>16.1 Save Options .....</b>	<b>186</b>
<b>16.2 Save On Exit .....</b>	<b>187</b>
<b>16.3 Save On Disconnect .....</b>	<b>187</b>
<b>16.4 Save On Firmware Download .....</b>	<b>188</b>
<b>16.5 TwinCAT Startup File .....</b>	<b>188</b>
16.5.1 Generating File .....	188
16.5.2 Integration in TwinCAT .....	189
<b>17 Tuning Your System .....</b>	<b>191</b>
<b>17.1 Introduction .....</b>	<b>192</b>
<b>17.2 Slider Tuning .....</b>	<b>192</b>
17.2.1 Load Inertia .....	192
17.2.2 Gentle, Medium, and Stiff .....	192
17.2.3 The Slider .....	193
<b>17.3 Using the Performance Servo Tuner .....</b>	<b>193</b>
17.3.0.1 Overview .....	193
17.3.0.2 Using the PST .....	193
Saving and Emailing Bode Plots .....	194
Importing a Frequency Response .....	195
17.3.0.3 Measurement Options .....	195
Using Manual Excitation Levels .....	195
17.3.0.4 Taking a Bode Measurement without the PST .....	196
17.3.1 Using the Performance Servo Tuner: Advanced .....	196
17.3.1.1 Typical Cases for Advanced PST Use .....	196
17.3.1.2 PST Options .....	201
17.3.1.3 Measurement Options .....	202
17.3.1.4 Plot Options .....	207
17.3.1.5 Resizing Bode Plots .....	209
<b>17.4 Tuning Guide .....</b>	<b>220</b>
17.4.1 Overview .....	220
17.4.2 Determining Tuning Criteria .....	221
17.4.3 Before You Tune .....	221
17.4.4 Closed Loop Tuning Methods .....	221
17.4.4.1 Tuning the Velocity Loop .....	221
17.4.4.2 Tuning the Position Loop .....	224
17.4.5 Torque Feedforward Tuning Methods .....	225
17.4.5.1 Shape Based Feedforward Tuning .....	225
17.4.6 Using Anti-Resonance Filters .....	225
17.4.6.1 Types of Anti-Resonance Filters .....	226
17.4.6.2 Biquad Calculations .....	232
17.4.6.3 Common Uses Of Anti-Resonance Filters .....	235
<b>18 Scope .....</b>	<b>236</b>
<b>18.1 Overview .....</b>	<b>236</b>
<b>18.2 Using the Scope .....</b>	<b>236</b>

18.2.1 Scope Channels Tab .....	236
18.2.1.1 Source Column .....	236
18.2.1.2 Color Column .....	237
18.2.1.3 Hide Column .....	237
18.2.1.4 Y-Axis Column .....	237
18.2.1.5 Filter and Filter Frequency Column .....	237
18.2.2 Measure Tab .....	237
18.2.2.1 AC RMS and True RMS .....	237
18.2.3 Scope Time-base and Trigger Tab .....	237
18.2.3.1 Scope Time-base and Trigger, More View .....	238
18.2.3.2 Trigger Type .....	239
18.2.3.3 Trigger Position .....	240
18.2.3.4 Trigger Value .....	240
18.2.3.5 Effects of Recorder Gap .....	241
18.2.3.6 Trigger Slope .....	242
<b>18.3 Scope Settings .....</b>	<b>243</b>
18.3.1 Load a setting (preset) to Scope screen .....	243
18.3.2 Create a new preset .....	243
18.3.3 Save or delete preset .....	244
18.3.4 Import preset .....	244
18.3.5 Export preset .....	244
18.3.6 Scope axis scaling and zooming .....	245
18.3.7 Manual range per axis .....	246
18.3.8 Unit display on Y axis .....	246
<b>19 Using Parameters and the Terminal Screen .....</b>	<b>247</b>
<b>19.1 Terminal .....</b>	<b>248</b>
19.1.1 Overview .....	248
19.1.2 Using the Terminal .....	248
19.1.3 Macros .....	249
Creating a Macro from Terminal commands .....	249
Macro Editor .....	250
<b>19.2 Viewing Parameters .....</b>	<b>251</b>
<b>19.3 Parameter List .....</b>	<b>251</b>
<b>19.4 Parameter Load/Save .....</b>	<b>253</b>
19.4.1 Loading an Incompatible File .....	253
<b>19.5 Parameter Comparer .....</b>	<b>253</b>
19.5.1 Reference Parameter Selection .....	254
19.5.2 Target Parameter Selection .....	254
19.5.3 Display the comparison .....	255
19.5.4 Motion Task Comparison .....	256
<b>20 Faults and Warnings .....</b>	<b>258</b>
<b>20.1 Fault and Warning Messages .....</b>	<b>259</b>
<b>20.2 Additional fault messages AKD-T .....</b>	<b>278</b>
<b>20.3 SD Card Errors .....</b>	<b>279</b>
<b>20.4 Clearing Faults .....</b>	<b>279</b>
<b>20.5 Parameter and Command Error Messages .....</b>	<b>280</b>
<b>20.6 CANopen Emergency Messages and Error Codes .....</b>	<b>284</b>

<b>20.7 Unknown Fault</b> .....	<b>291</b>
20.7.1 Remedies .....	291
<b>21 Troubleshooting the AKD</b> .....	<b>292</b>
<b>22 Firmware and Firmware Updates</b> .....	<b>293</b>
<b>22.1 Downloading Firmware</b> .....	<b>294</b>
22.1.1 AKD-C and AKD-N Firmware Download .....	294
22.1.1.1 Firmware Download over EtherCAT for AKD-C and AKD-N .....	294
22.1.2 WorkBench and Firmware Compatibility .....	294
<b>22.2 Forcing the drive into firmware download mode</b> .....	<b>295</b>
22.2.0.1 Forced download of AKD firmware. ....	295
<b>22.3 Invalid Firmware</b> .....	<b>296</b>
<b>22.4 Unsupported Firmware</b> .....	<b>296</b>
<b>22.5 Incompatible Firmware</b> .....	<b>297</b>
22.5.1 Resolving Incompatible Firmware .....	298
<b>22.6 International Export Restrictions</b> .....	<b>298</b>
<b>23 Connection Diagrams</b> .....	<b>299</b>
<b>23.1 Connection diagram AKD-x00306, AKD-x00606</b> .....	<b>300</b>
<b>23.2 Connection diagram AKD-x01206</b> .....	<b>301</b>
<b>23.3 Connection diagram AKD-x02406 and AKD-x00307 to 02407</b> .....	<b>302</b>
<b>23.4 24 V auxiliary supply (X1)</b> .....	<b>303</b>
23.4.1 AKD-x003 to 024, connector X1 .....	303
23.4.2 AKD-x048, connector X1 .....	303
<b>23.5 Motor Power Connection (X2)</b> .....	<b>303</b>
23.5.1 AKD-x003 to 024, power connector X2 .....	305
23.5.2 AKD-x048, power connector X2 .....	305
<b>23.6 External regen resistor (X3)</b> .....	<b>305</b>
23.6.1 AKD-x003 to 024, regen connector X3 .....	305
23.6.2 AKD-x048, regen connector X3 .....	307
<b>23.7 DC Bus link (X3, X14)</b> .....	<b>307</b>
23.7.1 DC Bus topology with Y connectors .....	308
23.7.2 DC Bus topology with busbar .....	309
<b>23.8 Mains supply connection (X3, X4)</b> .....	<b>309</b>
23.8.1 Three phase connection (all AKD types) .....	311
23.8.2 Single/Dual phase connection (AKD-x00306 to AKD-x01206 only) .....	311
<b>23.9 I/O Connection</b> .....	<b>312</b>
23.9.1 Overview .....	312
23.9.1.1 I/O connectors X7 and X8 (all AKD variants) .....	312
23.9.1.2 I/O connectors X21, X22, X23 and X24 (AKD-T with I/O option card only) .....	313
23.9.1.3 I/O connectors X35 and X36 (AKD-M only) .....	316
<b>23.10 Analog Output (X8, X23)</b> .....	<b>316</b>
<b>23.11 Analog Input (X8, X24)</b> .....	<b>317</b>
<b>23.12 Command encoder signal connection</b> .....	<b>318</b>
23.12.1 Incremental encoder input 5 V (X9) .....	318
23.12.2 Incremental encoder input 24 V (X7) .....	319
23.12.3 Encoder with EnDat 2.2 input 5 V (X9) .....	320
<b>23.13 Pulse / Direction signal connection</b> .....	<b>320</b>
23.13.1 Pulse / Direction input 5 V (X9) .....	320

23.13.2 Pulse / Direction Input 5 V to 24 V (X7)	321
<b>23.14 CW / CCW signal connection</b>	<b>321</b>
23.14.1 CW / CCW input 5 V (X9)	321
23.14.2 CW / CCW input 24 V (X7)	322
<b>23.15 Feedback connector (X10)</b>	<b>322</b>
<b>23.16 Feedback connector (X9)</b>	<b>322</b>
<b>23.17 Feedback connector (X7)</b>	<b>323</b>
<b>24 Fieldbus Manuals</b>	<b>324</b>
<b>24.1 AKD Modbus Communication</b>	<b>324</b>
<b>24.2 AKD EtherCAT Communication</b>	<b>324</b>
<b>24.3 AKD CANopen Communication</b>	<b>324</b>
<b>24.4 AKD PROFINET</b>	<b>324</b>
<b>24.5 AKD SynqNet Communication</b>	<b>324</b>
<b>24.6 AKD EtherNet/IP Communication</b>	<b>324</b>
24.6.1 AKD Modbus Communication	324
24.6.2 AKD EtherCAT Communication	324
24.6.3 AKD CANopen Communication	324
24.6.4 AKD PROFINET	325
24.6.5 AKD SynqNet Communication	325
24.6.6 AKD EtherNet/IP Communication	325
24.6.6.1 Modbus	327
Overview	327
Modbus Installation and Setup	327
Overview of Messaging	327
Supported Functions	327
Read Holding Registers (0x03)	327
Write Multiple Registers (0x10)	328
Exception Response Codes	329
Reading Product Serial Numbers Over Modbus	329
Modbus Dynamic Mapping	330
Configuring Dynamic Mapping	330
Saving and Resetting Dynamic Mapping	331
Modbus Dynamic mapping through WorkBench Terminal	331
24.6.7 Modbus Overview	331
24.6.8 Dynamic Mapping via Telnet	331
Scaling Parameters	332
24.6.9 Modbus scaling example	332
Modbus specific registers (Parameters)	333
32-bit versus 16-bit Values	334
Mapping of 64-bit Parameters to 32-bit Parameters	334
Fault Registers	334
Mapping Table	334
Modbus Parameter Table	337
Modbus 64-bit Parameters to 32-bit Mapping	357
Modbus Errors	359
General Functionality	360

Parameter Descriptions .....	360
24.6.10 MODBUS.ERRORMODE .....	360
24.6.11 MODBUS.ERRORS .....	360
24.6.12 MODBUS.CLRERRORS .....	360
Access Through Telnet .....	360
Access Through Modbus .....	360
Modbus Error Descriptions .....	361
<b>25 AKD - Parameter and Command Reference Guide .....</b>	<b>365</b>
<b>25.1 About the Parameter and Command Reference Guide .....</b>	<b>366</b>
25.1.1 Parameter and Command Naming Conventions .....	368
25.1.2 Summary of Parameters and Commands .....	369
<b>25.2 AIN Parameters .....</b>	<b>392</b>
25.2.1 AIN.CUTOFF .....	393
25.2.2 AIN.DEADBAND .....	395
25.2.3 AIN.DEADBANDMODE .....	397
25.2.4 AIN.ISCALE .....	399
25.2.5 AIN.MODE .....	400
25.2.6 AIN.OFFSET .....	402
25.2.7 AIN.PSCALE .....	403
25.2.8 AIN.VALUE .....	405
25.2.9 AIN.VSCALE .....	407
25.2.10 AIN.ZERO .....	409
<b>25.3 AIN2 Parameters .....</b>	<b>411</b>
25.3.1 AIN2.CUTOFF .....	412
25.3.2 AIN2.DEADBAND .....	413
25.3.3 AIN2.DEADBANDMODE .....	414
25.3.4 AIN2.MODE .....	415
25.3.5 AIN2.OFFSET .....	416
25.3.6 AIN2.VALUE .....	417
25.3.7 AIN2.ZERO .....	418
<b>25.4 AOUT Parameters .....</b>	<b>419</b>
25.4.1 AOUT.CUTOFF .....	420
25.4.2 AOUT.DEBUGADDR .....	421
25.4.3 AOUT.DEBUGDATATYPE .....	422
25.4.4 AOUT.DEBUGSCALE .....	424
25.4.5 AOUT.ISCALE .....	425
25.4.6 AOUT.MODE .....	426
25.4.7 AOUT.OFFSET .....	428
25.4.8 AOUT.PSCALE .....	429
25.4.9 AOUT.VALUE .....	431
25.4.10 AOUT.VALUEU .....	432
25.4.11 AOUT.VSCALE .....	433
<b>25.5 AOUT2 Parameters .....</b>	<b>435</b>
25.5.1 AOUT2.CUTOFF .....	436
25.5.2 AOUT2.MODE .....	437
25.5.3 AOUT2.OFFSET .....	438
25.5.4 AOUT2.VALUE .....	439

25.5.5 AOUT2.VALUEU .....	440
<b>25.6 BODE Parameters .....</b>	<b>441</b>
25.6.1 BODE.EXCITEGAP .....	442
25.6.2 BODE.FREQ .....	444
25.6.3 BODE.IAMP .....	446
25.6.4 BODE.IFLIMIT .....	448
25.6.5 BODE.IFTHRESH .....	450
25.6.6 BODE.INJECTPOINT .....	452
25.6.7 BODE.MODE .....	454
25.6.8 BODE.MODETIMER .....	458
25.6.9 BODE.PRBDDEPTH .....	461
25.6.10 BODE.VAMP .....	463
25.6.11 BODE.VFLIMIT .....	465
25.6.12 BODE.VFTHRESH .....	467
<b>25.7 CAP Parameters .....</b>	<b>469</b>
25.7.1 CAP0.EDGE, CAP1.EDGE .....	470
25.7.2 CAP0.EN, CAP1.EN .....	472
25.7.3 CAP0.EVENT, CAP1.EVENT .....	474
25.7.4 CAP0.FBSOURCE, CAP1.FBSOURCE .....	477
25.7.5 CAP0.FILTER, CAP1.FILTER .....	479
25.7.6 CAP0.MODE, CAP1.MODE .....	481
25.7.7 CAP0.PLFB, CAP1.PLFB .....	483
25.7.8 CAP0.PREEDGE, CAP1.PREEDGE .....	485
25.7.9 CAP0.PREFILTER, CAP1.PREFILTER .....	487
25.7.10 CAP0.PRESELECT, CAP1.PRESELECT .....	489
25.7.11 CAP0.STATE, CAP1.STATE .....	491
25.7.12 CAP0.T, CAP1.T .....	493
25.7.13 CAP0.TRIGGER, CAP1.TRIGGER .....	495
<b>25.8 CMP Parameters .....</b>	<b>497</b>
25.8.1 CMPx.ADVANCE .....	498
25.8.2 CMPx.ARM .....	500
25.8.3 CMPx.MODBOUND1 .....	502
25.8.4 CMPx.MODBOUND2 .....	504
25.8.5 CMPx.MODE .....	506
25.8.6 CMPx.MODEN .....	508
25.8.7 CMPx.MODVALUE .....	510
25.8.8 CMPx.OUTMASK .....	512
25.8.9 CMPx.SETPOINT .....	514
25.8.10 CMPx.SOURCE .....	516
25.8.11 CMPx.SOURCEVALUE .....	518
25.8.12 CMPx.STATE .....	520
25.8.13 CMPx.WIDTH .....	521
25.8.14 CMPx.WIDTHTYPE .....	523
<b>25.9 CPS Parameters .....</b>	<b>525</b>
25.9.1 CPS.ACTIVE .....	526
<b>25.10 CS Parameters .....</b>	<b>527</b>
25.10.1 CS.DEC .....	528

25.10.2 CS.STATE .....	530
25.10.3 CS.TO .....	532
25.10.4 CS.VTHRESH .....	534
<b>25.11 DIN Parameters .....</b>	<b>536</b>
25.11.1 DIN.HCMD1 TO DIN.HCMD4 .....	537
25.11.2 DIN.LCMD1 to DIN.LCMD4 .....	539
25.11.3 DIN.ROTARY .....	541
25.11.4 DIN.STATES .....	543
25.11.5 DIN1.FILTER TO DIN7.FILTER .....	544
25.11.6 DIN1.INV to DIN7.INV .....	546
25.11.7 DIN1.MODE TO DIN7.MODE .....	548
25.11.8 DIN1.PARAM TO DIN7.PARAM .....	552
25.11.9 DIN1.STATE TO DIN7.STATE .....	555
25.11.10 DIN9.STATE to DIN11.STATE .....	557
25.11.11 DIN21.FILTER to DIN32.FILTER .....	559
25.11.12 DIN21.STATE to DIN32.STATE .....	561
<b>25.12 DIO Parameters .....</b>	<b>563</b>
25.12.1 DIO9.INV to DIO11.INV .....	564
25.12.2 DIO9.DIR to DIO11.DIR .....	566
<b>25.13 DOUT Parameters .....</b>	<b>568</b>
25.13.1 DOUT.CTRL .....	569
25.13.2 DOUT.RELAYMODE .....	570
25.13.3 DOUT.STATES .....	572
25.13.4 DOUT1.MODE and DOUT2.MODE .....	573
25.13.5 DOUT1.PARAM AND DOUT2.PARAM .....	575
25.13.6 DOUT1.STATE AND DOUT2.STATE .....	577
25.13.7 DOUT1.STATEU AND DOUT2.STATEU .....	578
25.13.8 DOUT9.MODE to DOUT11.MODE .....	580
25.13.9 DOUT9.PARAM to DOUT11.MODE .....	581
25.13.10 DOUT9.STATE to DOUT11.STATE .....	582
25.13.11 DOUT9.STATEU to DOUT11.STATEU .....	584
25.13.12 DOUT21.STATE to DOUT32.STATE .....	586
25.13.13 DOUT21.STATEU to DOUT32.STATEU .....	588
<b>25.14 DRV Parameters .....</b>	<b>590</b>
25.14.1 DRV.ACC .....	593
25.14.2 DRV.ACTIVE .....	595
25.14.3 DRV.BLINKDISPLAY .....	597
25.14.4 DRV.BOOTTIME .....	598
25.14.5 DRV.CLRFAULTHIST .....	599
25.14.6 DRV.CLRFAULTS .....	600
25.14.7 DRV.CMDDELAY .....	602
25.14.8 DRV.CMDSOURCE .....	604
25.14.9 DRV.CRASHDUMP .....	606
25.14.10 DRV.CUSTOMIDENTIFIER .....	607
25.14.11 DRV.DBILIMIT .....	609
25.14.12 DRV.DEC .....	611
25.14.13 DRV.DIFVAR .....	613

---

25.14.14 DRV.DIR .....	614
25.14.15 DRV.DIS .....	616
25.14.16 DRV.DISMODE .....	618
25.14.17 DRV.DISSOURCES .....	620
25.14.18 DRV.DISSOURCESMASK .....	622
25.14.19 DRV.DISTO .....	624
25.14.20 DRV.DOWNLOADALLOWED .....	626
25.14.21 DRV.EMUHECKSPEED .....	627
25.14.22 DRV.EMUEDIR .....	629
25.14.23 DRV.EMUEMODE .....	631
25.14.24 DRV.EMUEMTURN .....	634
25.14.25 DRV.EMUEPULSEWIDTH .....	636
25.14.26 DRV.EMUERES .....	638
25.14.27 DRV.EMUEZOFFSET .....	640
25.14.28 DRV.EN .....	642
25.14.29 DRV.ENDEFAULT .....	644
25.14.30 DRV.ERRORLIST .....	645
25.14.31 DRV.FAULTDISPLAYMODE .....	646
25.14.32 DRV.FAULTHIST .....	647
25.14.33 DRV.FAULT1 to DRV.FAULT10 .....	648
25.14.34 DRV.FAULTS .....	651
25.14.35 DRV.HANDWHEEL .....	652
25.14.36 DRV.HANDWHEELSRC .....	654
25.14.37 DRV.HELP .....	655
25.14.38 DRV.HELPALL .....	656
25.14.39 DRV.HWENABLE .....	657
25.14.40 DRV.HWENDELAY .....	658
25.14.41 DRV.HWENMODE .....	660
25.14.42 DRV.ICONT .....	662
25.14.43 DRV.INFO .....	663
25.14.44 DRV.IPEAK .....	665
25.14.45 DRV.IZERO .....	666
25.14.46 DRV.LIST .....	667
25.14.47 DRV.LOGICVOLTS .....	668
25.14.48 DRV.MEMADDR .....	669
25.14.49 DRV.MEMDATA .....	670
25.14.50 DRV.MOTIONDISSOURCES .....	671
25.14.51 DRV.MOTIONSTAT .....	672
25.14.52 DRV.NAME .....	674
25.14.53 DRV.NVCHECK .....	675
25.14.54 DRV.NVLIST .....	677
25.14.55 DRV.NVLOAD .....	678
25.14.56 DRV.NVSAVE .....	679
25.14.57 DRV.ONTIME .....	681
25.14.58 DRV.OPMODE .....	682
25.14.59 DRV.READFORMAT .....	684
25.14.60 DRV.RSTVAR .....	685

25.14.61 DRV.RUNTIME .....	686
25.14.62 DRV.SETUPREQBITS .....	687
25.14.63 DRV.SETUPREQLIST .....	689
25.14.64 DRV.STOP .....	691
25.14.65 DRV.TEMPERATURES .....	692
25.14.66 DRV.TIME .....	693
25.14.67 DRV.TYPE .....	694
25.14.68 DRV.VER .....	696
25.14.69 DRV.VERIMAGE .....	697
25.14.70 DRV.WARNING1 to DRV.WARNING3 .....	698
25.14.71 DRV.WARNINGS .....	700
25.14.72 DRV.ZERO .....	701
<b>25.15 EIP Parameters .....</b>	<b>702</b>
25.15.1 EIP.CMDMAP .....	703
25.15.2 EIP.CONNECTED .....	705
25.15.3 EIP.POSUNIT .....	706
25.15.4 EIP.PROFUNIT .....	707
25.15.5 EIP.RSPMAP .....	709
<b>25.16 FAULT Parameters .....</b>	<b>711</b>
25.16.1 FAULTx.ACTION .....	712
25.16.2 FAULT176.ACTION, FAULT178.ACTION .....	714
25.16.3 FAULT564.ACTION, FAULT565.ACTION .....	715
25.16.4 FAULT570.ACTION .....	716
<b>25.17 FB1 Parameters .....</b>	<b>717</b>
25.17.1 FB1.BISSBITS .....	719
25.17.2 FB1.CALTHRESH .....	720
25.17.3 FB1.DIAG .....	721
25.17.4 FB1.ENCRESES .....	722
25.17.5 FB1.FAULTS .....	724
25.17.6 FB1.HALLSTATE .....	726
25.17.7 FB1.HALLSTATEU .....	728
25.17.8 FB1.HALLSTATEV .....	729
25.17.9 FB1.HALLSTATEW .....	730
25.17.10 FB1.IDENTIFIED .....	731
25.17.11 FB1.INITPSAVED .....	733
25.17.12 FB1.INITPSTATUS .....	734
25.17.13 FB1.INITPWINDOW .....	736
25.17.14 FB1.INITSIGNED .....	737
25.17.15 FB1.LASTIDENTIFIED .....	739
25.17.16 FB1.MECHPOS .....	740
25.17.17 FB1.MEMVER .....	741
25.17.18 FB1.MOTORPHASE .....	742
25.17.19 FB1.MOTORPOLES .....	743
25.17.20 FB1.OFFSET .....	744
25.17.21 FB1.ORIGIN .....	746
25.17.22 FB1.P .....	748
25.17.23 FB1.PDIR .....	749

---

25.17.24 FB1.PFIND .....	750
25.17.25 FB1.PFINDCMDU .....	751
25.17.26 FB1.PIN .....	752
25.17.27 FB1.POFFSET .....	753
25.17.28 FB1.POLES .....	754
25.17.29 FB1.POUT .....	755
25.17.30 FB1.PSCALE .....	756
25.17.31 FB1.PUNIT .....	758
25.17.32 FB1.RESKTR .....	759
25.17.33 FB1.RESREFPHASE .....	760
25.17.34 FB1.SELECT .....	761
25.17.35 FB1.TRACKINGCAL .....	764
25.17.36 FB1.USERBYTE0 to FB1.USERBYTE7 .....	765
25.17.37 FB1.USERDWORD0 to FB1.USERDWORD1 .....	767
25.17.38 FB1.USERWORD0 to FB1.USERWORD3 .....	769
<b>25.18 FB2 Parameters .....</b>	<b>771</b>
25.18.1 FB2.DIR .....	772
25.18.2 FB2.ENCREC .....	773
25.18.3 FB2.MODE .....	775
25.18.4 FB2.MOTORPHASE .....	777
25.18.5 FB2.MOTORPOLES .....	778
25.18.6 FB2.P .....	779
25.18.7 FB2.PIN .....	780
25.18.8 FB2.POFFSET .....	781
25.18.9 FB2.POUT .....	782
25.18.10 FB2.PUNIT .....	783
25.18.11 FB2.SOURCE .....	784
<b>25.19 FB3 Parameters .....</b>	<b>786</b>
25.19.1 FB3.DIR .....	787
25.19.2 FB3.ENCREC .....	788
25.19.3 FB3.MODE .....	789
25.19.4 FB3.MOTORPHASE .....	790
25.19.5 FB3.MOTORPOLES .....	791
25.19.6 FB3.P .....	792
25.19.7 FB3.PDIR .....	794
25.19.8 FB3.PIN .....	795
25.19.9 FB3.POFFSET .....	796
25.19.10 FB3.POUT .....	797
25.19.11 FB3.PUNIT .....	798
<b>25.20 FBUS Parameters .....</b>	<b>799</b>
25.20.1 FBUS.PARAM1 TO FBUS.PARAM10 .....	800
25.20.2 FBUS.PLLSTATE .....	804
25.20.3 FBUS.PLLTHRESH .....	805
25.20.4 FBUS.PROTECTION .....	806
25.20.5 FBUS.REMOTE .....	809
25.20.6 FBUS.SAMPLEPERIOD .....	810
25.20.7 FBUS.STATE .....	811

25.20.8 FBUS.SYNCACT .....	813
25.20.9 FBUS.SYNCDIST .....	814
25.20.10 FBUS.SYNCWND .....	815
25.20.11 FBUS.TYPE .....	816
<b>25.21 GEAR Parameters .....</b>	<b>818</b>
25.21.1 GEAR.ACCTMAX .....	819
25.21.2 GEAR.DECMAX .....	821
25.21.3 GEAR.IN .....	823
25.21.4 GEAR.MODE .....	825
25.21.5 GEAR.MOVE .....	828
25.21.6 GEAR.OUT .....	829
25.21.7 GEAR.VMAX .....	831
<b>25.22 GUI Parameters .....</b>	<b>833</b>
25.22.1 GUI.DISPLAY .....	834
25.22.2 GUI.DISPLAYS .....	835
25.22.3 GUI.PARAM01 .....	836
25.22.4 GUI.PARAM02 .....	837
25.22.5 GUI.PARAM03 .....	838
25.22.6 GUI.PARAM04 .....	839
25.22.7 GUI.PARAM05 .....	840
25.22.8 GUI.PARAM06 .....	841
25.22.9 GUI.PARAM07 .....	842
25.22.10 GUI.PARAM08 .....	843
25.22.11 GUI.PARAM09 .....	844
25.22.12 GUI.PARAM10 .....	845
<b>25.23 HOME Parameters .....</b>	<b>846</b>
25.23.1 HOME.ACC .....	847
25.23.2 HOME.AUTOMOVE .....	849
25.23.3 HOME.DEC .....	851
25.23.4 HOME.DIR .....	853
25.23.5 HOME.DIST .....	855
25.23.6 HOME.FEEDRATE .....	857
25.23.7 HOME.IPEAK .....	859
25.23.8 HOME.MAXDIST .....	861
25.23.9 HOME.MODE .....	863
25.23.10 HOME.MOVE .....	865
25.23.11 HOME.P .....	866
25.23.12 HOME.PERRTHRESH .....	868
25.23.13 HOME.SET .....	870
25.23.14 HOME.V .....	872
<b>25.24 HWLS Parameters .....</b>	<b>874</b>
25.24.1 HWLS.NEGSTATE .....	875
25.24.2 HWLS.POSSTATE .....	876
<b>25.25 IL Parameters .....</b>	<b>877</b>
25.25.1 IL.BUSFF .....	879
25.25.2 IL.CMD .....	880
25.25.3 IL.CMDACC .....	881

25.25.4 IL.CMDU .....	882
25.25.5 IL.DCMD .....	884
25.25.6 IL.DFB .....	885
25.25.7 IL.DIFOLD .....	886
25.25.8 IL.FB .....	888
25.25.9 IL.FBSOURCE .....	890
25.25.10 IL.FF .....	892
25.25.11 IL.FOLDFTHRESH .....	894
25.25.12 IL.FOLDFTHRESHU .....	896
25.25.13 IL.FOLDWTHRESH .....	898
25.25.14 IL.FRCTION .....	900
25.25.15 IL.IFOLD .....	902
25.25.16 IL.IUFB .....	904
25.25.17 IL.IVFB .....	905
25.25.18 IL.KACFF .....	906
25.25.19 IL.KBUSFF .....	908
25.25.20 IL.KP .....	909
25.25.21 IL.KPDRATIO .....	910
25.25.22 IL.KPLOOKUPINDEX .....	912
25.25.23 IL.KPLOOKUPVALUE .....	914
25.25.24 IL.KPLOOKUPVALUES .....	916
25.25.25 IL.KVFF .....	918
25.25.26 IL.LIMITN .....	919
25.25.27 IL.LIMITP .....	921
25.25.28 IL.MFOLDD .....	923
25.25.29 IL.MFOLDER .....	924
25.25.30 IL.MFOLDT .....	925
25.25.31 IL.MI2T .....	926
25.25.32 IL.MI2TWTHRESH .....	927
25.25.33 IL.MIFOLD .....	928
25.25.34 IL.MIMODE .....	930
25.25.35 IL.OFFSET .....	931
25.25.36 IL.VCMD .....	932
25.25.37 IL.VUFB .....	933
25.25.38 IL.VVFB .....	934
<b>25.26 IP Parameters .....</b>	<b>936</b>
25.26.1 IP.ADDRESS .....	937
25.26.2 IP.GATEWAY .....	939
25.26.3 IP.MODE .....	941
25.26.4 IP.RESET .....	943
25.26.5 IP.SUBNET .....	945
<b>25.27 LOAD Parameters .....</b>	<b>947</b>
25.27.1 LOAD.INERTIA .....	948
<b>25.28 MODBUS Parameters .....</b>	<b>949</b>
25.28.1 MODBUS.CLRERRORS .....	950
25.28.2 MODBUS.ERRORMODE .....	951
25.28.3 MODBUS.ERRORS .....	952

25.28.4 MODBUS.PIN .....	954
25.28.5 MODBUS.POUT .....	956
25.28.6 MODBUS.PSCALE .....	958
25.28.7 MODBUS.SCALING .....	960
<b>25.29 MOTOR Parameters .....</b>	<b>962</b>
25.29.1 MOTOR.AUTASET .....	964
25.29.2 MOTOR.BRAKE .....	966
25.29.3 MOTOR.BRAKEIMM .....	968
25.29.4 MOTOR.BRAKERLS .....	970
25.29.5 MOTOR.BRAKESTATE .....	972
25.29.6 MOTOR.CTF0 .....	973
25.29.7 MOTOR.ICONT .....	975
25.29.8 MOTOR.IDDATAVALID .....	977
25.29.9 MOTOR.IDMAX .....	979
25.29.10 MOTOR.IMID .....	980
25.29.11 MOTOR.IMTR .....	982
25.29.12 MOTOR.INERTIA .....	984
25.29.13 MOTOR.IPEAK .....	986
25.29.14 MOTOR.KE .....	988
25.29.15 MOTOR.KT .....	990
25.29.16 MOTOR.LDLL .....	992
25.29.17 MOTOR.LISAT .....	993
25.29.18 MOTOR.LQLL .....	994
25.29.19 MOTOR.NAME .....	996
25.29.20 MOTOR.PHASE .....	997
25.29.21 MOTOR.PHSADV1 .....	999
25.29.22 MOTOR.PHSADV2 .....	1000
25.29.23 MOTOR.PITCH .....	1001
25.29.24 MOTOR.POLES .....	1002
25.29.25 MOTOR.R .....	1004
25.29.26 MOTOR.RTYPE .....	1006
25.29.27 MOTOR.SUPPORTEDPARAMS .....	1008
25.29.28 MOTOR.TBRAKEAPP .....	1010
25.29.29 MOTOR.TBRAKERLS .....	1012
25.29.30 MOTOR.TBRAKETO .....	1014
25.29.31 MOTOR.TEMP .....	1016
25.29.32 MOTOR.TEMPC .....	1018
25.29.33 MOTOR.TEMPFAULT .....	1019
25.29.34 MOTOR.TEMPWARN .....	1021
25.29.35 MOTOR.TYPE .....	1023
25.29.36 MOTOR.VMAX .....	1025
25.29.37 MOTOR.VOLTMAX .....	1027
25.29.38 MOTOR.VOLTMIN .....	1029
25.29.39 MOTOR.VOLTRATED .....	1031
25.29.40 MOTOR.VRATED .....	1033
<b>25.30 MT Parameters and Commands .....</b>	<b>1035</b>
25.30.1 MT.ACC .....	1036

---

25.30.2 MT.CLEAR .....	1038
25.30.3 MT.CNTL .....	1040
25.30.4 MT.CONTINUE .....	1044
25.30.5 MT.DEC .....	1045
25.30.6 MT.EMERGMT .....	1047
25.30.7 MT.FEEDRATE .....	1049
25.30.8 MT.FIXEDSTOPCURRENT .....	1050
25.30.9 MT.FIXEDSTOPFOLLOWINGERROR .....	1051
25.30.10 MT.FIXEDSTOPMONITORWINDOW .....	1052
25.30.11 MT.LIST .....	1053
25.30.12 MT.LOAD .....	1054
25.30.13 MT.MOVE .....	1056
25.30.14 MT.MTNEXT .....	1058
25.30.15 MT.NUM .....	1060
25.30.16 MT.P .....	1061
25.30.17 MT.PARAMS .....	1063
25.30.18 MT.SET .....	1064
25.30.19 MT.TNEXT .....	1066
25.30.20 MT.TNUM .....	1068
25.30.21 MT.TNVSAVE .....	1070
25.30.22 MT.TPOSWND .....	1071
25.30.23 MT.TVELWND .....	1073
25.30.24 MT.V .....	1074
25.30.25 MT.VCMD .....	1077
<b>25.31 NSD Parameters .....</b>	<b>1079</b>
25.31.1 NSD.CPSMACADDRESS .....	1080
25.31.2 NSD.NODEID .....	1081
25.31.3 NSD.STRINGID .....	1082
<b>25.32 PL Parameters .....</b>	<b>1083</b>
25.32.1 PL.CMD .....	1084
25.32.2 PL.ERR .....	1086
25.32.3 PL.ERRFTHRESH .....	1088
25.32.4 PL.ERRMODE .....	1090
25.32.5 PL.ERRWTHRESH .....	1092
25.32.6 PL.FB .....	1094
25.32.7 PL.FBSOURCE .....	1096
25.32.8 PL.FILTERTIME .....	1098
25.32.9 PL.INTINMAX .....	1099
25.32.10 PL.INTOUTMAX .....	1101
25.32.11 PL.KI .....	1103
25.32.12 PL.KP .....	1105
25.32.13 PL.MODP1 .....	1107
25.32.14 PL.MODP2 .....	1109
25.32.15 PL.MODPDIR .....	1111
25.32.16 PL.MODPEN .....	1113
<b>25.33 PLS Parameters .....</b>	<b>1115</b>
25.33.1 PLS.EN .....	1116

25.33.2 PLS.MODE .....	1118
25.33.3 PLS.P1 TO PLS.P8 .....	1120
25.33.4 PLS.RESET .....	1122
25.33.5 PLS.STATE .....	1124
25.33.6 PLS.T1 TO PLS.T8 .....	1126
25.33.7 PLS.UNITS .....	1128
25.33.8 PLS.WIDTH1 TO PLS.WIDTH8 .....	1131
<b>25.34 REC Parameters .....</b>	<b>1133</b>
25.34.1 REC.ACTIVE .....	1134
25.34.2 REC.CH1 to REC.CH6 .....	1135
25.34.3 REC.DONE .....	1136
25.34.4 REC.GAP .....	1137
25.34.5 REC.NUMPOINTS .....	1138
25.34.6 REC.OFF .....	1139
25.34.7 REC.RECPRMLIST .....	1140
25.34.8 REC.RETRIEVE .....	1141
25.34.9 REC.RETRIEVEDATA .....	1142
25.34.10 REC.RETRIEVEFRMT .....	1144
25.34.11 REC.RETRIEVEHDR .....	1146
25.34.12 REC.RETRIEVESIZE .....	1147
25.34.13 REC.STOCTYPE .....	1148
25.34.14 REC.TRIG .....	1149
25.34.15 REC.TRIGPARAM .....	1150
25.34.16 REC.TRIGPOS .....	1151
25.34.17 REC.TRIGPRMLIST .....	1153
25.34.18 REC.TRIGSLOPE .....	1154
25.34.19 REC.TRIGTYPE .....	1155
25.34.20 REC.TRIGVAL .....	1157
<b>25.35 REGEN Parameters .....</b>	<b>1158</b>
25.35.1 REGEN.POWER .....	1159
25.35.2 REGEN.POWERFILTERED .....	1161
25.35.3 REGEN.REXT .....	1163
25.35.4 REGEN.TEXT .....	1164
25.35.5 REGEN.TYPE .....	1166
25.35.6 REGEN.WATTEXT .....	1168
<b>25.36 S3 Parameters .....</b>	<b>1170</b>
25.36.1 S3.ADDRESS .....	1171
<b>25.37 SD Commands .....</b>	<b>1172</b>
25.37.1 SD.LOAD .....	1173
25.37.2 SD.SAVE .....	1174
25.37.3 SD.STATUS .....	1175
<b>25.38 SM Parameters .....</b>	<b>1176</b>
25.38.1 SM.I1 .....	1177
25.38.2 SM.I2 .....	1178
25.38.3 SM.MODE .....	1179
25.38.4 SM.MOVE .....	1182
25.38.5 SM.T1 .....	1183

25.38.6 SM.T2 .....	1184
25.38.7 SM.V1 .....	1185
25.38.8 SM.V2 .....	1187
<b>25.39 STO Parameters .....</b>	<b>1189</b>
25.39.1 STO.STATE .....	1190
<b>25.40 STRING Parameters .....</b>	<b>1192</b>
25.40.1 STRING1.DRIVEENABLED to STRING2.DRIVEENABLED .....	1193
25.40.2 STRING1.NODECOUNT to STRING2.NODECOUNT .....	1194
<b>25.41 STRINGS Parameters .....</b>	<b>1195</b>
25.41.1 STRINGS.I2TFTHRESH .....	1196
25.41.2 STRINGS.I2TVALUE .....	1197
25.41.3 STRINGS.I2TWTHRESH .....	1198
25.41.4 STRINGS.IFTHRESH .....	1199
25.41.5 STRINGS.IVALUE .....	1200
25.41.6 STRINGS.IWTHRESH .....	1201
25.41.7 STRINGS.STOSTATE .....	1202
25.41.8 STRINGS.VVALUE .....	1203
<b>25.42 SWLS Parameters .....</b>	<b>1204</b>
25.42.1 SWLS.EN .....	1205
25.42.2 SWLS.LIMIT0 .....	1207
25.42.3 SWLS.LIMIT1 .....	1209
25.42.4 SWLS.STATE .....	1211
<b>25.43 TEMP Parameters .....</b>	<b>1213</b>
25.43.1 TEMP.CONTROL .....	1214
25.43.2 TEMP.POWER1 to TEMP.POWER3 .....	1215
<b>25.44 UNIT Parameters .....</b>	<b>1217</b>
25.44.1 UNIT.ACCLINEAR .....	1218
25.44.2 UNIT.ACCROTARY .....	1220
25.44.3 UNIT.LABEL .....	1222
25.44.4 UNIT.PIN .....	1223
25.44.5 UNIT.PLINEAR .....	1225
25.44.6 UNIT.POUT .....	1227
25.44.7 UNIT.PROTARY .....	1229
25.44.8 UNIT.VLINEAR .....	1231
25.44.9 UNIT.VROTARY .....	1233
<b>25.45 USER Parameters .....</b>	<b>1235</b>
25.45.1 USER.INT1 to USER.INT24 .....	1236
<b>25.46 VBUS Parameters .....</b>	<b>1239</b>
25.46.1 VBUS.HALFVOLT .....	1240
25.46.2 VBUS.OVFTHRESH .....	1242
25.46.3 VBUS.OVWTHRESH .....	1243
25.46.4 VBUS.RMSLIMIT .....	1244
25.46.5 VBUS.UVFTHRESH .....	1245
25.46.6 VBUS.UVMODE .....	1246
25.46.7 VBUS.UVWTHRESH .....	1248
25.46.8 VBUS.VALUE .....	1249
<b>25.47 VL Parameters .....</b>	<b>1250</b>

25.47.1 VL.ARPF1 TO VL.ARPF4 .....	1251
25.47.2 VL.ARPQ1 TO VL.ARPQ4 .....	1253
25.47.3 VL.ARTYPE1 TO VL.ARTYPE4 .....	1255
25.47.4 VL.ARZF1 TO VL.ARZF4 .....	1257
25.47.5 VL.ARZQ1 TO VL.ARZQ4 .....	1259
25.47.6 VL.BUSFF .....	1261
25.47.7 VL.CMD .....	1263
25.47.8 VL.CMDU .....	1265
25.47.9 VL.ERR .....	1267
25.47.10 VL.FB .....	1269
25.47.11 VL.FBFILTER .....	1271
25.47.12 VL.FBSOURCE .....	1273
25.47.13 VL.FBUNFILTERED .....	1274
25.47.14 VL.FF .....	1275
25.47.15 VL.GENMODE .....	1277
25.47.16 VL.KBUSFF .....	1279
25.47.17 VL.KI .....	1281
25.47.18 VL.KO .....	1283
25.47.19 VL.KP .....	1284
25.47.20 VL.KVFF .....	1286
25.47.21 VL.LIMITN .....	1288
25.47.22 VL.LIMITP .....	1290
25.47.23 VL.LMJR .....	1291
25.47.24 VL.MODEL .....	1293
25.47.25 VL.OBSBW .....	1294
25.47.26 VL.OBSMODE .....	1295
25.47.27 VL.THRESH .....	1296
25.47.28 VL.VFTHRESH .....	1298
<b>25.48 WS Parameters .....</b>	<b>1299</b>
25.48.1 WS.ARM .....	1300
25.48.2 WS.CHECKMODE .....	1302
25.48.3 WS.CHECKT .....	1304
25.48.4 WS.CHECKV .....	1305
25.48.5 WS.DISARM .....	1307
25.48.6 WS.DISTMAX .....	1308
25.48.7 WS.DISTMIN .....	1310
25.48.8 WS.FREQ .....	1312
25.48.9 WS.IMAX .....	1314
25.48.10 WS.MODE .....	1316
25.48.11 WS.NUMLOOPS .....	1318
25.48.12 WS.STATE .....	1319
25.48.13 WS.T .....	1321
25.48.14 WS.TDELAY1 .....	1322
25.48.15 WS.TDELAY2 .....	1324
25.48.16 WS.TDELAY3 .....	1326
25.48.17 WS.TIRAMP .....	1328
25.48.18 WS.TSTANDSTILL .....	1329

---

25.48.19 WS.VTHRESH .....	1330
<b>26 Record of document revisions .....</b>	<b>1332</b>
<b>27 Index .....</b>	<b>1334</b>

## 2 About the AKD User Guide

---

<b>2.1 About this User Guide</b> .....	<b>30</b>
<b>2.2 Abbreviations</b> .....	<b>30</b>

## 2.1 About this User Guide

This guide describes the operation and use of the AKD with WorkBench. Each section details a specific topic related to the use of the product in basic terms which will help you get the most from the product.

This guide is for users who have installed and tested the device according to the *AKD and AKD PDMM Installation Manual*. The *AKD Installation Manual* is included on the product disk and contains critical safety information.


## 2.2 Abbreviations

Abbreviation	Meaning
AGND	Analog ground
CE	Communauté Européenne
COM	Serial interface for a personal computer
DCOMx	Communication line for digital inputs (with x=7 or 8)
Disk	Magnetic storage (diskette, hard disk)
EEPROM	Electrically erasable programmable memory
EMC	Electromagnetic compatibility
F-SMA	Fiber optic cable connector according to IEC 60874-2
LED	Light-emitting diode
LSB	Low significant byte (or bit)
MSB	Main significant byte (or bit)
NI	Zero pulse
PC	Personal computer
PE	Protective earth
PLC	Programmable logic control
PLL	Phase locked loop
PLS	Programmable limit switch
PWM	Pulse-width modulation
RAM	Random access memory (volatile memory)
$R_{\text{Brake}}/R_{\text{B}}$	regen resistor (also called a regen resistor)
RBext	External regen resistor
RBint	Internal regen resistor
RCD	Residual current device
RES	Resolver
ROD	Incremental encoder (A quad B)
S1	Continuous operation
STO	Safe torque off
VAC	Volts, alternating current
VDC	Volts, direct current

### 3 AKD Models

AKD drive models are available in a variety of combinations of features. The part number identifies the features included in your model.

The figure below shows part number identification for drive features.

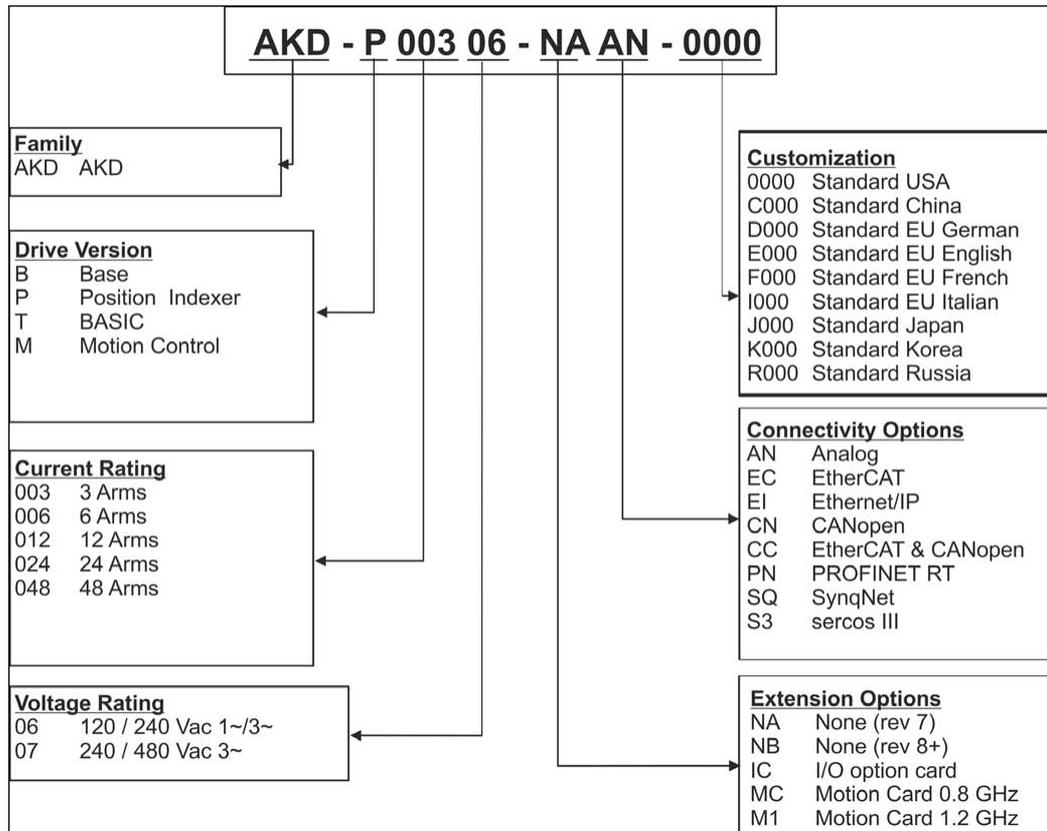

#### 3.1 CC Drive Models

CC drive models allow you to select between EtherCAT, CANopen, or analog operation. This drive model is identified with a new model number of the form AKD-Pxxxxx-NACC-0000 (the CC is the unique identifier).

The CC drive model is fitted with both the EtherCAT ( X5 and X6) and CANopen (X12 and X13) fieldbus connectors and a new software parameter (DRV.TYPE (→ p. 694)) allows you to select which features the drive supports; you cannot use EtherCAT and CANopen at the same time.

#### 3.2 The AKD-C Central Power Supply

Available AKD versions

Variant	Description	Power	Connectivity
AKD-C01007-CBEC	Central Power supply without extension.	10 kW	EtherCAT
AKD-C01007-MCEC	Central Power supply with Motion Controller extension. Includes all five IEC 61131 languages, PLC Open and Pipes Network.	10 kW	EtherCAT

Standard features

- Supply voltage range 400 V to 480 V ±10%.
- Mains EMC filter and 24 V EMC filter integrated.
- EtherCAT bus onboard.
- TCP/IP service channel 100 Mbit/s onboard.

- Safe Torque Off (STO) according to IEC 62061 SIL 2 onboard.
- Supports up to 16 AKD-N drives.

#### **Power section**

- Three phase supply, maximum voltage range 360 to 528 V, 47 to 65 Hz.
- B6 bridge rectifier, integral soft-start circuit.
- Fusing to be provided by the user.
- Shielding star point close to the device.
- DC power split to two connectors (strings) for up to 16 drives.
- DC power voltage range 565 to 680 VDC, DC bus output current max 17 A.
- Standby DC power voltage 55 VDC  $\pm 10\%$  (generated from 24 VDC voltage supply)
- Regen circuit for all connected AKD-N.
- Built-in regen resistor, external regen resistor or capacitor module if required.

#### **Integrated safety**

- Appropriate insulation/creepage distances and electrical isolation for safe electrical separation, per IEC 61800-5-1, between the power input/DC bus connections and the signal electronics.
- Soft-start, overvoltage detection, short-circuit protection, phase-failure monitoring.
- Temperature monitoring.
- SIL 2 safe torque off in accordance with IEC 62061 , → p. 1.

#### **Supply voltage 24V DC (electronic supply and standby voltage)**

- From an external, safety approved 24 V  $\pm 10\%$  power supply, minimum 480 W.

#### **Operation and parameter setting**

- Using the setup software WorkBench for setup via TCP/IP.

#### **Inputs/Outputs**

- 1 programmable digital output (→ p. 1)
- 1 fault relay output (→ p. 1)
- 1 Enable input (→ p. 1)
- 2 STO inputs (one per string) (→ p. 1)
- 2 STO status outputs (one per string) (→ p. 1)
- Service Interface (=> p. 1)
- EtherCAT Interface (=> p. 1)

#### **Option Cards**

- MC: Motion Controller card with additional digital inputs and outputs. Extends the AKD-C to AKD-C-PDMM, a master drive for multiaxis, synchronized drive systems.

### 3.3 The AKD-N Family of Digital Drives

#### Available AKD-N versions

Variant (short)	Description	Current	Connectivity
AKD-N-DB	Hybrid DC power and fieldbus connection. Hybrid motor power and feedback connection.	3 to 6 A	EtherCAT, I/O
AKD-N-DF	Hybrid DC power and fieldbus connection. Hybrid or dual line motor power and feedback connection. Local tertiary fieldbus interface.	3 to 6 A	EtherCAT, I/O, Local Fieldbus
AKD-N-DS	Hybrid DC power and fieldbus connection. Hybrid or dual line motor power and feedback connection. Local drive STO input.	3 to 6 A	EtherCAT, I/O, Local STO

#### Standard features

- Supply voltage range 55 VDC to 800 VDC
- Motion bus onboard.
- SFD, Hiperface DSL, Comcoder, ENDAT 2.1 & 2.2, BiSS, HIPERFACE, 1Vp-p Sin-Cos encoders, incremental encoders support onboard.
- Safe Torque Off (STO) according to IEC 62061 SIL 2 onboard.
- Use with synchronous servomotors, linear motors, and induction machines.

#### Power section

- DC power supply, voltage range 55 VDC to 800 VDC.
- Output stage IGBT module with floating current measurement.

#### Integrated safety

- Appropriate insulation/creepage distances and electrical isolation for safe electrical separation, per IEC 61800-5-1, between the power input/motor connections and the signal electronics.
- Temperature monitoring of the drive and motor.
- Motor overload protection: foldback mechanism
- SIL 2 safe torque off in accordance with IEC 62061

#### Operation and parameter setting

- Using the setup software WorkBench for system setup via TCP/IP connected to X18 of the intelligent power supply AKD-C.

#### Full digital control

- Digital current controller (670 ns)
- Adjustable digital velocity controller (62.5  $\mu$ s)
- Software option position controller (250  $\mu$ s)

#### Inputs/Outputs

- 3 programmable digital inputs → p. 1
- 1 programmable digital outputs → p. 1

#### Extensions

- Optional Feedback Connector X5 and Local fieldbus port X6, drive variant "DF", → p. 1
- Optional Feedback Connector X5 and Local STO input X6, drive variant "DS", → p. 1

## 4 Initial Drive Setup

---

<b>4.1 Initial Drive Setup</b> .....	<b>35</b>
<b>4.2 Startup Display Codes</b> .....	<b>35</b>
<b>4.3 AKD Setup Wizard</b> .....	<b>38</b>

## 4.1 Initial Drive Setup

The [AKD Quick Start Guide](#) provides details for initial drive setup. Initial drive setup consists of the following general steps:

### Hardware Installation:

1. Install the drive on your conductive panel and connect the Protective Earth ground.
2. Connect the logic power you will need to operate all of the control logic to X1.
3. Connect the motor power to X2.
4. Connect the feedback to X10.
5. Connect the inputs and outputs you will be using on X7 and X8.
6. Bring AC power to the unit and connect AC power to X3 or X4.
7. Connect drive communications to X11.
8. Confirm that you can communicate with the drive and that your PC is linked to the AKD.

### Software Installation and Drive Communication Setup:

1. Install and start the interface software (WorkBench).
2. Set the drive IP address using the S1 and S2 switches.
3. Configure the drive using the **Setup Wizard**.

### WorkBench System Requirements

Required Components: Microsoft .NET Framework 4.0

Supported Operating Systems:

- Windows XP
- Windows Vista
- Windows 7
- Windows 8

 
## 4.2 Startup Display Codes

---

4.2.1 AKD Display Codes .....	36
4.2.2 AKD-C Display Codes .....	37

### 4.2.1 AKD Display Codes



During drive operation the drive display shows the following codes depending on the drive status.





Display Code	Status
	Normal operation, current mode, no faults.
	Normal operation, velocity mode, no faults.
	Normal operation, position mode, no faults.
 + [3 digit code, flashing]	Fault (see <a href="#">Fault and Warning Messages</a> ).
 + [3 digit code, flashing]	Warning (see <a href="#">Fault and Warning Messages</a> ).
 + [IP address]	Displaying drive IP address .
	Powered on and FPGA loading. If the display is locked on this code then operational and resident FPGA images are corrupt.
 (fixed)	Drive enabled.
 (flashing)	Drive in dynamic brake mode (DRV.ACTIVE (→ p. 595) = 3).
	Operational started reboot, waiting for the resifnet to start.
	Firmware download: corrupted operational FPGA; resident FPGA is functional.
	Firmware download: HW download (HW switch was pressed - Rev 3 and higher).
	Firmware download: Corrupted operational FW.

Display Code	Status
	Firmware download: SW download (download command was issued from the operational FW).
	Start firmware download.
	Loading image process is running.
	Failure during firmware download.
	Special mode: Burn-in.
	Blackfin Reset.
	Resident loading.
	Resident completed and waiting for the operational to start.
	Kernel Panic.
	Blackfin Exception.

#### 4.2.2 AKD-C Display Codes

  
During drive operation the drive display shows the following codes depending on the drive status. The AKD-C has one LED. All codes with more than one character are displayed sequentially.

Display Code	Status
	No system power (inrush opened).
	Strings not fully powered (inrush closed). AKD-Ns cannot be enabled. The AKD-C has a fault which disables the AKD-Ns and unpowers the strings.

    Display Code	Status
	Strings powered and drives disabled. AKD-Ns cannot be enabled. The AKD-C has a fault which only disables the AKD-N's control board temperature.
	Strings powered and drive operational. All AKD-Ns can be enabled. The AKD-C has no faults and strings are fully powered.
 + [3 digit code, flashing]	Fault (see <a href="#">Fault and Warning Messages</a> ).
 + [3 digit code, flashing]	Warning (see <a href="#">Fault and Warning Messages</a> ).
 + [IP address]	Displaying drive IP address .
	Powered on and FPGA loading. If the display is locked on this code then operational and resident FPGA images are corrupt.
	Drive enabled.
	Download code.
	Special mode: Burn-in.
	Kernel error.
	Resident loading.
	Resident completed and waiting for the operational to start.

### 4.3 AKD Setup Wizard

The Setup Wizard contains step-by-step instructions for configuring a drive for the first time and generating a simple test motion. You can access the Setup Wizard from the Drive Overview screen of an AKD or AKD-N, or by right clicking on the drive name.

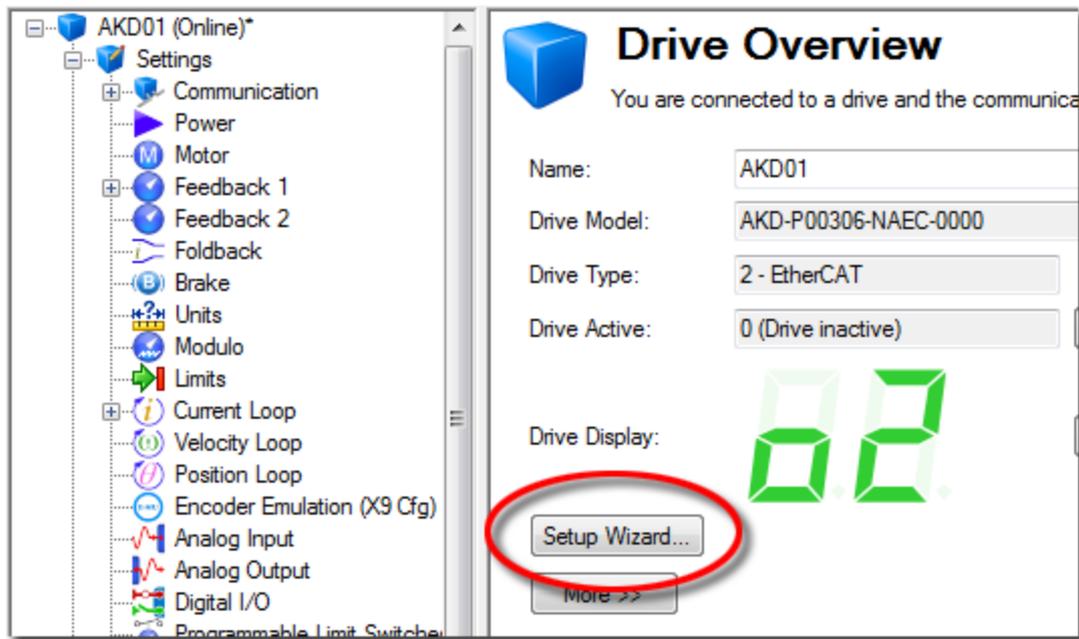

The Setup Wizard is useful during the initial setup. The wizard confirms your connection with the drive and leads you through a series of steps to quickly get your drive up and running. With plug and play feedback devices, several steps are skipped (feedback, brake) because the drive automatically configures these settings. For all systems, you can select the units you want to use, configure your operation mode, tune the system, and perform some simple jog moves within the wizard. After you are comfortable with the basic system setup, you can save your settings to the drive and exit the wizard.

## 5 Connecting the Drive

---

<b>5.1 Connected and Disconnected States</b> .....	<b>41</b>
<b>5.2 Disconnected</b> .....	<b>41</b>
<b>5.3 Confirm Connection with the Device</b> .....	<b>41</b>
<b>5.4 Connect To Another Device</b> .....	<b>41</b>
<b>5.5 TwinCAT and WorkBench configuration</b> .....	<b>42</b>
<b>5.6 Troubleshooting Connection and Communication Problems</b> .....	<b>44</b>

## 5.1 Connected and Disconnected States

WorkBench always starts disconnected from any devices. If a device was previously connected through WorkBench, the **Disconnected** view opens when you restart WorkBench and offers two choices:

- **Connect:** Opens the **Connect to a Drive** view.
- **Delete:** Deletes the selected drive from the WorkBench navigation pane.

While WorkBench is trying to establish communications with the drive, WorkBench is in the connecting state. Normally, WorkBench will be in the connecting state for a few moments before the connection is established. If WorkBench cannot establish communications correctly, then a five second timeout occurs and WorkBench returns to the disconnected state.

## 5.2 Disconnected

When WorkBench is disconnected from a device, no communication exists between your PC and the device. The device becomes disconnected because of one of the following conditions:

- When WorkBench starts it remembers which devices you were using previously, but it does not initially connect to these devices.
- If WorkBench detects that it can no longer communicate with the device, it will automatically go to this disconnected state. Common causes include a network cable being disconnected or the device being turned off.
- The disconnect command was pressed.

To restore communication:

1. Clicking Connect will start communication with the device. If WorkBench cannot find the device, it will immediately return to the disconnected state.
2. Pressing delete will remove this device from the navigation tree on the left hand side of the main window.


## 5.3 Confirm Connection with the Device

If you have more than one device connected to your network, then you can confirm that the new device is connected to the correct network as follows:

1. A seven-segment LED display is located on the front of the device near the top. If you can see the display, then press the **Blink** button from the Overview screen in WorkBench and the device will flash the seven-segment display on and off.
2. If it is difficult to see the display, then you can check the MAC address in the WorkBench list against the MAC address on the label of the device. The device is connected if the numbers displayed in WorkBench match the numbers printed on the label on the side of the device.

## 5.4 Connect To Another Device


Click on [Add New Kollmorgen Device...](#) in the bottom left corner of WorkBench to bring up the following window:

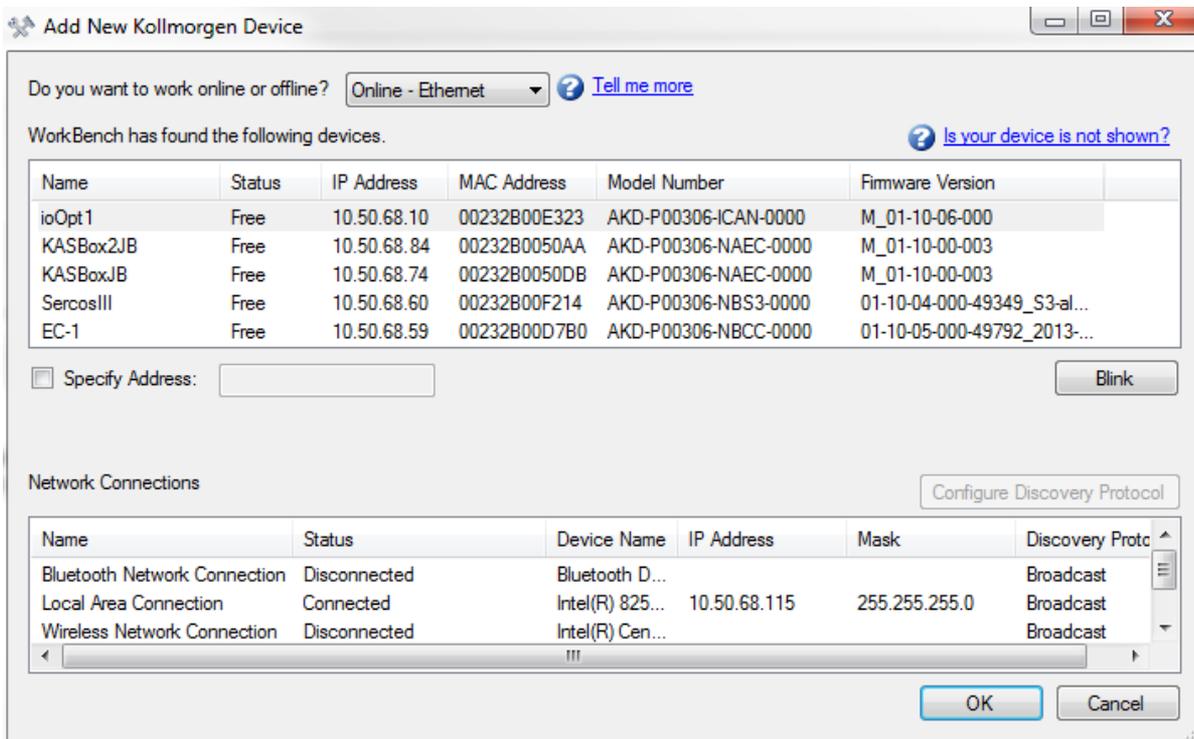


Button or Dialog Box	Description
Name	Displays the device name. By default the name is "No_Name". You can change the name by connecting to the device and navigating to the top item in the navigation tree.
Status	Only one user at a time can connect to a device. If someone else is connected to the device, it is <b>Busy</b> . If <b>Free</b> is displayed, then you can connect.
IP Address	Displays the IP address of the device. You can enter a raw IP address (1.2.3.4) or a DNS name. You can also specify a port number different from the default (port 23) by appending the IP address (for example, 1.2.3.4:1000).
MAC Address	Displays the MAC address of the device. The MAC address is unique and is also printed on the label on the side of the device.
Firmware Version	This is the version of firmware running on the device.
Custom Identifier	This is a custom identifier set by the user (see DRV.CUSTOMIDENTIFIER (→ p. 607)).
Specify Address	If your device does not appear in the list, you can enter its IP address (for example, 1.2.3.4) or a DNS name. You can also specify a port number different from the default (port 23) by appending the IP address (for example, 1.2.3.4:1000).
Blink	Clicking <b>Blink</b> forces the display on the selected device to alternate between the whole display being on and the whole display being off for 20 seconds.
Configure Discovery Protocol	Allows you to select between a Broadcast discover protocol or no discover protocol.

## 5.5 TwinCAT and WorkBench configuration

The EtherCAT network must be setup and managed using TwinCAT System Manager. To be able to connect to a drive and enable it, the drive must be loaded under the I/O Devices node in TwinCAT System Manager and axis must be added to NC - Configuration as shown in the EtherCAT Manual.

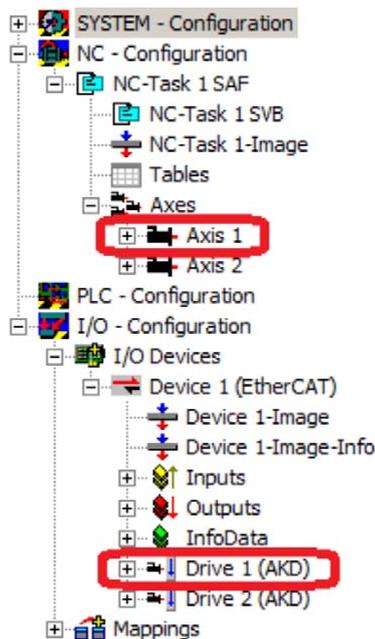


In order to connect to the drives using WorkBench, the drives must be either in Pre-Op, Safe-Op or Op state. State machine for a drive can be accessed from the Online tab for the corresponding drive under the I/O Configuration → I/O Devices → Device [x] → Drive [x] node (see screenshot below).

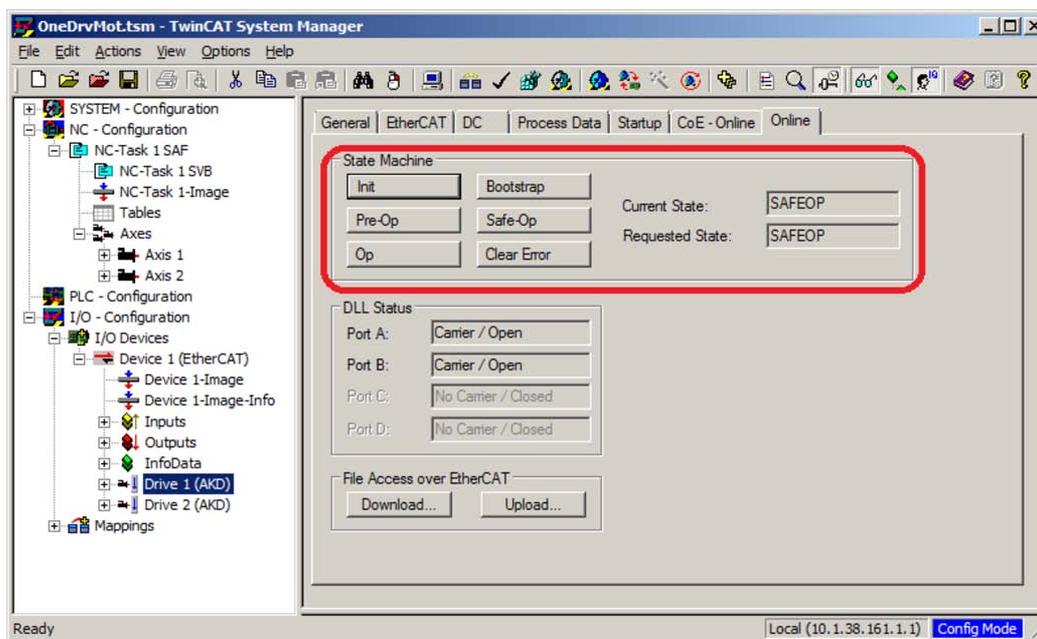


Installation process for WorkBench is the same process as normal, except that it must be installed on the same machine as TwinCAT. Communication to the drive is done thru TwinCAT master and it's not possible to connect WorkBench to the master remotely.

### 5.5.1 Find and Enter AmsNetId

In order to discover a TwinCAT drive, a valid project AmsNetId must be entered in the field below.

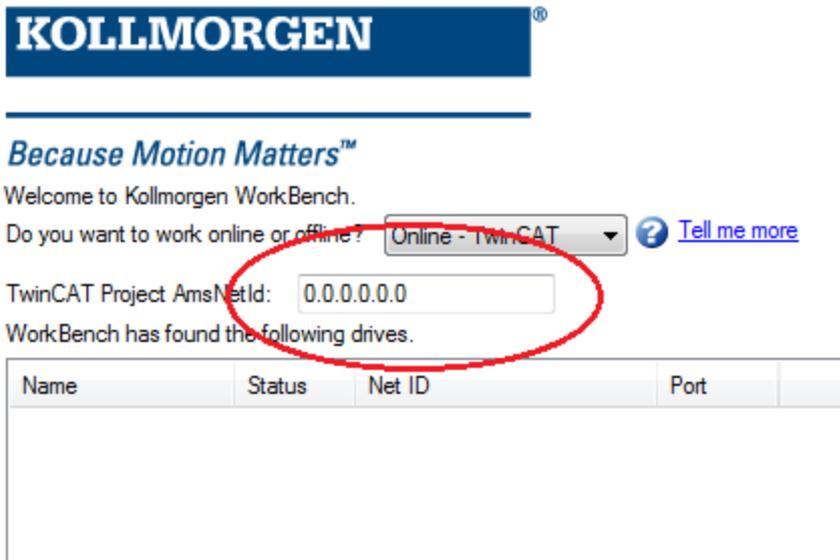

The project AmsNetId can be found in the TwinCAT System Manager under the NetId Management tab in Route Settings. Enter this Id number into WorkBench to discover the drive.

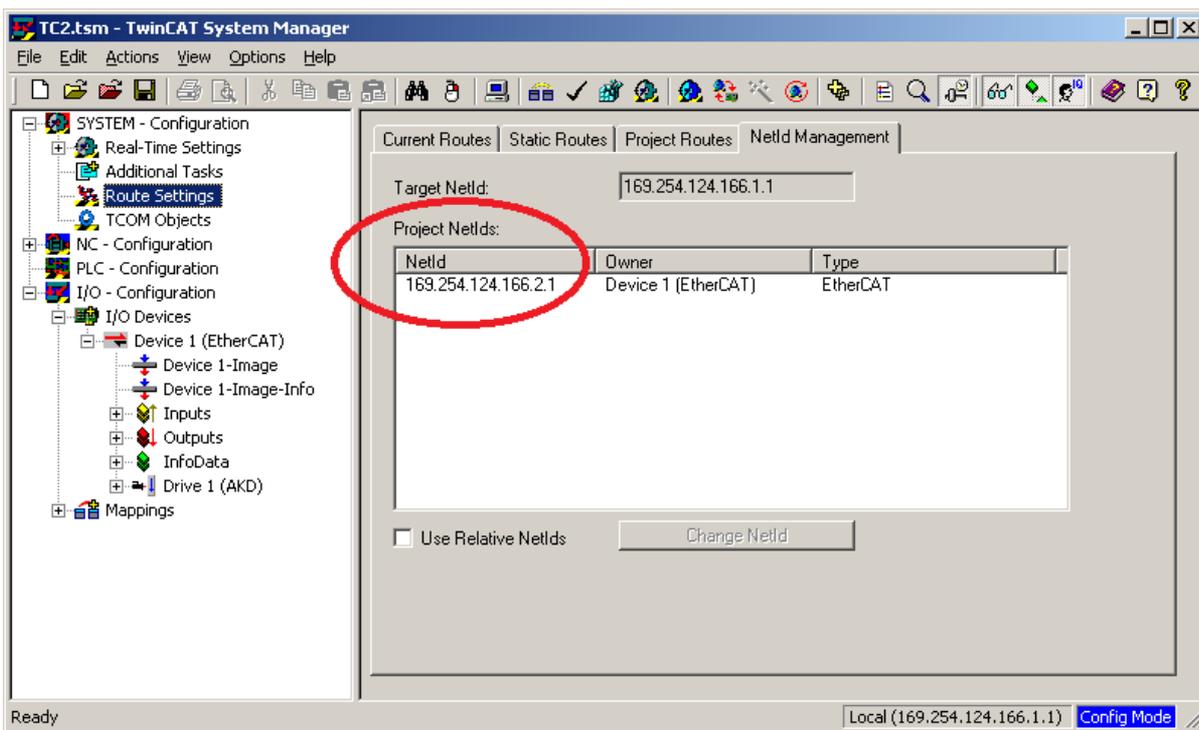

## 5.6 Troubleshooting Connection and Communication Problems

### 5.6.1 Device Not Shown


If your specific device is not shown in the list, then WorkBench has not been able to find the device. Common reasons why your device is not shown in the list include the following:

- The device is not powered on.
- One of the network cables between your PC and the device are not connected correctly. You can check if the cable is connected to the device by checking that the link LED on the Ethernet connector is on continuously. If your PC has a link LED, then you should check that this LED is also continuously lit (usually, this LED is next to the RJ45 socket on your PC).
- A router on the network between your PC and the device is blocking the device discovery messages. Make sure that port 5002 is not blocked by any routers or firewalls. You can enter the IP address of your device directly into WorkBench if a router or firewall is blocking port 5002. Often, firewalls are the cause of a blocked connection.
- Your PC and the device are on different subnets. Networks, especially those with many devices on them, are split up into multiple subnets. The discovery protocol used to find device will only work if your PC and the device are both on the same subnet. You can enter the IP address of the device directly into WorkBench if this is the case.
- The network mask defines more than 512 possible addresses. In this case, WorkBench will not ping all of these addresses, so you must unblock discover ports or specify directly the IP address of your device. When an adapter has such a network mask, its background will be shown as yellow to warn that this network will not be discovered with all discover protocols.

### 5.6.2 Find and Enter IP Address

You can view the device IP address on the device display by pressing the button shown below. The display shows the digits of the IP address in sequence, with dots separating the numbers. You should see four numbers separated by three dots, for example, 192.168.1.5.

You can enter the IP address if you press **More** and check the **SpecifyAddress** box.

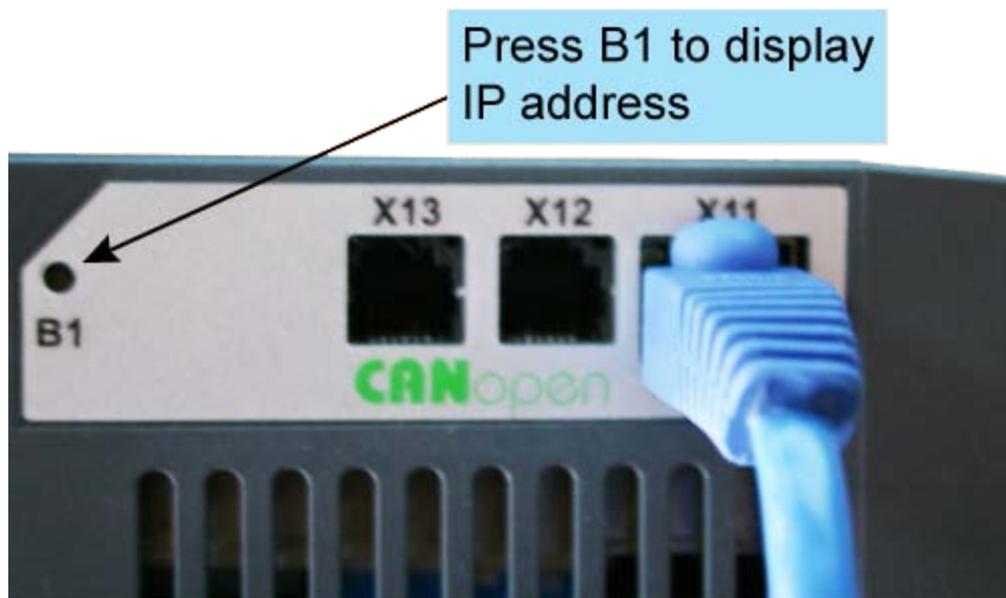

### 5.6.3 TwinCAT Drive Not Shown

If no TwinCAT device is shown, see Find and Enter AmsNetId (→ p. 44)

## 6 Communicating with the AKD

---

<b>6.1 Communication View</b> .....	<b>47</b>
<b>6.2 Setting the IP Address</b> .....	<b>48</b>
<b>6.3 Rotary Switches</b> .....	<b>50</b>
<b>6.4 Using the SD Card</b> .....	<b>52</b>

## 6.1 Communication View


Once the device is connected, the Communication View will display the device type as seen below.



Drive Type:

### 6.1.1 TCP/IP View

This view allows the configuration of TCP/IP properties by selecting the IP Mode from the drop-down menu:

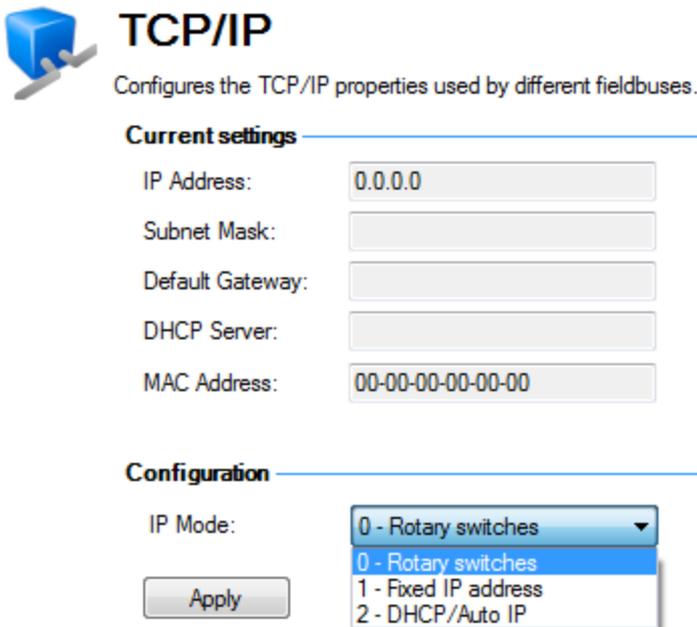

There are three modes under IP Mode on the TCP/IP screen by which the IP address can be set.

#### Mode 0

Rotary Switch(s) (default)

#### Mode 1

Fixed IP address (insert fixed TCP/IP). Use this mode to set a fixed IP address for the drive which is independent of the rotary switches. This is common with Modbus TCP or Ethernet/IP applications. In Mode 1 set the IP address using IP.ADDRESS (→ p. 937), IP.GATEWAY (→ p. 939), and IP.SUBNET (→ p. 945).

#### Mode 2

DHCP/IP independent of the rotary switches. This is the same behavior as setting the rotary switch(s) to "0" in Mode 0, however it allows the user to still use the rotary switch settings. For example, CANopen node address can now be set with the rotary switches while DHCP/AUTOIP is used for the IP address setting.

#### 6.1.1.1 TCP/IP Communication Protocols

##### IP Address

The IP address of a drive uniquely defines the drive on the network. Ethernet requires that every device on a network segment must have a unique IP address.

##### MAC Address

Ethernet also requires that every device must have a globally unique identifier called the MAC address. The MAC address is a 48 bit number normally shown as a series of six hexadecimal numbers (for example, 00:AA:11:BB:22:CC).

Every AKD is given a unique MAC address when it is manufactured and this MAC address cannot be changed. The MAC address of every drive is printed on the sticker on the side of the drive.

### 6.1.2 EtherNet/IP View

The EtherNet/IP view is only available if connected to an EtherNet/IP drive. From this view you can set position units (EIP.POSUNIT (→ p. 706)) and profile units (EIP.PROFUNIT (→ p. 707)). You can also view the state of your connection (EIP.CONNECTED (→ p. 705)).



## EtherNet/IP

Configures the EtherNet/IP fieldbus parameters.

Connected:

Position Units (Pos./Vel./Accel.):  Counts/Position Unit

Profile Units (Vel./Accel.):  Counts/s or /s<sup>2</sup>

## 6.2 Setting the IP Address

### 6.2.1 Overview

In order to use the AKD, you must be able to communicate with the device using WorkBench and an Ethernet connection. The AKD uses TCP/IP. Both the AKD and the PC must connect through this standard in order to communicate.

### 6.2.2 Identifying the Drive IP Address

The first step in establishing communication with the device is to identify the device's IP address. WorkBench and the device find each other using this IP address. You can establish communication through the IP address with two types of connections:

- **Automatic:** Allow the device to automatically acquire an IP address.
- **Direct:** Connect to a device directly based on a known IP address.

Select this connection type from the IP Mode drop-down box in the TCP/IP View (→ p. 47), or by setting IP.MODE (→ p. 941) from the terminal.

#### NOTE

The current IP address can be found at any time by briefly pressing the B1 button. The address will flash sequentially on the front display.

#### 6.2.2.1 Automatic (Dynamic) IP Addressing

Automatic (also called “dynamic”) addressing is performed using the Dynamic Host Configuration Protocol (DHCP). To put the device in DHCP mode, either:

- Set IP.MODE to 2

or

- Set IP.MODE to 0 and set the rotary switch(s) to 0.

The device will acquire its IP address from an external DHCP server if present in the network. If a DHCP server is not present, the device will assume an Automatic Private IP address of the form 169.254.x.x.


If your PC is directly connected to the device, and set to obtain an IP address automatically in the TCP/IP settings, a connection will be established with both devices using compatible automatically generated addresses. It can take up to 60 seconds for a PC to configure an Automatic Private IP Address (169.254.x.x). When first communicating with the device, conflicts might exist with other programs or devices connected to your computer that are competing for IP addresses. If you have a problem recognizing a device, then try turning off other devices (especially a wireless device or remote network connection). If you still have problems connecting with the device, refer to Troubleshooting Connection and Communication Problems (→ p. 44).

### 6.2.2.2 Static IP Addressing — Rotary Switches

Another option for connecting to the device is using a static IP connection. In this case a specific IP address is assigned to the device and the PC network configuration is modified to be able to recognize the static address. The device's IP address can be set using the rotary switch(s) on the front of the drive. IP.MODE must be set to 0.

#### NOTE

When all of a device's rotary switches are set to 0, the device is in Automatic (Dynamic) IP addressing.

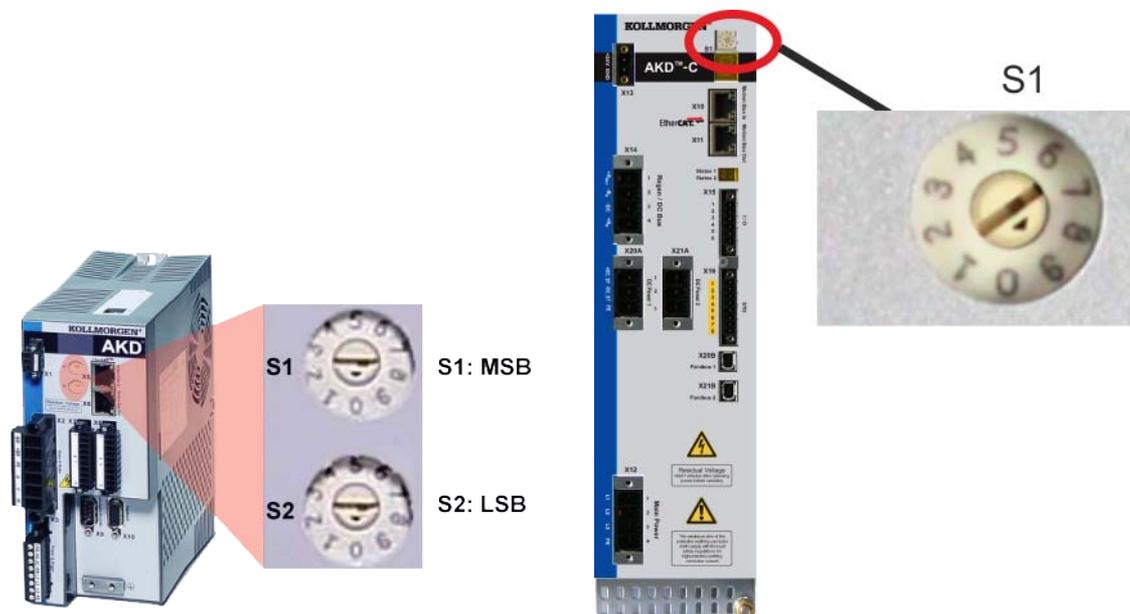

#### Devices with Two Rotary Switches

For drives with two rotary switches, the address will be set as 192.168.0.S1S2, with S1 representing the 10's digit and S2 the 1's digit. As you turn the switches, the drive displays the S1 and S2 values.

**Example:** S1 is set to 3, S2 is set to 5, the address now is set to: 192.168.0.35.

If the rotary switch is altered while 24 V Logic power is supplied to the AKD, you must turn the 24 V supply voltage off and then on again. This action will reset the address.

In order for the drive to connect to the PC, the PC network configuration must find this address. First, identify which network port you are using to communicate with the drive. Once you have identified the port, you can access the properties area of the network connection (on your PC) and set up the proper masking to allow the two devices to communicate. The configuration is set up in the "Use the following IP address:". Set the IP address to 192.168.0.100 and the Subnet mask to 255.255.255.0. This allows the two devices to recognize each other and connect point to point (note that S1 = 0 and S2 = 0 is automatic (dynamic) IP addressing).

#### Devices with One Rotary Switch

When connecting to the AKD-C, static IP addressing uses one rotary switch. Set rotary switch S1 to a number from 1 to 9. This setting generates addresses in a range from 192.168.0.01 to 192.168.0.09.

**Example:** if S1 is set to 5, then the IP address is 192.168.0.05

If the rotary switch is altered while 24 V Logic power is supplied to the AKD-C, you must turn the 24 V supply voltage off and then on again. This action will reset the address.

S1 Setting	AKD-C IP Address
1 to 9	Static IP Address. The IP address is 192.168.0.0n, where n is the number from the rotary switch. This setting generates addresses in a range from 192.168.0.02 to 192.168.0.09. Example: if S1 is set to 5 – the IP address is 192.168.0.05

### 6.2.2.3 Static IP Addressing — Software Assigned

Full IP Addressing can be accomplished using four keywords accessible using terminal commands:

- IP.MODE: set Mode=1 to set a static IP address.
- IP.ADDRESS: specifies the address of the device.
- IP.SUBNET: specifies the subnet mask that the device can communicate with.
- IP.GATEWAY: specifies the gateway IP address if the device needs to communicate outside of its specified subnet.

Once the IP address has been properly configured using those four keywords, the IP.RESET (→ p. 943) command must be issued from the terminal. This will immediately implement the settings that have been configured. These settings must be saved to the device (DRV.NVSAVE) to remain in effect after power has been removed and restored.

### 6.2.2.4 Recovering communications with a device on an un-reachable IP address

Sometimes a device may be configured for an IP Address, and the device needs to be taken offline, and bench tested, or otherwise used outside of its saved IP Settings. If IP.MODE has been set to 1 (using software defined static IP) the device will boot up on an IP Address that may be unreachable with the host computer's settings.

If the IP address prevents communication, the IP settings can be reset to default by the following procedure:

- Set the rotary switch(s) to 0
- Hold down button B1 (top-side of device) for 5 seconds.

The display will flash 0.0.0.0 and then attempt to discover an address by DHCP. Without removing logic power from the device, use WorkBench to connect to the device, reconfigure the IP address settings as desired, and store the values to non-volatile memory.


## See Also

Rotary Switches (→ p. 50) | Communication View (→ p. 47) | Troubleshooting Connection and Communication Problems (→ p. 44)

## 6.3 Rotary Switches

### 6.3.1 Overview

The rotary switches on the AKD are used for configuring the device without the need for a GUI. Different functions are available in different IP Modes and with different device models:

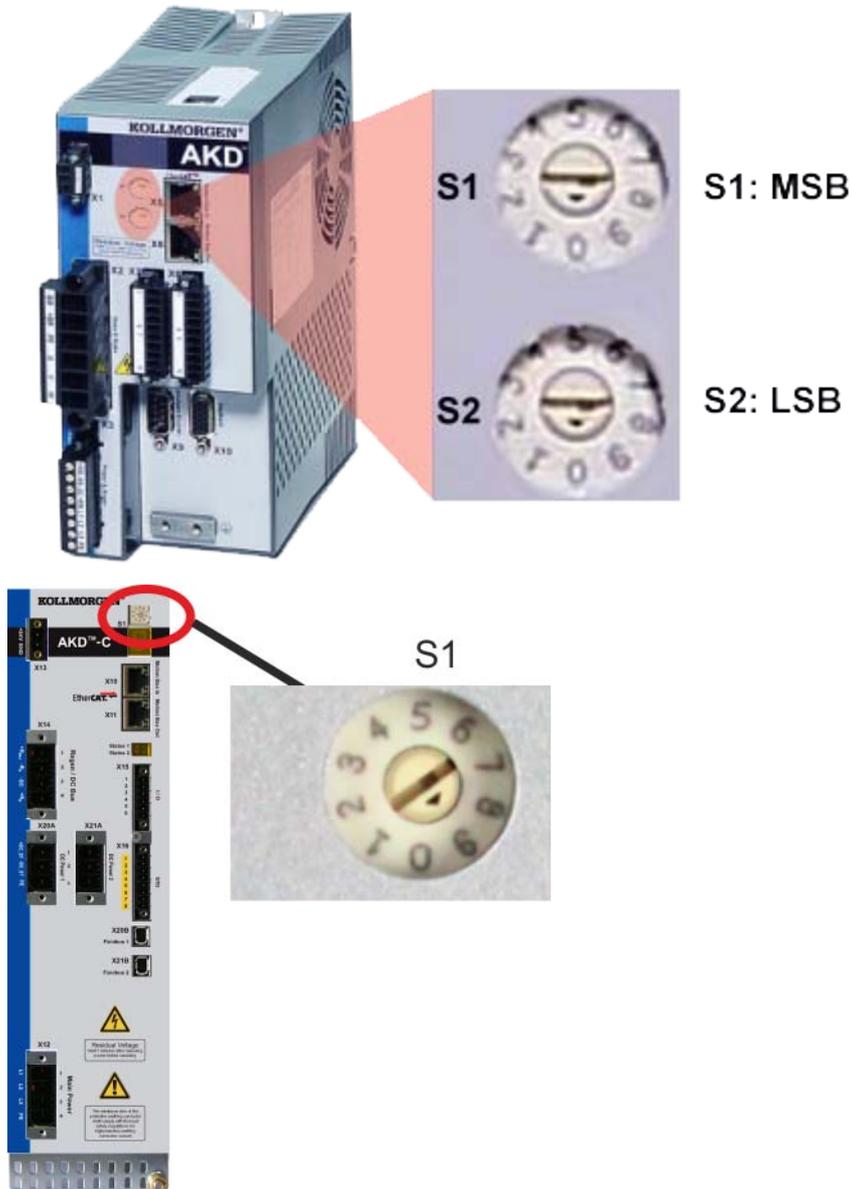

### 6.3.2 Rotary Switch Functions in IP.MODE 0

When IP.MODE is set to 0, the rotary switch(s) can be used for static IP addressing. See Setting the IP Address (→ p. 48) for more information.

### 6.3.3 Rotary Switch Functions in IP.MODE 0, 1, or 2

The following rotary switch settings can be used while IP.MODE is set to 0, 1, or 2. After setting the rotary switch(s), hold down the B1 button on the top of the device for 5 seconds.


S1	S2	Function
0	0	Resets IP address
1	0	Load drive state from SD card to AKD.
1	1	Save current drive state to the SD card.
1	2	Stops BASIC program execution in the drive.
1	3	Starts/restarts BASIC program in the drive.

S1	S2	Function
8	9	Switches DRV.TYPE between EtherCAT and CAN (See CAN-Bus activation with -CC models in the CANopen manual).
9	0	Sets baud rate to auto (See Baud Rate for CAN-Bus in the CANopen manual).
9	1	Sets baud rate to 125 (See Baud Rate for CAN-Bus in the CANopen manual).
9	2	Sets baud rate to 250 (See Baud Rate for CAN-Bus in the CANopen manual).
9	3	Sets baud rate to 500 (See Baud Rate for CAN-Bus in the CANopen manual).
9	4	Sets baud rate to 1000 (See Baud Rate for CAN-Bus in the CANopen manual).

## 6.4 Using the SD Card

### 6.4.1 Overview

The SD Card slot on the AKD is used for backing up and transferring the parameter file and the compiled program file of a drive. This feature is only available on AKD's with I/O option cards.

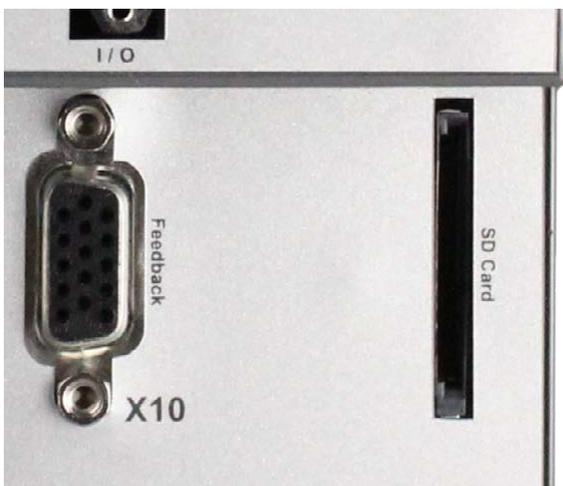

### 6.4.2 Save/Load with the SD Card

 
The following methods are available for saving data to the SD Card, or loading data from the SD Card to drive. Confirm that an SD Card is inserted into the drive slot before performing any of these functions.

#### NOTE

For the drive to recognize and load the parameter file and compiled program file, these files must be named **drive.akd** and **program.bin**, respectively.

#### 6.4.2.1 Save/Load from the Parameter Load/Save Screen:

From WorkBench select the Parameter Load/Save screen from the navigation tree of the appropriate drive. Select either **Load From SD Card...** or **Save To SD Card...** from the list of options



#### 6.4.2.2 Save/Load using SD.SAVE and SD.LOAD:

Call SD.SAVE (→ p. 1174) or SD.LOAD (→ p. 1173) from the WorkBench terminal to execute either command. These commands can only be executed when the drive is in the idle state (i.e. a program is not running) and the drive is disabled.

#### 6.4.2.3 Save/Load using Rotary Switches:

If a computer is not connected to the drive, the save or load command can also be issued using the Rotary Switches (→ p. 50) S1 and S2. Execute either command by selecting the desired rotary switch settings from the table below, and holding down B1 for 5 seconds.

S1	S2	Function
1	0	Load drive state from SD card to AKD
1	1	Save current drive state to the SD card.

#### 6.4.2.4 Save from PC

If you have drive files on a PC, but do not wish to connect to a drive in order to save them to the SD card, you can also save the files using the PC's resident SD card slot, or an external card reader. Note that for a drive to recognize and load the parameter file and compiled program file, these files must be named **drive.akd** and **program.bin**, respectively.

## 7 Using WorkBench

---

<b>7.1 Welcome Screen</b> .....	<b>55</b>
<b>7.2 Online</b> .....	<b>55</b>
<b>7.3 Offline</b> .....	<b>56</b>
<b>7.4 Device Overview</b> .....	<b>56</b>
<b>7.5 Watch</b> .....	<b>58</b>
<b>7.6 Settings</b> .....	<b>58</b>

## 7.1 Welcome Screen

This view lets you select which AKD drive you wish to work with. You can work with a physical drive via the Ethernet port of your PC ([online](#)) or with a drive simulation ([offline](#)).

**KOLLMORGEN** [Learn more about this topic](#)  
[Quick Start Guide](#)

*Because Motion Matters™*

Welcome to Kollmorgen WorkBench.

Do you want to work online or offline? Online - Ethernet [Tell me more](#)

WorkBench has found the following devices. [Is your device is not shown?](#)

Name	Status	IP Address	MAC Address	Model Number	Firmware Version	Custom Identifier
AKD-SQ9.2	Free	10.50.65.33	00271B00D3AF	AKD-B00306-NBSQ-0000	01-12-00-000-57235_SQ_2...	-
C_000001	Free	10.50.65.57	00271C050001	AKD-C01007-CBEC-0000	M_01-12-00-002	-
HWLAB1	Free	10.50.65.25	00271B03D7AC	AKD-P00306-NBAN-0000	M_01-12-00-000	-
IoOpt3	Free	10.50.65.59	00271B00E5AC	AKD-P00306-ICAN-0000	M_01-12-00-000	-
JPB	Free	10.50.65.27	00271B00F014	AKD-P00306-NBCN-0000	01-12-04-000-59030-alpha	-

Specify Address:

Network Connections

Name	Status	Device Name	IP Address	Mask	Discovery Proto...
Local Area Connection	Connected	Intel(R) Eth...	10.50.65.39	255.255.255.0	Broadcast
Wireless Network Connection	Disconnected	Intel(R) Dua...			Broadcast

## 7.2 Online

Select **Online** to display a list of the AKD devices that WorkBench has found on your local network. You can select one of these devices from the list and click **Next** to continue. This will connect you to the device and you will be given the option to use a setup wizard if your device is a drive.

Button or Dialog Box	Description
Name	The name that someone has given the drive. By default, the name is "No_Name". You can change the name by connecting to the drive and navigating to the top item in the navigation tree.
Status	Only one user can connect to an AKD at a time. If someone else is connected to the drive, then the status is <b>Busy</b> . If no one is connected to the drive, then the status is <b>Free</b> and you will be able to connect.
IP Address	This is the IP address of the drive.
MAC Address	This is the MAC address of the drive. The MAC address is unique and is also printed on the label on the side of the drive.
Firmware Version	This is the version of firmware running on the device.
Custom Identifier	This is a custom identifier set by the user (see DRV.CUSTOMIDENTIFIER (→ p. 607)).
Specify Address	If your drive does not appear in the list, you can enter its IP address (e.g. 1.2.3.4) or a DNS name. You can optionally specify a port number different than the default port 23 by appending it. For example, 1.2.3.4:1000 would be port 1,000.
Blink	Clicking <b>Blink</b> will force the display on the selected drive to repeatedly flash the display LEDs.

### 7.3 Offline

Select **Offline** to display a setup screen for the different models that WorkBench can simulate. Once you have made your selection, click **Create** and the **Overview** screen for the Offline drive opens.

### 7.4 Device Overview

Once your device is connected, the **Device Overview** shows a summary of the device that you are using.

**Drive Overview**  
You are using an offline drive.

Name:

Drive Model:

Drive Type:

Drive Active:   i The drive is inactive because:  
The software enable is not active.  
The hardware enable is not active.

Drive Display:   ? [Tell me more](#)

You can view or edit the following information from the Overview window.

Button or Dialog Box	Description	Parameter
Name	Names each device in use with a unique identifier.	DRV.NAME (→ p. 674)
Device Model	Displays the model number of this device. The model number is also on the label on the side of the device. If you are <a href="#">offline</a> , then you can change the type of device that you are simulating.	DRV.INFO (→ p. 663)
DeviceType	Selects the operational fieldbus for your device.	DRV.TYPE (→ p. 694)
Drive State	The device is active when it is enabled and also supplies voltage to the motor.	DRV.ACTIVE (→ p. 595)
Enable	Click <b>Enable</b> to turn on the power stage in the drive and apply voltage to the motor. This command may fail for many reasons; see "DRV.EN " (→ p. 642) for further details.	DRV.EN (→ p. 642)
Disable	Click Disable to turn off the power stage and remove the voltage applied to the motor.	DRV.DIS (→ p. 616)

Button or Dialog Box	Description	Parameter
Device Display	This graphic replicates the two-digit seven-segment display located on the front face of the drive. The seven-segment display shows a code that indicates the state of the drive and any faults that may be present. WorkBench shows a copy of what the drive display currently shows. A key to the display is <a href="#">here</a> .	
Blink	Click Blink to force the display to alternate between the whole display being on and the whole display being off for 20 seconds. You can use this button to confirm that you are communicating with the correct drive hardware.	DRV.BLINKDISPLAY (→ p. 597)
Setup Wizard	The <a href="#">Setup wizard</a> takes you through the essential configuration steps so that you can control the motor movement.	
More	Click <b>More</b> to display <b>Serial Number</b> , <b>Firmware Version</b> , <b>Cumulative On Time</b> , and <b>Update Firmware</b> .	
Serial Number	This text box displays the unique serial number of the drive you are communicating with. The serial number is also shown on the label on the side of the drive.	DRV.INFO (→ p. 663)
Firmware Version	This text box displays the version of the firmware code running inside the drive.	DRV.VER (→ p. 696)
Download	Click <b>Download</b> to retrieve the latest AKD firmware from Kollmorgen. See Downloading Firmware (→ p. 294)	
Cumulative On Time	This text box displays the cumulative time this drive has been powered on. When the drive is powered on, this value continues counting from the value it had when the drive was last turned off.	DRV.RUNTIME (→ p. 686)
Update Firmware	Use this box to select the firmware version you want your drive to run.	

### 7.4.1 Online and Offline

WorkBench allows you to work online (working with a real drive) or offline (working without any drive hardware).

#### 7.4.1.1 Online Drive

An "online drive" means that WorkBench is working with a specific physical drive on your network.

Each online drive can either be connected to WorkBench (WorkBench has an active connection with the drive and data is being passed between WorkBench and the drive) or it can be disconnected (there is no communication between WorkBench and the drive). If communications are lost (for example a network cable is disconnected) with a drive then WorkBench will switch the drive to the disconnected state.

Only one PC can be connected to a drive at a time.

#### 7.4.1.2 Offline Drive

An offline drive allows you to use WorkBench without having any drive hardware. The parameters of a drive are simulated within WorkBench. An offline drive allows you to create a drive configuration as well as explore the different screens within WorkBench. Because this is a simulation, there are a number of operations that are not possible (for example commanding motion).

#### 7.4.1.3 Switching Between Online and Offline

WorkBench does not allow you to change a drive instance from offline or online. If you wish to move a configuration between two devices that you can save the parameters to a file and then import this parameter file into a new drive you have created.

## 7.5 Watch

This window allows you to view the current value of selected information from the drive. You can toggle the window on/off by clicking the glasses on the tool bar .

The watch window displays at the bottom of the WorkBench screen. By default, the watch window shows position, velocity, and current for the selected drive. The list can be customized as shown below.

Button or Dialog Box	Description
Add	Adds a new parameter to the watch list.
Edit	Allows you to modify the selected item.
Delete	Removes the selected items from the list.
Move Up	Moves the selected items up one place in the list.
Move Down	Moves the selected items down one place in the list.

## 7.6 Settings

### 7.6.1 Navigation Tree

The Settings view allows you to configure the drive to fit your specific application. When you click Settings in the navigation pane located to the left of the WorkBench screen, additional views for configuring your drive appear. By default, only settings applicable to your current drive operation mode and command source will appear in this tree. To show all settings available for the AKD (even if these settings are not used with the current operation mode and command source), right click on **Settings** and select **Show all Settings**.

#### NOTE


The AKD-C does not have a Settings view. Clicking on Settings will lead to the Power View. Each AKD-N node on the AKD-C's strings has a Settings view.

### 7.6.2 Settings View

From the main Settings view, you can configure the following drive settings:

# Settings

Select which mode of operation and command source the drive should work in.

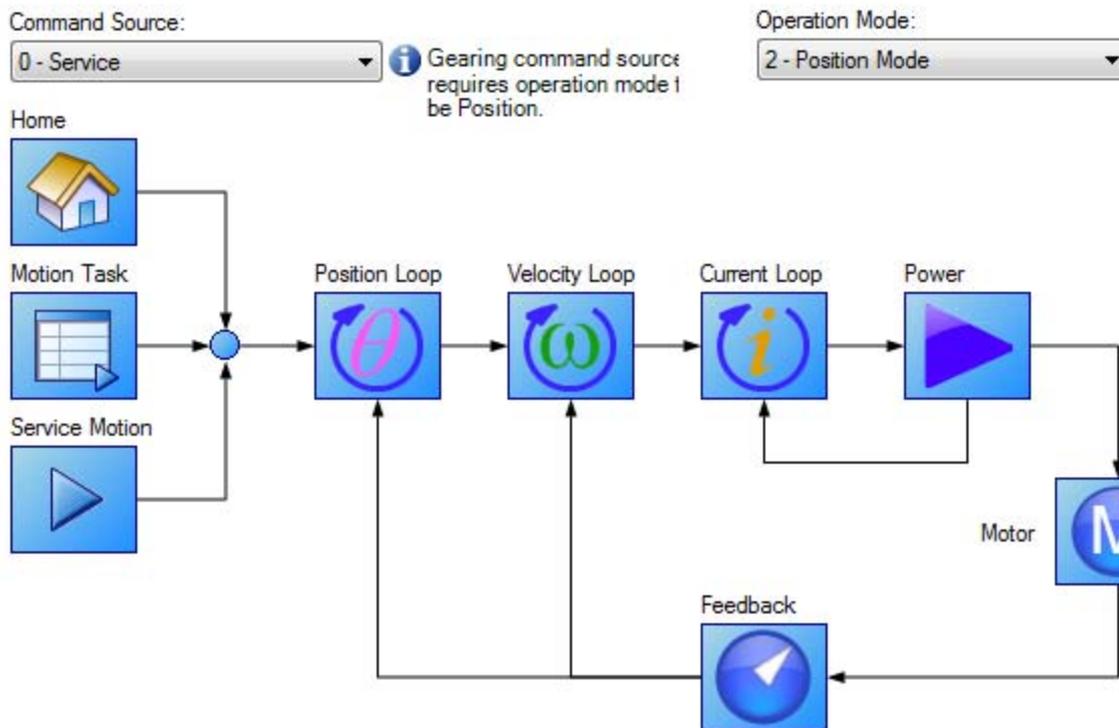

Button or Dialog Box	Description
Command Source	Selects where the command is being provided: 0-Service: You communicate with the drive using the TCP/IP service channel. 1-Fieldbus: The drive is being controlled by commands coming over the fieldbus. 2-Gearing: The position is proportional to the secondary feedback. 3-Analog: The analog input provides a current, velocity, or position command.
Operation Mode	Selects the control loop being commanded from the source: 0-Torque Mode: Drive controls are based on the current passing through the motor. For a rotary motor, this value is proportional to the torque of the motor; for linear motors, this value is proportional to the force the motor generates. 1-Velocity Mode: Drive controls are based on the velocity of the motor. 2-Position Mode: Drive controls are based on the position of the motor.
Motion and Control Loop Graphics	Allows you to select the details related to each specific loop from a graphical interface.

## Related Topics

Using Command Source and Operating Modes (→ p. 138) for details on configuring the drive for your application.

## 8 Configuring Drive Power

---

<b>8.1 Power</b> .....	<b>61</b>
<b>8.2 Operating Voltage</b> .....	<b>61</b>
<b>8.3 Direct DC Mains Operation</b> .....	<b>61</b>
<b>8.4 Regeneration</b> .....	<b>63</b>

## 8.1 Power

### 8.1.1 Drive Setup for Power and Bus

The **Power** screen allows you to confirm Power Bus settings. Review the data on the screen to be certain the bus voltage is at the appropriate levels you expect (approximate input line AC voltage \* 1.4). The other values are the appropriate limits for over voltage and under voltage for the particular drive. You can select the under voltage fault mode to trigger either only when the drive is enabled or always.

External Regeneration (→ p. 63) parameters can be set from the Regen screen.

From the **Power** screen, you can view and configure the drive power settings as follows:

Button or Dialog Box	Description	Parameter
Measured Bus Voltage	Reads the current DC bus voltage.	VBUS.VALUE (→ p. 1249)
Over Voltage Fault Level	Reads the over voltage fault level.	VBUS.OVFTHRESH (→ p. 1242)
Under Voltage Fault Level	Reads the under voltage fault level.	VBUS.UVFTHRESH (→ p. 1245)
Operating Voltage	Sets the operating voltage.	VBUS.HALFVOLT (→ p. 1240)
Under Voltage Fault Mode	Sets under voltage mode.	VBUS.UVMODE (→ p. 1246)

See Regeneration (→ p. 63) for more information about regen resistors and sizing regen resistors.

## 8.2 Operating Voltage

Operating voltage can be selected by the user to allow AKD-xxx07 (480VAC) drives to work on 240VAC input supplies.

The VBUS.HALFVOLT parameter has an effect on the following voltage-thresholds:

- DC-bus over-voltage threshold (see VBUS.OVFTHRESH (→ p. 1242)).
- The regen-resistor enable/disable voltage thresholds.
- The inrush-relay enable/disable voltage thresholds.

A power-cycle is needed after changing the value and saving the parameter on the NV memory of the Drive, since the voltage thresholds mentioned above are read during the boot-sequence of the Drive.

## 8.3 Direct DC Mains Operation

Direct DC input is available on all standard AKD models. The DC input should be run into the AC input connection. Positive and negative DC lines should use L1 and L2 connections (polarity is not critical). L1 and L2 connections are found on either the X3 connector or the X4 connector depending on the model.

(see Mains supply connection (X3, X4) (→ p. 309) for more information on this connection).

The nominal level of DC voltage applied must be compatible with the voltage fault levels in the drive. You must also consider voltage variations in the DC power supply above and below the nominal value so that nuisance faults are avoided.

When you determine the maximum nominal DC voltage applied to the drive, you should also consider the regeneration circuit, in addition to the over voltage level. Running the drive slightly below the over voltage level is not possible because the drive does not have the capability to dissipate regenerated energy. This practice can also be harmful to the regen circuit. A good practice is not to exceed the nominal DC voltage produced by a standard AC installation.

For the AKD-xzzzz06, 340 VDC is the equivalent DC voltage for a 240 VAC supply and for the AKD-xxxxx07, 680 VDC is the equivalent DC voltage for a 480 VAC supply.

The voltage fault levels are also shown in the **Power** screen and depend on the voltage level of drive used.

Voltage ranges are as follows:

Model	Under Voltage Level	Over Voltage Level
AKD-xzzzz06	90 VDC	420 VDC


Model	Under Voltage Level	Over Voltage Level
AKD-xzzz07	380 VDC	840 VDC

You can view bus voltage values in the **Power** screen as shown below:



## Power

Monitor and configure the different power values.

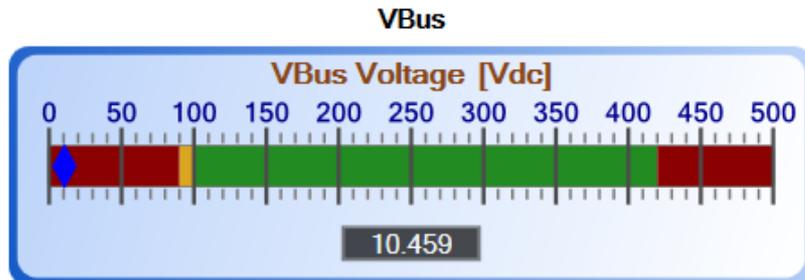

### Voltage

Over Voltage Fault Level:  Vdc

Under Voltage Fault Level:  Vdc

Operating Voltage:

Under Voltage Fault Mode:



## 8.4 Regeneration

### 8.4.1 Overview

Regeneration, or "shunting", dissipates energy from the DC bus during deceleration of the motor load. During deceleration, the motor acts as a generator that pumps energy back into the system. If this energy is not dissipated, then the bus energy level can exceed acceptable levels (VBUS.OVFTHRESH (→ p. 1242)). If the system exceeds the maximum bus voltage, then the drive generates an over voltage fault (F501) and shuts down. A regeneration resistor, or regen resistor, is an external device that dissipates excess energy and allows the drive to function normally during deceleration.

Follow these steps to determine the regen needs for your system and to configure the drive for regen:

1. Calculate motor peak and continuous regenerative energy and use this value to size the regen resistor.
2. Select a compatible regen resistor.
3. Configure regen parameter values in WorkBench.

From the Regen view, the following drive regen settings can be viewed and configured.

Button or Dialog Box	Description	Parameter
Regen Resistor Type	Sets the regen resistor type to either <b>-1-External Regen</b> or <b>0-Internal Regen (if available)</b> .	REGEN.TYPE (→ p. 1166)
External Regen Resistance	Sets the external, user-defined regen resistor resistance (only visible for external regen).	REGEN.REXT (→ p. 1163)
External Regen Heat Up Time	Sets the external regen resistor thermal protection time constant (only visible for external regen).	REGEN.TEXT (→ p. 1164)
External Regen Power	Sets the regen resistor's power fault level for an external regen resistor (only visible for external regen).	REGEN.WATTEXT (→ p. 1168)
Regen Power	Reads the regen power (only visible for external regen).	REGEN.POWER (→ p. 1159)

### 8.4.2 Regen Resistor Options

Select "-1 External Regen" from the **Regen. Resistor Type** box (REGEN.TYPE (→ p. 1166)) to view the **Select Resistor** drop-down box.

The **Select resistor** drop-down contains pre-sized resistors for your drive. Select the model regen resistor that you are using and the drive will populate the remainder of the fields. If you are using a nonstandard resistor, then choose **<User defined>** and fill in the appropriate values for your resistor.

#### NOTE

If you use a nonstandard resistor, contact Kollmorgen technical support to confirm that

**NOTE**

the nonstandard resistor will work correctly with your system.

### 8.4.3 Calculating Motor Peak Energy and Regen Resistor Size

In order to determine whether or not your system requires a regen resistor, you must calculate the peak kinetic energy that the motor generates during deceleration and the continuous regeneration energy created by the motor. If this energy exceeds the drive capacity, then you need a regen resistor. In many cases, peak or continuous regenerated energy does not exceed the drive capacity and no regen resistor is needed.


The calculation for peak kinetic energy requires values for several factors that affect the generation of energy in a motion system:

- Load inertia
- Motor inertia
- Motor speed from which deceleration occurs
- Time required to decelerate

Regen resistor sizing information for your particular application can be calculated using the Motioneering® Application Engine. You can download this program here:

[http://www.kollmorgen.com/website/com/eng/support/design\\_tools/motioneering.php](http://www.kollmorgen.com/website/com/eng/support/design_tools/motioneering.php)

After you install and set up this program, highlight your application (1) and then click on the Power Supply Sizing icon (2).

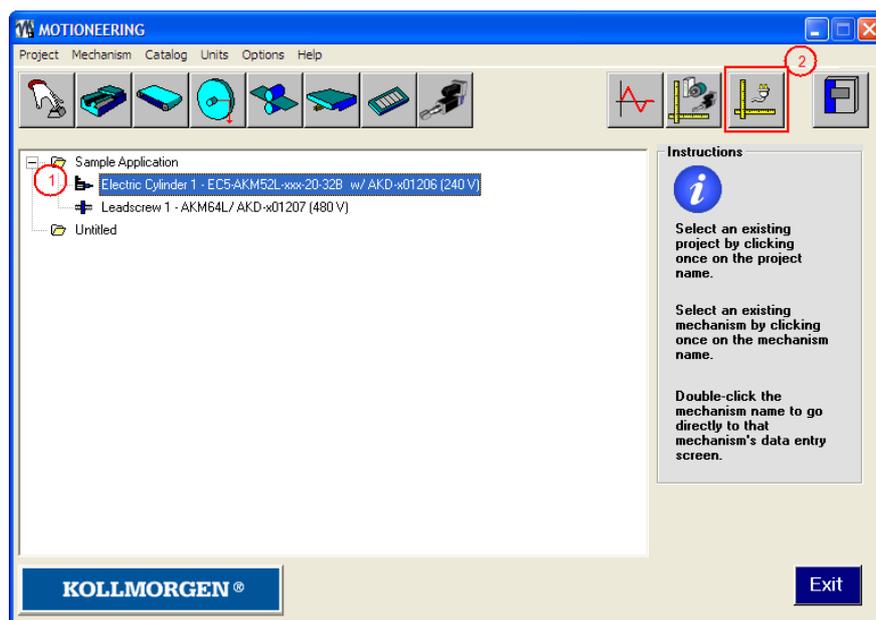

The application then displays the regen sizing tool; see the application help for further sizing assistance.

**Power supply sizing**

Project: Sample Application      List drives of type: AKD

Mechanism	Selected system	% rated power	watts
Leadscrew 1	AKM64L7 AKD-x01207 (480 V)	57.8	3050.8

**Bus power**

Determine by:

- Continuous mechanism load
- Mechanism with motion profile
- Estimated machine tool duty
- Maximum rated system power
- Custom

**Power requirements**

3050.8 Bus watts

**Regeneration**

Determine by:

- Simultaneous peak deceleration
- 20.0 % Duty cycle
- Motion profile

**Regeneration requirements**

178.0 Regeneration watts (avg.)

198.5 Maximum resistance (ohms)

2796.5 Regeneration watts (peak)

**Instructions**

Select one or more systems by holding down control key for combined requirements. Select bus power and regeneration methods, and results will be automatically calculated.

**NOTE**

Multiple servo amplifiers can be coupled via the DC bus connection and thus share the combined regeneration power.

**Exit**

### 8.4.4 Selecting a Compatible Regen Resistor

After you calculate the appropriate resistor size, compare the results with the capabilities of the drive and, if necessary, select an external regeneration resistor which matches these capabilities from the chart below. The resistors shown below are included in the WorkBench setup. If you do not find a match for your application, please contact the Kollmorgen customer support team for further assistance.

NA Part Number	EU Part Number	Resistor Type	AKD-x00306	AKD-x00606	AKD-x01206	AKD-x02406	AKD-x00307	AKD-x00607	AKD-x01207	AKD-x02407
BAFP-100-33	DE-201437	External Resistor, 100 W, 33 ohms	x	x			x	x	x	
BAFP-200-33	DE-201438	External Resistor, 200 W, 33 ohms	x	x			x	x	x	
BAR-250-33	DE-106254	External Resistor, 250 W, 33 ohms	x	x			x	x	x	
BAR-500-33	DE-106255	External Resistor, 500 W, 33 ohms	x	x			x	x	x	
BAR-1500-33	DE-106258	External Resistor, 1500 W, 33 ohms	x	x			x	x	x	
BAS-3000-33	DE-201407	External Resistor, 3000 W, 33 ohms	x	x			x	x	x	
BAR-600-23	DE-200613	External Resistor, 600 W, 23 ohms								x
BAR-1000-23	DE-200614	External Resistor, 1000 W, 23 ohms								x
BAS-2000-23	DE-200615	External Resistor, 2000 W, 23 ohms								x
BAS-3000-23	DE-200616	External Resistor, 3000 W, 23 ohms								x
BAS-4000-23	DE-200617	External Resistor, 4000 W, 23 ohms								x
BAR-500-15	DE-201439	External Resistor, 500 W, 15 ohms			x	x				
BAR-1000-15	DE-201440	External Resistor, 1000 W, 15 ohms			x	x				
BAS-2000-15	DE-103871	External Resistor, 2000 W, 15 ohms			x	x				

NA Part Number	EU Part Number	Resistor Type	AKD-x00306	AKD-x00606	AKD-x01206	AKD-x02406	AKD-x00307	AKD-x00607	AKD-x01207	AKD-x02407
BAS-3000-15	DE-103872	External Resistor, 3000 W, 15 ohms			x	x				
BAS-6000-15	DE-103873	External Resistor, 6000 W, 15 ohms			x	x				

### 8.4.5 Configuring Regen Parameter Values

If you use an external regen resistor, then you must configure three regen parameter values. These values are automatically inserted in WorkBench if the resistor is pre-sized. The chart below summarizes these three additional values:

- **External Regen Resistance** (REGEN.REXT, ohms)
- **External Regen Heat Up Time** (REGEN.TEXT, seconds)
- **External Regen Power** (REGEN.WATTEXT, watts)

These parameters allow the regen resistor to function properly and dissipate power appropriately for your system.

NA Part Number	EU Part Number	Resistor Type (all resistors UL recognized)	Resistance ohms (REGEN.REXT)	Heat Up Time s (REGEN.TEXT)	Power Rating W (REGEN.WATTEXT)
BAFP-100-33	DE-201437	External Resistor, 100 W, 33 ohms	33	16.5	100
BAFP-200-33	DE-201438	External Resistor, 200 W, 33 ohms	33	27.5	200
BAR-250-33	DE-106254	External Resistor, 250 W, 33 ohms	33	22.0	250
BAR-500-33	DE-106255	External Resistor, 500 W, 33 ohms	33	33.0	500
BAR-1500-33	DE-106258	External Resistor, 1500 W, 33 ohms	33	25.7	1,500
BAS-3000-33	DE-201407	External Resistor, 3000 W, 33 ohms	33	77.0	3,000
BAR-600-23	DE-200613	External Resistor, 600 W, 23 ohms	23	27.5	600
BAR-1000-23	DE-200614	External Resistor, 1000 W, 23 ohms	23	27.5	1,000
BAS-2000-23	DE-200615	External Resistor, 2000 W, 23 ohms	23	77.0	2,000
BAS-3000-23	DE-200616	External Resistor, 3000 W, 23 ohms	23	84.3	3,000
BAS-4000-23	DE-200617	External Resistor, 4000 W, 23 ohms	23	77.0	4,000
BAR-500-15	DE-201439	External Resistor, 500 W, 15 ohms	15	33.0	500

NA Part Number	EU Part Number	Resistor Type (all resistors UL recognized)	Resistance ohms (REGEN.REXT)	Heat Up Time s (REGEN.TEXT)	Power Rating W (REGEN.WATTEXT)
BAR-1000-15	DE-201440	External Resistor, 1000 W, 15 ohms	15	27.5	1,000
BAS-2000-15	DE-103871	External Resistor, 2000 W, 15 ohms	15	77.0	2,000
BAS-3000-15	DE-103872	External Resistor, 3000 W, 15 ohms	15	84.3	3,000
BAS-6000-15	DE-103873	External Resistor, 6000 W, 15 ohms	15	91.7	6,000

### Related Parameters

REGEN Parameters (→ p. 1158)

VBUS.OVWTHRESH (→ p. 1243)

VBUS.VALUE (→ p. 1249)

## 9 Configuring Motor Settings

---

<b>9.1 Motor</b> .....	<b>70</b>
<b>9.2 ECCN 3A225 Limitations for Induction Motors</b> .....	<b>74</b>
<b>9.3 Feedback 1</b> .....	<b>74</b>
<b>9.4 Feedback 2</b> .....	<b>82</b>
<b>9.5 Non-Plug and Play Feedback Devices</b> .....	<b>87</b>
<b>9.6 Foldback</b> .....	<b>88</b>
<b>9.7 Brake</b> .....	<b>91</b>
<b>9.8 Using Position Capture</b> .....	<b>92</b>

## 9.1 Motor

### 9.1.1 Overview

The **Motor** screen is used to set up or confirm the parameters of the motor that is connected to the drive. In certain cases, based on the feedback type, the motor parameters will automatically be set. The drive will auto-detect feedback devices that are preset with the appropriate feedback and motor parameters when MOTOR.AUTOSET is set to 1 (default). The values the drive uses for commutation and current and velocity loop gains will be populated automatically.

If your motor does not have a plug and play feedback device, then you must turn off the motor autoselect feature as shown in the screenshot below (MOTOR.AUTOSET = 0) and select the appropriate motor from the motor parameter database.

rvice ▾ | 0 - Torque Mode ▾ | Disable & Clear Faults | Save To Drive | Connect

**M** **Motor**  
 These parameters describe the motor attached to this drive.

Motor Name: AKM11B-ACCN1-00 Select Motor...

Motor Type: 0 - Rotary Create Motor...

**Motor Autoselect:** 0 - Off

Peak Current: 4.650 Ams

Continuous Current: 1.160 Ams

All of the appropriate Kollmorgen motors compatible with the AKD drive are contained in the motor database. For motors that are not listed, click **Select Motor** to open a custom motor view in which you can input the appropriate motor parameters.

### 9.1.2 Motor Setup

When motor autoselect is on (MOTOR.AUTOSET = 1), the AKD will automatically configure motor parameters from the data stored in a supported feedback device (Kollmorgen motors with SFD, Endat, BiSS, Hiperface and Hiperface DSL). If your motor is detected automatically, the parameters in the Motor view are shaded and not accessible. If you have a non-plug and play standard device (such as an incremental encoder or resolver), you can use this screen to enter the standard AKM, Cartridge motor, DDR, or DDL motor. Other motors can be configured from the Selecting a Motor (→ p. 71) screen.

### 9.1.3 Using the Motor View

The **Motor** view displays parameters related to the specific motor attached to the drive as follows:

- **Motor Name:** The motor part number read from the autoselect device, or the name from the motor database. When entering a custom motor name, the motor name should not contain any spaces.
- **Motor Type:** This field allows you to select the proper parameters for a rotary motor or a linear motor (linear motors are a future feature).
- **Motor Autoselect:** This setting allows the drive to automatically set up a plug and play motor (MOTOR.AUTOSET = 1). With **Motor Autoselect** turned off (MOTOR.AUTOSET = 0), you can access the motor database to select a catalog or custom motor.

The next set of parameters displayed are specific to the electrical and mechanical characteristics of the motor connected to the AKD drive.

- **Continuous Current:** Motor continuous current rating in Amps rms (MOTOR.ICONT (→ p. 975)).
- **Peak Current:** Motor peak current rating in Amps rms (MOTOR.IPEAK (→ p. 986)).
- **Coil Thermal Constant:** Motor coil thermal time constant in mHz (MOTOR.CTF0 (→ p. 973)).
- **Inductance (quad, H):** Motor rated inductance in milliHenries (MOTOR.LQLL (→ p. 994)).

- Inductance (direct, H): Motor line to line direct axis inductance (MOTOR.LDLL (→ p. 992)). Only visible for MOTOR.TYPE = 6, Rotary Interior Permanent Magnet.
- Inductance Saturation: Motor quadrature axis inductance saturation characteristic (MOTOR.LISAT (→ p. 993)). Only visible for MOTOR.TYPE = 6, Rotary Interior Permanent Magnet.
- Motor Poles: Number of motor poles (MOTOR.POLES (→ p. 1002)).
- Motor Phase: Motor phase offset used to set motor commutation as required. For most devices this is set to 0 (MOTOR.PHASE (→ p. 997)).
- Inertia: Motor rotor inertia in Kg-cm<sup>2</sup> (MOTOR.INERTIA (→ p. 984)).
- Torque Constant: Motor torque constant in Nm/Arms (MOTOR.KT (→ p. 990)).
- EMF Constant: Defines how much voltage is generated at the motors coils (MOTOR.KE (→ p. 988)).
- Motor Resistance: Motor winding resistance in Ohms (MOTOR.R (→ p. 1004)).
- Maximum Voltage: Motor maximum rated voltage in Volts rms (MOTOR.VOLTMAX (→ p. 1027)).
- Maximum Speed: Motor maximum rated speed (MOTOR.VMAX (→ p. 1025)).

### 9.1.4 Selecting a Motor

The **Select Motor** button opens a screen in which you can configure a non-plug and play motor or custom motor.


When this screen is opened, WorkBench displays by default the motor matched to the current motor name attached to the drive. WorkBench searches matching motor as follows:

1. WorkBench first checks the motor name with custom motors for a match.
2. If a match is not found, then WorkBench checks the name with the standard motors database for a match.
3. If a match is not found, then an AKM motor is selected.

For non-plug and play motors, a database of catalog motors is available based on the different Kollmorgen motor families. When you select a motor family, a part number is displayed according to the selected motor family. You can change the part number as needed, and the complete motor name will be displayed according to your selection. This complete motor name is sent to drive. The portions of the part number labeled in bold are required values.

### 9.1.5 Configuring Custom Motors

From the Select Motor screen, click on **Custom Motor** to create and edit custom motors in the following screen:

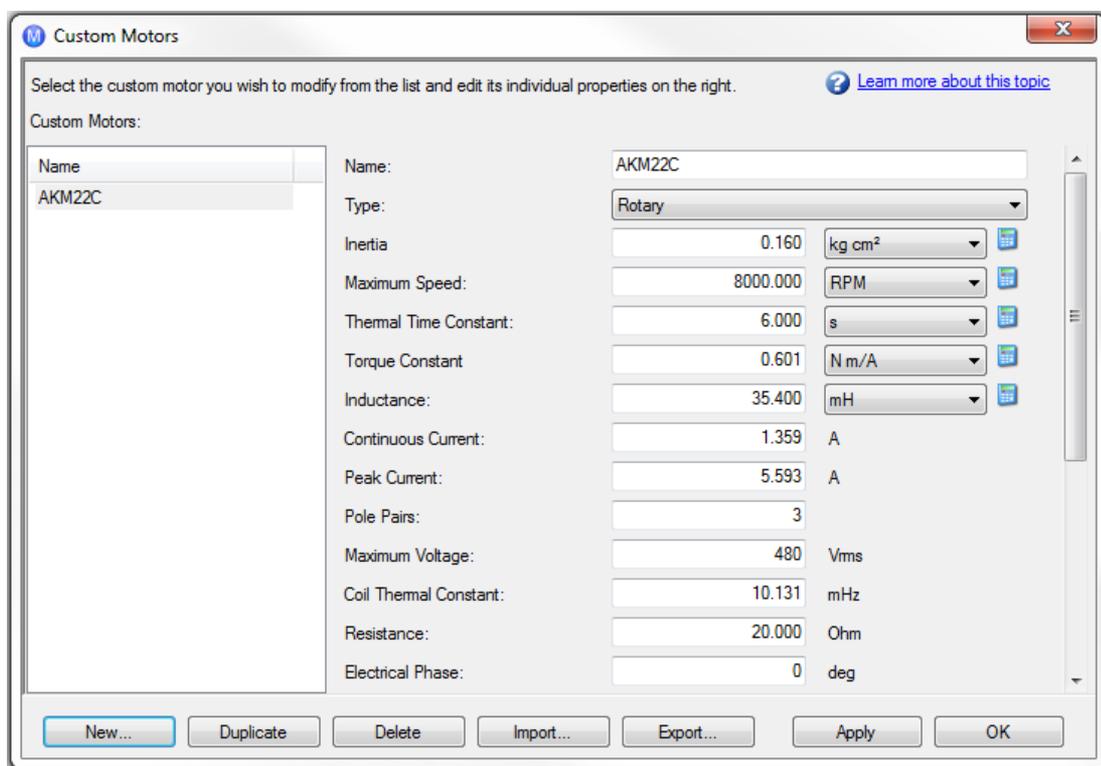

In this view, you can import or export a motor parameter file, or create a custom motor of your choice. The appropriate parameters must be chosen as listed. Several of the parameters allow you to select an alternate unit of measure. When building a custom motor file, do not use blank spaces in the name you choose. Once you have configured one or more custom motors, if you select a custom motor from the list and click **OK**, then the selected custom motor will be displayed in the **Select Motor** screen.

The actions available in the custom motor screen include:

- **New.** Allows you to start a new custom motor (with default values) or load a catalog motor you may want to modify.
- **Duplicate.** Makes a copy of the highlighted motor in the custom motor list.
- **Delete.** Deletes the highlighted motor in the customer motor list.
- **Import.** Allows you to import a motor file (\*.motor) from another location
- **Export.** Allows you to save the highlighted motor file (\*.motor) to another location
- **Apply.** Accepts the values you have entered for the specific motor files you are entering.
- **OK.** Returns you to the **Motor Selection** screen.

When entering any of the motor data, be certain the units are correct. The AKD drive uses the motor parameters to set up the various feedback loops and limits associated with the motor selected.

Note that if you select a custom motor from the list and click **OK**, then that selected custom motor will be displayed in the Select Motor screen.

#### 9.1.5.1 Validating Motor Parameters

When you click **OK** in the **Select Motor** screen, WorkBench validates the range with the drive. If any error is found, an error screen is displayed. Click **Continue** to set the motor parameters in the drive. Click **Cancel** to close this screen.

If errors occur while setting the motor parameters, an error screen indicates which parameters require additional attention.

#### 9.1.6 Motor Derating

Motor derating occurs while using a motor in the AKM or VLM series. If a brake is selected or a feedback type other than Resolver is selected, the continuous current will be derated.

**Resolver with no brake (no derate):**



**Motor**

These parameters describe the motor attached to this drive.

Motor Name:

Motor Type:

Motor Autoset:

Continuous Current:  Ams

Peak Current:  Ams

Select Motor X

**M Motor** ? Learn more about this topic

Select the motor that is attached to the drive.

To attach a motor, first select Motor family and then Motor series.

Motor Family:

Frame/Winding:  Mount:  Shaft:  Connectors:  Brake:  **Feedback:**

To create new or edit existing custom motors:

**SFD with no brake (derated):**



**Motor**

These parameters describe the motor attached to this drive.

Motor Name:

Motor Type:

Motor Autoset:

Continuous Current:  Ams

Peak Current:  Ams

Select Motor X

**M Motor** ? Learn more about this topic

Select the motor that is attached to the drive.

To attach a motor, first select Motor family and then Motor series.

Motor Family:


Frame/Winding:  Mount:  Shaft:  Connectors:  Brake:  **Feedback:**

To create new or edit existing custom motors:

- 1- 1624 LPR digital encoder w/commutation
- 2- 2048 LPR digital encoder w/commutation
- C- Smart feedback device (SFD)**
- R- Resolver
- GC Single-turn capacitive HIPERFACE encoder
- GD Multi-turn capacitive HIPERFACE encoder

### 9.1.7 Motor Temperature

The motor temperature settings are located in the nested motor temperature view. If your motor has thermistor with linear characteristics (MOTOR.RTYPE = 2, 3, or 4), the Actual Motor Temperature field will display the value of MOTOR.TEMPC. For other values of MOTOR.RTYPE this field will be hidden.

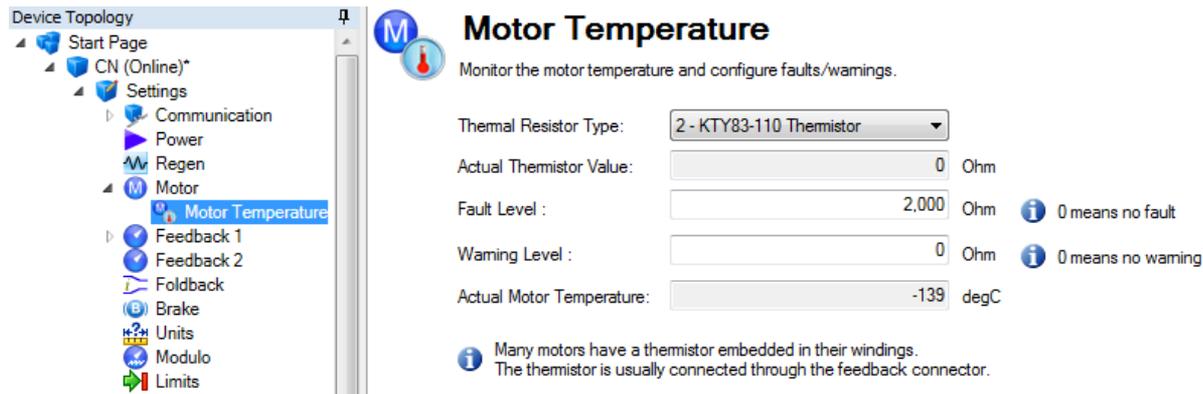

### Related Parameters

MOTOR Parameters (→ p. 962)

## 9.2 ECCN 3A225 Limitations for Induction Motors

According to regulation 3A225 of the Commerce Control List ([https://www.bis.doc.gov/index.php/forms-documents/doc\\_download/990-ccl3](https://www.bis.doc.gov/index.php/forms-documents/doc_download/990-ccl3)), the AKD is required to limit commutation speeds for Induction Motors (MOTOR.TYPE = 2) to less than 600Hz. The limit in the AKD has been set at 599Hz.

Convert commutation speed to operating speed using the following method:

Operating Speed (RPM) = Commutation Speed \* 60/Pole Pair Count of Motor

**Example for 12 pole induction motor at 599Hz:**

Operating Speed (RPM) = 599Hz \* 60/(6 pole pairs) = 5990 RPM

### 9.2.1 Limit enforcement and machine behavior

The limit is enforced by overriding VL.LIMITN (→ p. 1288) and VL.LIMITP (→ p. 1290) when MOTOR.TYPE = 2 (induction motor). If the user attempts to set a limit outside the boundaries of ECNN 3A225, the value will be overwritten by the limiting value, and warning 582 will be thrown (this will not interrupt drive operation). The warning is also thrown if the operating speed of the motor reaches the limit.

Warning 582 can be cleared by calling DRV.CLRFAULTS (→ p. 600).

### Related Topics

MOTOR.TYPE (→ p. 1023)

VL.LIMITN (→ p. 1288)

VL.LIMITP (→ p. 1290)

International Export Restrictions (→ p. 298)

## 9.3 Feedback 1

The Feedback view allows you to configure the primary position feedback device fitted to your motor.

When you select your feedback device from the Feedback Selection list, the appropriate feedback configuration choices appear below the dial.

### 9.3.1 Overview

The AKD offers a variety of feedback solutions, which allow you to optimize your system based on your specific machine needs. The table below lists the currently supported feedback types. Your motor model number will indicate the type of feedback that you have.

Kollmorgen motors with digital feedback devices (such as SFD, Endat, BiSS and Hiperface, Tamagawa) are plug and play. With these motors, all feedback and motor settings are configured automatically. Third party motors or Kollmorgen motors with non-digital feedback types require that parameters be entered manually. See Non-Plug and Play Feedback Devices (→ p. 87)).

The following table lists current support for primary and secondary feedback:

		Primary	Secondary
Resolver	Std & Multi pole	Yes	No
SFD, SFD3		Yes	No
Incremental (Digital) Encoder	With Halls and Index	Yes	No
	No Halls with Index	Yes	Yes
	No Halls with No Index	Yes	Yes
Analog Sin/Cos Encoder	With Digital Halls	Yes	No
	With Digital Halls and Analog Index	No	No
	No Halls and No Index	Yes	No
EnDAT 2.1	Single & Multi Turn	Yes	No
EnDAT 2.2	All Digital	Yes	Yes
	Analog / Digital	Yes	No
BiSS, BiSS Mode C Renishaw	All Digital (Mode C)	Yes	No
	Analog / Digital	Yes	No
Hiperface, Hiperface DSL	Analog / Digital; Single & Multi Turn	Yes	No
	All Digital	Yes	No

### 9.3.2 Using Feedback Options

Use the **Feedback** screen to set up your system to match the proper feedback device. By default, the drive uses the **Auto** setting to detect feedback devices. This setting allows the drive to test the feedback device to see if it is a recognized plug and play device. If the drive recognizes the device, then all the parameters for that device and motor are loaded into the drive. Both the feedback and the motor information are now present in the drive and the system is operable.

If the feedback is a non- plug and play device, then you can choose from the list of supported devices in **Feedback Selection** list and then enter the line count manually. The following sections describe each supported device available in the **Feedback Selection** list and the input information required to configure each device.

#### 9.3.2.1 Auto

This is the default setting and is used to determine if a plug and play device is available. If a plug and play device is available, the **Auto** mode is replaced by the feedback device detected, along with the appropriate resolution settings.

#### 9.3.2.2 None

This setting can be used if no feedback device is connected to the X10 connector. This may be the case if FB2 or FB3 is used for position or velocity control.

#### 9.3.2.3 Incremental Encoder

The incremental encoder is a non-plug and play device. Incremental encoders are available in a variety of line counts. If you select an incremental encoder option, the encoder resolution must be entered into the **Rotary**

**Encoder Resolution** box. The units for this field are in counts per revolution, which is post-quadrature (multiplies the lines per revolution by 4).

#### 9.3.2.4 Sine Encoder

Sine encoders are offered with different data communication protocols. These include Endat, BiSS, Hiperface, and others. A standard sine-cosine encoder with simple analog communication is not a plug and play device. As with the incremental encoder, the line count is entered in the **Rotary Encoder Resolution** box.

#### 9.3.2.5 Endat 2.1, Endat 2.2

These feedback device are plug and play when ordered as an option with AKM motors.

#### 9.3.2.6 BiSS Analog

These feedback devices are plug and play when ordered as an option with AKM motors.

#### 9.3.2.7 Hiperface, Hiperface DSL

These feedback devices are plug and play when ordered as an option with AKM motors.

#### 9.3.2.8 Resolver

The resolver feedback option is not plug and play. When selecting the resolver option, three specific parameters are set by default for the standard AKM resolver: phase lag, transformation ratio, and feedback poles. Currently, the AKD does not support non-Kollmorgen standard resolver options.

#### 9.3.2.9 SFD, SFD3

Smart Feedback Device (SFD) is Kollmorgen's most popular plug and play device. SFD allows for quick and easy setup from the **Auto** mode, which automatically configures the drive with the motor and feedback parameters.

#### 9.3.2.10 Tamagawa

This feedback type is not available on models with extension type NA (AKD Models (→ p. 31)).

### 9.3.3 Initial Position Check

#### NOTE

This feature is currently only available in AKD sercos<sup>®</sup> III drives.

Use the initial position check to determine whether homing is required at power-up. The initial position check compares the difference between the position it measures at power-up with a position stored in fast non-volatile memory (FB1.INITPSAVED (→ p. 733)) before the last power-down. The parameter FB1.INITPSTATUS (→ p. 734) will read whether the position difference is within an acceptable user defined window (FB1.INITPWINDOW (→ p. 736)).

### 9.3.4 Wake and Shake Overview

Motors which have no way to automatically identify commutation must run Wake and Shake. Motors without Halls fall into this category, as well as motors whose hall effect sensors were manually installed, and not aligned to a motor phase of 0 degrees.

The AKD will determine if Wake and Shake is needed for safe operation based on feedback type. If needed, the drive will automatically arm Wake and Shake. If Wake and Shake does not complete, a fault will be generated. When that fault is cleared, Wake and Shake will be automatically armed again.

#### NOTE

If the user attempts to manually disarm Wake and Shake on an AKD which requires it, a fault will be thrown and Wake and Shake will automatically arm again.

If Wake and Shake is armed on a motor with a feedback type that does not normally require Wake and Shake, the algorithm will still execute. If Wake and Shake fails, a fault will be generated. After the faults are cleared, Wake and Shake will automatically arm again.

**NOTE**

If Wake and Shake has been manually armed, it can be disarmed by clicking on the "disarm" button on the Wake and Shake screen, or by executing the WS.DISARM (→ p. 1307) command over telnet.

The AKD has multiple modes of completing Wake and Shake, each with different benefits for different operating conditions.

**Mode 0:**

Mode 0 is the fastest of the Wake and Shake methods; it executes and completes in a few seconds, and is ideal for applications that need the fastest start-up time. The tradeoff for this fast execution time is complexity in configuration. There are a lot of parameters that must be precisely tuned for this mode to operate correctly.

For more information see Using Wake and Shake Mode 0 (WS.MODE 0) (→ p. 77)

**Mode 1:**

Mode 1 is a more traditional method of completing Wake and Shake. It is also referred to as Commutation Alignment and Pole Locking. Mode 1 takes a little longer to execute than Mode 0, but is easier to configure. Only WS.IMAX (→ p. 1314) (current to be applied) and WS.TSTANDSTILL (time to apply current) need to be configured. The default values work for most motors.

For more information see Using Wake and Shake Mode 1 (WS.MODE 1) (→ p. 81)

**Mode 2:**

Mode 2 is the easiest of the Wake and Shake modes. It requires no parameters to be configured. This Auto-Commutation finding algorithm can take as long as 30 seconds to complete. Measurements are taken by exciting the motor with a sine excitation as the motor phase is adjusted. After a series of data points have been taken a DFT analysis is done to determine the motor phase offset for commutation.

**9.3.4.1 Using Wake and Shake Mode 0 (WS.MODE 0)****Overview**

Wake and shake (WS) is used to establish commutation in drives with the following types of feedback:

- Incremental encoders without Halls or commutation channels.
- Sine encoders without Halls or commutation channels.

When controlling a brushless DC (BLDC) motor, you must know the electrical position of the motor shaft. Without absolute position data, it is impossible for the drive to know which sequence of coils to energize to produce motion. Absolute feedback devices, such as resolvers and absolute encoders, can detect position directly. Incremental devices, such as incremental encoders and sine encoders without a commutation channel, must determine electrical position indirectly at start up. The drive uses the WS feature to determine electrical position by sending the motor short bursts of current and measuring the resulting incremental motion. The drive uses this measurement to estimate electrical position accurately enough to control the motor.

**Configuring WS**

You can configure WS after your motor has been connected to the AKD according to the *AKD Installation Manual*. The WS procedure is initiated automatically when both the hardware and software enable signals become logic high.

Before attempting to enable the drive, the drive must be compensated for the motor and the AKD servo loops must be stable.

Compensation values for many rotary motors are included in a database already loaded into the drive.

**NOTE**

An unstable system will not function properly during or after the WS process.

Use the default **Wake and Shake** view to configure your system:



## Wake and Shake

Wake and Shake will determine alignment offset between feedback and the electrical phases of the motor.

<b>Mode</b>		<b>Arm</b>	
Sets the method used for Wake and Shake		<input type="button" value="Arm"/>	<input checked="" type="button" value="Idle"/>
<input type="text" value="0 - Standard Wake and Shake"/>		Motor Phase:	<input type="text" value="0"/> deg
<b>Settings</b>			
Number of Wake and Shake Loops:	<input type="text" value="5"/>	Counts	
Time the current vector applied to motor:	<input type="text" value="2"/>	ms	
Maximum allowed velocity:	<input type="text" value="100.000"/>	rpm	
Maximum allowed current:	<input type="text" value="2.796"/>	Arms	
<input type="button" value="More &gt;&gt;"/>			

### Arm

Click **Arm** to set WS to start at the next drive enable (WS.ARM (→ p. 1300)). This area also shows the current status of the wake and shake process. See WS.STATE (→ p. 1319) for a detailed explanation of the possible states.

WS.ARM is not restricted to any feedback type.

### Settings

- **Number of Wake and Shake Loops.** The WS feature uses the mean of all wake and shake repetitions, called "loops", to establish commutation (WS.NUMLOOPS (→ p. 1318); see Using WS: Advanced (→ p. 79) for a discussion of loops). If fewer than five loops are used, commutation may be incorrect, possibly causing poor performance or stability.
- **Time the current vector applied to motor.** This box specifies the duration of the current pulse used for commutation. Increasing this value (WS.T (→ p. 1321)) increases the movement of the system.
- **Maximum allowed velocity.** If a velocity (VL.FB (→ p. 1269)) higher than this value (WS.VTHRESH (→ p. 1330)) is detected while WS is running, then a fault will be generated.
- **Maximum allowed current.** This value (WS.IMAX (→ p. 1314)) is directly proportional to the movement. A value that is too low may fail to cause movement; a value that is too high value may cause an over speed fault.
- **Maximum allowed movement (WS.DISTMAX (→ p. 1308)).** If the total motion from the starting position (the position at the time the drive is enabled after a WS.ARM command) exceeds WS.DISTMAX a fault will occur. Setting WS.DISTMAX to zero disables this feature.
- **Minimum allowed movement (WS.DISTMIN).** If the total motion from the starting position is less than WS.DISTMIN (→ p. 1310) a fault will occur. This will prevent poor initialization from broken wires, incorrect current settings, very high friction, etc. Setting WS.DISTMIN to zero disables this feature.

### Wake and Shake, More View

To configure additional WS settings, click **More** at the bottom of the default view to display the following options:

Less <<

---

**Wake and Shake Movement**

Minimum Distance:	182.044	Counts16Bit
Maximum Distance:	2,730.667	Counts16Bit

---

**Delay Time**

Delay Time between current steps:	5	ms
Delay Time between coarse angle to fine angle:	50	ms
Delay Time between loops in Mode 0:	100	ms
Delay Time after first current-pulse injection:	2,000	ms

### Wake and Shake Movement

Use these boxes to set values for the maximum (WS.DISTMAX (→ p. 1308)) and minimum (WS.DISTMIN (→ p. 1310)) movement required for finding commutation.

### Delay Times

Delay time is the time that elapses when switching different current vectors. Use these boxes to set specific time delays for current steps(WS.TDELAY1 (→ p. 1322)),coarse to fine angle (WS.TDELAY2 (→ p. 1324)) and time between loops in mode 0 (WS.TDELAY3 (→ p. 1326)).

### Special Cases for WS

#### Operation with Motor Brake

An amplifier with a motor brake operates the WS procedure similar to an amplifier without a brake. All precautions and behavioral descriptions above also apply in this case. It is important to note that the brake is automatically applied (motor brake, not holding brake) after the WS process is complete. The brake may cause unexpected movement if the DRV.OPMODE used prior to WS does not retain position. If a force component is present parallel to the track on a linear motor (gravity, load, etc.), or tangential on a rotary motor, the motor may move from the startup position after WS completes and the brake is applied.

If the application requires that the startup position be retained, have the controller system ready to take control immediately after WS is complete. One way to set this control is to have the drive in DRV.OPMODE 1 (digital velocity) or DRV.OPMODE 2 (position mode) on power-up. This precaution keeps the motor stationary after enable.

#### End of Travel Limits

If anything restricts the motion of the motor, a commutation fault can occur. Examples of situations that may result in faults include the following:

1. If the motor is resting against a rigid end stop, the movement of the motor may be impeded below the minimum threshold set by WS.DISTMIN. This lack of movement causes a fault.
2. If the motor is actuating a limit sensor/switch, the system (PLC, SWLS.LIMIT0 and SWLS.LIMIT1) may be preventing the AKD from producing motion. If descriptive motion is not achieved, the system faults.

#### Large Load Inertia or High Friction System

Systems with a large load mismatch may need more current than the default setting for correct commutation. Begin with the default value for WS.IMAX and gradually increase or decrease as needed. If adjusting WS.IMAX does not result in a successful commutation, the width of the search pulse can be increased by increasing WS.T.

### Using WS: Advanced

WS is performed upon enable in order to establish a valid value for MOTOR.PHASE at startup. MOTOR.PHASE is used to calculate electrical phase. With absolute feedback devices, MOTOR.PHASE is a fixed offset between absolute mechanical position and the electrical position. With incremental devices, position is accumulated relative to an initial MOTOR.PHASE. However, at startup, MOTOR.PHASE is invalid since the initial position is random, thus the requirement for the WS process.

WS is a two-step process:

1. Coarse Phase. The drive sequentially pulses a user-specified current, WS.IMAX (→ p. 1314), at each electrical quadrant (0°, 90°, 180°, 270°). Based on the resulting observed movement, an approximate location is calculated.
2. Fine Phase. The drive makes small adjustments to the coarse phase while monitoring movement during velocity mode (command velocity = 0) to find a precise position.

The amplitude of the current pulses in this process equals WS.IMAX. The drive repeats these two steps for a user-specified number of times (WS.NUMLOOPS) to produce a more accurate estimate of the electrical phase.

The drive normally indicates warning F478 (→ p. 271) before WS is initiated and successful. If WS fails, the commutation is not valid and the drive indicates one of the following faults:

- F473 (→ p. 271): Insufficient movement. The maximum movement during WS was less than WS.DISTMIN.
- F475 (→ p. 271): Excessive movement. The movement during WS exceeded WS.DISTMAX.
- F476 (→ p. 271): Fine-Coarse delta too large. The phase calculated during the fine phase and coarse phase differed by more than 10 degrees.
- F478 (→ p. 271): Overspeed. The feedback velocity (VL.FB) exceeded WS.VTHRESH during WS.
- F479 (→ p. 271): Loop angle delta too large. The difference between the phase determined in different cycles (loops) exceeded 30 degrees.
- F482 (→ p. 271): Commutation not initialized. WS is required (feedback is one of the types listed in the Overview) but WS has not been successfully performed.
- F483 (→ p. 271) to F485 (→ p. 272): U, V, or W phase missing. Intermittent or broken motor connection.

### Maximizing WS Reliability

The following suggestions will help you achieve successful commutation:

- Incorrect determination of MOTOR.PHASE may cause a system runaway. Since the typical movement during correct operation of WS is very small, you can use the velocity overspeed parameters (WS.VTHRESH and DRV.VTHRESH) to prevent a runaway. Prior to enabling the drive, set DRV.VTHRESH 100 mm/s for linear motors or 200 rpm for rotary motors. After a successful enable, DRV.VTHRESH can be returned to the normal operating value.
- Set WS.IMAX to its default value,  $WS.IMAX = 0.5 * \min(MOTOR.IPEAK, DRV.IPEAK)$ .
- Set WS.NUMLOOPS 20 for best results in many applications.
- WS.T specifies the duration for which the search current is applied. With a stable velocity loop, most applications work well with the default value of WS.T. The default value causes the software to calculate the width of the search pulse based on the velocity loop proportional gain, VL.KP. Increasing WS.T effectively increases the movement of the motor during WS, which may be necessary for systems with a low-resolution feedback or high load inertia.
- WS.IMAX specifies the amplitude of the current pulse used during the initial/rough commutation. A WS.IMAX value that is too low may result in a fault by failing to cause enough movement for commutation. If the value is too high, the preset movement threshold could be exceeded, also resulting in a fault. If the default value is producing faults for too little movement, gradually adjust this parameter to overcome excessive friction and/or load on the system. WS.IMAX also specifies the maximum current used in the second stage of commutation. The initial current is 25% of WS.IMAX, then steps up to 100% of WS.IMAX.
- FB1.SELECT selects the type of feedback used by the amplifier. The WS feature is used only for FB1.SELECT = 11, 21. The feedback must be configured prior to initiating the WS procedure.
- If your amplifier has a motor brake, set MOTOR.BRAKE = 1. For motors without a brake, set MOTOR.BRAKE = 0.

### CAUTION

- Adjust WS.T with extreme caution. Increasing WS.T increases the movement of the system. Applying an incorrect value of WS.T may cause erratic drive behavior.

**⚠ CAUTION**

- When initiating WS, the motor may experience a runaway. Stay clear of all moving parts. Ensure there are properly operating safety devices such as hardware limit switches and suitable end-of-travel limits.
- If WS.NUMLOOPS is less than 5, commutation may be incorrect. This condition may cause faults and/or adversely affect performance or stability. Set WS.NUMLOOPS = 20.

**Troubleshooting WS**

Problem	Possible Cause	Remedy
Excessive Movement	<ul style="list-style-type: none"> <li>• Brake slips on vertical system.</li> <li>• External forces on motor too great.</li> </ul>	<ul style="list-style-type: none"> <li>• Check brake.</li> <li>• Remove forces acting on motor.</li> <li>• Lower WS.IMAX.</li> </ul>
Insufficient Movement	<ul style="list-style-type: none"> <li>• Motor brake too rigid.</li> <li>• Motor resting on rigid end-stop.</li> <li>• Too much friction on motor track.</li> <li>• Foreign objects impeding movement of motor.</li> <li>• Motor load very large, and impedes sufficient movement.</li> <li>• WS.DISTMIN manually set too high</li> <li>• WS.IMAX too low</li> </ul>	<ul style="list-style-type: none"> <li>• Check brake</li> <li>• Check physical location of motor</li> <li>• Check friction and cleanliness of motor track</li> <li>• Increase WS.IMAX value</li> </ul>
Excessive Movement	<ul style="list-style-type: none"> <li>• Brake slips on vertical system.</li> <li>• External forces on motor too great.</li> </ul>	<ul style="list-style-type: none"> <li>• Check brake.</li> <li>• Remove forces acting on motor.</li> <li>• Lower WS.IMAX.</li> </ul>
Insufficient Movement	<ul style="list-style-type: none"> <li>• Motor brake too rigid.</li> <li>• Motor resting on rigid end-stop.</li> <li>• Too much friction on motor track.</li> <li>• Foreign objects impeding movement of motor.</li> <li>• Motor load very large, and impedes sufficient movement. WS.DISTMIN manually set too high</li> <li>• WS.IMAX too low</li> </ul>	<ul style="list-style-type: none"> <li>• Check brake.</li> <li>• Check physical location of motor.</li> <li>• Check friction and cleanliness of motor track</li> <li>• Increase WS.IMAX value</li> </ul>
U, V, or W Phase Missing Fault	Intermittent or broken motor connection.	Check connections to motor phases.
Commutation Not Initialized Fault	Wake and Shake is required but WS procedure has previously been canceled (WS.DISARM) or has failed.	Correct errors and rerun WS procedure.
Other	<ul style="list-style-type: none"> <li>• Drive not configured correctly.</li> </ul>	<ul style="list-style-type: none"> <li>• Check drive compensation</li> <li>• Verify amplifier feedback</li> </ul>

**Related Parameters**

WS Parameters (→ p. 1299)

DRV.IPEAK (→ p. 665)

FB1.SELECT (→ p. 761)

MOTOR.BRAKE (→ p. 966)

MOTOR.PHASE (→ p. 997)

MOTOR.IPEAK (→ p. 986)

**9.3.4.2 Using Wake and Shake Mode 1 (WS.MODE 1)****Overview**

Wake and Shake mode 1 uses a pole locking method (sets the motor pole count to 0) and applying current to determine the commutation angle.

Wake and shake is required for the following applications:

- Incremental encoders without Halls or commutation channels.
- Sine encoders without Halls or commutation channels.
- Motor with Halls which were not aligned to be at 0 degrees motor phase.

### Configuring Wake and Shake

Wake and Shake mode 1 has two configurable parameters: WS.IMAX and WS.TSTANDSTILL.

WS.IMAX (→ p. 1314) can be configured from the Wake and Shake view.

WS.IMAX is the value (in amps) of the current applied to the motor to lock the motor to a magnetic pole position. This value should be enough to force the motor to move. But if the motor oscillates strongly during Wake and Shake, this value should be lowered so that the motor does not oscillate more than a slight overshoot.

WS.TSTANDSTILL can be accessed from the terminal screen. This value determines how long WS.IMAX is applied to the motor. If it is observed that current is not applied for a long enough duration for the motor to come to a complete rest while Mode 1 is executing, then WS.TSTANDSTILL should be increased so that the motor starts motion and comes to a complete rest at a magnetic pole position.

## 9.4 Feedback 2

The Feedback 2 screen helps configure how you will be using either connector X9 or X7. The screen uses the term feedback in the labels, but you can also think of this as the “signal” source depending on how you use these connection points.

The **Feedback source** box allows you to choose from three feedback sources:

Source 0 – This simple indicates you are not using either connector as a feedback source.

Source 1 – This is tied to the use of connector X9 (consider for emulated encoder connection).

Source 2 – This is tied to the use of connector X7 (consider for the high speed opto inputs on the I/O Connector).

**Feedback Mode** offers three selections as well, depending how you are using the connection source above.

Mode 0 – The input is configured as A/B signals.

Mode 1 – The input is configured as Step and Direction signals.

Mode 2 – The input is configured as Up-down signals.

The **Resolution** box sets the resolution of the device you have indicated as your input of signal source.

### Encoder Emulation Output

The drive offers the flexibility to use connector X9 for an encoder emulation output. This output can be set up using the Encoder Emulation (→ p. 83) view.

The **Emulation Mode** box offers three settings for Encoder Emulation mode:

Mode 0 – The connector is free to use as an input.

Mode 1 – The X9 connector is now set up as an encoder emulation with a once per rev index pulse (resolution is set in the next parameter (Emulation Resolution)).

Mode 2 – The X9 connector is now set up as an absolute index pulse.

**Emulation Resolution** sets the resolution desired for the output of the emulated encoder.

The **Index or Absolute offset** is dependent on which emulation mode is selected, allowing you to set an offset for either the index pulse or absolute pulse.

A check box allows you to consider the motor direction based on the encoder output.

## 9.4.1 Encoder Emulation

### 9.4.1.1 Overview

The encoder emulation (EEO) connector (X9) can be used as either an output or an input. As an output, you can use this connector for position feedback to an analog controller and for configuring the drive as the master in a master/slave system. You can also use X9 connector as an input for controlling the drive through an A/B, pulse and direction, or CW/CCW command. Common applications for this input include using the drive with a stepper controller and configuring the drive as the slave in a master/slave system.

### 9.4.1.2 Using Encoder Emulation

You can configure the X9 connector from the **Encoder Emulation** screen by setting the connector function, resolution, and (where applicable) input position. The **Electronic Gearing** screen also has provisions for setting the function of the X9 connector.

### 9.4.1.3 Function Settings

Function settings for the X9 connector are assigned through the DRV.EMUEMODE (→ p. 631) parameter.

#### Emulation Mode

0-Input (No EEO Output). While in Emulation Mode, the EEO connector (X9) is configured as an input. This is the recommended setting and should be used in coordination with FB2.MODE (→ p. 775) to select the type of inputs the secondary feedback will accept. See Feedback 2 (FB2 Parameters (→ p. 771)) for definitions for the EEO Connector (X9). Note that this mode is also deprecated and will behave as it did with firmware versions prior to M\_01-03-00-000.

In earlier firmware versions, this mode indicates that the EEO connector is not operative.

### 9.4.1.4 Output Modes 1, 2, 6, 7, 8 and 9

The drive generates output pulses based on the motor position. Pulse outputs on the SubD connector X9 are three signals: A, B and index, with 90° phase difference (i.e. in quadrature, hence the alternative term “A quad B” output), with a zero pulse.

If you are using the AKD as a master, the slave drives use the master's encoder output signals as command input and follows these commands (velocity and direction). The drives operate from an internal supply voltage.

### Mode 1– A quad B with once per rev index pulse

#### [Output Mode 1 - A quad B with Once per Rev Index Pulse Connection Diagram](#)

This output mode simulates an encoder signal from the X9 port to another AKD or external controller. EEO resolution (DRV.EMUERES (→ p. 638)) defines how many counts are output for one revolution of the primary feedback.

Index offset (DRV.EMUEZOFFSET (→ p. 640)) determines the point during the revolution of the primary feedback when the index pulse (X9 pins 7&8) is output through the X9 port. The pulse will occur once every revolution of the primary feedback is at the positive value of the offset. Notice that the offset's resolution is set based on 1 rev = 65536, or a 16-bit scale. This is fixed and independent of the Resolution setting of the A and B channel above.



## Encoder Emulation (X9 Cfg)

The encoder emulation page is used to configure the X9 connector on the drive.

Emulation Mode:	<input type="text" value="1 - Output - A/B with once per rev index"/>	
Emulation Resolution:	<input type="text" value="2,048"/>	lines/rev
Index Offset:	<input type="text" value="32,768"/>	1 rev=65536
	<input type="checkbox"/>	Direction of the motor is forward

In this case, the Index is offset 180 degrees, or halfway through the revolution of the primary feedback.

### Mode 2 – A quad B with absolute index pulse

#### [Output Mode 2 - A quad B with Absolute Index Pulse Connection Diagram](#)

When mode 2 is chosen, a box will appear for an absolute index point to be entered (DRV.EMUETURN (→ p. 634)). The absolute index pulse will be output when the motor position reaches the full offset. The sum of the Absolute Offset (the revolutions) and the Index Offset (a fraction of a revolution) make up the "Full Offset". The index offset is fixed as 1rev = 65536, which is a 16-bit scale.

The "Full Offset" is a read-only calculation provided for easier understanding of the placement of the index pulse.

### Mode 6 – Output - with once per rev index and Input - Step and Direction

This mode allows you to output step and direction emulated encoder signals from the X9 (Emulated Encoder) connector, and input a step handwheel signal into the X7 (High Speed Opto IO) connector simultaneously. Mode 6 and 7 are identical, with the exception that the emulated encoder has an incremental Z pulse (Z pulse occurs every revolution) in mode 6, and an absolute Z pulse (Z pulse occurs at one absolute position) in mode 7. DRV.EMUERES, DRV.EMUEZOFFSET, and DRV.EMUETURN effect the position of the Z pulse for mode 6 in the same way as for mode 1.

### Mode 7 – Output - with absolute Index and Input - Step and Direction

This mode allows you to output step and direction emulated encoder signals from the X9 (Emulated Encoder) connector, and input a step handwheel signal into the X7 (High Speed Opto IO) connector simultaneously. Mode 6 and 7 are identical, with the exception that the emulated encoder has an incremental Z pulse (Z pulse occurs every revolution) in mode 6, and an absolute Z pulse (Z pulse occurs at one absolute position) in mode 7. DRV.EMUERES, DRV.EMUEZOFFSET, and DRV.EMUETURN effect the position of the Z pulse for mode 7 in the same way as for mode 2.

### Mode 8 – Output - with once per rev index and Input - Clockwise/Counterclockwise pulse

This mode allows you to output CW/CCW emulated encoder signals from the X9 (Emulated Encoder) connector, and input a step handwheel signal into the X7 (High Speed Opto IO) connector simultaneously. Mode 8 and 9 are identical, with the exception that the emulated encoder has an incremental Z pulse (Z pulse occurs every revolution) in mode 8, and an absolute Z pulse (Z pulse occurs at one absolute position) in mode

9. DRV.EMUERES, DRV.EMUEZOFFSET, and DRV.EMUEMTURN affect the position of the Z pulse for mode 8 in the same way as for mode 1.

#### Mode 9 – Output - with absolute Index and Input - Clockwise/Counterclockwise pulse

This mode allows you to output CW/CCW emulated encoder signals from the X9 (Emulated Encoder) connector, and input a step handwheel signal into the X7 (High Speed Opto IO) connector simultaneously. Mode 8 and 9 are identical, with the exception that the emulated encoder has an incremental Z pulse (Z pulse occurs every revolution) in mode 8, and an absolute Z pulse (Z pulse occurs at one absolute position) in mode 9. DRV.EMUERES, DRV.EMUEZOFFSET, and DRV.EMUEMTURN affect the position of the Z pulse for mode 9 in the same way as for mode 2.

#### 9.4.1.5 Input Modes 3, 4, and 5 (deprecated)

The X9 connector is capable of input modes. These input modes correspond to the signal types described below. The screen also includes provisions for setting the function of the X9 connector for input modes. Because these settings are deprecated, it is recommended to set DRV.EMUEMODE to 0 and use FB2.MODE to select the type of inputs the secondary feedback will accept.

##### Mode 3-A quad B signals

##### [Input Mode 3 - A quad B Signals Connection Diagram](#)

Input mode 3 allows an A quad B encoder or the encoder emulation output of another drive to be connected and used as a commander encoder, dual loop feedback, gearing, or camming input.

##### Mode 4-Pulse/direction signals

##### [Input Mode 4 - Pulse/direction Signals Connection Diagram](#)

Input mode 4 allows the drive to be connected to a third-party stepper-motor controller. The number of steps can be adjusted so that the drive can be adapted to match the step-direction signals of any stepper controller.


##### Mode 5-CW/CCW signals

##### [Input Mode 5 - CW/CCW Signals Connection Diagram](#)

The drive can be connected to a third-party controller which delivers up-down signals.

#### 9.4.1.6 Mode 10, Configure X9 for General Purpose I/O

This mode allows the X9 connector's three transceivers to be used as general purpose inputs or outputs (DIO 9, 10, 11). DIOx.DIR is used to configure the transceivers as inputs or outputs. DIOx.INV controls the polarity of these signals.

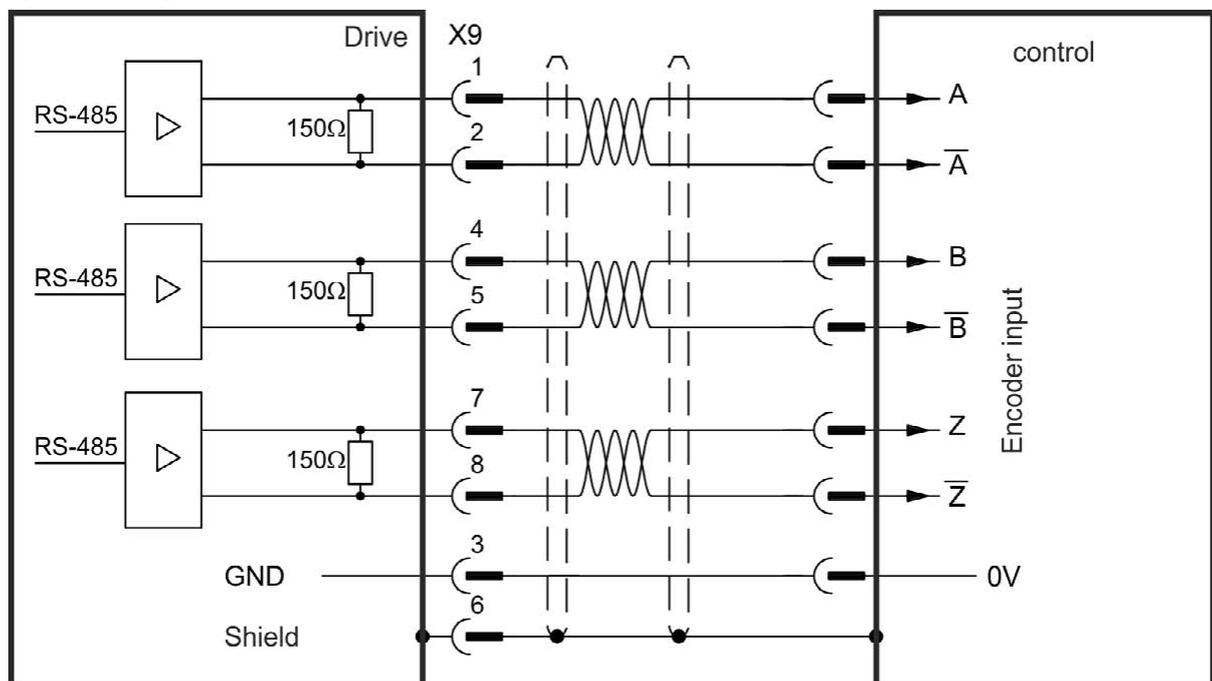

## Digital Inputs and Outputs

This page shows current state of each of the I/O pins and allows to select the function each pin performs.

General Purpose I/Os | X9 I/Os


---

**Configurable X9 Inputs/Outputs**

	Direction:	State:	Polarity:
DIO 9:	0 - Input	<input type="radio"/>	0 - Normal
DIO 10:	0 - Input	<input checked="" type="radio"/>	0 - Normal
DIO 11:	0 - Input	<input type="radio"/>	0 - Normal

### 9.4.1.7 Mode 11, Configure X9 for Endat 2.2

This mode allows a Heidenhain Endat 2,2 encoder to be connected to the drive through the X9 connector. This encoder can be used for primary feedback or handwheel input.

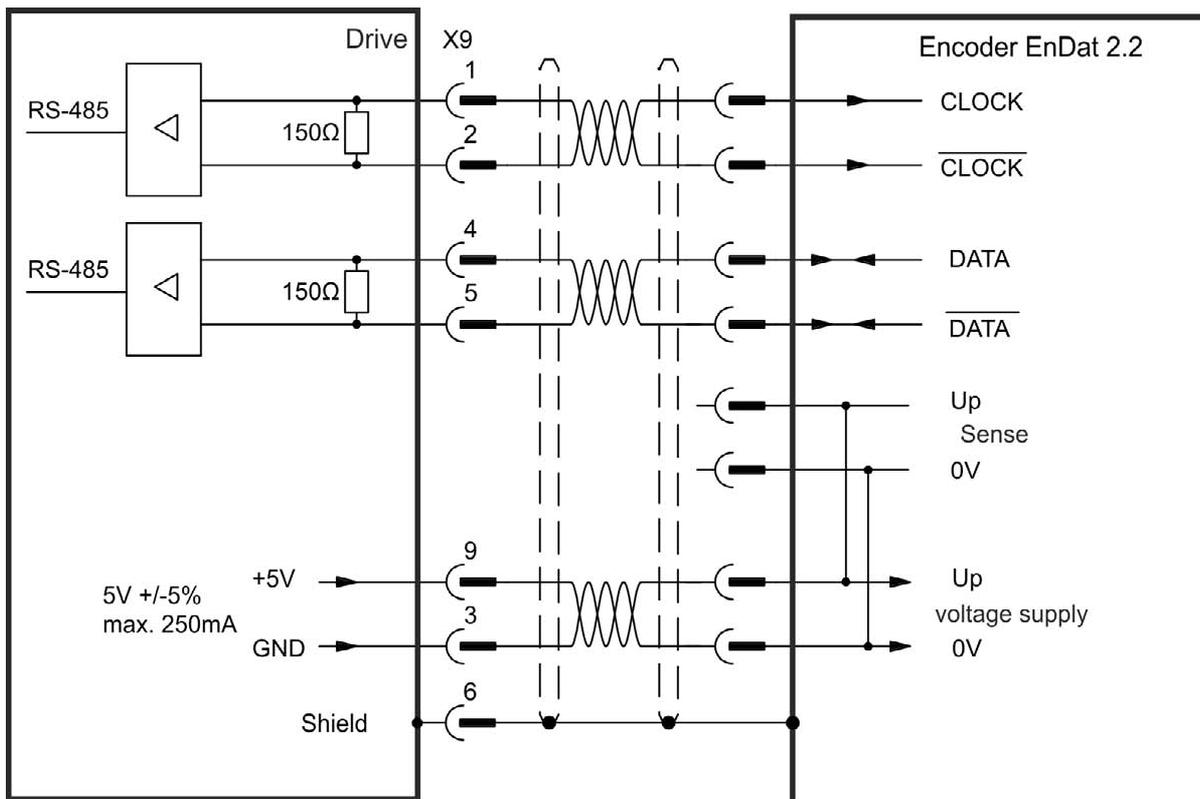

### 9.4.1.8 Output Modes 12, 13, and 14, Emulated Encoder Output with Z Pass Through

These modes are similar to modes 1, 6, and 8 respectively. They produce A/B (mode 12), Step/Direction (Mode 13), or CW/CCW pulses (Mode 14). The difference for these modes is the Z pulse follows the level of the feedback 1 index pulse. It is at a fixed position relative to the EEO input, rather than the EEO output.

**NOTE**

If you are using multi-turn or single turn absolute feedback devices, and the once per rev or absolute Z pulse modes (DRV.EMUEMODES 1,2,6,7,8, or 9) the Z pulse generated by the EEO will always be aligned with the same mechanical position of the primary feedback position. If you are using an incremental feedback device and these modes, then the

**NOTE**

origin of the primary feedback is not at the same mechanical position each time the drive powers up. If you are using the pass through mode (DRV.EMUEMODES 12, 13, or 14) the Z pulse generated by the EEO will always be aligned with the same mechanical position of the primary feedback position.

#### 9.4.1.9 Output Modes 15, 16, and 17, Emulated Encoder Output from Stepper Control

These modes are similar to modes 1, 6, and 8 respectively. They produce A/B (mode 15), Step/Direction (Mode 16), or CW/CCW pulses (Mode 17). No Z pulse is produced for these modes. The output is from an internal source in the drive that interpolates commands from the EtherCAT or CAN fieldbus networks.

#### 9.4.1.10 Resolution

The resolution setting defines how many counts are output for one revolution of the primary feedback (when X9 is configured as an output), or how many counts will be considered a full revolution of the input signal from an external controller (when X9 is configured as an input). The resolution value is post-quadrature; for example, a 1,000 count encoder has a resolution of 4,000 counts.

Note: If the resolution value is set to 0, then the X9 connector will not produce a command.

### Related Parameters and Commands

The DRV.EMUEMODE parameter sets the EEO output and input modes. The resolution (before multiplication) is set by the DRV.EMUERES function. The DRV.EMUEZOFFSET parameter adjusts and saves the zero pulse position within one mechanical turn. DRV.EMUEMTURN sets the absolute index point in mode 2 and DRV.HANDWHEEL sets the position at which the index pulse is output in output mode 2.

DRV.EMUEDIR (→ p. 629)

DRV.EMUEMODE (→ p. 631)

DRV.EMUEMTURN (→ p. 634)

DRV.EMUERES (→ p. 638)

DRV.EMUEZOFFSET (→ p. 640)

## 9.5 Non-Plug and Play Feedback Devices

To set up a AKD drive with a non-plug and play feedback device (for example a resolver or an encoder), you must select a motor from the list of standard or custom motors or enter the motor parameters manually. Once the motor data is entered into WorkBench, an initial set of parameters can be calculated and downloaded to the drive.

### 9.5.1 Parameters

The following parameters can be initialized to their default values or calculated from user-supplied motor data:

IL.KP	IL.LIMITN	VL.KP	PL.KI = 0 (Default Value)
IL.KFFACC	IL.LIMITP	VL.KI	PL.INTINMAX = 0.419 (Default Value)
IL.KBUSFF	IL.PWMFREQ	VL.LIMITN	PL.INTOUTMAX = 0.419 (Default Value)
IL.FRCTION	IL.KVFF	VL.LIMITP	MOTOR.IPEAK
IL.OFFSET	IL.FOLDFTHRESHU	VL.THRESH	MOTOR.ICONT
IL.INTEN	IL.FOLDWTHRESH	VL.KVFF	MOTOR.PITCH
IL.IVFB	IL.MFOLDD	PL.KP	MOTOR.POLES
IL.KPDRATIO	IL.MFOLDT	PL.KD = 0 (Default Value)	MOTOR.TYPE

### 9.5.2 Calculations

WorkBench uses the following equations to calculate parameter values.

### Current Loop

The current loop proportional gain (IL.KP) must be such that the current loop closed loop crossover frequency/bandwidth (BW) nominal is the lesser of 2000 Hz or (PWM Frequency/4).

Then, with this frequency:

$$IL.KP = 2 * \pi * (\text{desired bandwidth in Hz}) * (\text{motor L line-line in H})$$

Setting the D and Q components

### Velocity Loop

$$VL.KP = (2 * \pi * 75) * (2 * Jm / Kt) = 300 * \pi * Jm / Kt$$

$$VL.KI = 5$$

### Slider Tuning

The slider tuning algorithm in WorkBench currently uses the following algorithm.

#### Input - Motor Data

The values for inertia, Jm (Kg / cm<sup>2</sup>), and torque constant, Kt (Nm/A), are obtained from either the SFD or the motor model number that you select.

#### Constants

Velocity Loop Bandwidth – BW = The default value is 75Hz.

Input - Inertia Ratio – Q = The default is 1.

#### Output - Control Loop Gains

$$VL.KP = 2 * \pi * BW * Jm * (1+Q) * 0.0001 / Kt$$

$$VL.KPI = BW * 0.08 - 1 \quad (\text{minimum of } 1)$$

$$PL.KP = BW / 5$$

## 9.6 Foldback

The foldback feature in the AKD protects both the motor and the drive from overheating. Two current foldback algorithms run in parallel in the drive: the drive foldback algorithm and the motor foldback algorithm. Each algorithm uses different sets of parameters. Each algorithm has its own foldback current limit, IL.DIFOLD (drive foldback) and IL.MIFOLD (motor foldback). The overall foldback current limit is the minimum of the two at any given moment.

$$IL.IFOLD = \min (IL.DIFOLD, IL.MIFOLD).$$

Foldback is not the same as current limits. Instantaneous current limits for the drive are set by the positive peak current (IL.LIMITP) and negative peak current (IL.LIMITN) in the Limits view in WorkBench. The foldback algorithms may reduce the current output to the motor in spite of the current limit settings.

### 9.6.1 Drive Foldback

The drive foldback algorithm monitors current feedback; since this is a monitoring function, the drive foldback parameters are not user configurable. If the current feedback exceeds the continuous current rating of the drive (DRV.ICONT), then the algorithm decreases the current to the DRV.ICONT level. For example, under a step command input condition, the foldback algorithm allows maximum peak current (DRV.IPEAK) output from the drive for a short period of time (up to IL.DFOLDD time), after which the drive begins an exponential foldback (with time constant of IL.DFOLDT) of the current to the drive's continuous current.

It takes a few seconds for the exponential decay to drop from the drive's peak current to its continuous level. A recovery time, when the feedback current is below DRV.ICONT level, is required to allow current above DRV.ICONT level again. A recovery time of IL.DFOLDR with 0 current allows the drive to apply DRV.IPEAK current for IL.DFOLDD time.

### 9.6.2 Setting up motor foldback

Motor foldback is set up automatically when using a plug and play motor or when a particular motor is selected from the WorkBench database.

If you are using a custom motor, use the Motor view in WorkBench to set custom values needed for foldback configuration. The parameter entries required for the drive to apply motor foldback protection properly are coil thermal constant (MOTOR.CTFO), peak current of the motor (MOTOR.IPEAK), and continuous current of the motor (MOTOR.ICONT). These values are used to setup the algorithm for motor foldback.

### 9.6.3 Setting Fault and Warning Levels

The **Motor Current Limit** and **Overall Current Limit** boxes show status variables that are constantly updated by the foldback algorithm. As current is applied above the drive or motor continuous rating, the capacity for the application of peak current starts to decrease. The motor current limit and overall current limit are actively decreased. If the move profile requires less than continuous current rating for a period of time, the Motor Current Limit and Overall Current Limit begin to increase until they reach maximum foldback capacity once again.

When Motor Current Limit or Overall Current Limit < Warning Level, an n524 status warning is triggered.

When Motor Current Limit or Overall Current Limit < Fault Level, an F524 fault is triggered and the drive power stage is disabled. The load then coasts to a stop.

In the **Foldback** screen, setting the Warning Level to 0 turns off the warning feature. Otherwise, the Warning Level must be set above the Fault Level, but below the Motor Current Limit and Overall Current Limit to trigger a warning.


Motor Current Limit:	<input type="text" value="16.508"/>	Ams	Fault Level:	<input type="text" value="9.000"/>	Ams
Overall Current Limit:	<input type="text" value="16.508"/>	Ams	User Fault Level:	<input type="text" value="9.000"/>	Ams
Current Command:	<input type="text" value="0.000"/>	Ams	Warning Level:	<input type="text" value="0.000"/>	Ams

If User Fault Level is set above Fault Level, the User Fault Level will be ignored. The User Fault Level is used to increase the time the drive is operated in foldback mode without faulting. For instance if the default Fault Level is 9.000 Arms and a User Fault Level is set to 7.5 Arms, the Fault Level is changed to 7.5 Arms. This configuration effectively increases the time that foldback will be applied to the drive before faulting.

Motor Current Limit:	<input type="text" value="16.508"/>	Ams	Fault Level:	<input type="text" value="7.500"/>	Ams
Overall Current Limit:	<input type="text" value="16.508"/>	Ams	User Fault Level:	<input type="text" value="7.500"/>	Ams
Current Command:	<input type="text" value="0.000"/>	Ams	Warning Level:	<input type="text" value="0.000"/>	Ams


### 9.6.4 Motor Peak Current Time

Peak current (MOTOR.IPEAK) along with coil thermal constant (MOTOR.CTFO) are used to determine the maximum time the motor can sustain peak current. The maximum time (IL.MFOLDD) is displayed in the **Foldback** screen as shown below:

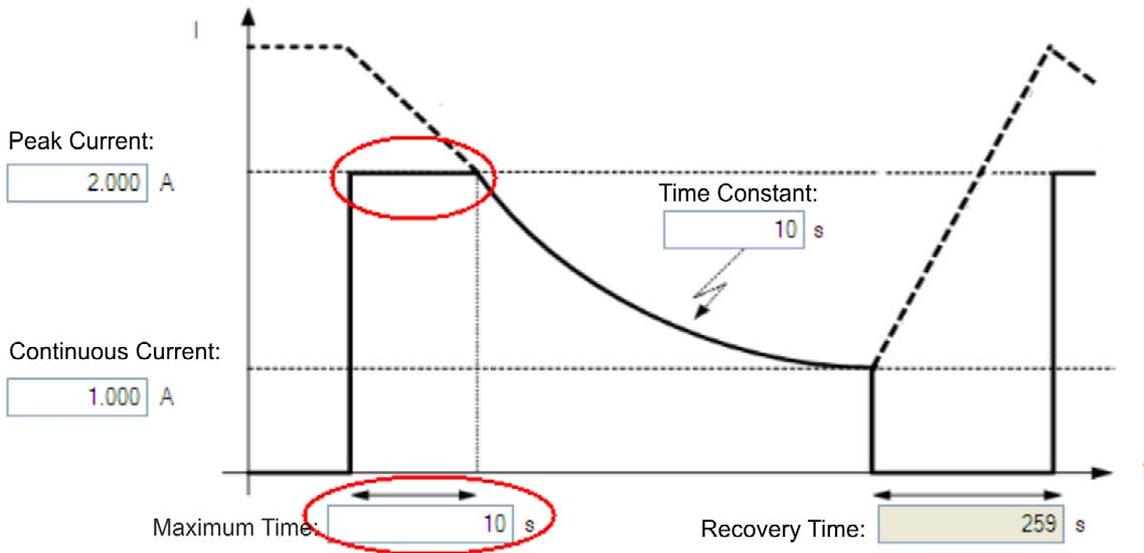


### 9.6.5 Motor Foldback Ramp

Once the maximum time for motor peak current has elapsed, if the move profile still demands peak current from AKD, the drive will exponentially lower the current applied to the motor. The Time Constant (IL.MFOLDT) dictates the profile. A smaller time constant represents a steeper decline in current applied to the motor.

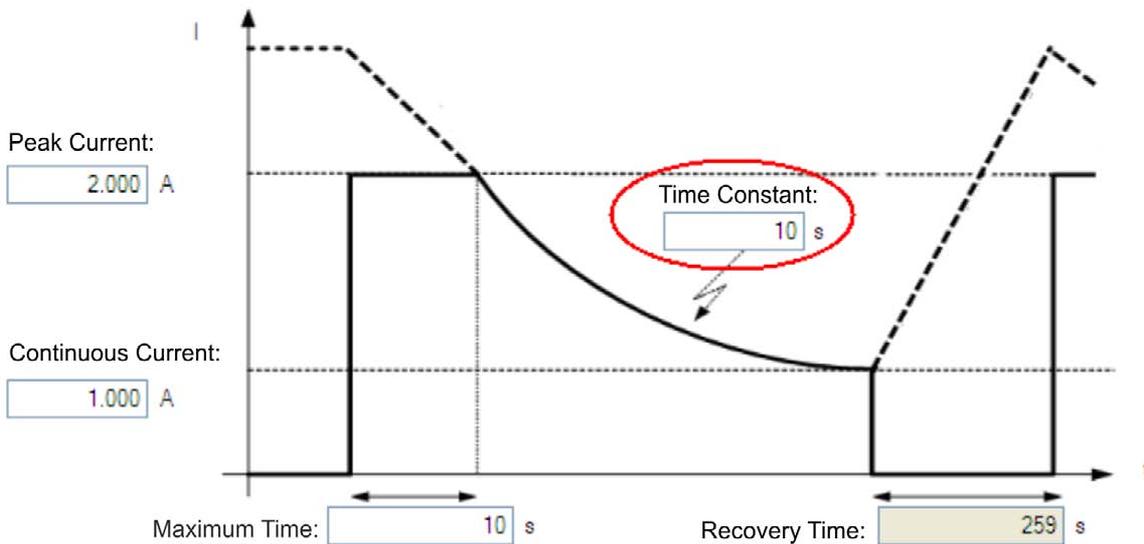


### 9.6.6 Motor Recovery

Once the peak motor current available has reached the continuous current of the motor, the motor needs Recovery Time (IL.MFOLDR) to cool down. Full Recovery Time (IL.MFOLDR) at 0 current is required for the motor to reach full maximum capacity in the shortest amount of time. The drive can command a current less than continuous current to continue driving the load, but the recovery time for full maximum capacity is increased.

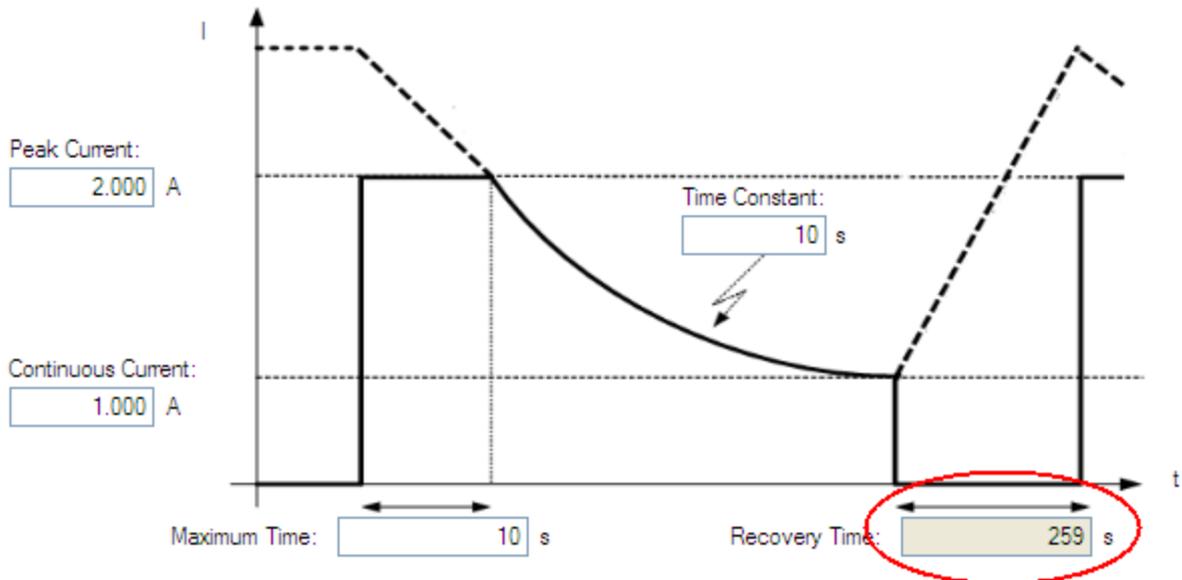

### 9.6.7 Overall Foldback

The overall limit is the momentary minimum value between the drive foldback and the motor foldback. The overall foldback is shown in the diagram below. You can set the warning and the fault levels as shown in the diagram.

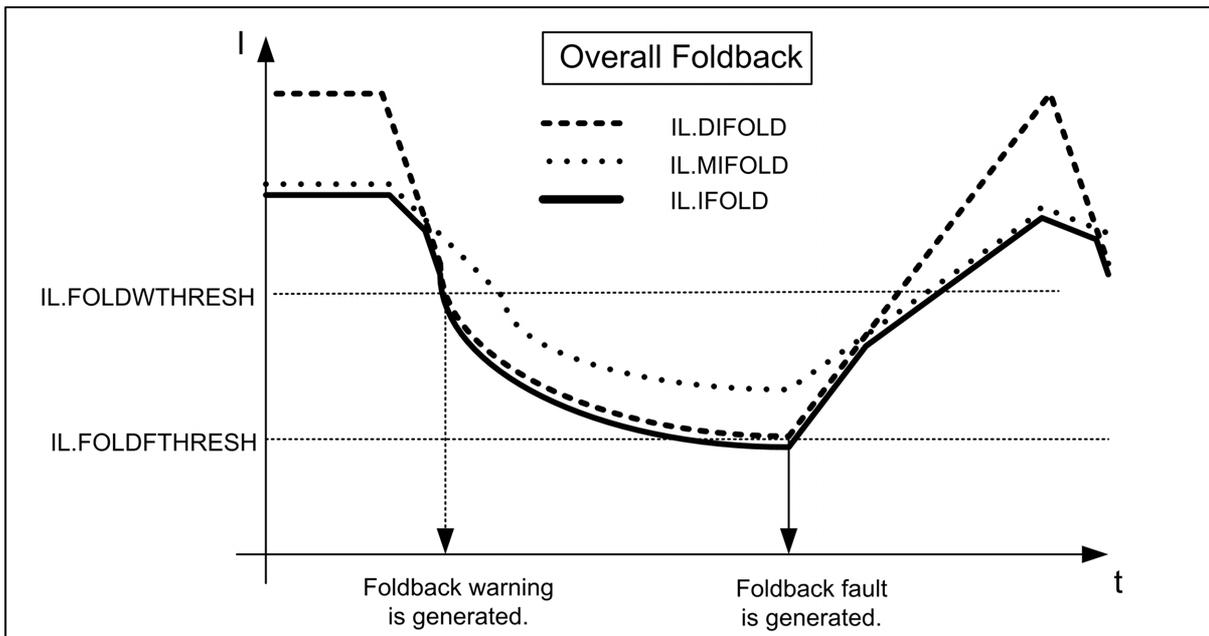

### 9.7 Brake

The brake output on connector X2 controls a mechanical brake that optionally may be fitted to a motor. The brake is applied and released relative to the **Drive Active** state of the drive. You can modify the release and apply delays using the parameters shown below.

Button or Dialog Box	Description	Parameter
Brake Control	Sets whether the motor has a brake.	<a href="#">MOTOR.BRAKE</a>

Button or Dialog Box	Description	Parameter
Time to Release	The time, set by the user, required to mechanically disengage the brake. After this time, motion commands are accepted.	<a href="#">MOTOR.TBRAKERLS</a>
Time to Apply	The time, set by the user, required to mechanically engage the brake. After this time, the drive will disable.	<a href="#">MOTOR.TBRAKEAPP</a>

## 9.8 Using Position Capture

### 9.8.1 Overview

Position capture allows you to precisely determine what the motor position (or drive clock time) was when a specific event triggers. The AKD drive uses two independent captures, which operate similarly.

Position capture is used in precision environments, where the motor may be moving at very high velocities, an IO is triggered, and you must know exactly where the motor was when the event occurred. Homing algorithms often use position capture.

Position capture will capture the motor position (or drive clock time) when the capture trigger is activated. The position capture or drive lock time capture will happen in less than 3 microseconds of the input transition. This assumes the use of high speed input 1 or 2 with the filter turned off. The capture engine can be re-armed and ready for another capture in less than 62.6 microseconds. This capture engine allows the position capture to obtain more accurate results than those obtained using the scope or recorder clock.

### 9.8.2 Configuring Position Capture

To configure the position capture, select **Position Capture** from the **Settings** group:

#### **Position Capture** The drive will be able to capture the position of the axes

##### Position Capture 0

Capture Mode:

Capture FB Source:

Captured Value:  deg

##### Capture Parameters

Source:

Edge:

##### Pre Condition

Condition:

Source:

Edge:

##### Position Capture 1

Capture Mode:

Capture FB Source:

Captured Value:  deg

##### Capture Parameters

Source:

Edge:

##### Pre Condition

Condition:

Source:

Edge:

#### Setting the Capture Source (CAP0.FBSOURCE, CAP1.FBSOURCE (→ p. 477))

CAP0.FBSOURCE and CAP1.FBSOURCE select the source of the captured value. Data for all source values is retrieved with CAP0.PLFB, CAP1.PLFB (→ p. 483).

Value	Description
0	Captures from feedback 1 (FB1), independent of the value of PL.FBSOURCE. The units are the same as those used for PL.FB.
1	Captures from feedback 2 (FB2).
2	Captures from feedback 3 (FB3).
3	Standard position capture, which stores PL.FB (→ p. 1094). The feedback number is determined by PL.FBSOURCE (→ p. 1096).
4	Captures from EXTENCODER.POSITION (AKD BASIC drives only).

#### Setting the Trigger Source (CAP0.TRIGGER, CAP1.TRIGGER (→ p. 495))

The trigger source determines which input on the drive causes the position capture to trigger.

Option	Description
0 - 6	These options trigger on the Digital Input 1 pin through Digital Input 7 pin, respectively.
7 - 9	These options trigger on the X9 connector RS485 Input 1 pin through RS485 Input 3 pin, respectively.
10	This option triggers on the primary encoder index.

#### Setting the Capture Mode (CAP0.MODE, CAP1.MODE (→ p. 481))

The capture mode determines what information is saved on the drive when the capture triggers.

Option	Description
<b>0 – Standard Position</b>	Captures the motor position in drive units.
<b>1 – Drive Internal Time</b>	Captures the time of the trigger in ns.
<b>2 – Distributed Clock Time</b>	Captures the network (Ethercat) distributed clock time.
<b>3 – Primary Encoder Signal</b>	Captures the motor position triggering on primary encoder index. This mode automatically rearms after each trigger.

If either **0 - Standard Position** or **3 - Primary Encoder Signal** is selected, delays may occur and are associated with feedback devices that are digital or interpolated.

#### Arming and Retrieving the Capture Value (CAP0.T, CAP1.T (→ p. 493))

CAP0.EN arms the capture and CAP0.T retrieves the capture value. Once you have configured the capture, you must arm it before it will trigger. Click **Arm** (1) to arm the capture.

Once the capture is armed, when it triggers, the captured value will be displayed below the Arm button (2).

#### Setting the Capture Edge (CAP0.EDGE, CAP1.EDGE (→ p. 470))

The capture edge determines which input state change triggers the capture.

Option	Description
<b>1 – Rising Edge</b>	Captures when the input signal goes high, from a low state.
<b>2 – Falling Edge</b>	Captures when the input signal goes low, from a high state.
<b>3 – Both Edges</b>	Captures any time the input signal changes state.

#### Setting the Pre-Condition Event: (CAP0.EVENT, CAP1.EVENT (→ p. 474))

The Capture Pre-Condition Event gives the user more flexibility in setting what conditions must be present for the Capture to trigger.

Event Option	Description
<b>0 – No precondition</b>	Capture triggers as soon as the capture edge occurs.
<b>1 – Trigger Edge after precondition</b>	Captures triggers only when the precondition occurs before the capture edge occurs.
<b>2 – Trigger Edge while precondition = 1</b>	Captures triggers only while the precondition is evaluated and is true while the capture edge occurs.
<b>3 – Trigger Edge while precondition = 0</b>	Captures triggers only while the precondition is evaluated and is false while the capture edge occurs.

#### Setting up a Pre-Condition for complex capture

##### Setting the Precondition Edge: (CAP0.PREEDGE, CAP1.PREEDGE (→ p. 485))

The pre-edge determines what input state change triggers the precondition. This feature operates the same as the capture edge described above.

##### Setting the Pre-Condition Select: (CAP0.PRESELECT, CAP1.PRESELECT (→ p. 489))

The preselect chooses what input source will trigger the precondition (based on the preedge setting, and the prefilter setting). This feature operates the same as the capture source described above.

### 9.8.3 Kollmorgen Test Reports

Position Capture test report based on performance testing by Kollmorgen:

#### Capture Accuracy with External Sensor

Drive: AKD-T00306-NBAN-000

Motor: AKM-21C

Feedback Type: Incremental type 2048 line encoder

Digital Input used: DIN1 (high speed input)

DIN1.FILTER = 0 (very important to set this to zero so filtering does not delay the system response)

Sensor Used : IDC RP1 type mounted directly to the shaft. Common industrial limit switch.

MOVE.RUNSPEED = 1000 RPM

With the motor running at above speed and the capture mechanism armed, the drive was able to capture the position within 30-70 counts (.17 - .40 degree) of accuracy or 27.5 - 64.0 micro sec.

#### Capture Accuracy with Internal Index from encoder

Drive - AKD-T00606-NBAN-000

Motor-AKM22G

Feedback Type - Incremental Encoder 2048 lines

MOVE.RUNSPEED = 1000 RPM

With the motor running at above speed and the capture mechanism armed, the drive was able to capture the position within 10-20 counts (.05 - .11 degree) of accuracy or 9.5 - 18.0 micro sec.

### Related Parameters

CAP Parameters (→ p. 469)

## 10 Using AKD in a Vertical Axis

**NOTE** For firmware versions 1-06 and later.

The drive should be configured to execute a controlled stop action in the event of a disable command (DRV.DISMODE = 2 or 3). This allows the motor to stop and the brake to be applied before the drive stops holding up the axis and removes power. With a vertical axis application where the motor is equipped with a brake that is controlled by AKD, it is recommended to set up the axis to immediately apply the brake in the event of the drive disabling for any reason. By setting MOTOR.BRAKEIMM (→ p. 968) = 1 (default is 0=off) the brake will be applied immediately in the event of the drive disabling.

Drive disabling can occur as a result of:

- Hardware Enable removed
- Software Enable removed
- Safe Torque Off (STO) activated
- Fault Condition
- Controlled Stop Input – any input configured as (DINx.MODE = 13 controlled stop)

**NOTE** For a digital input initiated controlled stop (A fault that results in controlled stop. See Fault and Warning Messages (→ p. 259)), or a software disable that is configured for a controlled stop (see DRV.DISMODE (→ p. 618)), the brake will be applied at the end of the controlled stop.

It is still important to setup the brake delays. This can be done in the brake screen under the settings section in WorkBench. These brake delays are used to delay the disabling of the power stage when motion is stopped and the drive is disabled. This is only pertinent for Controlled Stop and Software Disable of the drive. This prevents a slight drop of the load between the disable and the brake engagement. In other cases (Fault, Hardware Enable, STO) hardware disconnection prevents AKD from delaying the disable.

There is an advanced setting for the Hardware Disable. A programmable delay is available on the HW Enable input so the drive can hold the load before the disable. With a vertical load some movement could occur when the drive is disabled with a hardware input because the power stage was disabled immediately, before the brake could apply. DRV.HWENDELAY (→ p. 658) is available which will delay the disabling of the power stage. During this delay time, the drive will apply the brake immediately and simultaneously attempt to follow normal disable procedures. The value is limited to a maximum of 167 ms. During this time, the drive will attempt to bring the load velocity to 0 RPM. If DRV.HWENDELAY = 0, the feature is off (this is default).

Vertical Application Desired Response	Customer Disable Condition	Configuration Needed	Parameter Settings Needed
Controlled stop when possible. If not possible, apply motor brake immediately.	Normal disable	Command CS using input. Do not disable power stage or command other disables until CS completes and brake applies.	DRV.DISMODE = 2. Controlled stop then disable. Set: DRV.DISTO , CS.VTHRESH , CS.DEC , CS.TO .
	E-stop, or safety condition		
	Fault CS	Do not disable power stage or command other disables until CS completes and brake applies.	
	Fault Dynamic Brake	N/A	N/A
	Fault Power stage disable	None	MOTOR.BRAKEIMM = 1

Vertical Application Desired Response	Customer Disable Condition	Configuration Needed	Parameter Settings Needed
Controlled stop when possible. If not possible, dynamic brake.	Normal disable	Command CS using input. Do not disable power stage or command other disables until CS completes and brake applies.	DRV.DISMODE = 3. Controlled stop then disable. Set: DRV.DISTO , CS.VTHRESH , CS.DEC , CS.TO .
	E-stop, or safety condition		
	Fault CS	Do not disable power stage or command other disables until CS completes and brake applies.	
	Fault Dynamic Brake	N/A	N/A
	Fault Power stage disable	None	MOTOR.BRAKEIMM = 1

## 11 Configuring with Linear Motors

### 11.1 Connecting a DDL Motor to an AKD Drive

Before Connecting a DDL motor to an AKD drive, the following tasks must be accomplished:

- Integrate motor coil and magnet way onto a bearing structure so that the motor moves freely (rubber stops at the end of travel are recommended, especially during commissioning).
- Linear scale is integrated to the assembly and set up with the correct alignment and airgap to provide an appropriate sinusoidal or digital feedback signal.
- Determine the resolution of the Linear Scale in micrometers (microns) per cycle (this will be listed in the documentation of the linear scale).

Connect Hall sensor, Linear Scale, and motor temperature cables through the ACI-AKD cable assembly to the AKD's X10 Feedback Connector.

Connect the motor power leads to the AKD motor power connector X2 with the following connections:

Red -> U

White -> V

Black -> W

Yellow / Green -> PE

Apply 24 volt logic power to the AKD and launch WorkBench from a computer to interface with the AKD drive. From the main tree, under **Settings**, select **Motor** and click on **Select Motor**.

#### NOTE

If "Select Motor" is grayed out, Motor Autoset may need to be set to "0 -Off" to enable the Select Motor option.

On the Select Motor screen, for Motor Family select either **IC and ICD Series Ironcore DDL** or **IL Series Ironless DDL**. On the Select Motor screen for "Name" select the appropriate motor part number.

Click OK.

From the main tree, under Settings, select **Feedback 1**.

Under Feedback Selection, select either **10 – Incremental Encoder with Halls**, or **20 – Sine Encoder with Halls** to correspond to the Linear Scale that is integrated with the motor.



## Feedback 1 (X10)

The primary position feedback fitted to your motor.

Feedback Selection:	-1 - Auto Identify	
Feedback Identified:	-1 - Auto Identify	
	10 - Incremental Encoder with Halls	
	11 - Incremental Encoder without Halls	
	20 - Sine Encoder with Halls	
	21 - Sine Encoder without Halls	
	30 - Endat 2.1	
	31 - Endat 2.2	
	32 - BiSS Analog	
	33 - Hiperface	
	34 - BiSS Mode C Renishaw	
	40 - Resolver	
	41 - SFD (Smart Feedback Device)	
	42 - Tamagawa Serial	
	43 - Network Cyclic Feedback	
	44 - Network Cyclic Feedback via FB2	
	50 - Reserved (do not use)	
	63 - Simulated Motor	
If you rotate the motor shaft you should see the dial move.		
Motor Autoset:		
Position Feedback:		Counts 16Bit
Drive Direction:		0
Position Feedback Poles:		2

[Goto Wake And Shake Configuration](#)

Using the resolution of the Linear Scale in Microns per cycle, the Sine Cycles/Magnet Pitch is determined. Use the following:

1. Take the reciprocal of resolution to get cycles per micron
2. Multiply by 1000 to get cycles per millimeter
3. Multiply by 32 millimeters per Magnet Pitch to get Sine Cycles/Magnet Pitch

For example, if the resolution of the Linear Scale is 40 microns per cycle, then the Sine Cycles/Magnet Pitch would be 800.

The Linear Scale phase direction must be verified. Watch the Feedback 1 screen in WorkBench. When the coil assembly is moved in the direction of the cable exit (think of pulling the coil by the cable), the Position Feedback should increase positively in value and in the motor graphic, the gray block should move to the right. If the direction is opposite, then the A+ and A- signals on the Linear Scale must be swapped to correct the phase direction.

The motor is now ready for velocity loop and position loop compensation.

## 12 Selecting Units for Your Application

---

<b>12.1</b>	<b>Selecting and Saving Units</b> .....	<b>100</b>
<b>12.2</b>	<b>Units Example</b> .....	<b>100</b>
<b>12.3</b>	<b>Using Custom Units with Feedback 2</b> .....	<b>101</b>

## 12.1 Selecting and Saving Units


The drive uses three primary measures of motion: position, velocity, and acceleration. You must first choose units of measurement for each of these, and then enter the details of the mechanics in order to scale the chosen units appropriately.

The settings for units are automatically applied. The unit settings in the drive will reflect last settings made in the units screen before exiting. To save settings into the nonvolatile memory of the drive, click the **Save to Drive** button in the toolbar.

## 12.2 Units Example

### 1. Select type of mechanics

To set the units in the drive for a particular application, first select the type of mechanics present.

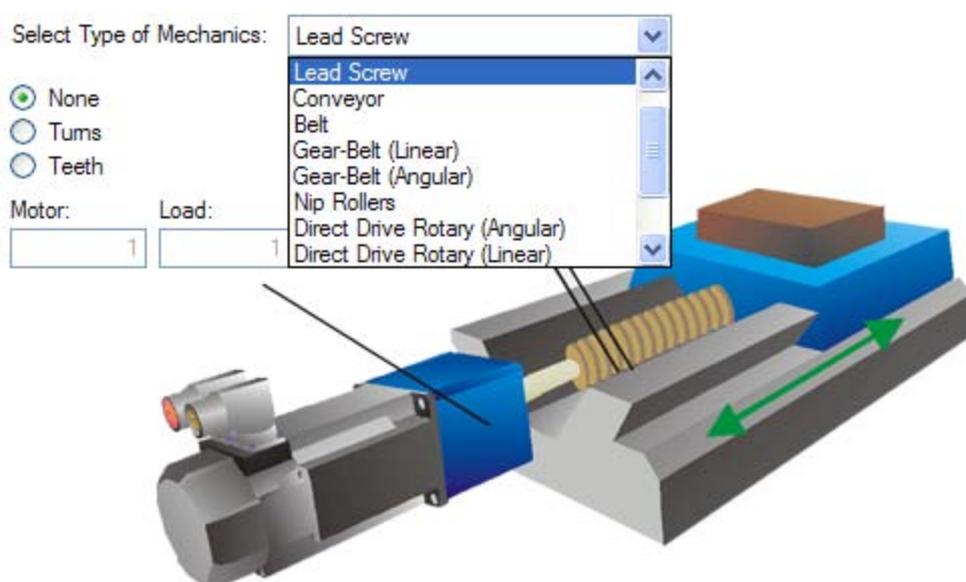

### 2. Select Position Units

By default, position is measured in counts. Counts are the smallest unit of position that can be represented in the drive. This unit of measure equates to 4,294,967,296 counts/revolution of the motor. You can use the units screen to change this measurement into a meaningful scale relating to the units of the application.

For position units, five selections are available:

- 0—Counts (4,294,967,296/rev)
- 1—Radians ( $2\pi$  /rev)
- 2—Degree (360/rev)
- 3—Custom (set by user according to mechanics of machine)
- 4—Counts (16-bit) (65,536 /rev)

#### Custom Units

The drive uses full 32-bit quantization for internal calculations regardless of unit settings. User units settings will not affect performance, resolution, or accuracy of the servo system.

Choose “3-Custom”, and then select your desired position units, for example, millimeters.

Position Unit:

Velocity Unit:

Acceleration Unit:

Custom Position Unit:

### 3. Select Velocity Units

For velocity, select **Custom/s** to set the measurement to mm/sec.

### 4. Select Acceleration Units

For acceleration, select **Custom/s^2** to set the measurement to mm/sec<sup>2</sup>.

Once the chosen units of measurement are established, the details of the mechanics need to be entered to establish the scaling of the chosen units.

Select Type of Mechanics:

None  
 Turns  
 Teeth

Motor:  Load:

Lead:  mm

In this example, a lead screw with a 10 mm lead and a 5:1 gearbox has been selected. A 10 mm lead means the load will traverse 10 mm for every turn of the screw. A scale factor is applied based on the values entered for the chosen mechanics. This scaling is done through UNIT.PIN and UNIT.POUT parameters in the AKD, which are automatically adjusted when the mechanics values are entered.

UNIT.PIN and UNIT.POUT can be directly entered using the **Motor Only** selection from the **Select Type of Mechanics** box. In this example, scaling is adjusted as follows:

Custom

UNIT.PIN Label: UNIT.POUT

mm =  rev.

UNIT.PIN is calculated as follows:

$$10 \text{ mm/screw turn} * 1 \text{ screw turn}/5 \text{ motor turns} = 2 \text{ mm/motor turn}$$

## 12.3 Using Custom Units with Feedback 2

When PL.FBSOURCE (→ p. 1096) = 1 (Feedback 2), UNIT.PIN and UNIT.POUT should reflect the mechanical data of the feedback 2 encoder.

For example, an incremental encoder is connected at the X9 terminal and configured as FB2 (the position feedback signal into the AKD servo position loop). This encoder is then mounted on a circular disk with a circumference of 400mm. One revolution of the encoder will be 400mm. In this case, set UNIT.PIN = 400 and UNIT.POUT = 1.

### **Related Parameters**

UNIT Parameters (→ p. 1217)

DRV.NVSAVE (→ p. 679)

MOTOR.TYPE (→ p. 1023)

## 13 Configuring General Drive Settings

---

13.1 Digital Inputs and Outputs .....	104
13.2 Command Buffer .....	116
13.3 Analog Input .....	119
13.4 Analog Output .....	120
13.5 Electronic Gearing .....	121
13.6 Limits .....	123
13.7 Compare Engines .....	124
13.8 Programmable Limit Switch .....	126
13.9 Enable/Disable .....	129
13.10 Controlled Stop .....	132
13.11 Dynamic Braking .....	134
13.12 Emergency Stop .....	135
13.13 Safe Torque Off (STO) .....	136
13.14 Under Voltage Fault Behavior .....	137

## 13.1 Digital Inputs and Outputs

### 13.1.1 Overview

The drive has programmable digital inputs and outputs that you can use to initiate motion, control auxiliary devices, or trigger other actions. The inputs and outputs should be wired according to the instructions in the drive [Installation Manual](#). Note that the input on pin 4 of the X8 connector is dedicated as an enable input.

### 13.1.2 Using Digital I/O

Once wired correctly, digital inputs and outputs can be used for a variety of functions such as to trigger auxiliary devices, initiate homing moves or other motion tasks, or set travel limits. This section describes the specific functionality of the programmable I/O.

**I/O Tip:** When using I/O devices, you must carefully consider the type of device you use for switches. An unsuitable switch can cause switch bounce, which in turn can cause erroneous triggers to occur. For example a low cost xx switch, as it is toggled, will bounce a few times before it turns on or off. A device that is monitoring these inputs frequently may interpret the bounce as multiple triggers of that I/O. The drive has the ability to reduce this type of error using some debounce techniques to ignore sudden state changes caused by bounces.

### 13.1.3 Digital Inputs

Digital inputs can be set in different modes based on the desired function. These functions are outlined below.

#### Mode 0: Off

This mode is the non-use state and is the default setting for the drive. This mode is valid for all opmodes and command source combinations.

#### Mode 1: Fault Reset

When an input configured with this mode becomes active, the drive will try to clear all active faults. This mode is edge triggered, so the action occurs only once. If the condition that triggered the fault is still present, the fault condition will remain. See [Fault and Warning Messages](#) (→ p. 259) for details regarding the behavior of individual faults.

This mode is valid for all opmodes and command source combinations.

#### Mode 2: Start Motion Task

This mode is used to start motion task number x, where x = the value of the associated input parameter. This input will trigger a motion task number as defined in the extra parameter field for this input.

This mode is valid for opmode 2 (position) and command source 0 (service) only.

Once started, the motion task will run until completed. Changes on the input that started the task will be ignored until the motion task is complete. If multiple inputs are configured to start a task, all of these inputs will be ignored until the task is complete. If a motion task is already active in the drive, changes on this input will be ignored.

#### Example:

→DIN1.MODE 2 - sets the input mode to be Start Motion Task

→DIN1.PARAM 1 - sets the Motion Task start to 1.

→MT.LIST - confirms that Motion Task 1 exists.

→10.000 [counts] 1000.000 [rpm] 0 1001.358 [rpm/s] 1001.358 [rpm/s] 0 0 0 [ms]

<Create a rising edge of the input>

<Motion Task 1 executed>

#### Mode 3: Motion Task Select Bit

This mode is used to select the motion tasks that are stored in the drive (numbers 1 to 127) or the reference traverse/homing (0). The motion task number is presented externally at the digital inputs. The motion task set by this mode will be executed when digital input assigned to mode 4 (motion task start selected) gets a rising edge.

This mode is valid for opmode 2 (position) and command source 0 (service) only.

### Example

Assume:

DIN1.MODE = DIN2.MODE=DIN3.MODE =3

The state of input 1 and 3 is 1.

The state of input 2 is 0.

Motion task 5 ( $5 = 2^0 + 2^2$ ) will be executed.

### Mode 4: Motion Task Start Selected

This mode is used to start the motion task that is stored in the drive by giving the motion task number. This input uses a secondary variable for the motion task number to be started with the Input trigger. The secondary variable is set by mode 3 (Motion task select bit).

Motion task number "0" initiates homing/reference traverse. A rising edge starts the motion task. A falling edge has no effect.

This mode is valid for opmode 2 (position) and command source 0 (service) only.

### Mode 5: Start Home

This mode is used to start the homing motion task on the rising edge. The falling edge has no effect on this input mode of operation.

This mode is valid for opmode 2 (position) and command source 0 (service) only.

### Mode 6: Start Jog

This mode is used to start a jog move. This input mode utilizes a secondary variable for the jog's velocity. The jog will start upon a rising edge. A falling edge stops the jog.

This mode is valid for opmodes 1 (velocity) and 2 (position) and command source 0 (service).

### Mode 7: Reserved

### Mode 8: Zero Latch

This mode is used to define the current drive position as the zero pulse for the drive EEO and sets the incremental encoder zero pulse offset. The current position, depending on the incremental encoder resolution that is set, is calculated at the rising edge and stored as an offset. An automatic save is then generated. This function is used to perform an automatic setting of the zero pulse in one turn of the motor.

This mode is valid for all opmodes and command source combinations.

### Mode 9: Command Buffer

This mode is used to execute four different sets of command buffers. Each set contains two buffers: low and high, for a total of eight buffers. DINx.PARAM for this mode can be 1 to 4, and determines which set of buffers to use.

To set the high and low values of the eight buffers from the terminal screen, use the commands DIN.HCMDx and DIN.LCMDx ( $1 \leq x \leq 4$ ). Use ";" to separate the two buffer commands. Each buffer contains up to 128 characters.

### Example

->DIN1.MODE 9 (sets command buffer mode to digital input 1)

->DIN1.PARAM 1 (sets the first set of buffers to digital input 1)

->DIN.HCMD1 DRV.OPMOE 1; (sets high command buffer)

->DIN.LCMD1 DRV.OPMOE 0; (sets low command buffer)

Under this configuration, a rising edge in digital input 1 will set DRV.OPMODE to 1 and a falling edge will set DRV.OPMODE to 0.

You can also set the command buffers from the **Digital I/O** view in WorkBench; see Command Buffer (→ p. 116)

This mode is valid for all opmodes and command source combinations.

### Mode 10: Control Fault Relay

This mode is used to create an external fault.

Input state is 0 – drive regular behavior

Input state is 1 – “Fault 245 – external fault” is issued.

This mode is valid for all opmodes and command source combinations.

#### **Mode 11: Home reference**

This mode is used to receive a physical home reference switch located on the machine to use for the different Home Types.

This mode is valid for opmode 2 (position) and command source 0 (service) only.

#### **Mode 12: Reserved**

#### **Mode 13: Controlled Stop**

This mode is used to stop the motor using the deceleration variable ramp. If zero velocity is reached, the power stage is then disabled. Also see CS Parameters (→ p. 527) and Controlled Stop (→ p. 132).

This mode is valid for all opmodes and command sources.

#### **Mode 14: Reserved**

#### **Mode 15: Quick Stop**

This mode is used to stop the motor. It is equivalent to issuing a DRV.STOP command.

This mode is valid for all opmodes and command sources 0 (service) and 2 (electronic gearing).

#### **Mode 16: Activate Electronic Gearing**

This mode starts/activates an electronic gearing procedure upon a rising edge.

This mode is valid for opmode 2 (position) and command source 2 (electronic gearing).

#### **Mode 17: Activate Electronic Gear Position Shift**

This mode is used to add a position shift to the gearing upon a rising edge. The distance of the position shift is set by the secondary variable. The secondary variable is set by DINx.PARAM. The parameter is in position units and is used to incorporate a phase shift while operating in electronic gearing mode.

This mode is valid for opmode 2 (position) and command source 2 (electronic gearing).

#### **Example**

An input is set to add a 180 degree "phase shift" when triggered. As the drive is following the electronic gearing input, the input is triggered and the motor will follow the drive acceleration and deceleration rates to shift 180 degrees while maintaining the gearing synchronization.

#### **Mode 18: Positive Limit Switch**

This mode will cause the input to operate as the positive limit switch. If the positive limit switch input is triggered (goes low), the positive direction motion will then be stopped.

This mode is valid for all opmodes and command source combinations.

#### **⚠ CAUTION**

When setting up the hardware limit switches, you must be certain that the switch remains in the triggered state until you move off of the switch. A very low deceleration rate combined with a high approach velocity may overshoot the switch. This action will cause the position limit warning to be canceled. The warning is not latched, therefore if the switch is overshoot, additional movement in the same direction (if commanded) will be possible. This movement can cause machine damage.

#### **Mode 20: Brake Release**

This mode is used to apply or release the brake when the drive is not active.

Input = 0: the drive controls the brake (regular drive behavior)

Input = 1: the user controls the brake (apply or release using commands)

This mode is valid for all opmodes and command source combinations.

#### **Mode 21: Current Limit**

This mode is used to limit the drive current. The current limit is set by a secondary variable; use DINx.PARAM to set the secondary variable.


This mode is valid for all opmodes and command source combinations.

#### **Mode 22: Switch Command Source and Opmode**

This mode is used to switch between the present command source/opmode and another command source/opmode setting predetermined by the user upon the level change of a digital input. This mode is valid for all opmodes and command source combinations. Arrow 1 in the screen shot below indicates the present command source/opmode that the drive is set for. This is the mode the drive is in when the digital input is not high. This low state is determined by the original settings for DRV.CMDSOURCE and DRV.OPMODE.

The drive will switch into the command source/opmode setting shown in arrow 2 when the digital input level changes to high. This setting is stored by DINx.PARAM and is edited with the drop-down boxes at arrow 2.

**NOTE** When the digital input is switched high, DRV.CMDSOURCE and DRV.OPMODE will take the values defined by DINx.PARAM. Do not perform a “drive save” in this state, or the low state and high state settings will become the same.

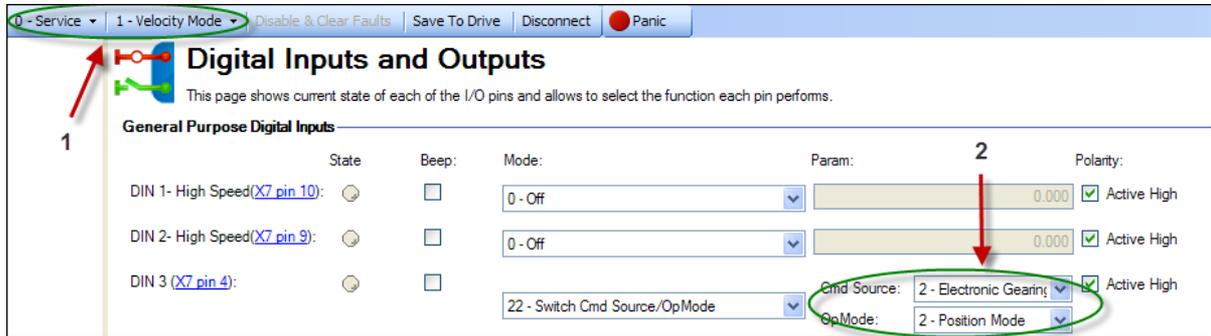

DINX.PARAM	Command Source	Opmode
0	0-service	0-torque
1	0-service	1-velocity
2	0-service	2-position
10	1-fieldbus	0-torque
11	1-fieldbus	1-velocity
12	1-fieldbus	2-position
N/A	2-electronic gearing	0-torque
N/A	2-electronic gearing	1-velocity
22	2-electronic gearing	2-position
30	3-analog	0-torque
31	3-analog	1-velocity
32	3-analog	2-position

If more than one digital input is configured to this mode, and one of them is active, then the command source/opmode combination configured for that input will be active. If additional inputs become active, the command source/opmode combination configured for the lowest numbered will be the active one.

**Example**

- Assume:
- Input 1 is configured for electronic gearing/position.
- Input 2 is configured for service/velocity.
- Input 3 is configured for fieldbus/position.
- The system is in service/torque.

**Result:**

With no inputs active, the system remains in service/torque.

If input 3 goes active first, then the system will go to fieldbus/position

If input 2 goes active first, then the system will go to service/velocity

If input 1 then goes active, then the lowest active input is now 1 so the system will go to electronic gear-  
ing/position

If input 2 then goes active, then the lowest active input is still 1 so there is no change.

If input 3 then goes inactive, then the lowest active input is still 1 so there is no change,

If input 1 then goes inactive, then the lowest active input is 2 so the system will go to service/velocity

If input 2 then goes inactive, then there are no active inputs and the system returns to service/torque.

**Mode 23: Change algebraic sign of the measured analog input voltage**

This mode can either change the algebraic sign of the measured analog input voltage, or zero the value using a digital input. Since the analog input voltage is used to generate command values in `DRV.CMDSOURCE=3` (analog command source), Mode 23 can also be used to change the direction of movement or stop motion using a digital input in `DRV.CMDSOURCE=3`.

This mode is valid for all opmodes and command source 3 (analog).

The value of `DINx.PARAM` defines the value of a multiplication factor for the measured analog voltage. The low-byte of the `DINx.PARAM` value determines the value of this factor, which is multiplied by the measured analog input voltage upon a rising edge on the associated digital input. The high-byte determines the factor upon a falling edge as follows:

`DINx.PARAM = 0xFFRR` (F=Falling edge; R = Rising edge)

The following values are used in this mode:

Value	Description
0x00	Zero the measured analog voltage.
0x01	Multiply the analog voltage with 1.
0x02	Multiply the analog voltage with -1.
0x03	Zero the measured analog voltage plus trigger in addition a software enable command.
0x04	Multiply the analog voltage with 1 plus trigger in addition a software enable command.
0x05	Multiply the analog voltage with -1 plus trigger in addition a software enable command.
0x06	Zero the measured analog voltage plus trigger in addition a software disable command.
0x07	Multiply the analog voltage with 1 plus trigger in addition a software disable command.
0x08	Multiply the analog voltage with -1 plus trigger in addition a software disable command.

**Example 1**

`DINx.PARAM = 513 = 0x0201`

The measured analog input voltage is multiplied with a factor of 1 upon a rising edge on the associated digital input.

The measured analog input voltage is multiplied with a factor of -1 upon a falling edge on the associated digital input.

**Example 2**

`DINx.PARAM = 256 = 0x0100`

The measured analog input voltage is multiplied with a factor of 0 upon a rising edge on the associated digital input.

The measured analog input voltage is multiplied with a factor of 1 upon a falling edge on the associated digital input.

### Example 3

DINx.PARAM = 1540 = 0x0604

The measured analog input voltage is multiplied with a factor of 1 upon a rising edge on the associated digital input. Additionally, the rising edge on the associated input triggers a software enable command, similar to the DRV.EN command.

The measured analog input voltage is multiplied with a factor of 0 upon a falling edge on the associated digital input. Additionally, the falling edge on the associated input triggers a software disable command, similar to the DRV.DIS command.

### Mode 25: Controlled Stop Without Re-enable

After performing a controlled stop the drive will not be re-enabled when the signal is high. Instead, the drive needs to be re-enabled by the user.

### Mode 26: Suspend Motion

Suspend Motion is a feature which stops current motion, suspends further motion, but keeps the drive enabled. The axis decelerates at the rate defined by CS.DEC (→ p. 528).

Motion is being disallowed by Suspend Motion when DRV.MOTIONDISSOURCES = 1.

## 13.1.4 Digital Outputs

Digital outputs can be set in different modes based on the desired function. These functions are outlined below.

### NOTE

If an output is overloaded (> 100 mA), then the output will turn off (with no indication in WorkBench) and remain off until one of the following occurs:

- The power supply driving the output is removed.
- The output is turned off from the firmware.
- The 24V supply to the AKD is power cycled.

If the overload condition still exists, the output will not turn on.

**Mode 0-User (Default = 0):** The output state is decided by the user or fieldbus. This mode is valid for all opmodes and command source combinations.

**Mode 1-Mains Ready:** The output mode produces a high signal if the drive DC bus voltage is higher than the under voltage error level and lower than the over voltage error level. This mode is valid for all opmodes and command source combinations.

**Mode 2-Software Limit:** This output turns on when the software limit positions are reached. This output produces a high signal if a software limit is reached by traveling in the direction of that software limit. Software limits are set in the **Limits** view. In the **Limits** view, Position 0 is the position limit for negative travel, while Position 1 is the limit for positive travel.

This mode is valid for all opmodes and command source combinations.

**Mode 3-Move Complete:** When a motion task has completed its move and the trajectory reaches zero and no following tasks are present, the move is considered complete and the output will activate when the actual position is within target\_position\_area, where target\_position\_area is as below.

$$\text{target\_position\_area} = \text{motion\_task\_target\_position} \pm \text{MT.TPOSWND}$$

Mode 3 and Mode 17 (MT in Position) are almost identical. Mode 17 will trigger as soon as the load is in the position window, whereas Mode 3 will wait until the trajectory is complete before monitoring the window. Mode 17 may signal faster because of this, and can also potentially bounce out of the window temporarily.

**Mode 4 - Position Error Monitor:** This output mode produces a high signal when the absolute value of the position error is less than the parameter entered in the extra parameter field and the drive is enabled.

-DOUx.PARAM < PL.ERR < DOUTx.PARAM

**Mode 5-Position Greater than X:** When the position is greater than the parameter entered in the extra parameter field, the output will activate.

This mode is valid for all opmodes and command source combinations.

**Mode 6-Position Less than X:** When the position is less than the parameter entered in the extra parameter field, the output will activate.

This mode is valid for all opmodes and command source combinations.

**Mode 7-Warning:** This output will activate when the drive experiences a warning, such as positive or negative limit switch input triggered.

This mode is valid for all opmodes and command source combinations.

**Mode 8-Enable:** If you need an output to indicate that the drive is enabled, use this output mode.

This mode is valid for all opmodes and command source combinations.

**Mode 9:** Reserved.

**Mode 10-Motor Brake:** The output mode produces a high signal if a brake is released (this is when the power is applied to the brake and the motor is free to spin). The output mode produces a low if a brake is applied (this is when power is removed from the brake and the brake is set).

This mode is valid for all opmodes and command source combinations.

**Mode 11-Drive Faults:** The output mode produces a high signal if the drive has a fault.

This mode is valid for all opmodes and command source combinations.

**Mode 12-Absolute velocity greater than x:** The output mode produces a high signal when the absolute value of the velocity is greater than a variable x. Use DOUTx.PARAM to set x.

This mode is valid for all opmodes and command source combinations.

**Mode 13-Absolute velocity less than x:** The output mode produces a high signal when the absolute value of the velocity is less than a variable x.

Use DOUTx.PARAM to set x.


This mode is valid for all opmodes and command source combinations.

**Mode 14-Homing complete:** The output mode produces a high signal when the homing process is completed.

This mode is valid for opmode 2 (position) and command source 0 (service) only.

**Mode 15 - PLS.STATE bits OR connected:** The output mode produces a high signal if at least one of the PLS.STATE bits is high (the PLS is active) and if the corresponding bit in the DOUTx.PARAM parameter also has been set to high. The DOUTx.PARAM command connects the PLS.STATE bits to the digital output itself and thus acts as an enable mask.

In mode 15 DOUTx.PARAM is set from the Digital Outputs section of the Programmable Limit Switches screen. See Programmable Limit Switch (→ p. 126).

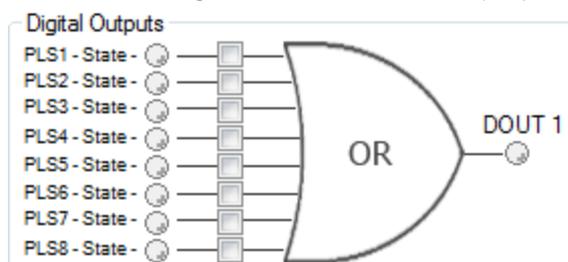

This mode is valid for all opmodes and command source combinations.

### Example

```
|<- Bit 7 to 0 ->|
```

```
DOUT1.PARAM = 23 = 0b 0 0 0 1 0 1 1 1 (Binary code)
```

The digital output 1 is active when bit 0 or bit 1 or bit 2 or bit 4 of PLS.STATE is high. All other bits within PLS.STATE are not considered by the digital output mode due to the DOUT1.PARAM setting. Do not use decimal places for the DOUTx.PARAM parameter for this particular digital output mode.

**Mode 16 - Command Buffer Active:** The output mode produces a high signal when the commands in a digital input Command Buffer are being executed.

#### Mode 17 - Reserved

**Mode 17 - MT In Position:** This output turns on when the position value reaches a window around target position of the active motion task, which doesn't have any further following motion tasks. The motion task target position window size can be assigned using MT.TPOSWND parameter.

$$\text{target\_position\_area} = \text{motion\_task\_target\_position} \pm \text{MT.TPOSWND}$$

Mode 3 and Mode 17 (MT in Position) are almost identical. Mode 17 will trigger as soon as the load is in the position window, whereas Mode 3 will wait until the trajectory is complete before monitoring the window. Mode 17 may signal faster because of this, and can also potentially bounce out of the window temporarily. DOUTx.STATE always returns 0 in modes 19 and 23.

**Mode 20 – Controlled Stop Active:** This output mode produces a high signal if no controlled stop is active. When a controlled stop is executed, the signal goes low and stays low until the controlled stop has finished.

**Mode 21 – Immediate Fault Disable:** This output mode produces a low signal when a fault will disable the power stage immediately, or when the hardware enable input is low. The output stays low as long as the fault is not cleared by the user or the hardware enable signal is low.

**Mode 22 – In Rush Relay State:** This output mode produces a low signal when the in rush relay is open. The mode produces a high signal when the in rush relay is closed.

**Mode 23 – Compare Output:** This output mode reflects the state of the the compare output. There are two compare engines and DOUTx.PARAM selects the engine (0 or 1) that controls this output.

Compare Engines (→ p. 124) | CMP Parameters (→ p. 497)

#### Summary of Opmode and Command Source Dependencies

DINx.MODE	Mode Description	Opmode	Command Source
0	Off	all	all
1	Fault Reset	all	all
2	Start Motion Task	2-Position	0-Service
3	Motion Task Select Bit	2-Position	0-Service
4	Motion Task Start Selected	2-Position	0-Service
5	Start Home	2-Position	0-Service
6	Start Jog	1-Velocity 2-Position	0-Service
8	Zero Latch	all	all
9	Command Buffer	all	all
10	Control Fault Relay	all	all
11	Home Reference	2-Position	0-Service
13	Controlled Stop	all	all
15	Quick Stop	all	0-Service
16	Activate Electronic Gearing	2-Position	2-Electronic Gearing
17	Electronic Gear Position Shift	2-Position	2-Electronic Gearing
18	Positive Limit Switch	all	all
19	Negative Limit Switch	all	all
20	Brake Release	all	all
21	Current Limitation	all	all
22	Switch CmdSource/Opmode	all	all
23	Analog In Sign Control	all	3-Analog

DINx.MODE	Mode Description	Opmode	Command Source
25	Controlled Stop without Re-enable	all	all
26	Suspend Motion	all	all

DOUTx.MODE	Mode Description	Opmode	Command Source
0	User- (Default=0)	all	all
1	Mains Ready	all	all
2	Software Limit	all	all
3	Move Complete	2-Position	0-Service
4	Position Error Monitor	2-Position	all
5	Position > x	all	all
6	Position < x	all	all
7	Warning	all	all
8	Enable	all	all
10	Motor Brake	all	all
11	Drive Fault	all	all
12	Absolute Velocity > x	all	all
13	Absolute Velocity < x	all	all
14	Homing Complete	2-Position	0-Service
15	Programmable Limit Switch	all	all
16	Command Buffer Active	all	all
17	Mt in position		
20	Controlled Stop Active	all	all
21	Immediate Fault Disable	all	all
22	In Rush Relay State	all	all
23	Compare Output	all	all

### 13.1.5 Digital Inputs (X7/X8)


The drive provides 8 digital inputs (→ p. 312). These can be used to initiate pre-programmed functions that are stored in the drive. A list of these pre-programmed functions is included in the WorkBench. Digital Input 8 is not programmable but is fixed to the ENABLE function.

If an input is programmed, it must be saved to the drive.


**NOTE** Depending on the selected function, the inputs are high or low active.

The inputs can be used with switched +24 V (source type) or switched GND (sink type). See diagrams below for typical examples of digital input wiring.

**Digital Input Wiring Diagram (Source type connection, example)**

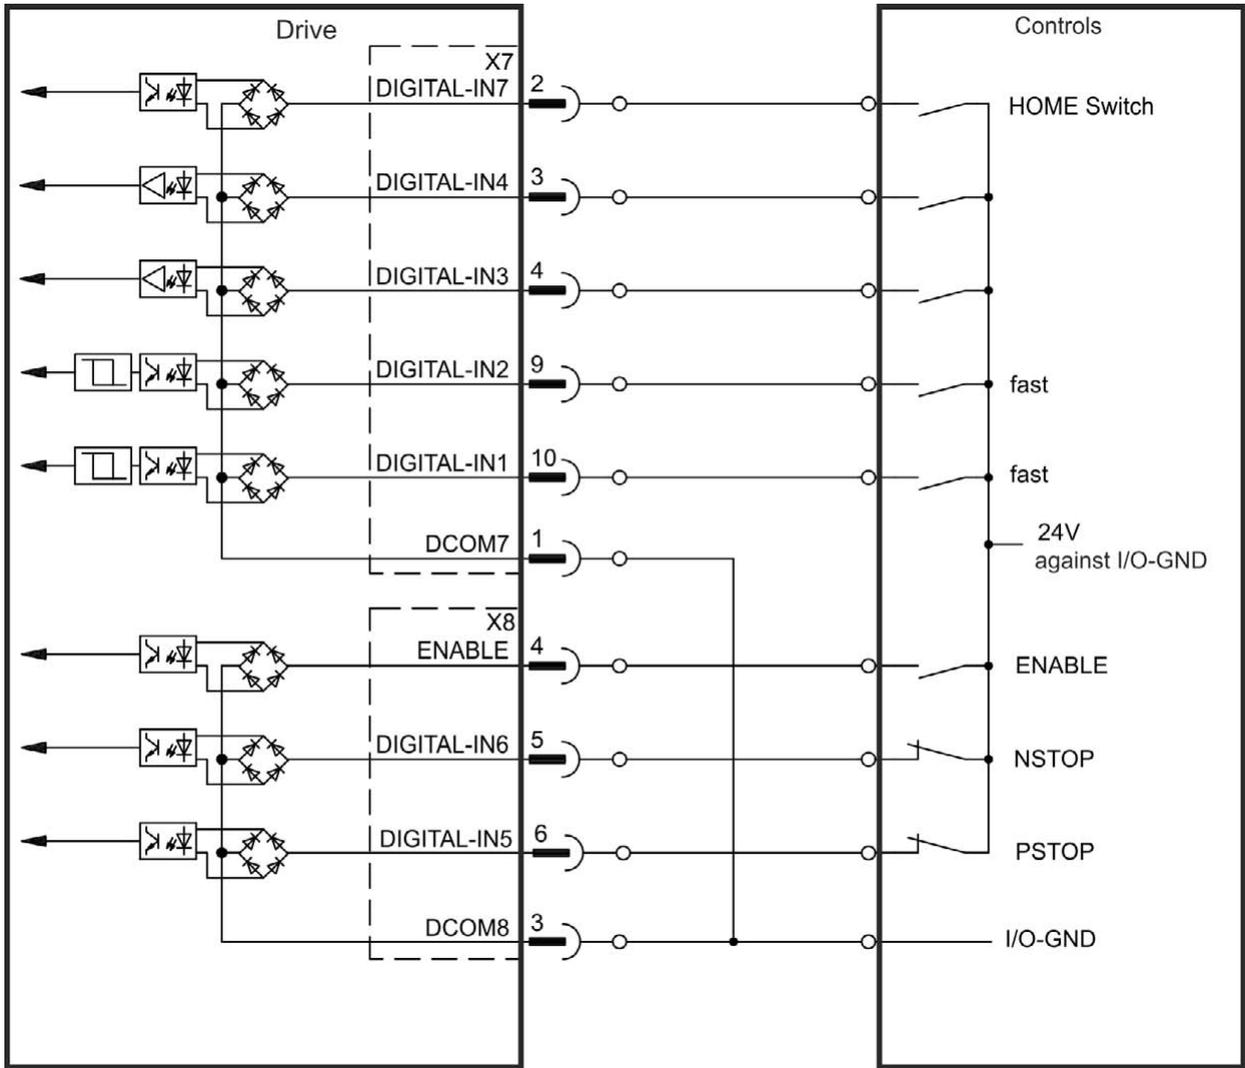

**Digital Input Wiring Diagram (Sink type connection, example)**

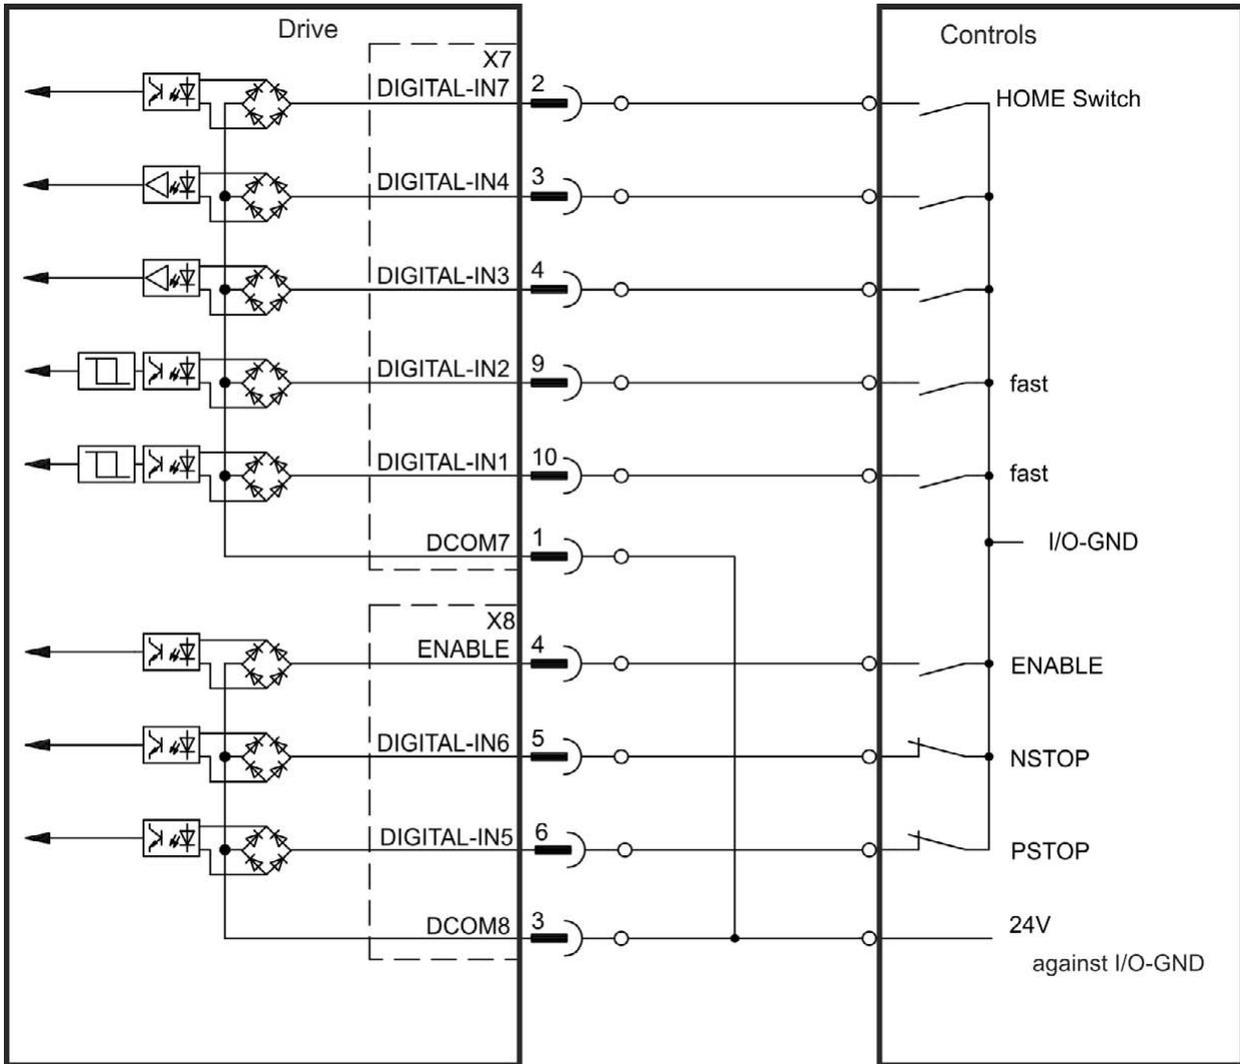

### 13.1.5.1 Digital Inputs 1 and 2

These inputs (X7/9 and X7/10) are particularly fast and are therefore suitable for latch functions, for example. They can also be used as 24 V inputs for electronic gearing .

#### Technical characteristics

- Floating, reference common line is DCOM7
- Sink or Source type sensors possible
- High: 3.5 to 30 V/2 to 15 mA , Low: -2 to +2 V/<15 mA
- Update rate: Hardware 2  $\mu$ s

### 13.1.5.2 Digital Inputs 3 to 7

These inputs are programmable with the setup software. By default, all inputs are not programmed (off). For more information refer to the setup software.

#### Technical characteristics

Choose the function you require in WorkBench.

- Floating, reference common line is DCOM7 or DCOM8
- Sink or Source type sensors possible
- High: 3.5 to 30 V/2 to 15 mA , Low: -2 to +2 V/<15 mA
- Update rate: Software 250  $\mu$ s

### 13.1.5.3 Digital Input 8 (ENABLE)

Digital Input 8 (terminal X8/4) is set to Enable function.

- Floating, reference common line is DCOM8
- Sink or Source type wiring is possible
- High: 3.5 to 30 V/2 to 15 mA , Low: -2 to +2 V/<15 mA
- Update rate: direct connection to hardware (FPGA)

#### NOTE

The Hardware Enable input and the Software Enable signal (via fieldbus or WorkBench) are serial, that means wiring of Hardware Enable is mandatory.

The output stage of the drive is enabled by applying the ENABLE signal (Terminal X8/4, active high). Enable is possible only if input STO has a 24 V signal . In the disabled state (low signal) the connected motor has no torque.

A software enable by means of the setup software is also required (AND link), although this can also be permanently enabled with WorkBench.

### 13.1.6 Option Board I/Os

If connected to a drive equipped with extended I/Os (X21, X22, X23, X24) select the Option I/Os tab from the Digital I/O view to configure digital input and digital output parameters.



## Digital Inputs and Outputs

This page shows current state of each of the I/O pins and allows to select the function each pin performs.

General Purpose I/Os	X9 I/Os	Option Board I/Os	
<b>Option Board Digital Inputs</b>			
	State: <input type="radio"/> Beep: <input type="checkbox"/> Filter: <input type="text" value="2 - 163µs"/>	State: <input type="radio"/> Beep: <input type="checkbox"/> Filter: <input type="text" value="2 - 163µs"/>	
DIN 21:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>	DIN 27:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>
DIN 22:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>	DIN 28:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>
DIN 23:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>	DIN 29:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>
DIN 24:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>	DIN 30:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>
DIN 25:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>	DIN 31:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>
DIN 26:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>	DIN 32:	<input type="radio"/> <input type="checkbox"/> <input type="text" value="2 - 163µs"/>
<b>Option Board Digital Outputs</b>			
	State: <input type="radio"/>	State: <input type="radio"/>	
DOUT 21:	<input type="radio"/>	DOUT 26:	<input type="radio"/>
DOUT 22:	<input type="radio"/>	DOUT 27:	<input type="radio"/>
DOUT 23:	<input type="radio"/>	DOUT 28:	<input type="radio"/>
DOUT 24:	<input type="radio"/>	DOUT 29:	<input type="radio"/>
DOUT 25:	<input type="radio"/>	DOUT 30:	<input type="radio"/>

### Related Topics

DIN21.FILTER to DIN32.FILTER (→ p. 559) | DIN21.STATE to DIN32.STATE (→ p. 561) |  
 DOUT21.STATE to DOUT32.STATE (→ p. 586) | DOUT21.STATEU to DOUT32.STATEU (→ p. 588)

## 13.2 Command Buffer

### 13.2.1 Overview

The Command Buffer input mode (Digital Inputs and Outputs (→ p. 104)) allows you to change values for parameters using a digital input.

The drive has four available buffers. A digital input configured for command buffer mode is linked to one command buffer set. This is determined by the user (see arrow 1). In this case, command buffer 1 is used.

## Digital Inputs and Outputs


This page shows current state of each of the I/O pins and allows to select the function each pin performs.

### General Purpose Digital Inputs

	State	Beep:	Mode:	Param:	Polarity:
DIN 1- High Speed(X7 pin 10):	<input type="radio"/>	<input type="checkbox"/>	0 - Off	0.000	<input checked="" type="checkbox"/> Active High
DIN 2- High Speed(X7 pin 9):	<input type="radio"/>	<input type="checkbox"/>	0 - Off	0.000	<input checked="" type="checkbox"/> Active High
DIN 3 (X7 pin 4):	<input checked="" type="radio"/>	<input type="checkbox"/>	9 - Command Buffer	Buffer # 1 <input type="button" value="Edit"/>	<input checked="" type="checkbox"/> Active High
DIN 4 (X7 pin 3):	<input type="radio"/>	<input type="checkbox"/>	0 - Off	0.000	<input checked="" type="checkbox"/> Active High
DIN 5 (X8 pin 6):	<input type="radio"/>	<input type="checkbox"/>	0 - Off	0.000	<input checked="" type="checkbox"/> Active High
DIN 6 (X8 pin 5):	<input type="radio"/>	<input type="checkbox"/>	0 - Off	0.000	<input checked="" type="checkbox"/> Active High
DIN 7 (X7 pin 2):	<input type="radio"/>	<input type="checkbox"/>	0 - Off	1.000	<input checked="" type="checkbox"/> Active High

The graphic below explains the architecture of the buffers.

### Available buffers in AKD:

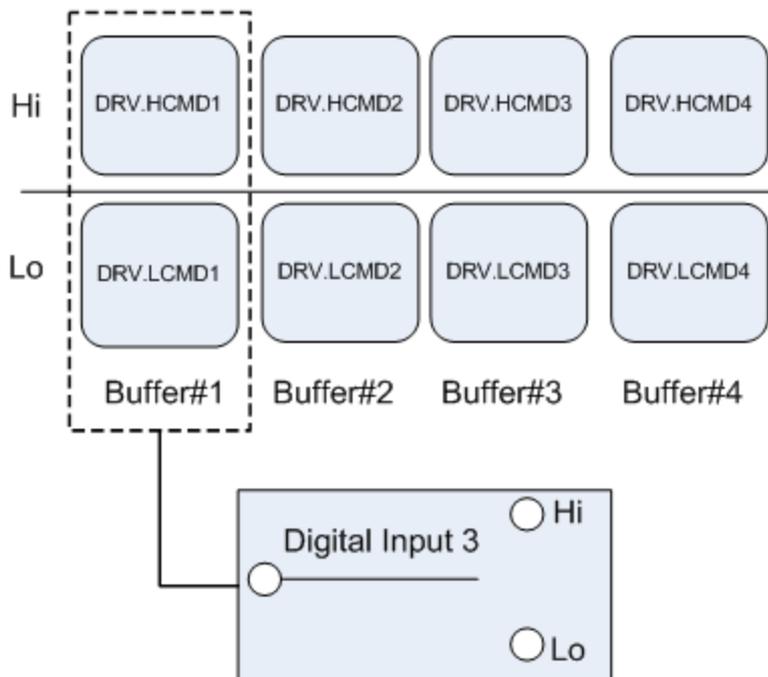

### 13.2.2 Editing the Command Buffers


By default, the buffers are empty. Each side of the buffer can contain 128 characters maximum (parameter and value included). You can use the **Command Buffer Editor** to enter the sequence of commands to the digital input buffer. You can enter the sequence of commands into Low command buffer (DIN.LCMDx) or High command buffer (DIN.HCMDx) and save these settings to the drive.

To edit the command buffers, open the **Digital I/O** view and select **Digital input mode** as **9 – Command Buffer**.

General Purpose Digital Inputs	State	Beep:	Mode:	Param:	Polarity:
DIN 1- High Speed(X7 pin 10):	<input type="radio"/>	<input type="checkbox"/>	9 - Command Buffer	1 <input type="button" value="Edit"/>	<input checked="" type="checkbox"/> Active High

The **Param** box lists the available command buffers. Select desired command buffer number for the DIN. This number sets to the DINx.PARAM keyword. When you mouse over the **Param** box, the Tooltip displays the current content of the High command buffer and Low command buffer in the drive.

To edit the selected command buffer, click **Edit** to display the command buffer editor screen.

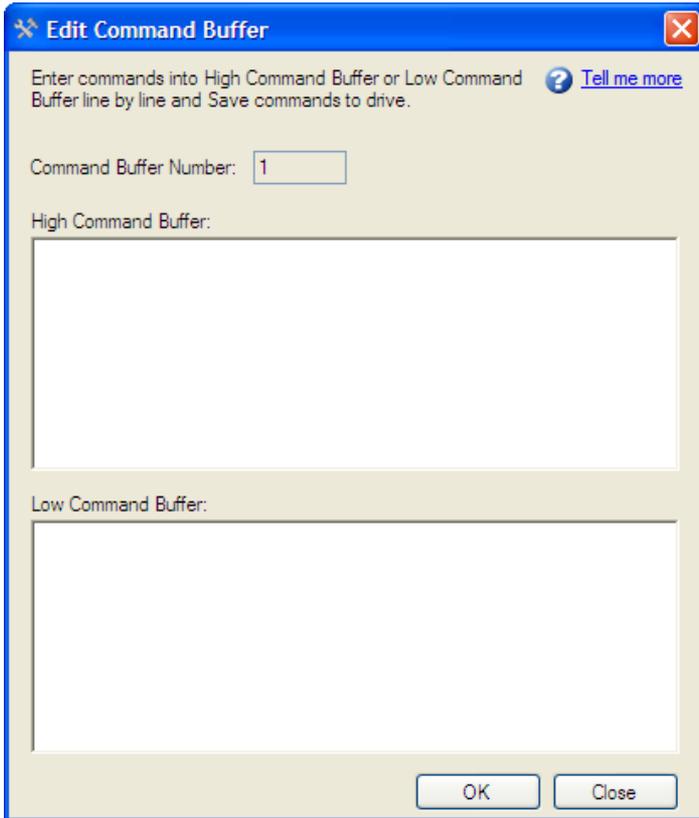

The command buffer editor screen has following properties:

Button or Dialog Box	Description
Command Buffer Number	The identification number of the command buffer (1, 2, 3, 4).
High Command Buffer	Adds sequence of commands to the High command buffer parameter. Contents are saved to the keyword DIN.HCMDx. A maximum of 128 characters can be set to drive along with the separator “;”. Commands must be entered line by line and when saving to the drive each commands will be formed into single line separated by “;”.
Low Command Buffer	Adds sequence of commands to the Low command buffer parameter. Contents are saved to the keyword DIN.LCMDx. A maximum of 128 characters can be set to drive along with the separator “;”. Commands must be entered line by line and when saving to the drive each commands will be formed into single line separated by “;”.
Ok	Saves the sequence of commands to the drive.
Close	Closes the screen and returns to Digital I/O view. If contents are not saved to drive before closing the screen, confirmation message “The commands have been modified and not save to drive. Do you want close without saving?” is displayed.

Commands and parameters are entered on separate lines with a space between the parameter and the value.

A semicolon separator is not necessary in the editor, but it is required if the buffers are edited inside the terminal window.

### 13.2.3 Behavior of the Command Buffer

Digital inputs have either a high or a low state. The contents of the buffer are executed at the rising edge of the state change. The contents of the buffer are also loaded at drive power up according to the starting state of the digital input. When the command buffer is initially configured, the buffer is not executed until the first digital input state change is detected.

Tip: Once you have the buffer configured and tested, put the digital input in the most common state that it will be in at start up. Save the parameters to the drive. This will synchronize the NVRAM with the buffer, so at start up, values will not have to be changed.

### 13.2.4 Delays for the Buffer

There is a delay command that can be used to delay the execution of a command or parameter change (DRV.CMDDELAY). The value can be from 0 ms to 5000 ms.

The following commands may require a delay before the next command in the buffer can be executed:

DRV.EN (100 ms min)

DRV.DIS (50 ms min)

Example:

```
DRV.EN
DRV.CMDDELAY 100
MT.MOVE
```

The command buffer does not send back warnings when a parameter is invalid or out of range, so make sure the syntax is correct and that the digital input changes during legal drive states for the commands given.

## 13.3 Analog Input

If the drive command source is set to analog, then the analog input to the drive supplies the current or velocity command to the control loops of the drive. The default analog input screen displays a summary block diagram of the analog input. You can adjust the analog input settings from this view as follows:

Button or Dialog Box	Description	Parameter
Offset	The offset adds a bias to the analog input command. This offset is commonly used to remove any biases that may be present on the analog input signal.	AIN.OFFSET (→ p. 402)
Input Voltage	The value of the analog input after the offset, deadband, and low pass filters.	AIN.VALUE (→ p. 405)
Scale	If the opmode is current mode, then this value is the amount of current that will be commanded for each volt on the analog input. If the opmode is velocity mode, then this value is the velocity that will be commanded for each volt on the analog input. <b>Note:</b> Scaling in KAS is 80% of that in AKD. In AKD 10 v = 32767 while in KAS 10V = 26126	AIN.ISCALE (→ p. 399), AIN.VSCALE (→ p. 407), or AIN.PSCALE (→ p. 403)
Torque Command	The current or velocity command that is sent to the control loops.	IL.CMD (→ p. 880) PL.CMD (→ p. 1084) or VL.CMD (→ p. 1263)

Click the **More** button to access a detailed view of the analog input. You can adjust additional analog input settings from this view as follows:

Button or Dialog Box	Description	Parameter
Low Pass Filter	The break point frequency for the low pass filter.	AIN.CUTOFF (→ p. 393)
Deadband	The threshold for the deadband. This parameter is commonly used to reduce noise while the drive is stationary.	AIN.DEADBAND (→ p. 395)

Both analog input views provide a link to the encoder emulation output setup; see Encoder Emulation (→ p. 83) for more details on this feature.

## Related Parameters

AIN Parameters (→ p. 392)

## 13.4 Analog Output

The drive has one analog output. You can either directly control the voltage output or select a different mode to output different signals. Analog output is configured through the X8 connector; for detailed information on this connector, see [Connection Diagrams, Analog Output](#).

Button or Dialog Box	Description	Parameter
Analog Output Mode	Select which internal signal is output by the analog output.	AOUT.MODE (→ p. 426)
Analog Output Value (user)	Enter the analog output value (when AOUT.MODE (→ p. 426) = 0, analog output signal is determined by the user)	AOUT.VALUEU (→ p. 432)
Analog Output Value	Displays the voltage that this analog output generates.	AOUT.VALUE (→ p. 431)
Analog Velocity Scale Factor	Scales the analog output (AOUT.VALUE (→ p. 431)) for AOUT.MODE = 1, 2, or 3.	AOUT.VSCALE (→ p. 433)
Analog Output Offset	Sets the analog output 2 offset.	AOUT.OFFSET (→ p. 428)
Low Pass Filter	Enables a software-based low pass filter of the analog output value. 0 Hz is a pass-through or "disable" of this feature.	AOUT.CUTOFF (→ p. 420)

The analog output modes consist of the following:

AOUT.MODE	Description
0	User variable. The analog output signal is determined by the user (using AOUT.VALUEU).
1	Actual velocity. The analog signal describes the current velocity value (VL.FB).
2	Velocity error. The analog signal describes the velocity error value.
3	Velocity command. The analog signal describes the velocity command value.
4	Actual current. The analog signal describes the actual current value.
5	Current command. The analog signal describes the current command value.
6	Actual position. The analog signal describes the current position value.
7	Position error. The analog signal describes the position error value.

AOUT.MODE	Description
8	Triangle wave. The analog signal is a triangle wave (sawtooth pattern).
9	Debug mode. In this mode the user can define a drive variable to monitor via the analog output (AOUT.VALUEU).
10	Unfiltered Velocity (VL.FBUNFILTERED)
11	Filtered Velocity - 10Hz Lowpass (VL.FBFILTER)

## 13.5 Electronic Gearing

### 13.5.1 Overview

Electronic gearing is the act of sending a digital pulse position command to the AKD drive. The X9 connector is used for controlling the drive through an A/B type signal, pulse and direction (also called step and direction), or CW/CCW command. A common application for electronic gearing is using servos with a stepper controller or daisy chaining multiple AKD drives from one master drive as slave drives.

In order to command an AKD using electronic gearing, the command source (DRV.CMDSOURCE) must be set to **2-Electronic Gearing** and the opmode (DRV.OPMODE) must be set to **2-Position Mode**.


2 - Electronic Gearing | 2 - Position Mode  In Workbench Toolbar

The input modes of the X9 connector are used to set up the AKD for electronic gearing.




## Electronic Gearing

Electronic Gearing allows the drive to follow a position being supplied to the drive.

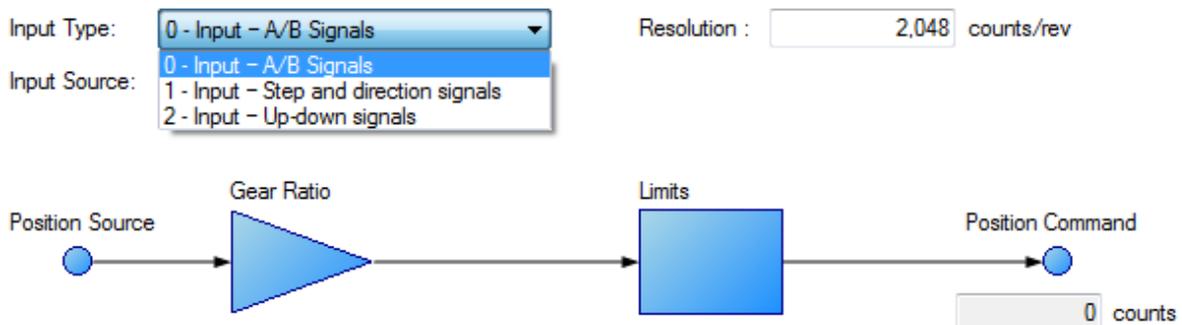


Resolution is the post-quadrature value of the counts/revolution of the input. Additionally, a gear ratio can be applied to affect the output ratio of the motor.

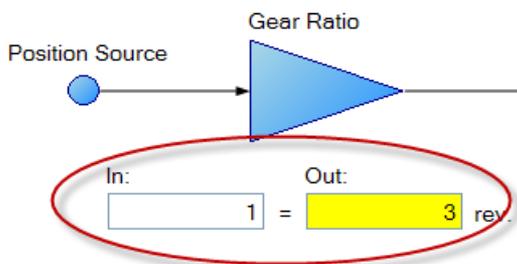

The position command (DRV.HANDWHEEL) reads the EEO value, where 4,294,967,296 is a full revolution of the input, then the value rolls over. Gear ratio does not affect the EEO value. If the output is set to 3 output revs per input rev, there will be 4,294,967,296 counts per 3 revolutions of the motor.

### 13.5.2 Limits

Electronic Gearing has independent limits, as shown below:

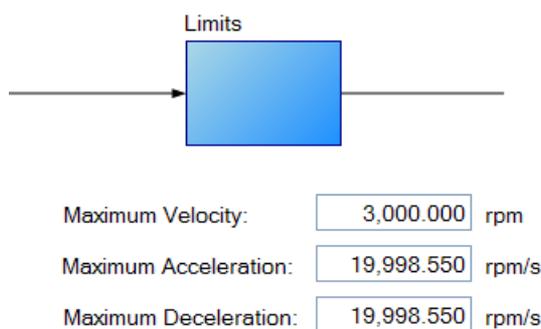

These limits (GEAR.ACCMAX, GEAR.DECMAX, GEAR.VELMAX) are applied only during gearing mode and the units are consistent with speed and acceleration of the output motor. All other limits in the drive are active along with gearing limits.

#### NOTE

Since the master determines the trajectory profile of the slave, it is not common to need to set GEAR limits to change the profile from the master. Erratic motion may result since they can clamp the servo command. If you are experiencing problems, first increase these limits to their maximums.

If the master is already moving when entering electronic gearing mode, velocity or position can be matched (GEAR.MODE):

The Gearing type defines how gearing starts if the master is already moving—

- Velocity Matching
- Position Matching

In **Velocity Matching**, the motor will ramp up to the same velocity with no concern over lost steps during the acceleration period.

In **Position Matching**, the motor will match the position command from the switchover point by speeding up to recover the lost steps during the acceleration period.

### 13.5.3 Determining Maximum Cable Length

When you use an external incremental encoder as an input to X9, you must determine the maximum allowable cable length.

#### NOTE

This information is only applicable when using an external encoder as either a secondary feedback input or a gearing command (DRV.EMUEMODE3). Not applicable for any other X9 mode or when using two AKDs in a master/slave system.

The X9 port has a 5V output used to supply power to an external incremental encoder.

The maximum cable length depends on the current draw of the external encoder and the cable type connecting the X9 port. The following example can be used as a guide to calculate the maximum cable length for your application.

#### X9 port characteristics:

Nominal Supply Voltage: 5 V

Tolerance: 5%

Minimum Supply Voltage: 4.75 V

Maximum current: 0.25 A

Permitted wire gauge: 20-28 AWB (Typical for D9 connector)

#### Sample Application Hardware:

Example external encoder: Hengstler RI-36H (RS-422 encoder) used with X9 port.

Encoder Nominal Supply Voltage: 5V (+/- 10%)

Minimum Supply Voltage: 4.5 V calculated based on tolerance above

Maximum required encoder supply current: 50 mA

**Example cable:**

Lapp Li2YCY - 24AWG (0.22 mm<sup>2</sup>)

Loop resistance: 0.186 Ohms/m

**Sample Calculations:**

Maximum Permissible voltage cable drop = 0.25 V

= (Minimum Supply Voltage from AKD) 4.75 V – (Minimum supply voltage of RI-36H encoder) 4.5V

Maximum permissible resistance of cable run to X9 = 5 Ohms

= (Max voltage cable drop) 0.25V ÷ (Maximum encoder current) 0.05A

Maximum permissible cable length for example application = 26.9 m

= (Max cable resistance) 5 Ohms ÷ 0.186 Ohms/m

## Related Parameters

GEAR Parameters (→ p. 818)

DRV.CMDSOURCE (→ p. 604)

DRV.EMUEMODE (→ p. 631)

DRV.EMUERES (→ p. 638)

DRV.HANDWHEEL (→ p. 652)

DRV.OPMODE (→ p. 682)

## 13.6 Limits

This screen allows you view and modify the various drive limits.

Button or Dialog Box	Description	Parameter
<b>Current Limits</b>		
Positive Peak Current	The maximum positive current allowed.	IL.LIMITP (→ p. 921)
Negative Peak Current	The maximum negative current allowed.	IL.LIMITN (→ p. 919)
Dynamic Break Peak Current	The maximum amplitude of the current for dynamic braking.	DRV.DBILIMIT (→ p. 609)
<b>Velocity Limits</b>		
Positive Speed Limit	The maximum speed allowed in the positive direction.	VL.LIMITP (→ p. 1290)
Negative Speed Limit	The maximum speed allowed in the negative direction.	VL.LIMITN (→ p. 1288)
User Over Speed Limit	The user set threshold velocity for an over speed fault.	VL.THRESH (→ p. 1296)
Overall Over Speed Limit	The overall over speed fault threshold.	VL.VFTHRESH (→ p. 1298)

Button or Dialog Box	Description	Parameter
<b>Position Limits</b>		
Maximum Position Error	The maximum position error. If the position error PL.ERR is larger than PL.ERRFTHRESH, then the drive generates a fault	PL.ERRFTHRESH (→ p. 1088)
Position Limit 0	The minimum position the drive can reach before generating a negative software position fault.	SWLS.LIMIT0 (→ p. 1207)
Position Limit 1	The maximum position the drive can reach before generating a positive software position fault.	SWLS.LIMIT1 (→ p. 1209)
<b>Acceleration Limits</b>		
Acceleration	The acceleration ramp used to profile some types of motion.	DRV.ACC (→ p. 593)
Deceleration	The deceleration ramp used to profile some types of motion.	DRV.DEC (→ p. 611)
<b>Motor Limits</b>	Motor limits are set through the Motor Foldback Screen (see Foldback (→ p. 88))	

### 13.6.1 Limits

The limits screen covers most of the basic system limits, including current, velocity, and position.


- **Current Limits:** The current limits are set based on the drive ratings. You can change these limits to be lower than the default values for the drive, however, this may effect the expected performance of your application.
- **Velocity Limits:** The velocity limits are set based on the motor ratings. You can modify these settings above the ratings of the motor if the application requires some overhead, but be aware the motor has mechanical limitations and may be damaged if run above those limits. It is best to leave these at the default ratings for the motor selected.
- **Position Limits:** The position limits can be set based on your specific machine application requirements. The Maximum Position Error can be set to cause a fault when the position error exceeds the value you insert here. Each limit switch can be either the lower or the upper software limit switch register, depending on the value of SWLS.EN. If only one limit switch is enabled (SWLS.EN = 1 or 2), then SWLS.LIMIT0 is the lower limit, and SWLS.LIMIT1 is the upper limit. If both limit switches are enabled (SWLS.EN = 3), then whichever switch is set to a larger value is the upper limit switch. The other switch becomes the lower limit switch. As the motor reaches the lower limit, the motor will stop and display the warning n107. As the motor reaches the upper limit, the motor will stop and display the warning n108.
- **Acceleration Limits:** This field allows you to raise accelerations to give the system crisp moves. These limits default to a low value, so you may wish to change these after the mechanics and other sections of your system are defined.

## 13.7 Compare Engines

The AKD Position Compare feature allows the drive's digital outputs to be turned on or off depending on one or more feedback positions. The AKD supports two independent compare engines (CMP0, CMP1). The comparison is done at a hardware level, making it faster than Programmable Limit Switch (→ p. 126), which is done through firmware.

### 13.7.1 Configuring Position Compare

Select Compare Engines under Settings in the WorkBench navigation tree. This view shows an overview of the two compare engines. Use this view to set each engine's compare source, output, phase advance, and modulo settings.

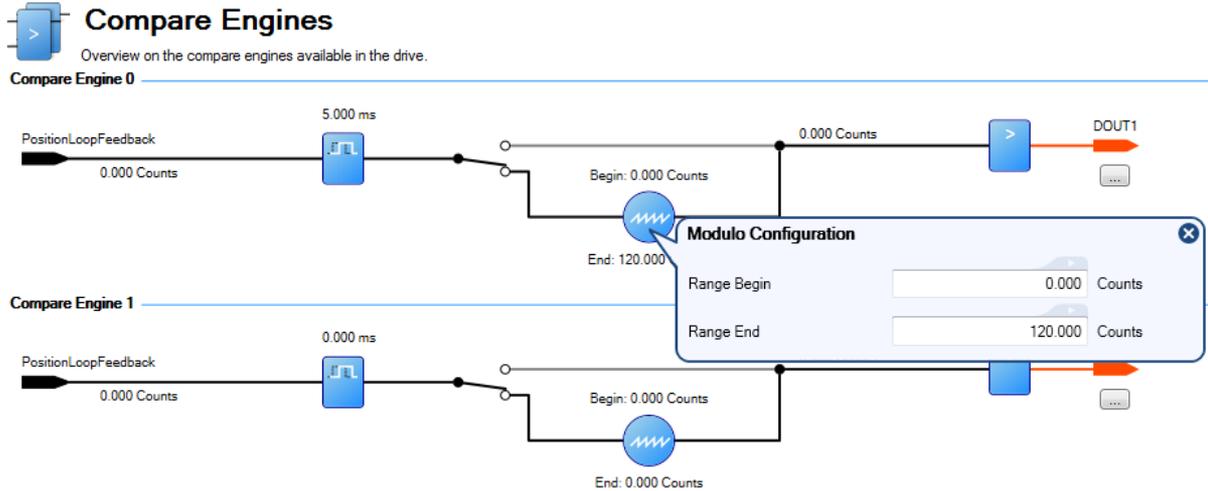


### 13.7.1.1 Order of Configuration

The compare parameters, CMPx.SOURCE, CMPx.MODBOUND1, CMPx.MODBOUND2, CMPx.WIDTH and CMPx.MODEN must be set prior to arming setpoints with CMPx.ARM. If CMPx.SETPOINT is not set prior to CMPx.MODEN or CMPx.ARM an error message will not be generated, but the compare will trigger at either the last set value or the default value of 0 if the drive has been power cycled or rebooted.

Prior to enabling modulo functionality with CMPx.MODEN, CMPx.SOURCE, CMPx.MODBOUND1, CMPx.MODBOUND2, and CMPx.WIDTH must all be set.

### 13.7.1.2 Setting Compare Sources (CMPx.SOURCE (→ p. 516))

Compare setpoints are compared against compare sources. If they match, an output pulse is generated. Use CMP0.SOURCE and CMP1.SOURCE to select the source which the compare setpoints will be compared against.

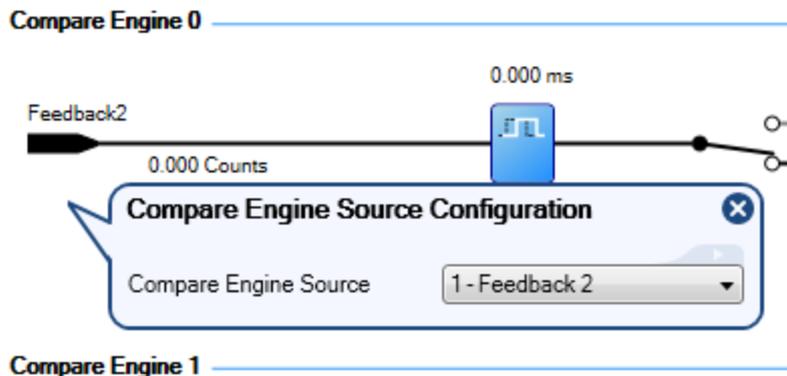


Select one of the following compare source values:

Value	Description
0	Triggers output based on a compare with the primary feedback position (FB1.P (→ p. 748)), independent of the value of PL.FBSOURCE (→ p. 1096). The units of the primary feedback are determined by FB1.PUNIT (→ p. 758).
1	Triggers output based on a compare with the secondary feedback position (FB2.P (→ p. 779)), independent of the value of PL.FBSOURCE. The units of the secondary feedback are determined by FB2.PUNIT (→ p. 783).


Value	Description
2	Triggers output based on a compare with the tertiary feedback position (FB3.P (→ p. 792)), independent of the value of PL.FBSOURCE. The units of the tertiary feedback are determined by FB3.PUNIT (→ p. 798).
3	Triggers output based on the position of PL.FB (→ p. 1094). The units of the position feedback are determined by UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225).

### 13.7.2 Setting Compare Setpoints (CMPx.SETPOINT (→ p. 514))

Each compare engine has eight independent setpoints that can trigger output pulses with widths in either position or time. Use a compare engine's view to set each setpoint's value, width, width-type, mode, and to arm each setpoint.

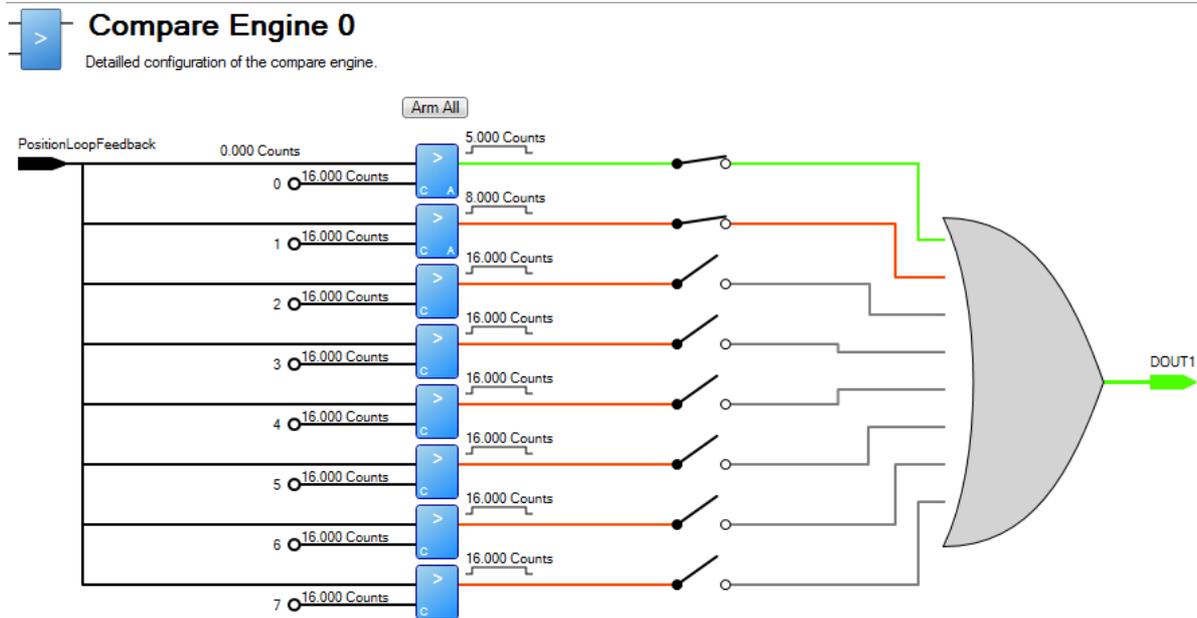

Each setpoint has either a C or S in its lower left corner, indicating either continuous or single-shot mode.

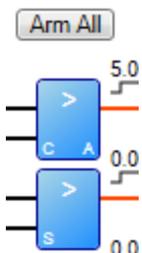

Setpoints can be armed using CMPx.ARM. In WorkBench, all setpoints can be armed for a given engine using the **Arm All** button. If a setpoint is armed, an A will appear in the bottom right corner of its graphic.

## Related Topics

CMP Parameters (→ p. 497)

## 13.8 Programmable Limit Switch


### 13.8.1 Overview

Programmable Limit Switches (PLSs) are used to turn on and off drive digital outputs based on the drive's position. Multiple positions can be combined to affect the state of an output when PLSs are combined.


### 13.8.2 Using Programmable Limit Switches

To use PLSs, you must first configure a digital output as follows:


1. Click on the Digital I/O icon in the the tree view.
2. Set the output of your choice to mode fifteen (see 1 below). In this example, digital output 1 is used.
3. Now that the digital output mode is set for PLS, you can click on the **Goto Programmable Limit Switch** link (see 2 below) to open the PLS screen (this screen is also shown in the WorkBench tree view).

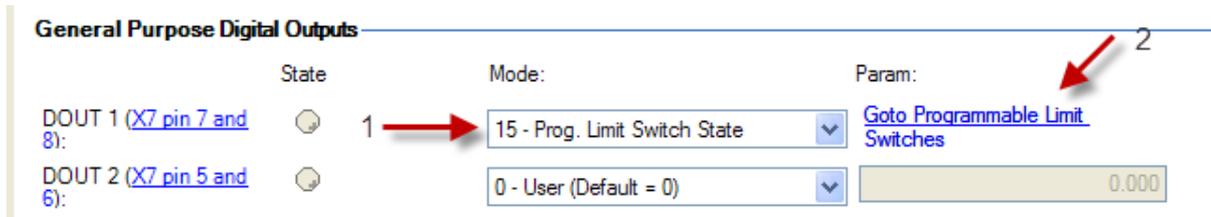

The PLS screen is used to establish the positions for the output(s) to turn on.

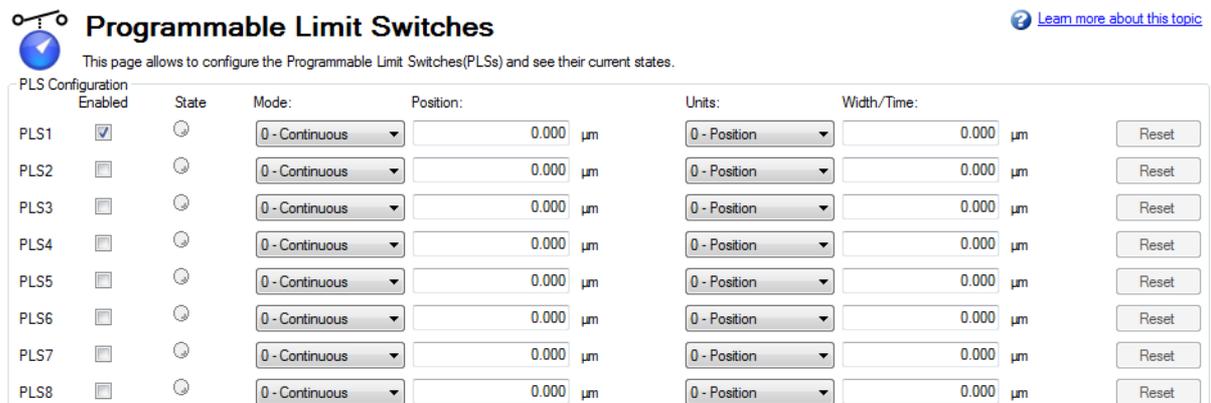


The PLS configuration section of the screen sets the mode and limits of each of the eight PLSs. The PLS is ignored unless it is enabled (see image above). In the screen example, PLS1 is set for continuous operation in position mode. Every time the 360 degree position (PL.FB) is crossed in either direction, the output will turn on for 10 degrees of motor movement.

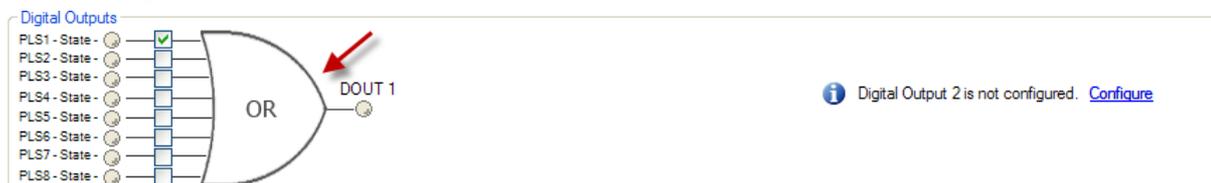

The final step is to configure the OR gate for the PLSs on which output is triggered. Digital output mode 15 produces a high signal if at least one of the PLS.STATE bits is high (the PLS is active) and if the corresponding bit in the DOUTx.PARAM parameter also has been set to high. The DOUTx.PARAM command connects the PLS.STATE bits to the digital output itself and thus acts as an enable mask. The gate appears for setup in the screen when a digital output is configured in Mode 15 – Prog Limit Switch State. Since only PLS1 is configured, select PLS 1 (see arrow above).

### PLS Example 1 - Turning on a digital output for a position range

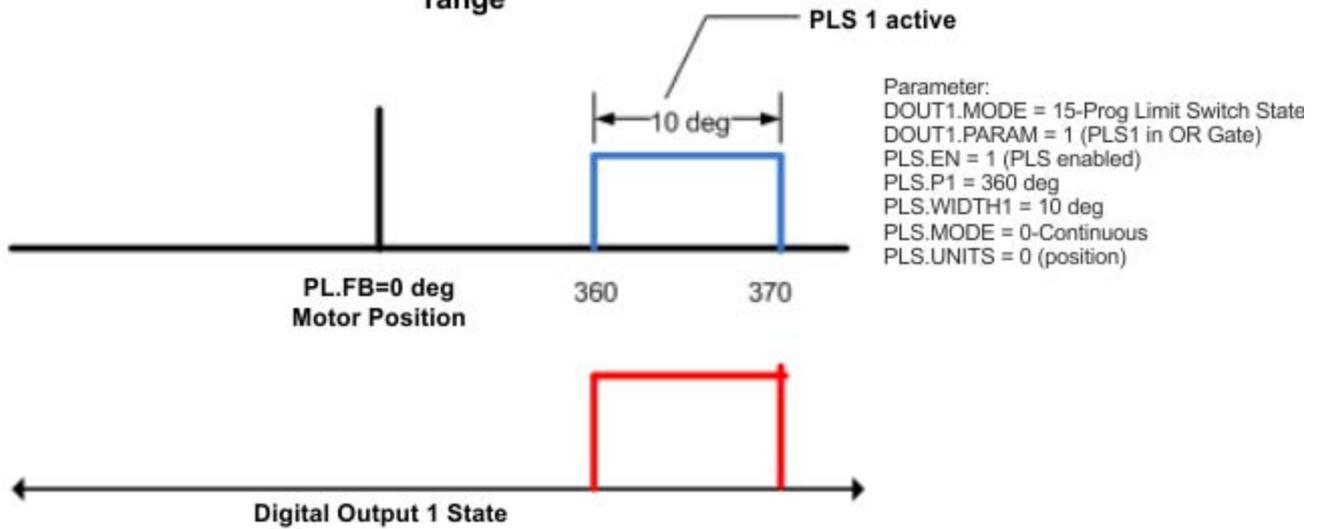

To setup an output with multiple turn-on points, configure and enable more PLS's and include them in the OR Gate.

#### Programmable Limit Switches

This page allows to configure the Programmable Limit Switches(PLSs) and see their current states. [Learn more about this topic](#)

PLS Configuration	Enabled	State	Mode:	Position:	Units:	Width/Time:	
PLS1	<input checked="" type="checkbox"/>	<input type="radio"/>	0-Continuous	360.000 deg	0-Position	10.000 deg	Reset
PLS2	<input checked="" type="checkbox"/>	<input type="radio"/>	0-Continuous	1.000.000 deg	0-Position	10.000 deg	Reset
PLS3	<input checked="" type="checkbox"/>	<input type="radio"/>	0-Continuous	2.000.000 deg	0-Position	10.000 deg	Reset
PLS4	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	0.000 deg	0-Position	0.000 deg	Reset
PLS5	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	0.000 deg	0-Position	0.000 deg	Reset
PLS6	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	0.000 deg	0-Position	0.000 deg	Reset
PLS7	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	0.000 deg	0-Position	0.000 deg	Reset
PLS8	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	0.000 deg	0-Position	0.000 deg	Reset

**Digital Outputs**

PLS1 - State

PLS2 - State

PLS3 - State

PLS4 - State

PLS5 - State

PLS6 - State

PLS7 - State

PLS8 - State

**Digital Output 2 is not configured. [Configure](#)**

**Current Position**  
 Position Feedback:  deg

### 13.8.3 Single Shot Mode

Single shot mode is a special mode of PLS. Single shot mode (see 1 below) turns on the output until it is reset (see 2 below). Normal operation of this mode usually depends on a machine controller to reset the PLS using the fieldbus object for PLS.RESET .

### Programmable Limit Switches

This page allows to configure the Programmable Limit Switches (PLSs) and see their current states. [Learn more about this topic](#)

PLS Configuration	Enabled	State	Mode:	Position:	Units:	Width/Time:	
PLS1	<input checked="" type="checkbox"/>	<input type="radio"/>	1-Single shot	360.000 deg	0-Position	10.000 deg	Reset
PLS2	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	1.000.000 deg	0-Position	10.000 deg	Reset
PLS3	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	2.000.000 deg	0-Position	10.000 deg	Reset
PLS4	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	0.000 deg	0-Position	0.000 deg	Reset
PLS5	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	0.000 deg	0-Position	0.000 deg	Reset
PLS6	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	0.000 deg	0-Position	0.000 deg	Reset
PLS7	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	0.000 deg	0-Position	0.000 deg	Reset
PLS8	<input type="checkbox"/>	<input type="radio"/>	0-Continuous	0.000 deg	0-Position	0.000 deg	Reset


**Digital Outputs**

PLS1 - State -    
 PLS2 - State -    
 PLS3 - State -    
 PLS4 - State -    
 PLS5 - State -    
 PLS6 - State -    
 PLS7 - State -    
 PLS8 - State -

OR Gate: DOOUT 1

Digital Output 2 is not configured. [Configure](#)

Single Shot Example:

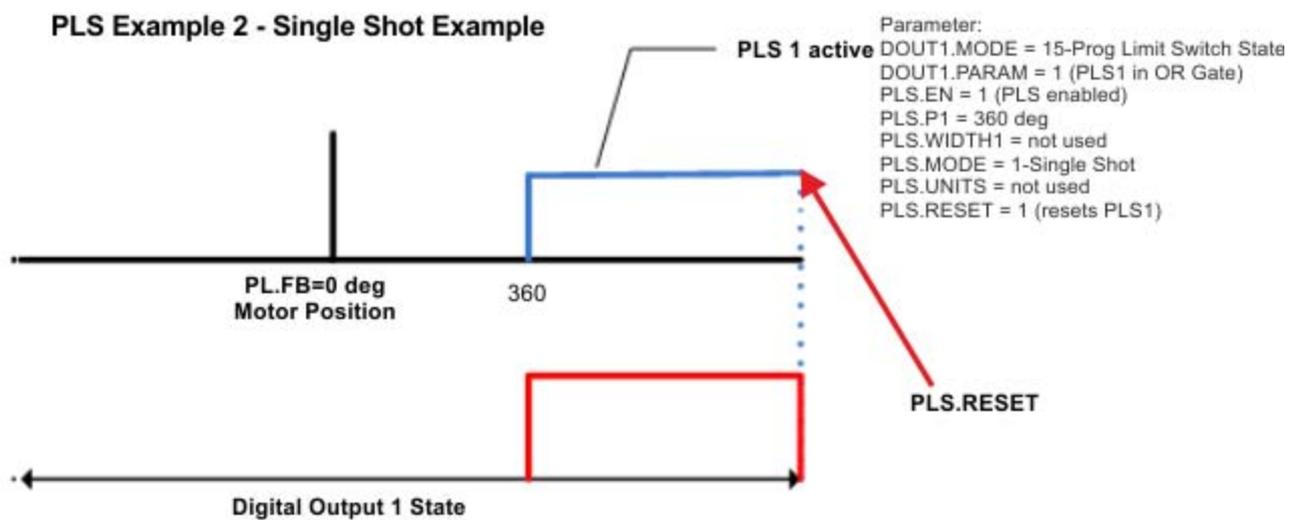

Related Parameters

PLS Parameters (→ p. 1115)

Digital Inputs and Outputs (→ p. 104)

## 13.9 Enable/Disable

### 13.9.1 Enable Modes

The AKD offers several options for hardware and software enables, as well as safe torque off (STO) to cover a variety of conditions.

#### Hardware Enable Mode

The AKD has two methods hardware enable methods. These methods are controlled by DRV.HWENMODE. Mode 0 allows for the drive to enable and clear faults on the rising edge of the hardware enable input. Mode 1 will NOT clear any faults on the rising edge of the hardware enable input, allowing you to review any current faults and manually clearing.

#### Software Enable Default

In addition, the Software Enable has two methods for enabling the AKD. These are controlled by DRV.ENDEFAULT. Default 0 leaves the software in the disabled state upon start-up. Default 1 enables the software upon start-up.

### 13.9.2 Disable Modes

Use DRV.DISMODE to select the method for stopping the drive.

#### Disable

Disable Mode: 0 - Disable axis immediately  
 0 - Disable axis immediately  
 1 - Dynamic brake immediately  
 2 - Controlled stop then disable  
 3 - Controlled stop then dynamic brake

Disable Timeout: \_\_\_\_\_ ms

#### Mode 0: Immediately disable drive.

With this condition, the drive will immediately disable the power stages and the driven motor will either coast to a stop or in the case of a vertical or overhung load axis, will fall abruptly. If a brake is present, the brake will be applied according to MOTOR.TBRAKEAPP. Using Digital Input mode 13, you can achieve a controlled stop as described in Mode 2.

#### Mode 1: Dynamic Brake to a stop.

In this situation, the drive will use the dynamic brake feature and stop motion quickly, and then disable the power stage. In most cases, the driven motor will stop quickly (pending the joules available and load circumstances). In the case of an overhung or vertical load, the driven motor will attempt to stop, but then will continue to allow the load to fall if no measures have been taken to secure the load.

Note: for Modes 2 and 3, you can access the Controlled stop section to set the values of the controlled stop deceleration rate, the velocity threshold, and time in velocity threshold to deactivate the drive.

#### Mode 2: Controlled stop, then disable.

In this mode, a controlled stop will take place based on a variety of parameters that you set. First, the driven motor will decelerate at a controlled rate (CS.DEC) until one of two things happens. 1) The motor reaches the velocity limit set (CS.VTHRESH) for a period of time (CS.TO), or 2) The drive emergency time out is reached (DRV.DSTO). Once either of these cases is reached, the power stage will be disabled (and brake applied if present)

#### Mode 3: Controlled stop, then dynamic brake.


Similar to Mode 2, the motor will decelerate at a controlled rate (CS.DEC) until CS.VTHRESH is reached for a period of time (CS.TO). The drive will then dynamically brake and disable under the same conditions as described in Mode 2.

The Disable Timeout Setting determines the amount of time the drive will follow the disable mode before it deactivates the drive regardless of method chosen and alerts with an Emergency Timeout Fault.

All disable modes operate based on the type of disable command received. Any critical faults, hardware disable, or STO disable immediately turn off the power stage, and the motor will coast or free fall, depending on how the motor is secured.

### 13.9.3 Drive Status

The **Drive Status** area is displayed below the settings area and includes a graphical representation of drive active status with different sets of inputs. If the input or output is enabled, then it is shown in green; if the input or output is disabled, then it is shown in red. The inputs to the OR and & (AND) gates identify which conditions are true (green) or false (red) and follow the normal logic for & (AND) and OR gates. This diagram is useful for finding which input may be preventing the drive from being enabled.

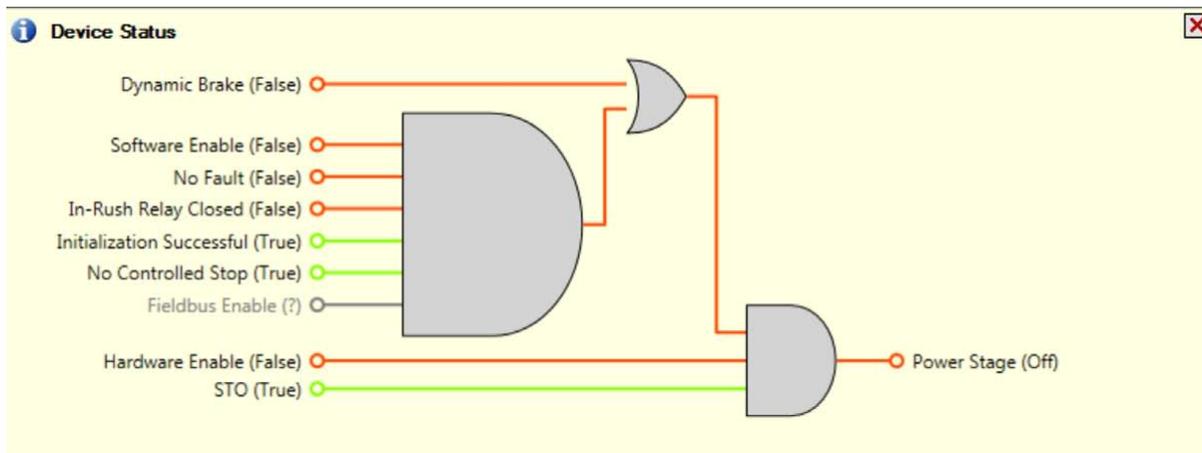

### 13.9.4 Controlled Stop


The Controlled Stop area displays values for parameters associated with controlled stop.

Button or Dialog Box	Description	Parameter
Velocity Threshold	Sets the velocity threshold for controlled stop process.	CS.VTHRESH (→ p. 534)
Velocity Threshold Timeout	Sets the velocity threshold, which is the time value for the drive velocity to be within CS.VTHRESH before the drive disables	CS.TO (→ p. 532)
Deceleration	Sets the deceleration value for the controlled stop process.	CS.DEC (→ p. 528)
Control stop Input	Displays the list of digital inputs configured to controlled stop mode separated by ','. When no controlled stop mode is configured, this box displays the message: <b>No CS Input Configured</b> . <b>Configure Input</b> link will opens the Digital I/O screen where you can configure the controlled stop mode.	


### 13.9.5 More/Less Button

The **More** button reveals the status diagram for the controlled stop configuration. It also displays the block diagram for the control stop. Two block diagrams available: one for a brake fitted and another for no brake.

Control stop status diagram

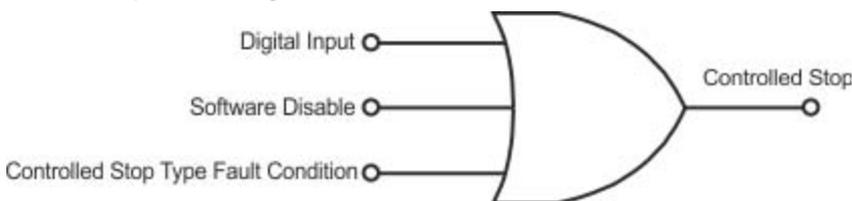

### Controlled Stop Block Diagram

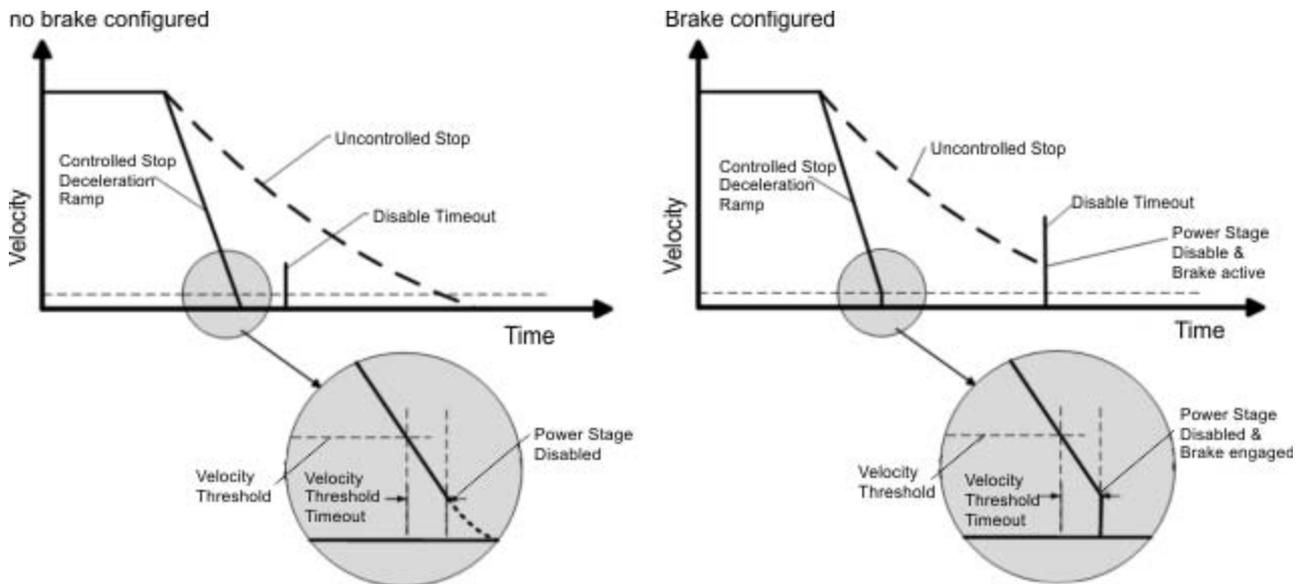

### 13.10 Controlled Stop

In a controlled stop, drive motion is brought to a standstill in a controlled manner. The drive commands a zero velocity from the motor. The motor decelerates at the prescribed deceleration value (CS.DEC (→ p. 528)).

A controlled stop can occur in four three ways:

- The user configures a programmable digital input to mode 13 using DINx.MODE. For example, if [DIN1.MODE 13](#) is applied, digital input 1 is set to controlled stop.
- Either a controller or the user (through the WorkBench terminal window) initiates a software disable (DRV.DIS) command .
- CANopen PDO is set to 3442.

CANopen Property	Value
Index/Subindex	3442/0
Data Type	Unsigned 8
Access	W/O
PDO mappable	N/A
Description	Controlled stop
ASCII Object	

- A fault initiates a controlled stop from the drive. See Fault and Warning Messages (→ p. 259) for the faults which initiate a controlled stop.

The controlled stop mechanism is activated in the following cases:

1. DRV.DISMODE = 2 and user executes DRV.DIS from the terminal or WorkBench disable buttons.

**NOTE** You must disable the drive in order to set DRV.DISMODE.


2. DRV.DISMODE = 2 and user executes DRV.DIS from a fieldbus connected to the drive.
3. A fault happens for which the reaction evolves controlled stop (CS). After the CS is executed, the drive disables.
4. A digital input mode (DINx.MODE) is set to 13. If the digital input state changes (active high or low according to DINx.INV) the CS is executed, and then the drive disables.

5. HW limit switch: A digital input is defined as a positive (negative) limit switch (DINx.MODE 18 or 19). When the limit switch is met, the CS mechanism starts running. In this case, the parameter DRV.DISTO is not active.
6. SW limit switch: SWLS defines an active SW limit. When the limit is met, the CS mechanism starts running. In this case, the parameter DRV.DISTO is not active.

Use the drive CS parameters to configure a controlled stop as follows:

1. CS.DEC: Deceleration ramp that is used for disable.
2. CS.VTHRESH: Velocity 0 threshold. The motor shaft is considered as stopped as soon as the actual velocity (filtered through a 10 Hz filter, such as VL.FBFILTER) is within  $\pm$  CS.VTHRESH.
3. CS.TO: Velocity 0 time. The actual velocity must be consecutively within  $0 \pm$  CS.VTHRESH for the time CS.TO, before the drive completes the CS process. This value is used since the motor can overshoot out of the VEO window depending on the gains, deceleration ramp, motor inertia and so on.
4. DRV.DISTO: Disable time out. This parameter sets an overall and independent running check as to whether or not the drive can achieve the disable state. If the VEO window set in step 3 is too small, it is possible that the drive may never reach the end of the CS process. The DRV.DISTO parameter and functionality addresses this issue by disabling the drive after the DRV.DISTO time elapses, even if the CS process did not end.

### Controlled Stop Diagram

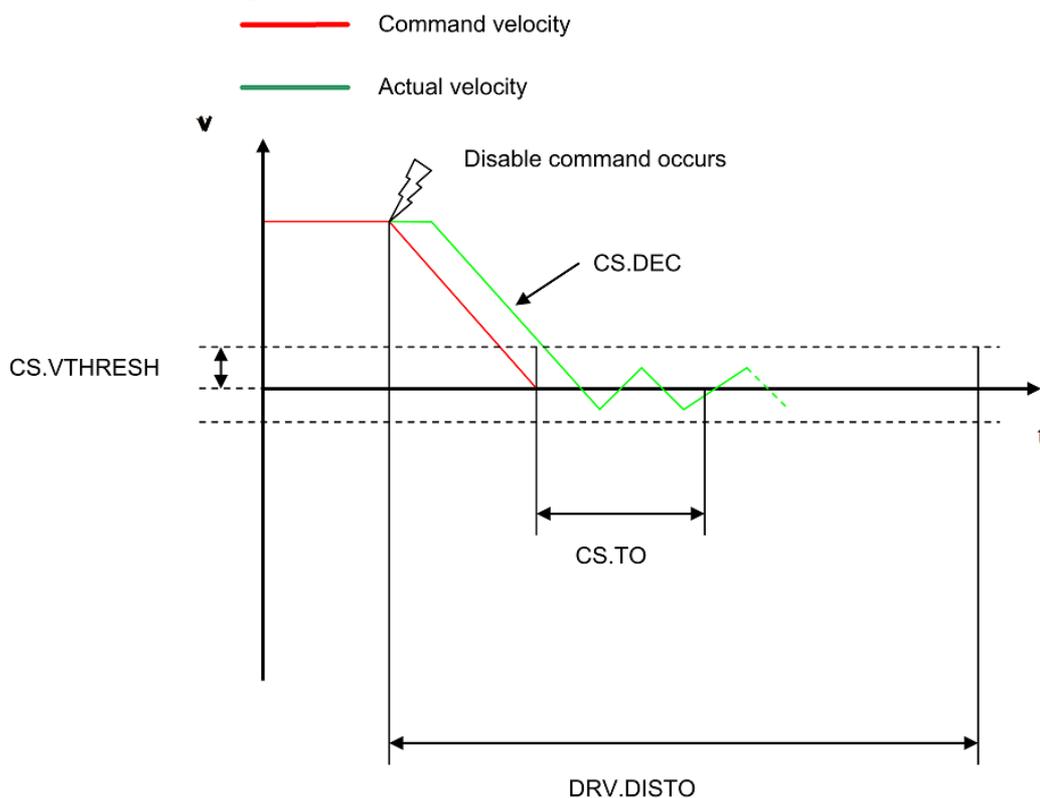

When configuring the controlled stop feature, please note the following:

- If the HW limit switch is active and any of the other CS activated, the only difference will be that in this case the DRV.DISTO will limit the time before disabling the drive.
- If the value of DRV.OPMODE of the drive is current mode, the drive will not execute the CS but instead stop immediately.
- Set DRV.DISTO to an appropriate value that will allow the motor to decelerate from any velocity to 0 with DRV.DEC. This value must also allow the motor to afterwards remain within VL.FB for CS.TO consecutively within  $0 \pm$  CS.VTHRESH.

The drive issues a fault FF703 (→ p. 277) in case that the DRV.DISTO counter expires during a controlled stop procedure.

## Related Parameters and Commands

CS Parameters (→ p. 527)

CS.STATE (→ p. 530): Reads the current state of controlled stop process (0 = controlled stop is not occurring. 1 = controlled stop is occurring).

DIN1.MODE TO DIN7.MODE (→ p. 548)

DRV.DIS (→ p. 616)

DRV.DISTO (→ p. 624)

DRV.DISMODE (→ p. 618)

Related topics:

Emergency Stop (→ p. 135)

Digital Inputs and Outputs (→ p. 104)

Fault and Warning Messages (→ p. 259)

### 13.11 Dynamic Braking

Dynamic braking is a method to slow a servo system by dissipating the mechanical energy in a resistor driven by the motor back EMF. The drive has a built in advanced dynamic braking mode which operates fully in hardware. When activated, the drive shorts the motor terminals in phase with the back EMF (q axis) but continues to operate the non-force producing current loop (d-axis) with 0 current. This action forces all of the dynamic braking current toward stopping the motor current and insures the fastest stopping of motor terminal current.

The drive hardware also limits the maximum dynamic braking motor terminal current via the DRV.DBILIMIT parameter to prevent the drive, motor, and customer load from encountering excessive currents/forces. When the current is not being limited, the mechanical energy is dissipated in the motor terminal resistance. When the current is being limited, energy is returned to the drive bus capacitors. When the amount of returned energy raises the bus capacitor voltage enough, the drive activates the regeneration control to start transferring the returned energy to the regen resistor. This resistor could be internal or external to the drive depending on drive model and drive wiring.

Whether and how the drive uses dynamic braking mode depends on the drive disable mode (DRV.DISMODE) setting.

#### 13.11.1 Drive Regeneration

When the servo motor is slowing down at a rate faster than friction and motor losses would slow the motor, then mechanical energy can be returned to the drive. This returned energy initially drives the internal bus voltage upwards. When the returned energy is high enough, the regeneration control transfers the excess returned energy into the regeneration power resistor. If the regeneration control cannot fully handle the power returned (for example, because there is not a regen resistor present or its resistance value is too high), then the bus voltage will continue to rise and a bus over voltage fault will happen and disable the drive completely, which allows the motor to freewheel.

##### **AKD-x00306 to AKD-x00606**

These units do not have an internal regeneration resistor. In many applications machine friction, motor losses, and the limited bus capacitor energy absorption handles the application. But, depending on the exact application requirements, an external resistor can be connected.

##### **AKD-x01206 to AKD-x02406 and AKD-xzzz07**

These units have an internal regeneration resistor plus the capability to connect an external resistor if higher power levels are needed.

Related Topics

See section 6.14 *Dynamic Braking* in the *AKD Installation Manual* for detailed information on dynamic braking.

DRV.DISMODE (→ p. 618)

DRV.DBILIMIT (→ p. 609)

## 13.12 Emergency Stop

### 13.12.1 Stop / Emergency Stop / Emergency Off

The control functions Stop, Emergency Stop and Emergency Off are defined by IEC 60204. Notes for safety aspects of these functions can be found in ISO 13849 and IEC 62061.

#### NOTE

The parameter DRV.DISMODE must be set to 2 to implement the different stop categories. Consult the *AKD User Guide* for configuring the parameter.



#### WARNING

With vertical load the load could fall. Serious injury could result when the load is not properly blocked. Functional safety, e.g. with hanging load (vertical axes), requires an additional mechanical brake which must be safely operated, for example by a safety control.

Set parameter MOTOR.BRAKEIMM to 1 with vertical axes, to apply the motor holding brake immediately after faults or Hardware Disable.

#### 13.12.1.1 Stop

The stop function shuts down the machine in normal operation. The stop function is defined by IEC 60204.

#### NOTE

The Stop Category must be determined by a risk evaluation of the machine.

Stop function must have priority over assigned start functions. The following stop categories are defined:

##### Stop Category 0

Shut-down by immediate switching-off the energy supply to the drive machinery (this is an uncontrolled shut-down). With the approved safety function STO the drive can be stopped using its internal electronics (IEC 61508 SIL2).

##### Stop Category 1

A controlled shut-down, whereby the energy supply to the drive machinery is maintained to perform the shut-down, and the energy supply is only interrupted when the shut-down has been completed.

##### Stop Category 2

A controlled shut-down, whereby the energy supply to the drive machinery is maintained.

Stop Category 0 and Stop Category 1 stops must be operable independently of the operating mode, whereby a Category 0 stop must have priority.

If necessary, provision must be made for the connection of protective devices and lock-outs. If applicable, the stop function must signal its status to the control logic. A reset of the stop function must not create a hazardous situation.

### 13.12.1.2 Emergency Stop

The Emergency Stop function is used for the fastest possible shutdown of the machine in a dangerous situation. The Emergency Stop function is defined by IEC 60204. Principles of emergency stop devices and functional aspects are defined in ISO 13850.

The Emergency Stop function will be triggered by the manual actions of a single person. It must be fully functional and available at all times. The user must understand instantly how to operate this mechanism (without consulting references or instructions).

#### NOTE

The Stop Category for the Emergency Stop must be determined by a risk evaluation of the machine.

In addition to the requirements for stop, the Emergency Stop must fulfil the following requirements:

- Emergency Stop must have priority over all other functions and controls in all operating modes.
- The energy supply to any drive machinery that could cause dangerous situations must be switched off as fast as possible, without causing any further hazards ( Stop Category 0) or must be controlled in such a way, that any movement that causes danger, is stopped as fast as possible (Stop Category 1).
- The reset must not initiate a restart.

### 13.12.1.3 Emergency Off

The Emergency Off function is used to switch-off the electrical power supply of the machine. This is done to prevent users from any risk from electrical energy (for example electrical impact). Functional aspects for Emergency Off are defined in IEC 60364-5-53.

The Emergency Off function will be triggered by the manual actions of a single person.

#### NOTE

The result of a risk evaluation of the machine determines the necessity for an Emergency Off function.

Emergency Off is done by switching off the supply energy by electro-mechanical switching devices. This results in a category 0 stop. If this stop category is not possible in the application, then the Emergency Off function must be replaced by other measures (for example by protection against direct touching).

## 13.13 Safe Torque Off (STO)

Safe torque off (STO) is a restart lock safety feature that prevents a system restart. The STO input provides direct electrical control of the power stage of the AKD drive. It bypasses the processor and will disable the power stage regardless of software or other hardware signals.

### 13.13.1 AKD-x003 up to AKD-x024

STO is controlled by a digital input which releases the power output stage of the drive as long as a 24 V signal is applied to the input. If the STO input goes open-circuit, then power will no longer be supplied to the motor, and the drive will lose all torque and coast to a stop. If the STO digital input does not have 24V applied to it and you attempt to enable the drive (using the hardware and software enables) the drive will generate a 602 "Safe Torque Off" fault.

### 13.13.2 AKD-x048

STO is controlled by two digital inputs which release the power output stage of the drive as long as a 24 V signal is applied to these inputs. If one of the STO inputs goes open-circuit, then power will no longer be supplied to the motor, and the drive will lose all torque and coast to a stop. If one of the STO digital inputs does not have 24V applied to it and you attempt to enable the drive (using the hardware and software enables) the drive will generate a 602 "Safe Torque Off" fault.

### 13.13.3 AKD-C Global STO

There is one STO-Enable input and one STO-Status output for each DC Power string. STO-Enable 1 only effects string 1. STO-Enable 2 only effects string 2.

The string STO input releases the power output stage of all AKD-N (without option DS) connected to the string as long as a 24 V signal is applied to this input. If the STO input goes open-circuit, then power will no longer be supplied to the connected motors, and the drives will lose all torque and coast to a stop.

**NOTE**

In case of using an AKD-N with option "DS" (local STO input), the global STO signal will have no influence on this drive. The local STO input on the AKD-N has no influence over the global STO. The local STO functionality is described in the AKD-N installation manual.

**13.13.4 STO Fault**

If you see this fault you need to apply 24V to the STO input and then clear the fault (DRV.CLRFAULTS (→ p. 600)) before you can enable the drive. The STO will not generate a fault until you try to enable the drive. You can read the current faults using DRV.FAULTS (→ p. 651).

```
-->DRV.FAULTS
602: Safe torque off.
-->
```

**13.13.5 Reading STO state**

The current state of the STO can be read using the STO.STATE (→ p. 1190) parameter. WorkBench also shows you the state of the STO inputs in the status bar at the bottom of the window.

**13.14 Under Voltage Fault Behavior**

You can adjust the conditions for an under voltage fault using VBUS.UVMODE in the WorkBench Terminal (→ p. 248) View:

**VBUS.UVMODE = 1 (default)**

The drive will not report an under voltage fault unless the drive is enabled and VBUS.VALUE falls below VBUS.UVFTHRESH

**VBUS.UVMODE = 0**

The drive will report an under voltage condition any time VBUS.VALUE falls below VBUS.UVFTHRESH.

When an under voltage fault occurs, the drive is disabled and issues the following alerts:

- WorkBench alert: 502 Bus Under Voltage
- Drive LED alert: Left LED displays [F], right LED displays [u-V].\
- Fault relay output turns on.

## 14 Using Command Source and Operating Modes

---

<b>14.1 Overview</b> .....	<b>139</b>
<b>14.2 Using Command Source and Operation Modes</b> .....	<b>139</b>
<b>14.3 Current Loop</b> .....	<b>140</b>
<b>14.4 Velocity Loop</b> .....	<b>143</b>
<b>14.5 Position Loop</b> .....	<b>145</b>

## 14.1 Overview

Operation modes (opmodes) allow you to set up your drive to communicate directly over the Ethernet input, a specific fieldbus, or an analog or digital control.



### Settings

[Learn more about this topic](#)

Select which mode of operation and command source the drive should work in. The AKD drive can work in many different modes, each mode is suited to

Command Source:	Operation Mode:
<input type="text" value="2 - Electronic Gearing"/>	<input type="text" value="2 - Position Mode"/>

There are two basic components to how you will command the drive and how it will behave. The “Service mode” indicates how the drive will be communicated to. The drive has communication options via Ethernet, a variety of fieldbuses, through an analog input, and through electronic gearing, or digital inputs. The second component ties to which loop you will be controlling (torque, velocity, or position).

## 14.2 Using Command Source and Operation Modes

There are two methods to access these two parameters within WorkBench. The first is by selecting the **Settings** screen from the left hand tree. By clicking on the top level of the **Settings** folder, you access the graphical representation of both the Command source and Operation Mode. The drop-down box then allows you to select the desired command type and control loop you wish to activate. Please note that some Command Sources can only be used with certain control loops (as an example, Electronic Gearing can only be used in position loop Operation Mode).

### 14.2.1 Command Source

The command source sets how you communicate with the drive. Initially, you might be communicating via your PC using the Ethernet connection. Each Command Source is listed below:

#### 14.2.1.1 Service

This is the most common source used when establishing initial communications with the drive to set the system up, and when you may need to “service” the drive. The Service source communicates with your PC via the Ethernet port located on the top of the drive at connector X11.

#### 14.2.1.2 Fieldbus

When using a fieldbus, such as CANOpen or EtherCAT, the drive is set to this command source. For CANOpen, use the connectors X12 and X13 located on the top of the drive. For EtherCAT, Connectors X5 and X6 located on the front of the drive are used.

#### 14.2.1.3 Electronic Gearing

If the drive will be used to follow the output of an external encoder, following motion using an electronic gear ratio, then you should use this command source. When using Electronic Gearing, the Operation mode must be set in the Position Loop mode. This is also the mode used for step and direction inputs as well.

#### 14.2.1.4 Analog

This command source allows the drive to be controlled from an analog source. Typically a +/- 10 VDC signal is attached to connector X8 pins 9 and 10. Varying the analog input will then vary torque, velocity, or position based on the Operation mode selected.

### 14.2.2 Operation Mode

The operation mode identifies which servo loop you will be controlling. The drive offers torque, velocity, or position control. From the setting screen page, a graphical representation of the loop is displayed. By clicking these graphical representations, you can access additional loop information such as gains, filters, and other settings.

## Related Parameters

DRV.CMDSOURCE (→ p. 604)

DRV.OPMODE (→ p. 682)

### 14.3 Current Loop

#### 14.3.1 Overview

The current loop is active when the drive operates in current torque (current) mode (DRV.OPMODE (→ p. 682) = 0). The parameters that govern the current loop are shown in the Current Loop view. The various types of tuning for the drive adjust these parameters automatically, so you normally do not need to adjust the current loop parameters in the current loop screen. The Current Loop view includes an active block diagram. If you click on a block in the diagram, the appropriate tab opens below.

A more detailed block diagram for the current loop is included in 1 Block Diagrams.


#### 14.3.2 Current Loop Gain

The current loop is tuned based on the inductance of the motor used with the drive. The current loop gain is automatically set so that the idealized current loop crossover frequency is  $IL.KP/L$  in rad/sec where L is the motor line-line inductance.



## Current Loop

Parameters for controlling the torque/force of the motor. Usually no changes are needed with correct motor data.

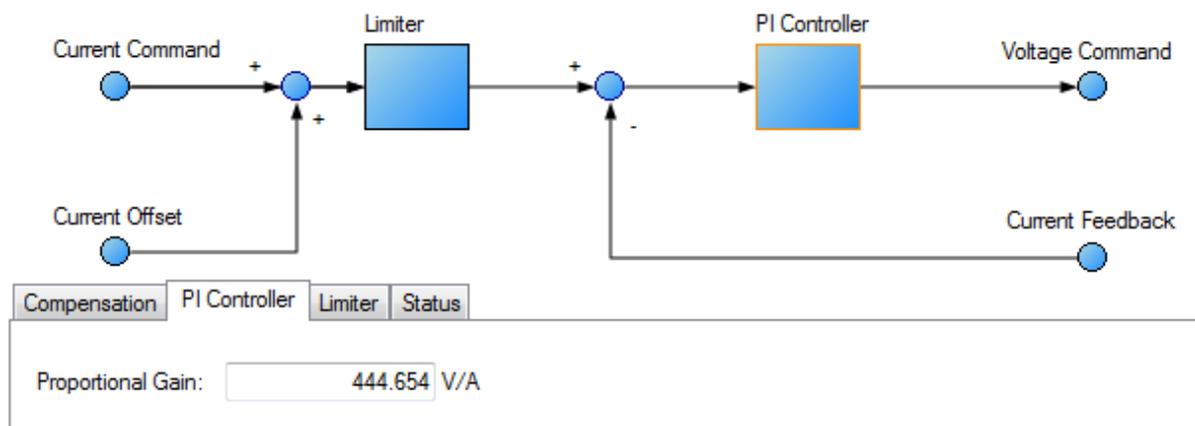

Current loop gain is set automatically by the drive using the following methods:

- **Option A.** When a feedback device is automatically identified by the drive and the motor data is automatically populated (Motor Autaset = 1-On) the proportional gain of the current loop (il.kp) is set based on the motor data and is shown as a read-only parameter in the current loop screen.
- **Option B.** When the motor is selected using the motor database or using the custom motor tool, the imported inductance value is used to set the current loop proportional gain.



## Motor

These parameters describe the motor attached to this drive.

Motor Name:	AKM22C-ANC2C-00	Select Motor...
Motor Type:	0 - Rotary	Create Motor...
Motor Autoselect:	0 - Off	
Peak Current:		
Continuous Current:		
Inertia:		
Torque Constant:		
Inductance:	35	
Motor Poles:		
Maximum Speed:	8	
Motor Resistance:	20	
Maximum Voltage:		
Motor Phase:		
Coil Thermal Constant:	10	
EMF Constant:	0	

**M** Motor
[Learn more about this topic](#)

Select the motor that is attached to the drive.

To attach a motor, first select Motor family and then Motor series.

Motor Family: AKM Series

**Frame/Winding:** AKM22C   
 **Mount:** A   
 **Shaft:** N   
 **Connectors:** C   
 **Brake:** 2   
 **Feedback:** C

To create new or edit existing custom motors:

Custom Motors...

More >>

OK    Close

### NOTE

Manual adjustments to the current loop proportional gain parameter are not normally required during the motor tuning procedure. If manual adjustments are made to the current loop proportional gain parameter, repeating the motor setup procedure will overwrite the changes and restore the value to the Kollmorgen calculated value.

## Related Parameters

IL Parameters (→ p. 877)

DRV.OPMODE (→ p. 682)

### 14.3.3 Current Loop Gain Scheduling

This feature is needed when the motor inductance is saturated during normal operation. Because the current loop gain is calculated using the motor inductance, if the inductance changes, the current loop is at risk of becoming unstable.

If a motor is being used under high loads, the inductance is probably saturating if one or more of the following occurs:

- Audible chirping occurs.
- Chirping gets louder with higher commanded current.
- Instability occurs under high current loads (at or near MOTOR.IPEAK (→ p. 986))

To fix this problem, gain scheduling can be used to change the current loop gain as a function of the measured current, IL.FB (→ p. 888).

#### 14.3.3.1 Using the Gain Scheduling View in WorkBench

To use this feature effectively, you should have either an inductance chart of motor inductance as a function of current, or you must have an idea of how the current loop is performing.

If a chart of motor inductance versus current command is available, it is possible to calculate the required current loop gain values over the range of motor currents.

Current Loop Gain =  $2000 * 2\pi * \text{Motor Inductance (H)}$

#### Example

Motor Inductance is 3.19 mH, current loop gain would be 40.01

Current Loop Gain =  $2000 * 2 \pi * 0.00319 = 40.01$

Once suitable values have been identified, you can enter these values into WorkBench in the **Gain Scheduling** view. The **Import** and **Export** buttons at the bottom of the view allow you to import and export data as .csv files.



## Gain Scheduling


[? Learn more about this topic](#)

Advanced user current loop gain lookup table for special motors that have varying inductance.

Drive IPeak :  Ams

Proportional Gain :  V/A

IL.CMD (A)	Table Index	Value (%)	Resulting IL.KP
0.000	0	100.000	400.072
0.115	1	99.607	398.500
0.229	2	99.607	398.500
0.344	3	99.607	398.500
0.459	4	99.607	398.500
0.573	5	99.607	398.500
0.688	6	99.607	398.500
0.803	7	99.607	398.500
0.917	8	99.607	398.500
1.032	9	99.607	398.500
1.146	10	99.607	398.500
1.261	11	99.607	398.500
1.376	12	99.607	398.500

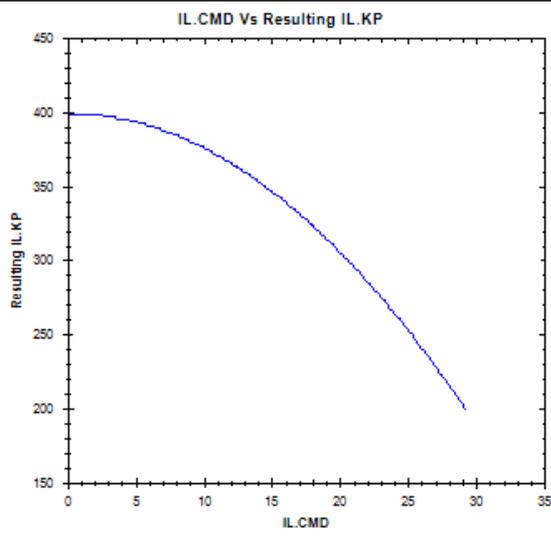

By default, the current loop value will be what is defined in IL.KP across the whole range of currents. To change the value of IL.KP over a range of values, simply enter a scaling term: 0 - 100% of the current value.

**Example**

If the current loop gain entered on IL.KP was 40.124 (shown above) and a current loop gain of 36 was desired, a scaling term of 90% should be entered for the desired current ranges.

$40.124 * 0.90 = 36.112$

**Using the Terminal View for Gains Scheduling**

You can also use the Terminal to set up the Gains Scheduling Table. If you use the Terminal, then two parameters are required for each lookup table point: IL.KPLOOKUPINDEX (→ p. 912) and IL.KPLOOKUPVALUE (→ p. 914). IL.KPLOOKUPINDEX specifies the lookup table index (0 – 255), and IL.KPLOOKUPVALUE specifies the scaling term (0 – 100%) to scale IL.KP.

The current to which a lookup index refers can be calculated as follows:

$IL.CMD \text{ Range} = DRV.IPEAK / 157 * IL.KPLOOKUPINDEX$

A full list of table values can also be retrieved using IL.KPLOOKUPVALUES (→ p. 916), which returns a comma delimited table as follows:

```
-->IL.KPLOOKUPVALUES
Index Value
0, 100.000
```

1, 100.000  
 2, 100.000  
 3, 100.000  
 4, 100.000  
 5, 100.000  
 6, 100.000  
 7, 100.000  
 8, 100.000  
 9, 100.000  
 10, 100.000

## 14.4 Velocity Loop

### 14.4.1 Overview


The velocity loop is active when the drive operates in velocity mode (DRV.OPMODE (→ p. 682) = 1) or position mode (DRV.OPMODE = 2). The parameters that govern the velocity loop are shown in the Velocity Loop view. This view is only available while in Operation Mode 1 or 2 (set in the Settings view). The various types of tuning for the drive adjust these parameters automatically, so you normally do not need to adjust the velocity loop parameters in the velocity loop screen.

A detailed block diagram for the velocity loop is included in Block Diagrams.


### 14.4.2 Tabs in the Velocity Loop View

The velocity view includes an active block diagram. If you click on a block in the diagram, the appropriate tab opens below.


- **Ramp limiter**. The ramp limiter consists of the acceleration limits of the drive. These acceleration limits override both motion task and electronic gearing acceleration limits, so they must be set higher than the highest required motion task acceleration or gearing acceleration value. These acceleration and deceleration limits are also shown in the Service Motion view and the Limits view (DRV.ACC (→ p. 593) and DRV.DEC (→ p. 611)).
- **Velocity clamp**. The velocity clamp affects the maximum speed of the drive when the command source is service (DRV.CMDSOURCE (→ p. 604) = 0). This speed limit affects motion commanded in service motion and in motion tasks. These limits are also found in the limit screen on WorkBench. (VL.LIMITP (→ p. 1290) and VL.LIMITN (→ p. 1288))
- **AR1, AR2, AR3, AR4**: These values are the independent bilinear quadratic (bi-quad) filters inside the drive. AR1 and AR2 are in the forward path and AR3 and AR4 are in the feedback path. These bi-quad filters can each be configured in five different modes.

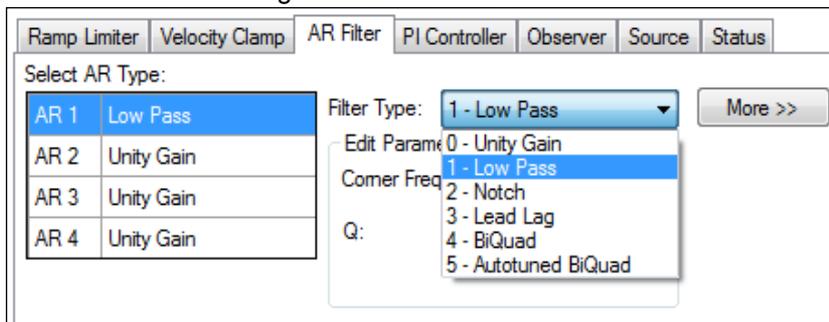

- **0–Unity Gain.** The filter is off, and it will not affect the loop.
- **1–Low Pass.** In modes 1, 2, and 3, the bi-quad filter is configured for each respective type of filtering. The Edit Parameters field is used to set up the filter. The actual bi-quad filter values are shown to the left:

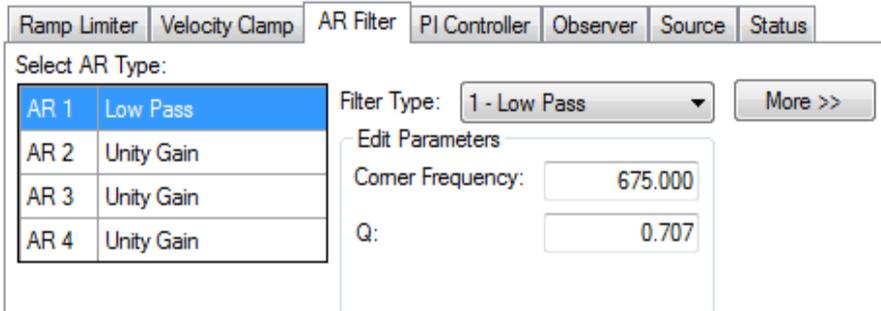


- **2–Notch**
- **3–Lead Lag**
- **4–Bi-quad** . A manually configured Bi-quad filter. This is an advanced tuning function.
- **5–Autotuned Biquad** . When the PST sets a filter after the PST process is complete, the values are input into the Bi-Quad filter and are shown as read only values.
- **Status.** The status tab shows parameters that are relevant to the velocity loop performance.

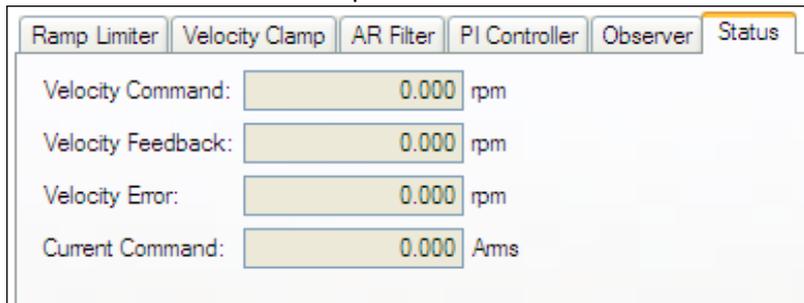

### 14.4.3 Velocity Loop Default Settings and Changes

By default, a PI loop with a low-pass filter (AR1) is set in the drive.

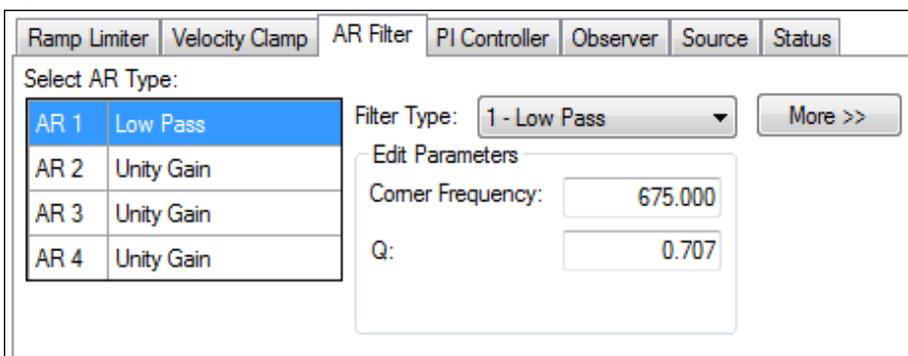

The default value for the low-pass filter is 675Hz. The low-pass filter is important for disturbance rejection, and it also reduces the audible noise of the system.

#### Velocity Loop Changes Based on Slider Tuning

Slider tuning (see Slider Tuning (→ p. 192)) uses the slider control to adjust the proportional gain and integral gain values of the velocity loop based on the desired bandwidth. If you adjust the bandwidth using the slider tuner and then return to the velocity loop screen, you will see different values inside the proportional gain and integral gain fields. No adjustment is made to the filters automatically by using the slider tuner. Only the proportional and integral terms are adjusted.

#### Velocity Loop Changes Based on PST

When the PST (see Using the Performance Servo Tuner (→ p. 193)) is used, changes are made to the proportional gain, integral gain, filters, and other parameters not related to the velocity loop screen directly. The values adjusted are dependent on the drive, motor, load, and the PST settings. The filters that are adjusted by the PST are automatically put into mode **5-Autotuned Bi-quad**.

No adjustments can be made to mode **5- Autotuned BiQuad** filters that are set by the PST. If adjustment to the tuning of the system is desired after the PST process is completed, then these adjustments should be made in the settings of the PST. The PST process can then be repeated.

#### 14.4.4 Biquad Filters

Filters in the AKD all exist as digital biquad filters in the servo loops. Lowpass, LeadLag, and Resonator filters are derived by the following equations. WorkBench handles all the math involved for the user. Enter the values in the fields for the type of filter desired.

##### Generate a Biquad as a Lowpass at Frequency F

Numerator Frequency = 5000

Numerator Q =  $\text{Sqrt}(2)/2$  (this is 0.707)

Denominator Frequency = F

Denominator Q =  $\text{Sqrt}(2)/2$  (this is 0.707)

##### Generate a Biquad as a LeadLag at Frequency F, Gain G

Numerator Frequency =  $F * 10^{-(G/80)}$

Numerator Q =  $\text{Sqrt}(2)/2$  (this is 0.707)

Denominator Frequency =  $F * 10^{(G/80)}$

Denominator Q =  $\text{Sqrt}(2)/2$  (this is 0.707)

##### Generate a Biquad as a Resonator at Frequency F, Gain G, Bandwidth Q

Numerator Frequency = F

Numerator Q =  $10^{-(G/40)} * Q$

Denominator Frequency = F

Denominator Q =  $10^{(G/40)} * Q$

#### Related Parameters

VL Parameters (→ p. 1250) | DRV.ACC (→ p. 593) | DRV.CMDSOURCE (→ p. 604) | DRV.DEC (→ p. 611) | DRV.OPMODE (→ p. 682)

#### Related Topics

Limits (→ p. 123) | Service Motion (→ p. 171) | Tuning Your System (→ p. 191) | Motion Tasks (→ p. 162)

## 14.5 Position Loop

### 14.5.1 Overview

The position loop is active when the drive operates in position mode (DRV.OPMODE (→ p. 682) = 2). The parameters that govern the position loop are shown in the Position Loop view. The various types of tuning inside AKD adjust these parameters, so you normally do not need to adjust the position loop parameters in the position loop screen.

A detailed block diagram for the position loop is included in 1 Block Diagrams.

### 14.5.2 Tabs in the Position Loop View

The position loop view includes an active block diagram. If you click on a block in the diagram, the appropriate tab opens below.

- **Gains.** This tab shows the gains for the position loop.
- **Limiter.** The value in the **Maximum Position Error** box (PL.ERRFTHRESH (→ p. 1088)) limits the position error (PL.ERR (→ p. 1086)) that can be present. When the maximum position error is exceeded, the drive generates fault F439 (→ p. 269), Following Error. If the maximum position error is set to 0 (default) then the maximum position error is ignored.

The screenshot shows the 'Limiter' tab selected. Below the tab headers, there is a label 'Maximum Position Error:' followed by a text input field containing the value '300.000' and the unit 'deg'.

- **Status.** This tab shows the present value of commanded position (PL.CMD (→ p. 1084)), position feedback (PL.FB (→ p. 1094)), position error (PL.ERR (→ p. 1086)), and velocity command (VL.CMD (→ p. 1263)).

### 14.5.3 Position Loop Default Behavior and Changes

By default, only a proportional gain (PL.KP (→ p. 1105)) is applied in the position loop.

The screenshot shows the 'Gains' tab selected. It displays several parameters with input fields:
 

- Proportional Gain: 100.000 (rev/s)/rev
- Integral Gain: 0.000 Hz
- Feed Forward Gain: 0.000
- Integral Input Saturation Level: 360.000 deg
- Integral Output Saturation Level: 360.000 deg

#### Position Loop Changes Based on Slider Tuning

Slider Tuning (see Slider Tuning (→ p. 192)) adjusts the proportional gain of the position loop (along with velocity loop view parameters; see Velocity Loop (→ p. 143)). If you adjust the bandwidth using the slider tuner, then when you return to the position loop screen, you will see a change to the proportional gain only. No adjustment is made to the integral gain or feedforward gain through the slider tuner. The integral saturation levels are not applicable when the integral gain is set to 0. In the **Gains** tab, the boxes for these values may be populated with default values whether or not the integral gain is set to 0.

#### Position Loop Changes Based on PST

When the Performance Servo Tuner (PST, see Using the Performance Servo Tuner (→ p. 193)) is used, changes are made to the position loop proportional gain, integral gain, feedforward gain and other parameters not related to the Position Loop view directly. The values adjusted are dependent on the drive, motor, load, and the PST settings.

### Related Parameters

PL Parameters (→ p. 1083)


DRV.OPMODE (→ p. 682)

VL.CMD (→ p. 1263)

### 14.5.4 Modulo Position

Modulo position is a function that simplifies rotational applications such as unidirectional rotating assembly tables. When enabled, the modulo axis feature converts several position-based parameters to fit in a defined modulo range. Once this range is defined, a given position value will roll over at the end of the modulo range and return to the beginning of the modulo range. This behavior affects some drive functions, which work with modulo-scaled position variables when the modulo-feature is enabled.

The following figure describes the progress of the actual position value (PL.FB) for linear scaling and modulo scaling when the motor moves continuously in a positive direction:

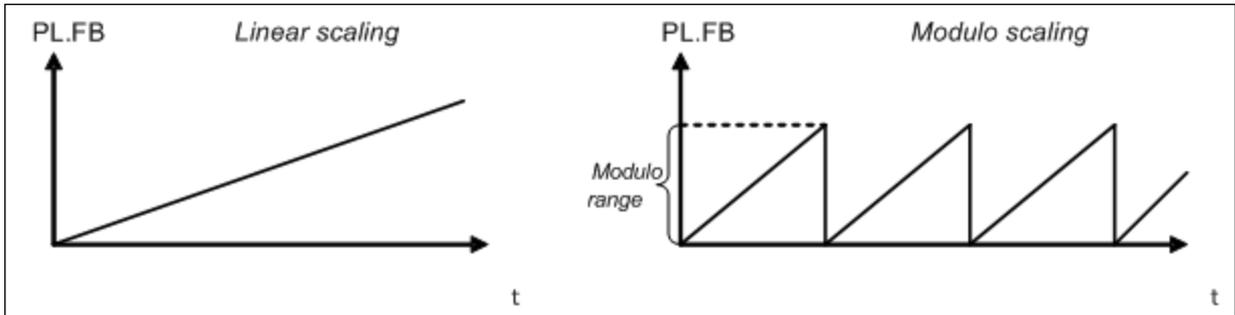

#### 14.5.4.1 Setting up the modulo axis in WorkBench

You can set up the modulo axis from the **Modulo** view in WorkBench.

### Modulo

Modulo is used to set a rollover value for the position scale.

[? Learn more about this topic](#)

Modulo Position: 1 - Enabled

Modulo Range Begin/End:  deg

Modulo Range Begin/End:  deg

Direction For Absolute Motion Task: 1 - Positive

Position Feedback:  deg

Button or Box	Description
Modulo Position	Enables or disables modulo (PL.MODPEN (→ p. 1113))
Modulo Range Begin/End	Sets the beginning and end of the modulo range (PL.MODP1 (→ p. 1107), PL.MODP2 (→ p. 1109))
Direction for Absolute Motion Task	Sets the direction of an Absolute Motion task when Modulo is enabled. The direction can be set to always positive, or always move negative. The "Shortest Distance" mode will determine the shortest distance to the target and move in that direction. The "inside range" mode will move in the direction that allows the motor to stay in between the defined scale and therefore not to wrap around. Shortest Distance is more commonly used than Inside Range mode. (PL.MODPDIR (→ p. 1111))
Position Feedback	Reads and displays the position feedback (PL.FB (→ p. 1094))

#### 14.5.4.2 Setting up the modulo axis from the Terminal

You can use the following parameters to configure the modulo-axis feature:

- PL.MODPEN (→ p. 1113): Enables or disables the modulo-axis feature.
- PL.MODP1 (→ p. 1107): Defines either the beginning or the end of the modulo range, depending on the PL.MODP2 setting.
- PL.MODP2 (→ p. 1109): Defines either the beginning or the end of the modulo range, depending on the PL.MODP1 setting.

#### 14.5.4.3 Parameters affected by the modulo axis

The following parameters are converted into modulo format when the values of these parameters are queried by a user, a fieldbus, or the software oscilloscope.

- PL.FB (→ p. 1094): The actual position of the drive is converted into modulo scaling.
- PL.CMD (→ p. 1084): The command position of the drive is converted into modulo scaling.
- CAP0.PLFB (CAP0.PLFB, CAP1.PLFB (→ p. 483)): The actual position of the drive, which has been captured by the capture engine 0, is converted into modulo scaling.
- CAP1.PLFB (CAP0.PLFB, CAP1.PLFB (→ p. 483)): The actual position of the drive, which has been captured by the capture-engine 1, is converted into modulo scaling.

#### 14.5.4.4 Drive functions affected by modulo axis

##### Software limit switch

The software limit switches in the drive compare the actual position (PL.FB (→ p. 1094)) with threshold values. Motion is stopped when the actual position exceeds the software limits. Since PL.FB is affected by the modulo-axis feature, the software limit switches monitor the modulo-converted PL.FB value. Software limit switches with thresholds outside of the modulo range never limit motion.

##### Programmable limit switch

The programmable limit switches compare the actual position (PL.FB (→ p. 1094)) with selectable thresholds and then status flags are set to "true" when the actual position is currently within these position limits. The programmable limit switches monitor the modulo-converted PL.FB value. Programmable limit switches that are set outside the modulo-range never become active.

##### Digital output Modes 5 and 6

The digital output modes 5 and 6 (position greater than x, position less than x) compare the actual position of the drive with thresholds and activate the associated outputs when PL.FB (→ p. 1094) is lower or higher than the threshold. The digital output mode functionality monitors the modulo-converted PL.FB value. Position thresholds that are set outside the modulo range continuously activate or deactivate the digital output.

##### Motion tasking to absolute target positions

When modulo is enabled, absolute motion tasks assume that the command is modulo converted. Absolute motion tasks to target positions outside of the modulo range generate a warning, nFault and Warning Messages (→ p. 259) (Motion task target position is out of modulo range).


#### 14.5.4.5 Using the modulo position feature with multiturn encoders

A special case exists for the following combinations of events:

- The drive is connected to a multiturn feedback device.
- The modulo axis feature is enabled.
- The selected modulo range does not fit as an integer in the range of the multiturn feedback.
- The application moves further than the total amount of multiturn feedback revolutions. In this case, problems occur because the multiturn feedback position overrun and a modulo range position rollover point does not occur at exactly the same position.

After powerup of the drive, the actual position (PL.FB (→ p. 1094)) will be read from the multiturn feedback device. This position can be considered as a position within the feedback range as described in the figures below.

The following figure illustrates drive behavior when the selected modulo range fits as an integer within the multiturn feedback range. For simplicity, assume that one multiturn feedback range describes four feedback revolutions and the selected modulo range is set to two feedback revolutions.

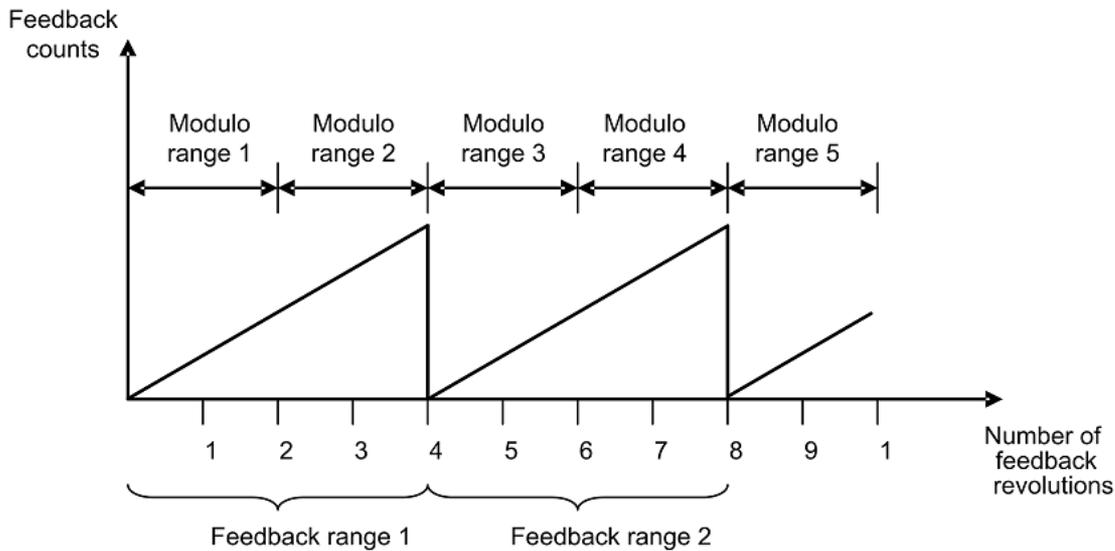


As described in the figure above, the selected modulo range of the drive is repeated exactly at the point where the connected multiturn feedback rolls over (Modulo range 1, 3, 5...). The application can move for several multiturn feedback ranges and the drive can recalculate the modulo position correctly after a power cycle. The positions within the modulo ranges represent the same value in modulo format for each feedback range.

#### Example

The modulo-converted position, which represents 5 or 9 feedback revolutions, corresponds to the modulo position, which represents 1 feedback revolution.

The next figure illustrates the drive behavior when the selected modulo range does not fit as an integer within the multiturn feedback range. For simplicity, assume that one multiturn feedback range describes four feedback revolutions and the selected modulo range is set to 2.5 feedback revolutions.

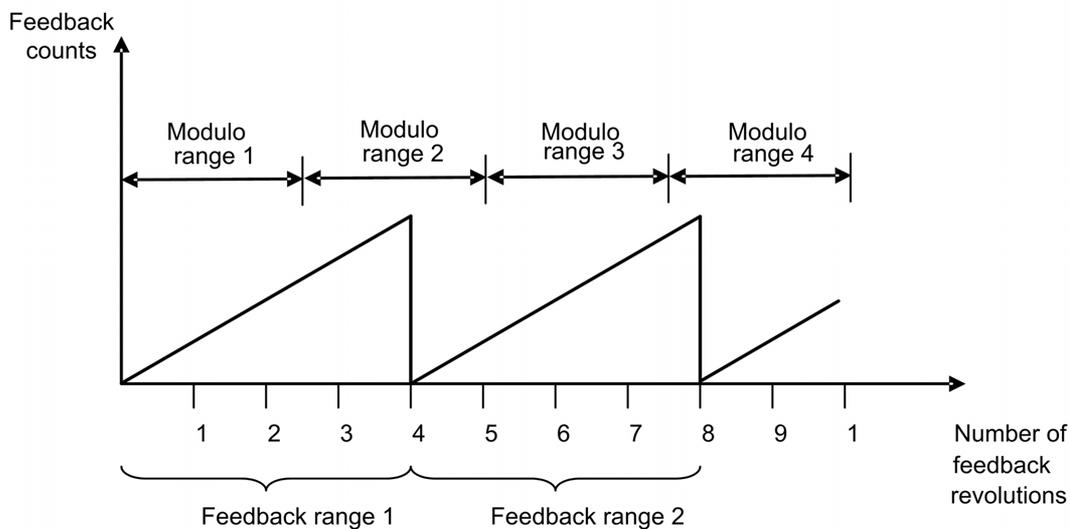

As described in the figure above, the selected modulo range is not repeated exactly at the place where the connected multiturn feedback rolls over. The application can move for several multiturn feedback ranges, but the drive cannot calculate the modulo position correctly after a power cycle.

#### Example

The modulo-converted position, which represents five feedback revolutions, does not correspond to the modulo-position, which represents one feedback revolution.

## 15 Creating Motion

---

<b>15.1 Homing</b> .....	<b>151</b>
<b>15.2 Motion Tasks</b> .....	<b>162</b>
<b>15.3 Service Motion</b> .....	<b>171</b>
<b>15.4 Motion Profile Table</b> .....	<b>172</b>
<b>15.5 Jog Move</b> .....	<b>183</b>
<b>15.6 Drive Motion Status</b> .....	<b>183</b>

## 15.1 Homing

### 15.1.1 Overview

Homing is used to mechanically move a motor (connected to a mechanism) to a specific location on the machine, referred to as “home”. Motion tasks then use this home as a reference point for movements that must base a known position on this reference point. Motor movement is usually controlled by a variety of limit switches (end of travel) and a home reference switch. Using these reference points with the logic of the drive allows the machine to find and set the home reference point.

### 15.1.2 Using Homing

The AKD includes a variety of homing methods (set with HOME.MODE (→ p. 863)) to accommodate your machine needs:

- Home using current position (HOME.MODE 0)
- Find limit input (HOME.MODE 1)
- Find input limit then find zero angle (HOME.MODE 2)
- Find input limit then find index (HOME.MODE 3)
- Find home input (HOME.MODE 4)
- Find home input then find zero angle (HOME.MODE 5)
- Find home input then find index (HOME.MODE 6)
- Find zero angle (HOME.MODE 7)
- Move until position error exceeded (HOME.MODE 8)
- Move until position error exceeded, then find zero angle (HOME.MODE 9)
- Move until position error exceeded, then find index (HOME.MODE 10)
- Find index signal (HOME.MODE 11)
- Home to home-switch, including mechanical stop detection (HOME.MODE 12)
- Home to feedback position (HOME.MODE 13)
- Home to home-switch for rotary applications (HOME.MODE 14)
- Find next feedback zero position (HOME.MODE 15)
- Find home input with dual edges (HOME.MODE 16)

Each of these homing methods offers a different way to achieve a home reference point based on your particular system mechanics. All homing methods provide the options of adjusting the acceleration, deceleration, and speed for homing moves. In addition, once the homing move is completed, you can either set an offset position or make an offset move as required. Homing modes, guidance for mode selection, and homing examples are included in *Selecting and Using Homing Modes* (→ p. 153).

#### **NOTE**

When using any of the methods that use homing switches and limits, please refer to the Input/Output section for proper wiring techniques.

#### **Home Default Window**

The Home window provides a means to select your homing method and configure the homing settings. This window also provides a simple controls to start homing and confirm homing success.




## Home

This page is used to issue a homing command. The home command is used to zero the drives position.

Select the type of homing motion you wish to use:

1 - Find limit input

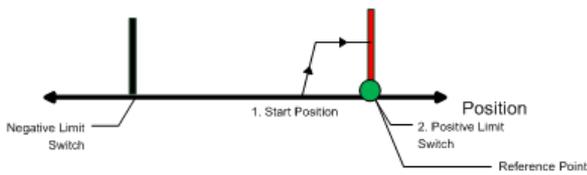

[Goto Drive Motion Status](#)

### Settings

Acceleration:	<input type="text" value="333.339"/>	$\mu\text{m/s}^2$
Deceleration:	<input type="text" value="333.339"/>	$\mu\text{m/s}^2$
Direction:	<input type="text" value="0 - Negative"/>	
Distance:	<input type="text" value="0.000"/>	$\mu\text{m}$
Position:	<input type="text" value="0.000"/>	$\mu\text{m}$
Position Lag:	<input type="text" value="1.000"/>	$\mu\text{m}$
Velocity:	<input type="text" value="2.000"/>	$\mu\text{m/s}$
Negative Limit Switch:	<input type="text" value="No Limit Input Config"/>	<a href="#">Configure Inputs</a>
Max Distance:	<input type="text" value="0.000"/>	$\mu\text{m}$ Disabled when value is 0.

### Controls

Found:	<input type="radio"/>
Done:	<input type="radio"/>
Active:	<input type="radio"/> <input type="button" value="Start"/>
Error:	<input type="radio"/>
Position Feedback:	<input type="text" value="0.152"/> $\mu\text{m}$
Auto Homing:	<input type="text" value="0 - Disabled"/>

### Mode Selection:

Use this box to select the appropriate homing mode. Homing modes are described below in [Selecting and Using Homing Modes](#). The active options in the **Settings** area change depending on the homing mode selected.

### Settings:

- **Acceleration:** Sets the acceleration ramp used during the homing procedure.
- **Deceleration:** Sets the deceleration ramp used during the homing procedure.
- **Direction:** Sets the start direction for homing movement.
- **Distance:** Sets a prescribed distance you want the motor to move once the home reference point is found. A zero value (default) corresponds to the axis actively returning to the defined position found during the homing process.
- **Position:** Sets the current position to a prescribed value once the home reference point is found.
- **Position Lag:** Sets the position error threshold, which is used for indicating home reference when using the hardstop modes 8 and 9.
- **Velocity:** Sets the initial velocity used for homing moves.
- **Velocity Factor:** In modes where a limit is reached, and direction is reversed, the velocity factor allows you to reduce the velocity as a percentage of the homing velocity.
- **Positive/Negative Limit Switch/Home Reference/Peak Current:** These fields appear based on the mode selected. For homing to limits and home reference, this field will indicate how the digital inputs are configured as well as provide a link to the digital input page. For Homing to a hard stop, the Peak Current field allows you to set the peak current limit desired during homing.

### Controls:

- **Found:** When the home reference is found, then this indicator is green.
- **Done:** When the home move is complete, this indicator is green.
- **Active:** This indicator will be green while the Home move is taking place.
- **Error:** This indicator will be red if something in the homing sequence failed.
- **Position Feedback:** This window reports the current value for PL.PFB.

- Auto Homing: Allows the system to auto-home on power up.
- **Start/Stop**: Click this button to start or stop the selected homing method.

### 15.1.3 Selecting and Using Homing Modes

#### Homing Mode 0: Home Using Current Position

Using the current position is the most basic homing method. This method simply uses the current position of the motor as the home point reference. Two values allow you to further define homing with this method:

- **Distance**: A value other than zero will cause a movement of the motor the distance entered in counts (or other units based on your units settings). You can use this to establish a home point at some prescribed distance from the initial starting position of the motor. This home will be at the offset distance entered from zero.
- **Position**: You can use this parameter to set the value of the home position other than zero. This allows you to offset your home reference away from zero. PL.FB will be set to the value you enter when the motor reaches the home reference point (based on the method selected).

The distance and position offsets are available and behave similarly on all of the homing types. The motor will either move an additional distance (distance value) after it finishes the homing method, or set the position to the amount entered in the position value.

#### Homing Mode 0 Example

Use the current position as home and have the motor end motion 180 degrees from home:

1. Select Mode 0 from the drop-down box.
2. Enter 180 into the **Distance** box.
3. Click **Start**.
4. The motor will move 180 degrees from the start position. The **Position Feedback** box (PL.FB) will show 180 (the motor is now sitting 180 degrees from home).

#### Homing Mode 1: Find Limit Input

The find limit input mode creates a move to a limit input. This method can be used if you have a positive or negative limit switch available that you want to establish as a home reference point.

#### NOTE

Limit switches should be set to Active Low (when switch power is lost, no current is flowing, and the drive homes at the point of the loss in power of the limit switch).

The sequence of this homing mode is as follows:

1. The motor starts to move in the positive or negative direction, depending on the value you set in the **Home** screen (in the **Settings** section, **Direction** box).
2. The motor stops as soon as the hardware limit switch has been detected and then reverses direction.
3. The home position is set when the limit switch is no longer active. The actual and command position of the drive is immediately set to the home position value (HOME.P) and the motor ramps down to zero velocity. The axis is then moved to the position (HOME.P) + distance offset (HOME.DIST).

The values for distance and position can be used as described in homing mode 0.

#### CAUTION

When homing to a limit switch, the limit switch must remain in the triggered state while the motor decelerates to zero and begins to reverse. A very low acceleration rate combined with a high approach velocity may overshoot the switch and cause it to become active. This action will cause a homing error fault.

#### Homing Mode 1 Example

Use the positive end of travel limit as home reference, and then set this position to be -20 degrees.

1. Select Mode 1 from the drop-down box and enter 20 into the Position box.

2. Set the direction to positive. When Start is selected, the motor will move until it encounters the positive end of travel switch.
3. As soon as the switch is triggered, the motor will reverse direction until the switch is no longer active.
4. As soon as the switch is no longer active, the position will be set to -20 degrees and the motor will ramp to 0. Depending on the velocity you are homing with, and the settings of the acceleration/deceleration ramps, the position feedback will be close to the position you entered.

### Homing Mode 2: Find Input Limit then Find Zero Angle

Similar to the Find Input Limit method, the find input limit then find zero angle<sup>1</sup> mode follows the same steps, but upon completion of the move, it continues to move to find the zero angle reference of the motor.

#### NOTE

Limit switches should be set to Active Low (when switch power is lost, no current is flowing, and the drive homes at the point of the loss in power of the limit switch).

The specific steps are as follows:

1. The motor starts to move according to the direction (HOME.DIR) setting.
2. The motor stops as soon as the hardware limit switch has been detected and changes direction of movement.
3. The home position has been found as soon as the hardware limit switch is no longer active. The actual and the command position of the drive will immediately be set to the HOME.P value plus distance to the mechanical zero angle of the feedback device according to the current direction.
4. The motor moves to the home position (HOME.P) plus the distance move offset is applied (if present), which is located at the mechanical zero-angle of the feedback.

The values for distance and position can be used as described in home mode 0.

#### CAUTION

When homing to a limit switch, the limit switch must remain in the triggered state while the motor decelerates to zero and begins to reverse. A very low acceleration rate combined with a high approach velocity may overshoot the switch and cause it to become active. This action will cause a homing error fault.

### Homing Mode 2 Example

Use the positive end of travel limit as home reference and then move to the zero angle of the motor

1. Use the positive end of travel limit as home reference and then move to the zero angle of the motor.
2. Select Mode 2 from the drop-down box.
3. Set the Direction to Positive.
4. When Start is selected, the motor will move until it encounters the positive end of travel switch.
5. As soon as the switch is triggered, the motor will reverse direction and move to the zero angle of the motor.

### Homing Mode 3: Find Input Limit then Find Index

Similar to the Find Input Limit method, this follows the same steps, but upon completion of the move, it continues to move to find the index pulse of the motor. This method can only be used with feedback devices that have an index pulse such as incremental encoders and analog sine encoders with an index channel (Feedback selection 10, 11, 20, 21). This method requires that Capture Mode is turned on in the home screen. With Mode 3 selected, a **Set Capture** button appears (see arrow below). Click **Set Capture** to set the Position Capture mechanism correctly for proper homing with an index pulse.

---

<sup>1</sup>Mechanical zero angle of the feedback = 0 degree.



## Home

This page is used to issue a homing command. The home command is used to zero the drives position.


Select the type of homing motion you wish to use:

3 - Find limit input then find index



Capture mode is not set correctly.

Set Capture

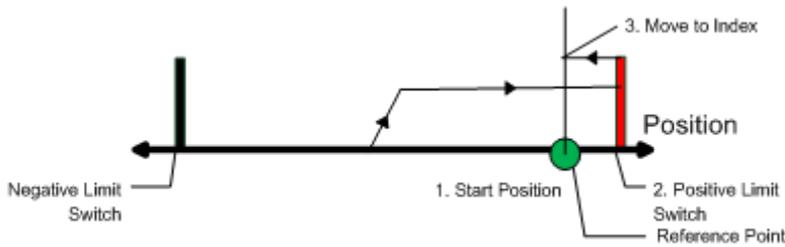

Once homing is triggered, the homing routine is performed as follows:

1. The motor starts to move according to the HOME.DIR setting.
2. The motor stops as soon as the hardware limit switch has been detected and changes direction of movement.
3. The motor ramps down to a reduced velocity as soon as the hardware limit switch is no longer active (please refer also to HOME.FEEDRATE). The drive is searching for the index-signal during this time. The home-position has been found as soon as the index-signal has been detected by the drive.
4. The actual and the command position of the drive will be set to the HOME.P value as soon as the index pulse is found. The drive then ramps down to velocity 0. The axis is then moved to the position (home.p) + distance offset (home.dist).

### ⚠ CAUTION

When homing to a limit switch, the limit switch must remain in the triggered state while the motor decelerates to zero and begins to reverse. A very low acceleration rate combined with a high approach velocity may overshoot the switch and cause it to become active. This action will cause a homing error fault.

### Homing Mode 3 Example

Use the positive end of travel limit as home reference, and then move to the index reference of the motor feedback device at 50% of the original home velocity.

1. Select Mode 3 from the drop-down box.
2. Set the Direction to Positive.
3. In the **Home** screen click **Set Capture**.
4. Set the velocity factor to 50%.
5. When Start is selected, the motor will move until it encounters the positive end of travel switch. As soon as the switch is triggered, the motor will reverse direction, decelerate to a reduced velocity based on the Velocity Factor value, and move until the motor encounters the index pulses of the feedback device.

### Homing Mode 4: Find Home Input

Homing Mode 4 establishes the home reference based on an external home switch connected to a drive digital input (DINx.MODE - 11 Home Reference).

The sequence of this homing mode is as follows:

1. The motor starts to move according to the direction (HOME.DIR) setting.
2. The home position has been found as soon as the home-switch becomes active while traveling in the selected direction of motion (HOME.DIR). The actual and command position of the drive will immediately be set to the position (HOME.P) value and the motor ramps down to velocity 0. The axis is then moved to the position (home.p) + distance offset (home.dist).

If the Home Reference Input is active when told to home, the drive does a reset and then the home sequence. The sequence of the reset:

1. The motor moves in the opposite direction of HOME.DIR
2. When the home switch is not active, the motor ramps down to zero, and subsequently follows the sequence of the homing mode.

The hardware limit switches are monitored during the homing procedure. The drive behaves as follows in case that a hardware limit switch is active before the home-switch has been activated:

1. The motor changes the direction until the home switch is crossed.
2. The motor ramps down to zero velocity and reverses direction again after crossing the home-switch.
3. The home-switch will now be activated according to the direction (HOME.DIR) setting and when the home-position has been found. The actual and the command position of the drive will immediately be set to the position (HOME.P) value and the motor ramps down to zero velocity. The axis is then moved to the position (home.p) + distance offset (home.dist).

#### Homing Mode 4 Example

Move in the negative direction towards the home reference point and then move 180 degrees from the reference point

1. Select Mode 4 from the drop down-box.
2. Set the **Direction** to **Negative** and enter 180 for distance.
3. Click **Start**.
4. The motor moves until it encounters the home reference switch. As soon as the switch is triggered, the motor moves an increment of 180 degrees as desired.

#### Homing Mode 5: Find Home Input then Find Zero Angle

The sequence of this homing mode is as follows:

1. The motor starts to move according to the Direction (HOME.DIR) setting.
2. The home position has been found as soon as the home-switch becomes active while traveling in the selected direction of motion (HOME.DIR) and the zero angle of the resolver has been found. The actual and the command position of the drive will immediately be set to the Position (HOME.P) value plus the distance to the mechanical zero angle of the feedback device according to the current direction.
3. The motor moves to the home Position (HOME.P) value plus the distance move offset is applied (if present), which is located at the mechanical zero-angle of the feedback.

If the Home Reference Input is active when told to home, the drive does a reset and then the home sequence. The sequence of the reset:

- The motor moves in the opposite direction of HOME.DIR
- When the home switch is not active, the motor ramps down to zero, and subsequently follows the sequence of the homing mode.

The hardware limit switches are monitored during the homing procedure. The drive behaves as follows in case that a hardware limit switch is active before the home-switch has been activated:

1. The motor changes the direction until the home switch is crossed.
2. The motor ramps down to zero velocity and changes afterwards the direction again after crossing the home-switch.
3. The home-switch will now be activated according to the HOME.DIR setting and when the home-position has been found. The actual and the command position of the drive will immediately be set to the position (HOME.P) value plus distance to the mechanical zero angle of the feedback device according to the current direction.
4. The motor moves to the home Position (HOME.P) value plus the distance move offset is applied (if present), which is located at the mechanical zero-angle of the motor feedback.

## Homing Mode 5 Example

Move in the positive direction towards the home reference point and then move 60 degrees from the zero angle location.

1. Select Mode 5 from the drop-down box.
2. Set the Direction to Positive and enter 60 for distance.
3. When Start is selected, the motor will move until it encounters the Home reference switch. As soon as the switch is triggered, the motor will move to the zero angle location plus an additional 60 degrees as desired.


## Homing Mode 6: Find Home Input then Find Index

Similar to the Home input method, this follows the same logic as the other homing methods, first completing the home to input method, and then finding the index pulse of the motor feedback.

This homing mode starts motion until a digital input, which is assigned to act as a home-switch, has been activated. The motor moves afterwards with a reduced velocity (HOME.FEEDRATE) until the index signal has been detected by the drive.

### NOTE

This method requires that Capture Mode is turned on. This is done in the home screen. With Mode 6 selected, a "Set Capture" button will appear (see arrow below). Pressing the button sets the Position Capture mechanism correctly for proper homing with an index pulse..

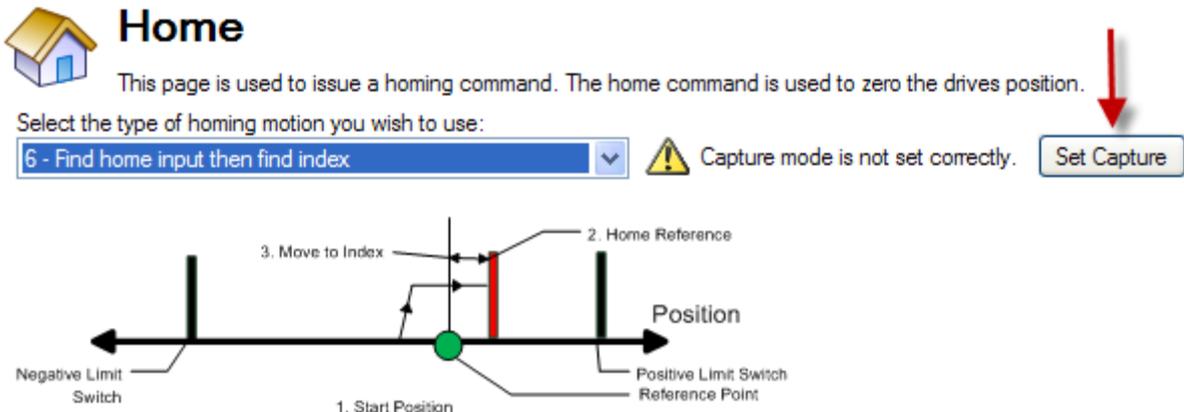

The home-switch must be activated according to the setting of the HOME.DIR setting.

The sequence of this homing mode is as follows:

1. The motor starts to move according to the HOME.DIR command.
2. The motor decelerates to a reduced velocity according to the HOME.FEEDRATE setting as soon as the home-switch becomes active during a motion in direction of the HOME.DIR setting.
3. The actual and the command position of the drive will immediately be set to the HOME.P value as soon as the index-signal has been detected. The motor decelerates until velocity 0 has been reached.

If the Home Reference Input is active when told to home, the drive does a reset and then the home sequence. The sequence of the reset:

1. The motor moves in the opposite direction of HOME.DIR
2. When the home switch is not active, the motor ramps down to zero, and subsequently follows the sequence of the homing mode.

The hardware limit switches are monitored during the whole homing procedure. The drive behaves as follows in case that a hardware limit switch is active before the home-switch has been activated:

1. The motor changes the direction until the home-switch is crossed.
2. The motor ramps down to zero velocity and changes direction again after crossing the home-switch.
3. The home-switch will now be activated according to the HOME.DIR command. The motor decelerates to a reduced velocity according to the HOME.FEEDRATE setting as soon as the home-switch becomes active.
4. The actual and the command position of the drive will immediately be set to the HOME.P value as soon as the index-signal has been detected. The motor decelerates until zero velocity has been reached. The axis is then moved to the position (HOME.P) + distance offset (HOME.DIST).

### Homing Mode 7: Find Zero Angle

The sequence of this homing mode is as follows:

1. The home value is immediately found by the drive and the actual and the command position of the drive will immediately be set to the Position (HOME.P) value plus the distance to the mechanical zero angle of the feedback device according to the current direction.
2. The motor moves to the home Position (HOME.P) value, which is located at the mechanical zero-angle of the feedback.

### Homing Mode 7 Example

Move in the positive direction towards the zero angle location.

1. Select Mode 7 from the drop-down box.
2. Set the direction to Positive.
3. When Start is selected, the motor will move to the zero angle location.

### Homing mode 8: Move Until Position Error Exceeded

This method is also referred to as move to hard or mechanical stop. The AKD has several options related to this method as well. For this basic method, the motor will move until it encounters a hard stop, causing the position error to exceed a specific threshold you set. Once the threshold is exceeded, the motion stops and home reference is established. You can use the Distance or Position as described initially in this section.

**⚠ CAUTION** Be sure to choose the direction appropriately to move off of the stop if using the distance offset.

The sequence in this homing mode is as follows:

1. As this home move is initiated, the motor will move according to the Direction (HOME.DIR) value until the position error exceeds the Position Lag (HOME.PERRTHRESH) value.
2. The motor is now at home position (HOME.P) value.

### Homing Mode 8 Example

Move in the positive direction towards a hard stop and limit the current to 1 amp. Allow 30 degrees of error before considered at the hard stop.

1. Select Mode 8 from the drop-down box.
2. Set the Direction to Positive, Position Lag to 30 degrees and Peak Current to 1.
3. When Start is selected, the motor will move to the hard stop with a peak current of 1 amp.
4. As the position error exceeds the 30 degrees, the home Position (HOME.P) is set.

### Homing Mode 9: Move Until Position Error Exceeded then Find Zero Angle

The sequence in this homing mode is as follows:

1. As this home move is initiated, the motor will move according to the Direction (HOME.DIR) value until the position error exceeds the Position Lag (HOME.PERRTHRESH) value.

2. The home value is immediately found by the drive and the actual and the command position of the drive will be set to the Position (HOME.P) value plus the distance to the mechanical zero angle of the feedback device according to the current direction.
3. The motor moves to the home Position (HOME.P) plus the distance move offset is applied (if present) value, which is located at the mechanical zero-angle of the feedback.

### Homing Mode 9 Example

Move in the positive direction towards a hard stop and limit the current to 1 amp. Allow 30 degrees of error before considered at the hard stop. Then move to the zero angle of the motor and designate this as the 180 point.

1. Select Mode 9 from the drop-down box.
2. Set the Direction to Positive, Position to 180, Position Lag to 30 degrees and Peak Current to 1.
3. When Start is selected, the motor will move to the hard stop with a peak current of 1 amp. As the position error exceeds the 30 degrees, the home Position (HOME.P) is set and the Position will be set to 180.

### Homing Mode 10: Move Until Position Error Exceeded then Find Index

This method is similar to HOME.MODE 8, but looks for the index pulse after it encounters the hard stop. For this method, the motor will move until it encounters a hard stop, causing the position error to exceed a specific threshold that you set. Once the threshold is exceeded, the motion will reverse and look for an index pulse.

This method can only be used with feedback devices that have an index pulse such as incremental encoders and analog sine encoders with an Index channel (Feedback selection 10, 11, 20, 21). This method requires that Capture Mode is turned on in the home screen. With Mode 10 selected, a **Set Capture** button appears (see arrow below). Click **Set Capture** to set the position capture mechanism correctly for proper homing with an index pulse.



## Home

This page is used to issue a homing command. The home command is used to zero the drives position.


Select the type of homing motion you wish to use:

10 - Move until position error exceeded then find index

⚠

Capture mode is not set correctly.

Set Capture

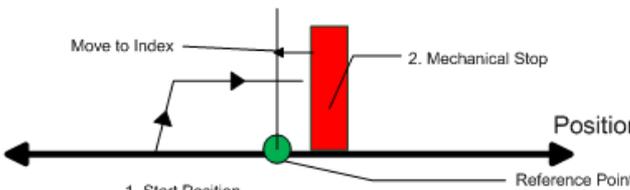

**Settings**

Acceleration:	10,000.170	rpm/s
Deceleration:	10,000.170	rpm/s
Direction:	0 - Negative	
Distance:	0.000	deg
Position:	0.000	deg
Position Lag:	180.000	deg
Velocity:	60.000	rpm
Velocity Factor:	50	%
Peak Current:	0.075	Ams

**Controls**

Found:

Done:

Active:  ▶ Start

Error:

Position Feedback:  deg

Auto Homing:

⚠ Drive is inactive.

1. Motor advances into the mechanical stop and then reverses direction.
2. The motor is searching for the index pulse during this time.
3. If the motor finds the Index pulse, then the Home-position is found.

4. The actual and the command position of the drive will be set to the HOME.P value as soon as the index signal is found. The drive then ramps down to velocity 0.
5. If another mechanical stop is found before the Index signal, then the homing sequence will fail and the system needs to be reviewed for proper wiring.


#### Homing Mode 10 Example: Move Until Position Error Exceeded then Find Index.

1. Select mode 10 from the drop-down box.
2. Set the direction to positive.
3. In the home screen click **Set Capture**.
4. Set position lag and peak current values based on your application requirements.
5. When start is selected, the motor moves in the positive direction until a hard stop is encountered.
6. The motor reverses and moves until it encounters the index reference and then it stops.
7. If another hard stop is encountered before the index reference, home fails.

Unlike Homing Mode 3, the Home position is set as soon as the index pulse is found, irrespective of the direction of motion.

#### Homing Mode 11: Find Index Signal

This method can only be used with feedback devices that have an index pulse such as incremental encoders and analog sine encoders with an Index channel (Feedback selection 10, 11, 20, 21). This method requires that Capture Mode is turned on in the home screen. With Mode 11 selected, a **Set Capture** button appears (see arrow below). Click **Set Capture** to set the position capture mechanism correctly for proper homing with an index pulse.

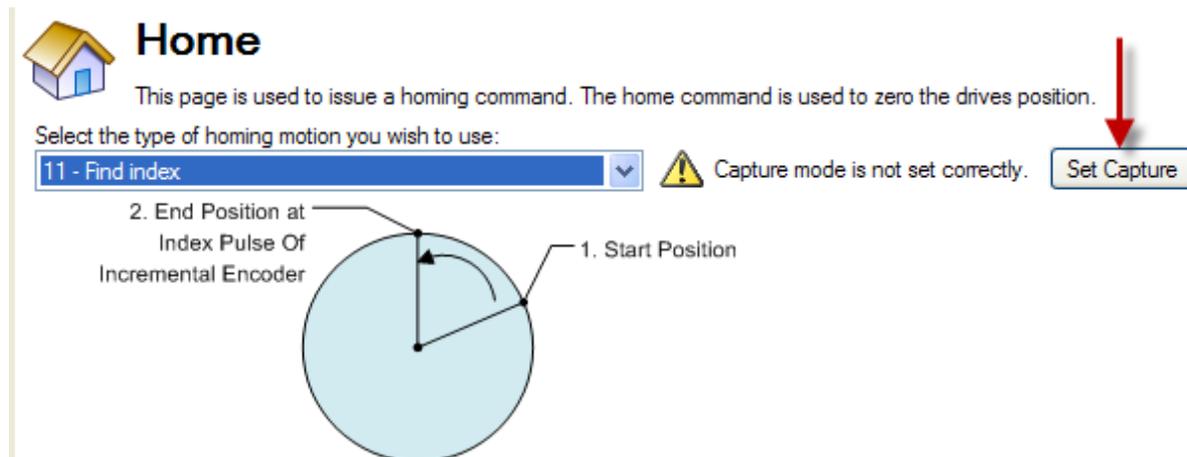

Once homing is triggered, the homing routine is performed as follows:

1. The motor starts to move according to the HOME.DIR setting.
2. The Motor is searching for the index pulse during this time.
3. If the Motor finds the Index pulse, then the Home-position is found.
4. The actual and the command position of the Drive will be set to the HOME.P value as soon as the index-signal is found. The Drive then ramps down to velocity 0 and moves back to index position.
5. If the Limit switch is active before Index signal, then the Motor changes the direction and then repeats steps 3 and 4.

#### Homing Mode 11 Example: Find Index Signal.

1. Select Mode 11 from the drop-down box.
2. Set the Direction to Positive.
3. In the home screen press the “set capture” button.
4. When Start is selected, the motor will move until it encounters the index reference and then it stops.

5. If Limit switch is encountered before Index reference, the Motor changes direction and searches for Index signal in the opposite direction.

Unlike Homing Mode 3, the Home position is set as soon as the index pulse is found, irrespective of the direction of motion.

### **Homing Mode 12: Homing to a home-switch, including mechanical stop detection**

This homing mode starts a motion until a digital input, which is assigned to act as a home switch, has been activated. The home switch must be activated according to the setting of the HOME.DIR setting. The home position is found as soon as the home-switch was activated during a motion in direction of the HOME.DIR setting.

The sequence of this homing mode is as follows:

1. The motor starts to move according to the HOME.DIR setting.
2. The home position has been found as soon as the home-switch becomes active during a motion in direction of the HOME.DIR setting. The actual- and the command position of the Drive will immediately be set to the HOME.P value and the motor ramps down to velocity 0.

This homing mode is similar to the homing mode 4, but checks if the motor hits a mechanical stop instead of the hardware limit switches. A mechanical stop is detected as soon as the absolute value of the position error (PL.ERR) is larger than the position error threshold (HOME.PERRTHRESH) setting. The current command value is limited to the HOME.IPEAK value during the homing process. The motor behaves as follows when a mechanical stop has been detected before the home switch was found:

1. The motor changes the direction until the home switch is crossed.
2. The motor ramps down to velocity 0 and changes afterwards the direction again after crossing the home switch.
3. The home-switch will now be activated according to the HOME.DIR setting and the home-position has been found. The actual and the command position of the drive is immediately set to the HOME.P value and the motor ramps down to velocity 0.

If the Home Reference Input is active when told to home, the drive does a reset and then the home sequence. The sequence of the reset:

- The motor moves in the opposite direction of HOME.DIR
- When the home switch is not active, the motor ramps down to zero, and subsequently follows the sequence of the homing mode.

### **Homing Mode 13: Absolute Mode - Use Feedback Position**

This mode should be selected when using a multi-turn feedback device with AKD. Since the feedback keeps track of its value at all times, the drive takes the value of the feedback at power up. The homing flag is also set. Use auto-home with this mode (HOME.AUTOMOVE). The multi-turn device is initially referenced using FB1.OFFSET. This value is set in the drive using the terminal screen and will need to be saved to the drive. Single-turn absolute devices can also utilize this mode if they are used in applications like a rotary index table where the entire range is within 360 degrees.

### **Homing Mode 14: Homing to a home-switch for rotary applications**

Motion in this mode continues until a digital input assigned to act as a home switch has been activated. The home position is found as soon as the home-switch is activated during motion in the direction set by HOME.DIR (→ p. 853)

The sequence of this homing mode is as follows:

1. The motor starts to move in the direction set by HOME.DIR.
2. The home position is found as soon as the home-switch becomes active during a motion in direction of the HOME.DIR setting. The actual position and command position of the drive will immediately be set to the HOME.P (→ p. 866) value and the motor will ramp down to velocity 0.

This homing mode is similar to homing mode 12, but it will ignore hardware limit switches as well as mechanical stops. It will also always turn in the direction set by HOME.DIR, even when the reference switch is active at the beginning of the homing procedure. Use HOME.MAXDIST (→ p. 861) to prevent the motor from turning endlessly. HOME.DIST is not applied to the homing mode 14. The axis does not return to the zero position (or zero position + home.distance) as it does for other home modes, such as mode 4. This ensures that the homing motion is done only in the direction set by HOME.DIR.


#### Homing Mode 15: Find next feedback zero position

This homing mode is similar to homing mode 7 (Find Zero Angle), however, if the feedback device has more than 1 pole pair (2 poles), the motor will home to the next pole pair.

#### NOTE

If the feedback device has 2 poles (1 pole pair) then this mode will operate exactly the same as homing mode 7.

#### Homing Mode 15: Diagram of home positions depending on feedback pole count

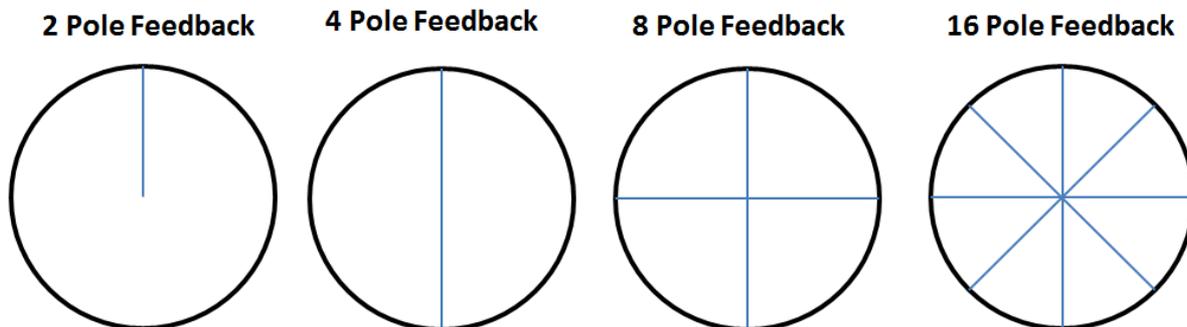

#### Homing Mode 16: Find home input with dual edges

This homing mode is similar to homing mode 4, but is better for applications which home at high velocity and require high accuracy. The axis is homed in the direction of HOME.DIR (→ p. 853) with velocity HOME.V (→ p. 872). Once the axis detects the home position the direction is changed and the axis returns to the home position with a reduced velocity defined by HOME.V and HOME.FEEDRATE (→ p. 857).

#### 15.1.4 Using Homing: Advanced

The various homing methods in the AKD offer several options for setting up your home reference. When using any of the methods that use homing switches and limits, please refer to the Input/Output section for proper wiring techniques.

#### Related Parameters and Commands

HOME Parameters (→ p. 846)

PL.FB (→ p. 1094)

CAP0.MODE, CAP1.MODE (→ p. 481): Sets index capture method

Related Topics

Digital Inputs and Outputs (→ p. 104)

DIN Parameters (→ p. 536)

DOUT Parameters (→ p. 568)

### 15.2 Motion Tasks

#### 15.2.1 Overview

The AKD offers several options for executing moves, which are called "motion tasks" in WorkBench. You can directly link an input to a single motion task, assign inputs as a BCD pointer and execute, command over the Ethernet connection, or automatically execute a motion task as the result of the completion of another

move event. Using the Motion Task view, you can also set up a single motion task or a sequence of motion tasks through the Motion Task screen, which is accessed from the Settings view. The Motion Task view allows you to modify a variety of parameters for a given move, including move profile, move type, velocity, distance, and acceleration limits.

**NOTE** Motion Tasking is not supported by AKD SynqNet.

### 15.2.2 Motion Task Input Table

Motion tasks can be easily entered and manipulated using the Motion Task Table. With this table, you can enter specific motion tasks and edit tasks, as well as insert and delete tasks, much like an Excel spreadsheet. The data table you build remains in WorkBench until you load the tasks into the drive. Once the tasks are loaded, you have access to the graphical representation of the moves (as in previous versions of WorkBench).



#### Motion Tasks

Motion Tasks allow you to specify one or a sequence of predefined moves that can be started by a digital input or a terminal command.

[Learn more about this topic](#)

Start Motion Task Running: Idle

	Position [counts16bit]	Velocity [rpm]	Acceleration [rpm/s]	Deceleration [rpm/s]	Profile	Type	Following Task
0						▼	▼
1						▼	▼
2						▼	▼
3						▼	▼
4						▼	▼
5						▼	▼
6						▼	▼
7						▼	▼
8						▼	▼
9						▼	▼
10						▼	▼
11						▼	▼
12						▼	▼
13						▼	▼
14						▼	▼
15						▼	▼
16						▼	▼
17						▼	▼
18						▼	▼
19						▼	▼
20						▼	▼

Save Motion Tasks To Drive Reload Tasks From Drive Import From File Export To File

Enter values in each column for each task that you require. Once you enter an item, that field will change color indicating it has been edited but not yet loaded to the drive. Continue entering your tasks row by row. If you find that you skipped a task, you can easily insert it before or after a row that you highlight, and right-click to open the menu options. You can also select a task and using the right click access the copy and paste commands.

For delays and motion blends, double click on the line you want to edit and the delay and blend options will be available to adjust. You must load any changes or modifications to the drive before they will be available for use.

### 15.2.3 Using Motion Tasks

Use the Motion Task view to create and execute new motion tasks within WorkBench. As you add motion tasks, the new tasks appear as branches. You can use the root Motion Task view to view all tasks at once and execute individual tasks. When you select the Motion Task view, the Motion Task table is opened, as shown below.

**Motion Tasks** [Learn more about this topic](#)

Motion Tasks allow you to specify one or a sequence of predefined moves that can be started by a digital input or a terminal command.

Motion Task Running:

	Position [deg]	Velocity [rpm]	Acceleration [rpm/s]	Deceleration [rpm/s]	Profile	Type	Following Task
▶ 0	3600.000	1500.000	10000.169	10000.169	Trapezoidal	Absolute	1
1	-360.000	500.000	10000.169	10000.169	Trapezoidal	Relative to Comman...	2
2	0.000	2000.000	200000.032	200000.032	Trapezoidal	Absolute	0
3							
4							
5							
6							

From this view, you can perform the following actions:

Button or Dialog Box	Description
Start	By highlighting an existing motion task, you can use this button to initiate that task (and subsequent tasks it may be linked to). In order to start any Motion Task, the motor must have been homed.
More/Less	This expands the Task table to include additional information regarding each task.
Save Motion Tasks To Drive	Saves the motion tasks in the table to the drive. This field is highlighted in pink if any values in the table have changed and have not been saved to the drive
Reload Tasks From Drive	Uploads motion tasks table with current values from the drive. This action deletes any values listed in the table.
Import From file	Allows import of a .xml file to the task table.
Export To File	Exports to a .xml file the current list of tasks in the table.

All of the task parameters can be added to the Motion Tasks Table when More is selected. You can also view individual tasks in the Motion Task (Edit Single Task) screen by double-clicking on the task row.

**Edit Single Task** [Learn more about this topic](#)

**Motion Task**  
Motion Tasks allow you to specify one or a sequence of predefined moves that can be started by a digital input or a terminal command.

Task Number:

Preview

Type:  Profile:

Position:  deg

Velocity:  rpm

Acceleration:  rpm/s

Deceleration:  rpm/s

Following Task:

Following Task

Start Condition

Dwell Time:  ms

Blend

Once in the edit screen, you can adjust move type, position command, velocity and accelerations as well as sequencing options. The editable fields include:

- **Type:** Sets the type of move, absolute or incremental type moves.

- **Profile :** This area sets the basic shape of the move. The basic move is trapezoidal, but S-curve (1:1) and custom profiles are also available using a "Profile Table".
- **Position:** This is the command position (PL.CMD), based on the type of move selected.
- **Velocity:** Sets the peak or traverse velocity depending on the move parameters
- **Acceleration:** Sets the profile acceleration ramp (this cannot be set higher then the drive acceleration limit setting - DRV.ACC)
- **Deceleration:** Sets the profile deceleration ramp (this cannot be set higher then the drive deceleration limit setting - DRV.DEC)

In addition to these profile settings, you can set additional parameters on how your next move will be executed. These parameters include:

- **Following Task:** By checking this box, you can indicate which task you want to follow the task that you are editing.

- **Start Condition:** This box allows for different start conditions to initiate the following task. Currently, the only option is a dwell delay. The dwell delay time can be entered in the dwell time box.
- **Blend:** It is possible to blend moves together by using the blend option. This option allows either a blend to velocity, or blend to acceleration.

Once you have entered the data, you can click on the Motion Task root directory to bring the table up to execute your moves. For more advanced motion tasks, specific constraints can be added. Currently, you can have a task that is either an interrupt task, or non-interruptible.

#### Advanced: Constraints

- **Interrupt:** This constraint can be used to interrupt a task that has not been finished. In other words, this constraint only will initiate the interrupt task motion if another task with no constraints is underway. This selection is a good option for registration tasks when you only want the move to happen if the current task has not finished.
- **Non-Interruptible:** When this constraint is selected, then the task can not be interrupted by another motion task or task call from inputs.

### 15.2.4 Motion Profiles

**Trapezoidal** moves include a fixed ramped acceleration set by MT.ACC (→ p. 1036), a traverse period at velocity set by MT.VEL, and a fixed ramped deceleration set by MT.DEC (→ p. 1045). The distance traveled during the move is determined by the type of move (absolute or incremental). Position is set using MT.P (→ p. 1061). Note that for short moves, the traverse velocity may not ever be reached.

**OneToOne** and **Profile Table** moves use a lookup table (see the section on Motion Profile Table (→ p. 172)) for the acceleration and deceleration profiles. OneToOne profiles use the table throughout the entire move by interpolating the table at each sample to determine the command position of the move. Profile Table moves split the table and use the first half for acceleration and the second half for deceleration with constant velocity (if the move is long enough to reach the maximum velocity) in between. Tables used for OneToOne moves do not need to be symmetric so they may not work with Profile Table moves which require symmetric tables.

### 15.2.5 Motion Types

Motion tasks can use the following motion types:

- Absolute
- Relative to command position (PL.CMD)
- Relative to previous target position
- Relative to external start position
- Relative to feedback position

Motion types define how the target position will be calculated. These can be either incremental (relative) or absolute. An incremental move is a move that increments a specific distance. The AKD allows the user to increment based on two different beginning positions as described below. Absolute moves move to a specific position based on the actual position from an established zero or home point.

#### Absolute motion task

An absolute move type will move to the actual position indicated by MT.P. A home move would have been established to provide the reference for actual positions on the machine. In this case, the target position =  $PL.CMD = MT.P$

#### Example:

You want to move to a position that is 68 degrees from home reference.

On the Motion Task edit page, Select the Absolute move type, and then enter 68 into the position block (units should be set in degrees). Enter the traverse speed and adjust the acceleration and deceleration parameters as needed. Once you move off the edit screen you can select this task and initiate a start. Regardless of your current position, the motor will now rotate to the absolute position of 68 degrees as referenced from the home position.

#### Motion task relative to command position (PL.CMD)

This type is simply an incremental move. The target position is based on the current position represented by PL.CMD (→ p. 1084) plus the increment you want to move. Specifically, Target Position =  $PL.CMD + MT.P$ .

#### Example:

Your current motor position at the time you activate the motion task is 38 degrees. You want to move an increment of 30 degrees.

On the Motion Task edit page, select the **Relative to Command Position** move type, and then enter 30 into the position block (units should be set in degrees). Enter the traverse speed and adjust the acceleration and deceleration parameters as needed. Once you move off the edit screen you can select this task and initiate a start. The motor will move 30 degrees from the current position. After the motion task, the motor will now be at 68 degrees ( $38 + 30 = 68$ ).

#### Motion task relative to previous target position

Using the last target position as the start point, this profile will move the increment chosen from that old position. This motion type is recommended in situations where a previous task may have been interrupted, or you

want to eliminate any accumulated error. The target position will look at the previous target position and then add the increment you enter for this task. Specifically,  $\text{Target Position} = \text{Previous Target Position} + \text{MT.P}$ .

**Example:**

You initiated a motion task to increment 360 degrees, but that task was interrupted and the motor was stopped at 175 degrees. You use this method and increment another 360 degrees, the motor will complete the motion at 720 degrees (basically, it finished the first move to 360, and then made the additional distance requested of 360 degrees).

The task would be set up similar to the Relative command position example above. To view this in action, set up 2 tasks, once Relative Command Position and the second, Relative Old Target Position. Use low velocities so you can stop motion before the move is completed. Start the first move and then stop before it finishes. Then select the second move. The motor will stop at the desired end position if the stop had not occurred. Try this again, but do not use the Relative Old Target Position and you will see the difference.

## 15.2.6 Using Motion Tasks: Advanced

### Joining multiple tasks

Tasks can be joined in sequence using the task setup screen. Dwells can be added to allow the following tasks to wait a specific amount of time before starting. Tasks can also be blended to provide for smoother transitions between multiple moves. AKD allows blending with either acceleration or velocity.

### Start Conditions

AKD currently provides only one alternatives to start a following task at this time (more are planned):

- Dwell Delay. Starts the following task after the dwell time entered (MT.FTIME)

### Blending

As an alternative to dwells, the AKD can blend motion tasks to provide smooth transitions between multiple tasks. This feature extends the life of your machine life by minimizing mechanical wear due to hard move transitions (jerks).

- **No blend.** No blend, move starts upon completion of the previous task
- **Blend into Acceleration.** Blends the acceleration of the current task into the following task. As the target position of the first task is reached, the acceleration blends into the second task. This prevents the motor from decelerating to zero before starting the second move. This only works where both accelerations are driving the motor in the same direction.
- **Blend into Velocity.** Blends the velocity of the current task into the following task. In this method, the target position is reached as the velocity of the second move is reached. The blending begins prior to reaching the target position, and is completed at the target position of the first move, and the traverse velocity of the second move. This only works when both velocities are in the same direction.

## Related Parameters and Commands

MT Parameters and Commands (→ p. 1035)

Fixed Stop (→ p. 167)

DRV.MOTIONSTAT (→ p. 672): Bit 0 monitors if motion tasking is active.

AIN Parameters (→ p. 392)

AOUT Parameters (→ p. 419)

DIN Parameters (→ p. 536)

DOUT Parameters (→ p. 568)

HOME Parameters (→ p. 846)

## 15.2.7 Fixed Stop

### 15.2.7.1 Overview

This feature allows the user to move the axis to a fixed stop and exert a specified torque against it. Various status flags indicate when the fixed stop has been reached, passed or the axis is slipping. While a fixed stop motion task is running, the current is limited to the `MT.FIXEDSTOPCURRENT`. Faults related to fixed stop can be configured to trigger different drive reactions.

### 15.2.7.2 Configuring a Fixed Stop

A motion task can be configured to detect a fixed stop. The following parameters must be configured along with any standard motion task configuration (Motion Tasks (→ p. 162)). These parameters can be configured from the Terminal (→ p. 248) window in WorkBench.

**NOTE** The drive must be in position mode (`DRV.OPMODE` (→ p. 682)) to perform a fixed stop.

1. **MT.CNTL** (→ p. 1040): Configure Bit 17 to activate fixed stop detection.
2. **MT.FIXEDSTOPFOLLOWINGERROR** (→ p. 1051): When the actual following error (`PL.ERR` (→ p. 1086)) reaches this parameter value, the fixed stop is registered. The end motion task position (`MT.P` (→ p. 1061)) must be greater than `MT.FIXEDSTOPFOLLOWINGERROR` to ensure that the motion task reaches the fixed stop.
3. **MT.FIXEDSTOPMONITORWINDOW** (→ p. 1052): When the fixed stop is reached, its position is monitored by a fixed stop window. If the actual position is out of this window, the fixed stop has broken off and fault 176 is triggered. Configure `FAULT176.ACTION` to determine whether the fault returns a fault, warning, or whether the fault is ignored.
4. **MT.FIXEDSTOPCURRENT** (→ p. 1050): The current applied to the axis when a fixed stop has been reached. While a fixed stop motion task is running, the current limit (`IL.LIMITP` (→ p. 921) or `IL.LIMITN` (→ p. 919) depending on direction) will be overwritten by the value of `MT.FIXEDSTOPCURRENT`. Once the motion task has completed, the current limit is restored to its previous value.

**NOTE** Do not configure a following motion task for a fixed stop motion task.


That status of a fixed stop can be read from `DRV.MOTIONSTAT` (→ p. 672).

DRV.MOTIONSTAT Bit	Description
18	The fixed stop has been reached.
19	The fixed stop has been passed. The motion task ended without triggering a fixed stop because the following error was lower than <code>MT.FIXEDSTOPFOLLOWINGERROR</code> . This triggers Fault 178.
20	The axis broke off of the fixed stop position. This triggers Fault 176.

### 15.2.8 Registration Moves

Registration moves are also known as "indexing on the fly." In a registration move, a digital input interrupts a running motion task and starts a new one. The start position of the new motion task is latched at the time the digital input is activated. The target position of the new motion task is calculated based on the latched position value, for a very accurate target position.

Typical applications for using the registration move are feed-to-length applications, which must guarantee proper positioning with respect to special mark or index. If this mark is reached, an external trigger signal aborts the current move and starts the registration move.

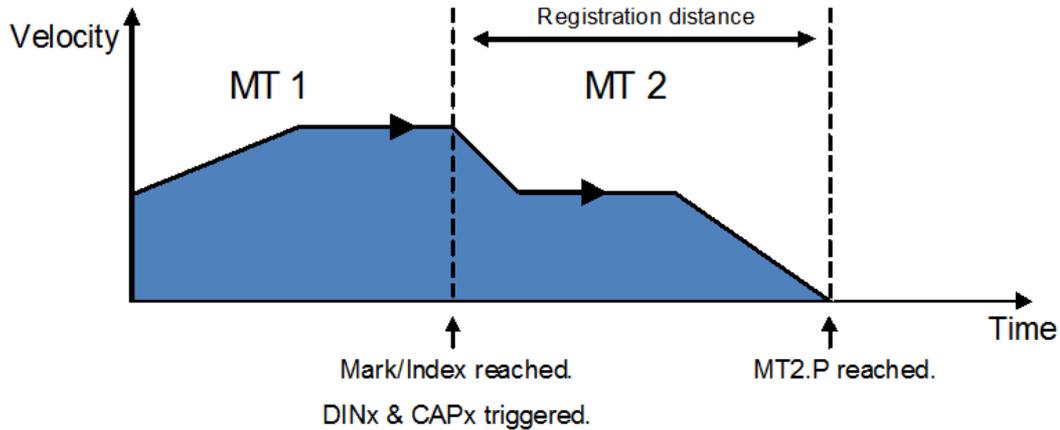

### 15.2.8.1 Configuring Registration Moves in WorkBench

You can configure registration moves from the Motion Task editor:

Following Task
Registration

Constraints: None

[Goto Digital I/O](#)
[Goto Position Capture](#)

DIN Triggering This MT

DIN1 (mode 2)

Position Capture

CAP0 - DIN 1 - Rising Edge

Configure

DINx: ▼

CAPx: ▼ Apply

Box	Description
Constraints	Configures bits 13 and 14 from the MT.CNTL keyword. For registration "none" or "interruptable" should be used. "Non-interruptable" will not function properly. See for information on constraints.
DIN Triggering (read-only)	Displays the list of all digital inputs that are configured to start motion tasks. These are potentially all digital inputs that can trigger this motion task. This field is read-only, indicating current configuration.
Position Capture (read-only)	Displays the list of capture engine that are configured with the proper Capture Mode (4-auto-armed position) in order to execute a registration move. These are potentially all registered position that can be used for this MT.
Configure (write-only)	Configures a digital input and the capture engine to be use as registration source for this MT.

### 15.2.8.2 Configuring Registration Moves from the Terminal View

You can also configure registration moves from the terminal view using drive parameters. To configure a registration move, you must configure three sets of parameters.

<b>DINx</b> MODE = 2 or 4 PARAM = z	<b>CAPy</b> MODE = 4 TRIGGER = x-1	<b>MT ( NUM = z )</b> CNTL = 5* ACC = user def. V = user def. P = user def. ...
---	--	--

\*other options are possible (Bit 13 & 14); see Registration Moves (→ p. 168) and the MT.CNTL (→ p. 1040) parameter description.

- Digital input (DINx) : Configure DINx to mode 2 or 4 so that input x will trigger the registration move.
- Capture (CAPy): Either capture engine 0 or 1 may be used to trigger a registration move. Set CAPy.MODE to 4, where "x" indicates the capture engine to be used. CAPy.TRIGGER must be set to x-1, where x is the DIN used above. All other capture parameters can be set as desired (see capture parameter descriptions).
- Motion tasking (MT): A registration move requires the standard motion task parameters (ACC, DEC, V, P). It also requires that the motion control word be set as follows:
  - 0x0005 - standard registration move (this move can be interrupted and can start regardless of previous velocity)
  - 0x2005 - non-interruptible registration move (move must complete before any other motion task can start)
  - 0x4005 - interruptible registration move but will not start if velocity is 0
  - 0x6005 - non-interruptible registration move that will not start if velocity is 0
 After the motion task is configured MT.SET can be used to complete the setup of the motion task.

### Example

Mark triggers digital input 2.

Capture machine 0 is used.

Motion task 3 is the registration move.

Motion task 3 is only activated if a preceding motion task is active.

Motion task 3 is configured with 1,000 rpm/s<sup>2</sup> acceleration and deceleration , target velocity of 10 rpm and a relative position of 50,000 counts.


Commands:

```
DIN2.MODE 2
DIN2.PARAM 3
CAP0.MODE 4
CAP0.TRIGGER 1
MT.NUM 3
MT.CNTL 16389
MT.P 50000
MT.ACC 1000
MT.DEC 1000
MT.V 10
MT.SET
```

The registration move is now active.

### 15.3 Service Motion

**Service Motion** allows you to set up simple motion (Command Source must be set to Mode 0 - Service). It is typically used during initial set up to exercise the system. It can be used to help troubleshoot the system, execute tuning, make repetitive moves for verification of mechanical set up, or for other general simple motion needs. There are multiple ways to set up motion depending on the desired result in torque, velocity or position modes. In all modes, you can run a momentary pulse, set up reversing motion, or initiate continuous motion.

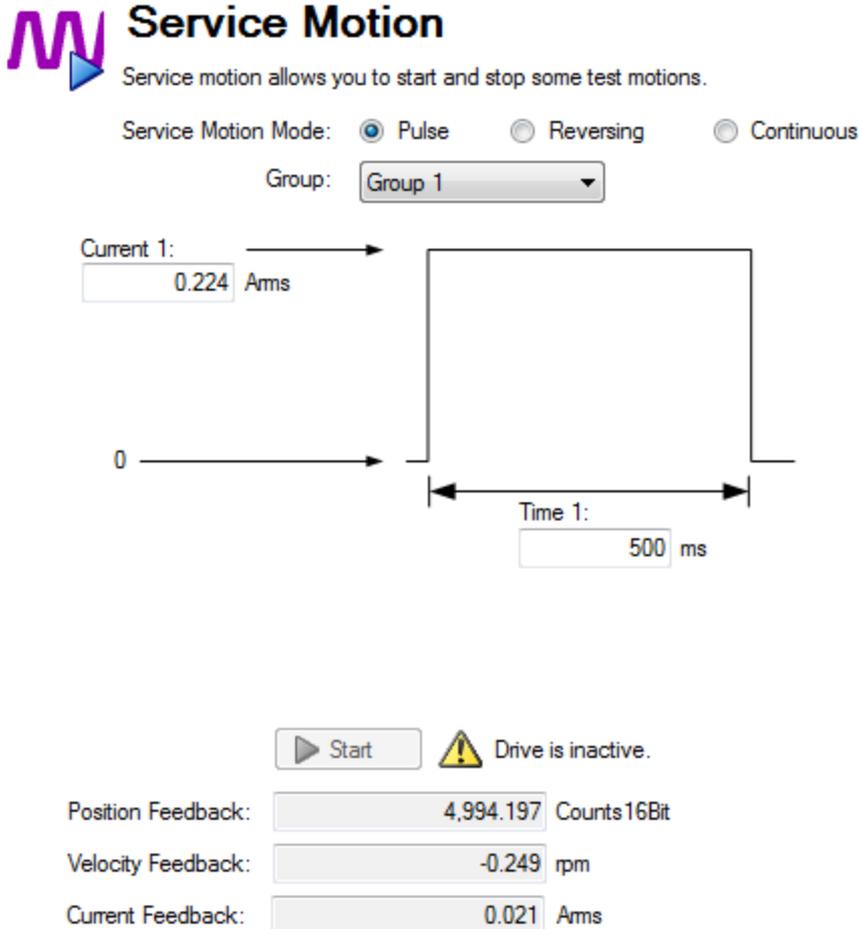

**Service Motion**

Service motion allows you to start and stop some test motions.

Service Motion Mode:  Pulse  Reversing  Continuous

Group:

Current 1:  Ams

0

Time 1:  ms

 Drive is inactive.

Position Feedback:  Counts16Bit

Velocity Feedback:  rpm

Current Feedback:  Ams

The chart below identifies the commands available on the **Service Motion** view:

Button or Dialog Box	Description
Pulse	Alternates between the commanded current or velocity and zero velocity. You can specify the time period between the commanded value and the return to zero. Setting a time to zero will generate a continuous command.
Reversing	Alternates between the two commanded values. You can specify the time the command will be held in each state.
Continuous	Runs the commanded current or velocity continuously.
Group	Selects parameter group to be used with service motion. Group 1 selects parameter group for SM.MODE 0, and group 2 selects parameter group for SM.MODE 2. See SM.MODE (→ p. 1179) for more details.
Current 1/Current 2	Sets the two different currents.

Button or Dialog Box	Description
Time 1/Time 2	Sets the time for which the different commands are generated. Setting a time to zero generates a continuous command.
Start/Stop	Starts and stops the motion.
Position Feedback	Displays the present position of the motor.
Velocity Feedback	Displays the present velocity of the motor.
Current Feedback	Displays the present current of the motor.

The **Drive Motion Status** view indicates when the drive is performing service motion.

## Related Topics

Drive Motion Status (→ p. 183)

## Related Parameters

SM.I1 (→ p. 1177)

SM.I2 (→ p. 1178)

SM.I2 (→ p. 1178)

SM.MOVE (→ p. 1182)

SM.T1 (→ p. 1183)

SM.T2 (→ p. 1184)

SM.V1 (→ p. 1185)

SM.V2 (→ p. 1187)

## 15.4 Motion Profile Table

Motion Profile Tables allow S-Curve and other customer specified velocity profiles. The tables are interpolated to determine the command position each sample during the move. There are two forms of interpolation, OneToOne and Profile Table that are used to create the profile actually used for motion. OneToOne interpolation uses the table for every sample during the motion. Profile Table interpolation uses the table only for acceleration and deceleration with the insertion of a constant velocity section of the move for longer moves.

There are two default tables (Table 0 and Table 1) pre-loaded on AKD drives. Table 0 is an S-Curve profile that has sinusoidal jerk, acceleration, and velocity profiles. This provides very smooth motion and can be used with either OneToOne or Profile Table interpolation. Table 1 is an asymmetric profile that can only be used with OneToOne interpolation. This has the highest acceleration at low speeds and is an example of a customer table that may decrease overall motion times for systems with high torque at low velocity.

You can define acceleration, velocity, position, and jerk for drive motion tasks using the **Motion Profile Table** view shown below:



This is a beta feature. Please note that IL.KACCFF should be set to 0 when using this feature.

 **Motion Profile Table** [Learn more about this topic](#)

Edit the motion table that are stored in the Drive.

**⚠ Beta feature - may change. Caution: IL\_KACCFF should be set to 0 using this feature !**

Tables:

ID	Name	Size	Status

Name:

Position:	Velocity:
Acceleration:	Jerk:

The **Motion Profile Table** view consists of three sections:

- Grid
- Graphical Representation
- Control Buttons

#### 15.4.1 Grid

You can modify motion profile table data using the tables grid on the left side of the view and the Name text box on the right. All profile table data is displayed in the tables grid. This data includes:

- ID: indicates the unique ID number (0 to 7) of the profile table.
- Name: indicates the name of the profile table. By default, a profile table name is 'no\_name'. To edit the profile table name select one of the profile tables from the grid, and then change the profile table name by using the **Name** textbox .
- Size: indicates the total count of the profile table data.
- Status: indicates the current status of the profile table in the grid. Before saving a table into the drive, the status displays "Modified" and after saving the drive, the status displays "Sync". If you change the profile table name, then the status displays "Name Modified".

#### 15.4.2 Graphical Representation

On the right side of the Motion Profile Table view, you can view graphical representations of acceleration, velocity, position, and jerk of the selected profile table. Graphs are plotted based on the given data of the profile table. See the screenshot below for typical graphical representations:



## Motion Profile Table

[Learn more about this topic](#)

Edit the motion table that are stored in the Drive.

**Beta feature - may change. Caution: IL\_KACCFF should be set to 0 using this feature !**

Tables:

ID	Name	Size	Status
0	no_name	1000	Modified

Name:

Position:

Velocity:

Acceleration:

Jerk:

Table data is modified. Click on Save tables to Drive button to save the t...

### 15.4.3 Control Buttons


The control buttons at the bottom of the **Motion Profile Table** view allow you to manipulate motion profile tables and data as follows:

Control Button	Description
Add	Adds new profile tables. A new table has a size of zero when it is added to the grid. You can add a maximum of 8 profile tables, numbered 0 to 7.
Remove	Remove profile tables from the grid (in memory). If a profile table is in use by a motion task and you attempt to delete the profile table using the <b>Remove</b> button, then a caution message appears. The caution message shows the affected profile table ID and an option to either continue or not.
CW/CCW	Moves profile table position either up or down in the grid list. If a profile table is in use by a motion task and you attempt to delete the profile table using the <b>Up</b> or <b>Down</b> buttons, a caution message appears. The caution message shows the affected profile table ID and an option to either continue or not.
Save tables to the Drive	Saves a newly added or modified valid profile table to the drive. The current representation in the grid is saved in the drive.
Reload tables from Drive	Reloads the table from the drive and overrides the table that is currently in memory.
Cancel	Cancel appears only when the reload operation is in progress. Click <b>Cancel</b> to cancel the profile table reloading operation.

Control Button	Description
Clear tables in Drive	Clears all the profile tables present in the drive.
Reset to Default Button	Loads the default table map into the memory. The current default map contains only one profile table (S-curve with 1,000 points).
Import	Imports the data from either preset tables within WorkBench or from an external .csv file. When you click <b>Import</b> , the <b>Import Table Data</b> popup screen appears and allows you to select the table size.
Export	Exports data to a .csv file.

#### 15.4.3.1 Import Table Data

The **Import** button opens the **Import Table Data** screen shown below:

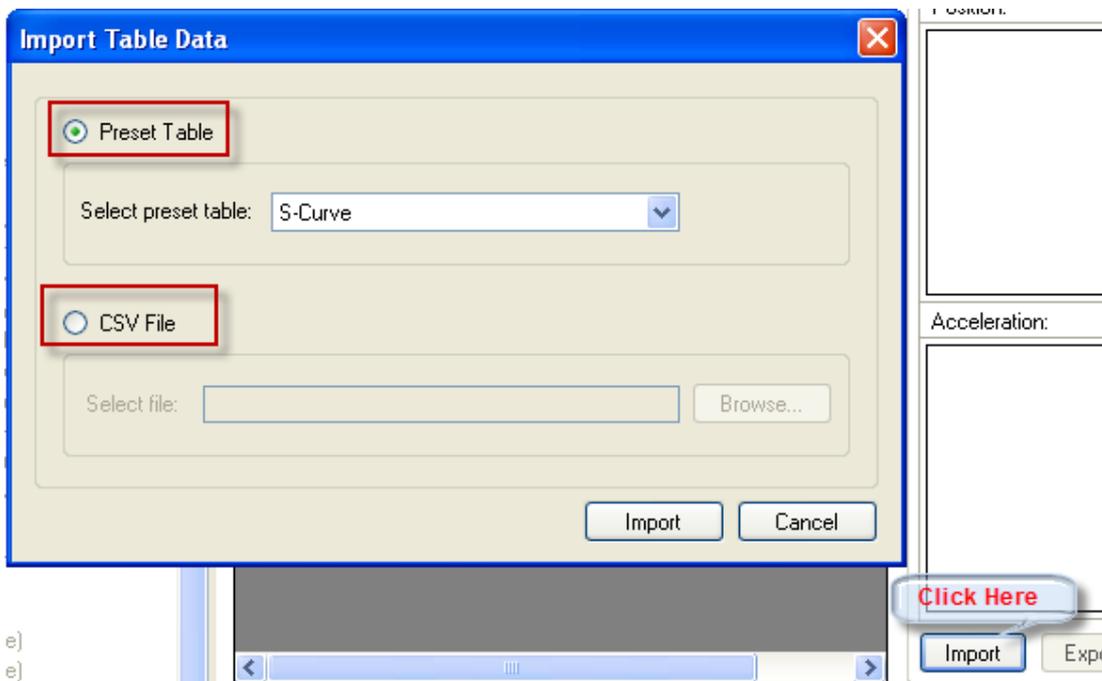


You have two options to provide inputs to the profile table:

- Preset Table
- CSV File

#### 15.4.3.2 Importing data from Preset Table option


By default, the **Preset table** option is selected. You can select one of the preset tables from the **Select Preset Table** box. After selecting the source, click **Import** to complete the import of the data.

After import, the size of the profile table is shown in the grid and you can view the graphical representation of position, velocity, acceleration, and jerk based on the profile table data now loaded into the grid.

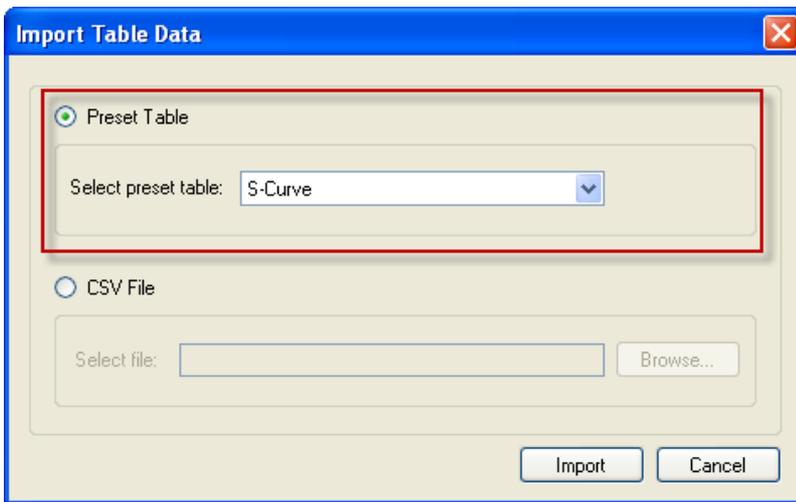

### 15.4.3.3 Importing data from an external CSV file

You also use the **CSV File** option to import the profile table data from an external .csv file. Select the **CSV File** option and then select the valid file using the browse button. After selecting the source file, click **Import** to complete the import of the data. A message indicates successful data import. After import, the size of the profile table is shown in the grid and you can view the graphical representation of position, velocity, acceleration, and jerk based on the profile table data now loaded into the grid.

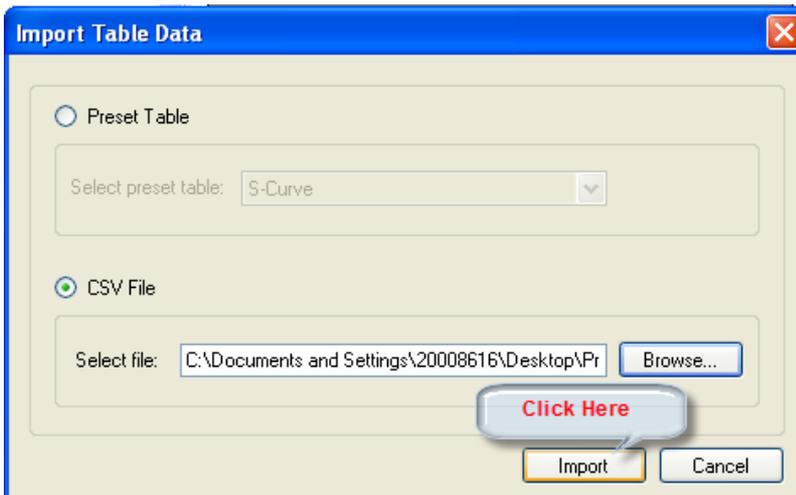

If an invalid source or invalid format is selected, an "Invalid Data Format" message appears.


### 15.4.4 Creating Motion Profile Tables

A motion profile table is a table of unit-less position values, which are the integral of the velocity profile during the acceleration and deceleration process of a motion task. A motion profile can be stored in the drive and used in order to accelerate and decelerate with a certain profile shape.


The motion profile table describes the shape of the acceleration process, but does not determine how fast the motion task accelerates or decelerates and which target velocity will be reached.

#### 15.4.4.1 Example of a motion profile table

An example of a motion profile table is shown below:

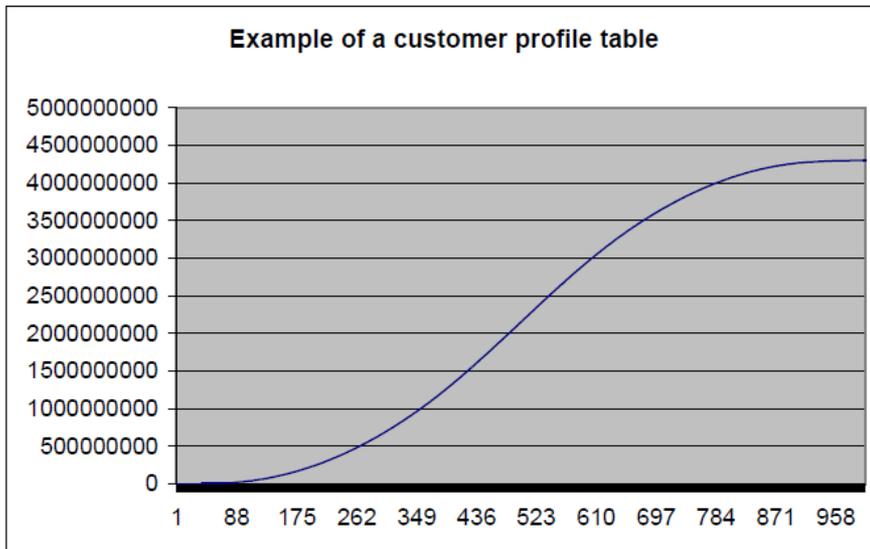

The motion profile table is the integral of the velocity profile. The velocity profile during the acceleration and the deceleration process is shown below:

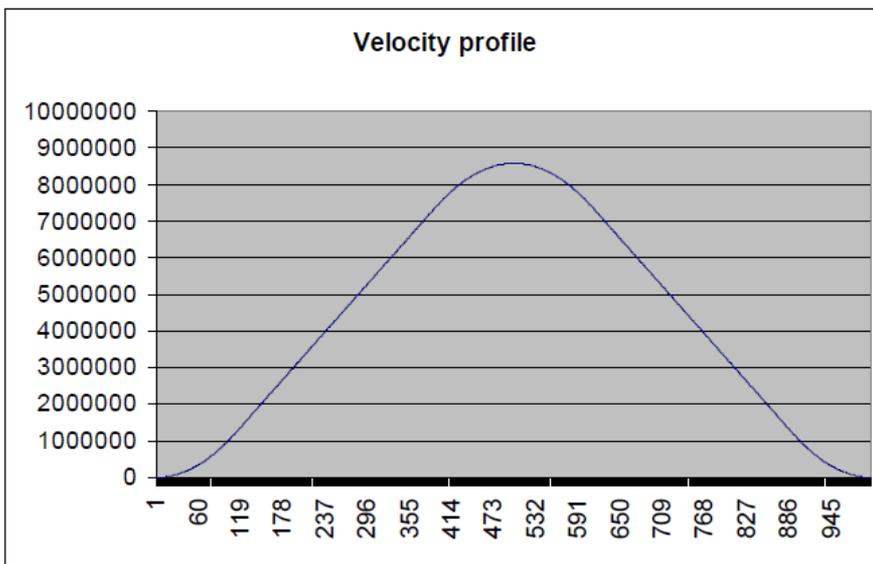

The derivative of the motion profile table is calculated using the following formula:  

$$\text{velocity\_profile\_value}_n = \text{customer\_profile\_entry}_{n+1} - \text{customer\_profile\_entry}_n$$

#### 15.4.4.2 Motion Profile Table Restrictions

Restrictions for motion profile tables include the following:

1. A motion profile table needs a reasonable number of entries (usually between 1,000-4,000 entries, depending on the acceleration and deceleration time of a motion task). If an acceleration or deceleration process takes more position-loop samples than half of the motion profile table entries, then the drive interpolates linearly between the single motion profile table entries.
2. The motion profile table should contain an even number of entries. The first point of the customer table starts with the value of 0 and the last point must contain the value of  $2^{32}-1$ .
3. The motion profile table contains values in ascending order.
4. The following motion profile table entry must contain the value of nearly  $2^{31}$ .


$$\text{table\_entry} = \frac{\text{number\_of\_table\_points}}{2} + 1$$

**Example**

Assume that a motion profile table contains 1,000 data points. In this case point  $1000/2+1 = 501$  must contain the value of  $2^{31} = 2,147,483,648$ .

5. A motion profile table must also be symmetric during the acceleration and the deceleration process when Profile Table interpolation is used.

To illustrate profile symmetry, the derivative of the motion profile table (velocity profile) is shown below. Note the symmetry according to the velocity profile.

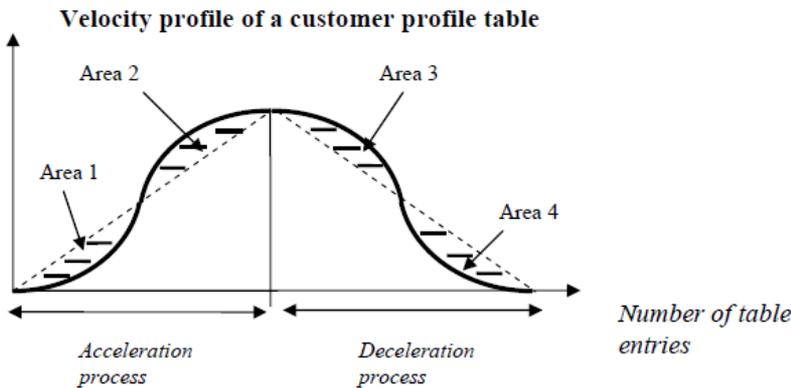


The left half of the curve describes the shape of the acceleration process of the motion task. The right half of the curve describes the shape of the deceleration process of the motion task. A symmetric motion profile table means that Area 1, Area 2, Area 3 and Area 4 have the same size.

**15.4.4.3 Different methods of motion table motion tasking**

**General motion profile table explanations**

The algorithm for handling the motion profile motion task are the same for both methods, the standard customer table motion task and the OneToOne customer table motion task. The diagram below illustrates a basic table profile algorithm. The figure shows a standard customer table motion task.

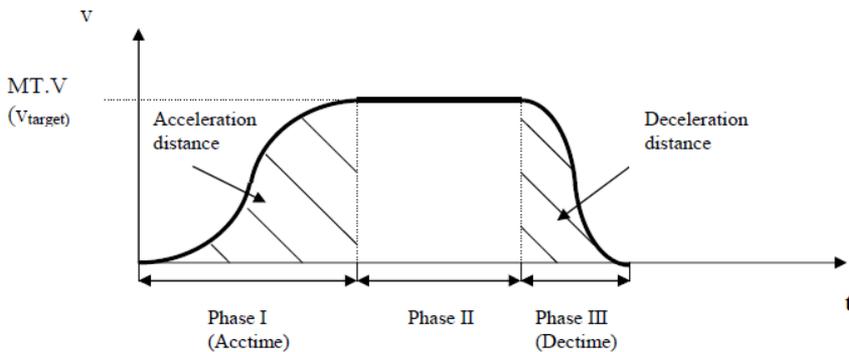

The drive calculates the acceleration time and deceleration time out of the given motion task parameters (see MT Parameters and Commands (→ p. 1035)) with the assumption of a trapezoidal acceleration setting (MT.ACC (→ p. 1036) and MT.DEC (→ p. 1045)). The formulas are:

$$Acctime = \frac{MT.V}{MT.ACC} ; Dectime = \frac{MT.V}{MT.DEC}$$

**15.4.4.4 Use of IL.KACCFF with Motion Tables**


IL.KACCFF can be used with Profile Table or OneToOne interpolation motion tasks as long as the following criteria is met:

$(Acctime + Dectime) < (number\_of\_table\_points/4000)$

If this criteria is not met, a current spikes at 4KHz will occur.

#### 15.4.4.5 Profile Table Interpolation Motion Task

The Profile Table interpolation motion task is displayed in the following figure:

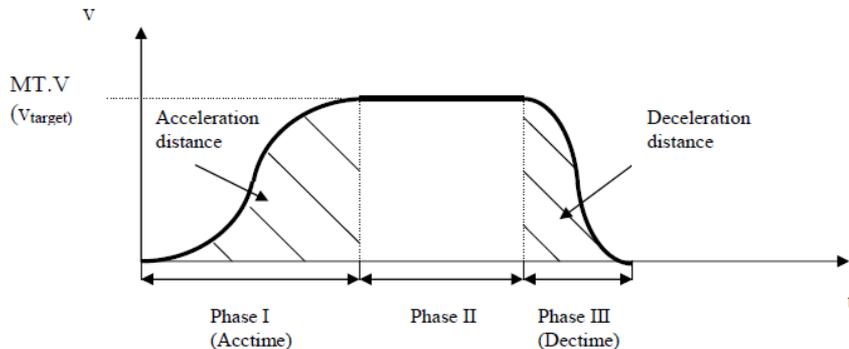


The Profile Table interpolation for a stand-alone motion task (the motion task does not automatically trigger a following motion task) can be separated in three different phases:

1. Phase I: The drive steps within a pre-calculated acceleration time through the first half of the motion profile table and reaches finally the requested target velocity of the motion task.
2. Phase II: The drive inserts a constant velocity phase and checks continuously if a brake-point has been crossed. The brake-point is naturally the target position minus the deceleration distance.
3. Phase III: The drive steps into the second half of the motion profile table and reaches finally the requested target position when the velocity becomes zero. The step into the second half of the motion profile table is a critical point and requires a symmetric table and the value of  $231$  at entry number\_of\_table\_points / 2 + 1 as explained in 15.4.4.2 Motion Profile Table Restrictions for a customer table.

#### 15.4.4.6 OneToOne interpolation motion task

The OneToOne interpolation motion task is basically very similar to the Profile Table interpolation motion task handling with just a few small differences.

1. The OneToOne customer table motion task does not step out of the table after an acceleration process and inserts a constant profile (Phase II in the section above). The OneToOne handling steps within a pre-calculated time through the whole table in one go and cover the required distance.
2. A change-on-the-fly from one motion task to another without finishing the first motion task is not possible for this mode.
3. The OneToOne profile does not use different acceleration and deceleration values. The AKD calculates the sum of the acceleration time and deceleration time and uses this total time ( $total\tau = MT.V/DRV.ACC + MT.V/MT.DEC$ ) for the motion task as explained in the following picture. In case that the acceleration + deceleration time is too small for moving a certain distance, which would lead into a too large peak-velocity, the total time will automatically be extended to the required value in order to not exceed the maximum allowed velocity to the minimum of  $MT.V$  or  $VL.LIMITP$  and  $VL.LIMITN$ .

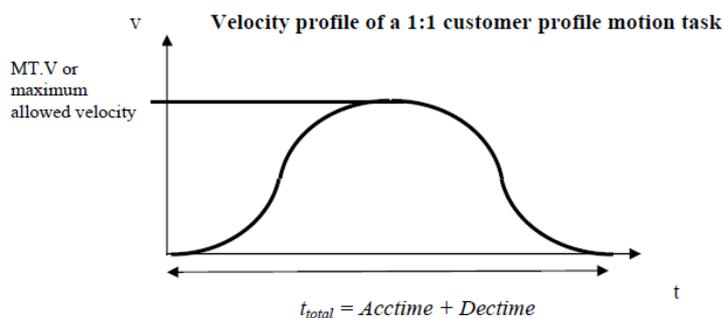

Note that the motion task target velocity is only reached in case of a symmetric table. The velocity will be different when the profile table is non-symmetric.

#### 15.4.4.7 Setting up a motion profile motion task

It is recommended that motion tasks be set up via the WorkBench software. The S-curve profile or the OneToOne profile may be selected via a drop-down menu.

It is also possible to select to adjust a motion task on a command line level with the help of the MT commands. There are 2 commands which are mentioned within this chapter:

- Trapezoidal, OneToOne, or Profile Table moves are selected using bits 10 and 11 of the MT.CNTL (→ p. 1040) command.
- The MT.TNUM (→ p. 1068) selects which of the 8 tables (0 to 7) to use for the profile. The parameter MT.TNUM will be ignored in the case that a trapezoidal motion task has been selected.

#### 15.4.4.8 Drive reaction on impossible motion tasks

For all motion tasks, which use a motion profile table as the shape for the velocity profile, the motion task properties must be pre-calculated and it must be evaluated in advance, if a motion task can be handled without any problems or if some of the motion task parameters must be re-calculated automatically by the AKD.

An impossible motion task occurs when the user has not specified enough movement in order to accelerate to the motion task target velocity and to decelerate to velocity 0 without exceeding the distance to travel.

##### OneToOne interpolation limitations

A OneToOne interpolation motion task cannot be activated while another motion-task is running. A OneToOne interpolation motion task must start from velocity 0.

When using a OneToOne interpolation motion task the AKD pre-calculates the expected peak-velocity and checks if the velocity exceeds the minimum of the MT.V (→ p. 1074), VL.LIMITP (→ p. 1290) and VL.LIMITN (→ p. 1288).

The expected peak-velocity according to the figure above can be calculated via using the following formula:

$$v_{PeakExpected} = \frac{2 \cdot \text{Distance\_to\_travel}}{t_{total}}$$

The 'distance to travel' is defined in the motion task settings MT.P (→ p. 1061) and MT.CNTL (→ p. 1040). In case that  $v_{PeakExpected}$  exceeds the minimum of the MT.V, VL.LIMITP or VL.LIMITN setting, the AKD re-calculates the total so that  $v_{PeakExpected}$  does not exceed the velocity limitations.


The AKD accelerates and decelerates within the same time in case of a OneToOne profile and therefore different settings for MT.ACC (→ p. 1036) and MT.DEC (→ p. 1045) are not considered.

#### 15.4.4.9 Profile Table interpolation limitations

##### Starting from velocity 0 without change-on-the-fly to a following motion task

If there is not enough 'distance to travel' selected by the user in order to accelerate to the target velocity via the selected acceleration (internally converted to acceleration time) and deceleration (internally converted to deceleration time), the AKD lowers the target velocity automatically to  $V_{TargetLimited}$  and accelerates within the selected acceleration time to the limited target velocity and decelerates afterward with the selected deceleration time to velocity 0.

The shape of the velocity profile will look like the following pictures with the assumption, that  $MT.ACC$  and  $MT.DEC$  have different values.

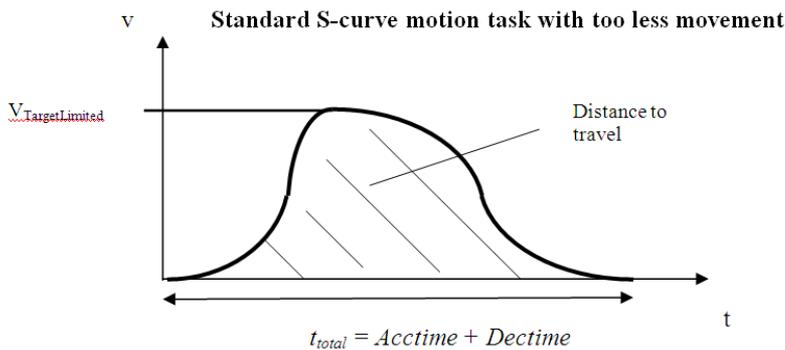

### During a change on the fly condition


There are 2 different kinds of considerations within the AKD firmware for a change-on-the-fly condition.

- A change on the fly in the same direction (the target velocity of the previous and the following motion task have the same algebraic sign).
- A change on the fly in the opposite direction (the target velocity of the previous and the following motion task have a different algebraic sign).


Since the shape of a customer table is unknown to the AKD, the drive verifies in advance the validity of the motion task with the assumption of a symmetric motion profile table.

### Movement to the same direction

The following figure displays a movement in the same direction, in this case in a positive direction.


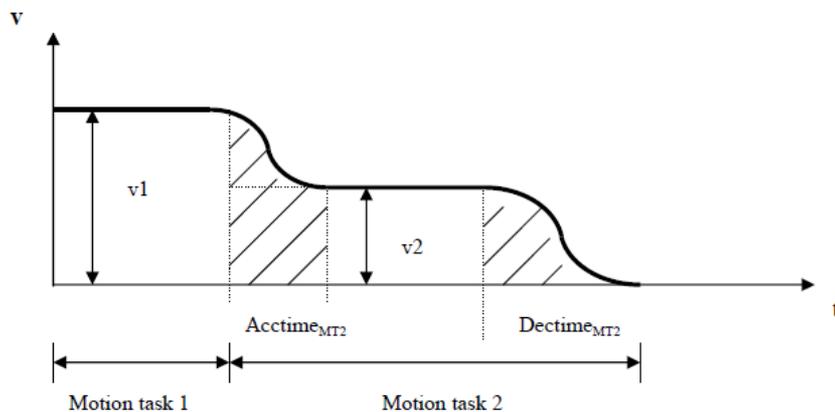


In case that the distance to the target position of the motion task 2 is smaller than  $distmin$ , the AKD generates a profile as shown in the next figure.

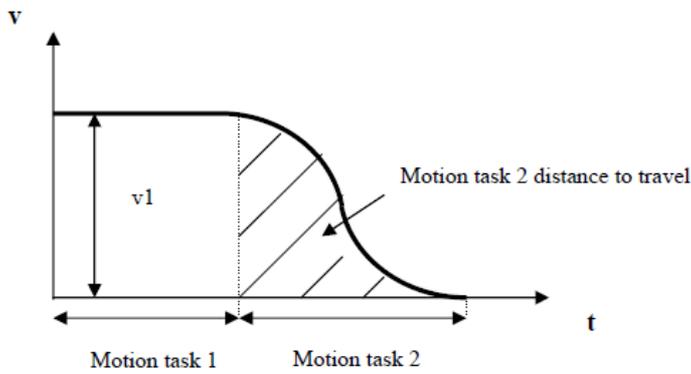

**Movement in different directions**

The switch on the fly from a positive velocity to a negative velocity is described in the next figure.

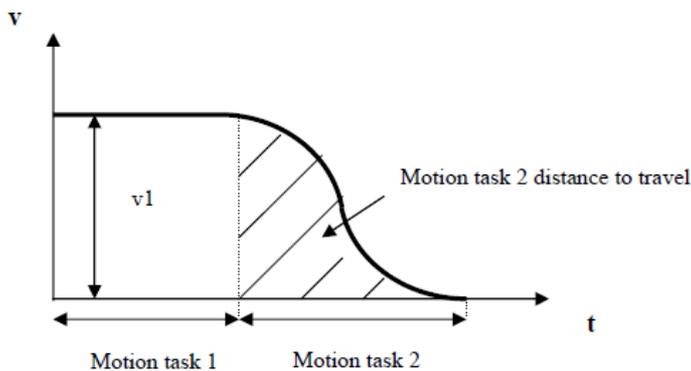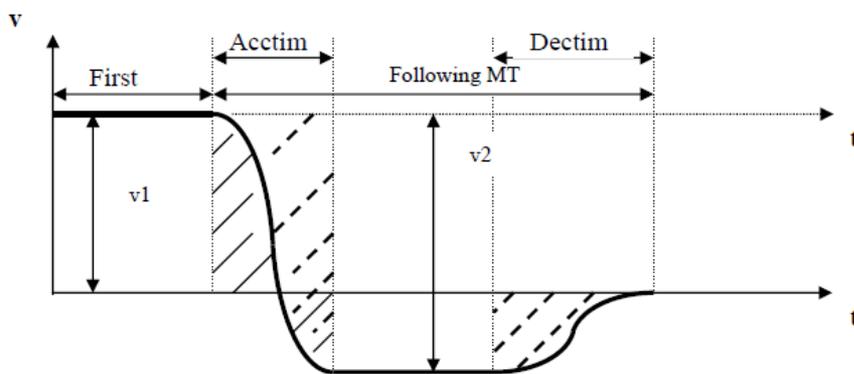

It is not possible to pre-calculate exactly the area, which is marked with solid lines of the following motion task since the shape of the motion profile table is unknown to the drive. This means that it is not possible to identify the movement in positive and negative direction during a change on the fly from  $v_1$  to  $v_2$ . A criterion that a change on the fly will be executed by the drive is, if the total movement in negative direction of the following MT is larger than the area, which is marked with dashed lines. In this case it is ensured, that there will be definitely enough total movement of the MT in negative direction, because the motor moves during the acceleration from  $v_1$  to  $v_2$  also a bit in positive direction. The magnitude of  $v_2$  is in this case the 'target velocity of MT1' + 'target velocity of MT2.'

The drive behaves as follows in case that the hatched area is smaller than the distance to travel negative direction:

1. The drive stops the first motion task with the assigned deceleration ramp.
2. Afterwards the following motion task is triggered automatically by the drive starting from velocity 0.

## 15.5 Jog Move

This screen verifies that the servo system is able to command motion. Verify the settings for velocity, acceleration, and deceleration. Adjust these settings if necessary. Click **Jog** and continuous motion will occur until you click **Stop**. If motion does not occur, check for warnings, faults, or prompts from WorkBench.

If erratic motion and or vibration occur when motion is commanded, open the wizard **Tuning** screen and reduce the desired bandwidth significantly. If erratic motion continues, exit the **Setup Wizard** and use the **Performance Servo Tuner** and **Service Motion** screens in the settings tree for more advanced setup of the servo system.

### NOTE

In order to tune the system the drive must be in service-type command source and either velocity or position opmode. If the drive is in torque opmode, then a popup screen will allow you to switch into velocity mode.

## 15.6 Drive Motion Status

**Drive Motion Status** allows you to view the current status of the drive internal motion. An LED indicates the status of various possible motion states (as read by the DRV.MOTIONSTAT (→ p. 672) parameter). The **Drive Motion Status** box displays the DRV.MOTIONSTAT (→ p. 672) output in hexadecimal form. The boxes below **Drive Motion Status** indicate the drive state. When drive motion is activated, a green LED is shown. When error occurs, a red LED is shown as indicated below:



## Drive Motion Status

This page indicates the current status of the drive internal motion.

Drive Motion Status:

### Motion Active Mode

- Homing
- Service Motion
- Motion Task
- Electronic Gearing

### Emergency Stop

- Procedure in progress
- Error has occurred

### Home

- Position found
- Routine finished
- Error has occurred

### Motion Task

- Target velocity reached
- Target position reached
- Unable to start/Invalid MT
- Target position crossed when stopping

### Electronic Gearing

- Slave is synchronized

## Related Topics

Service Motion (→ p. 171) | Motion Tasks (→ p. 162) | Emergency Stop (→ p. 135) | DRV.MOTIONSTAT (→ p. 672)


## 16 Saving Your Drive Configuration

---

<b>16.1 Save Options</b> .....	<b>186</b>
<b>16.2 Save On Exit</b> .....	<b>187</b>
<b>16.3 Save On Disconnect</b> .....	<b>187</b>
<b>16.4 Save On Firmware Download</b> .....	<b>188</b>
<b>16.5 TwinCAT Startup File</b> .....	<b>188</b>

## 16.1 Save Options

WorkBench offers several options for saving your drive configuration. From the WorkBench menu, if you select **Tools** and then **Options**, the following window appears:

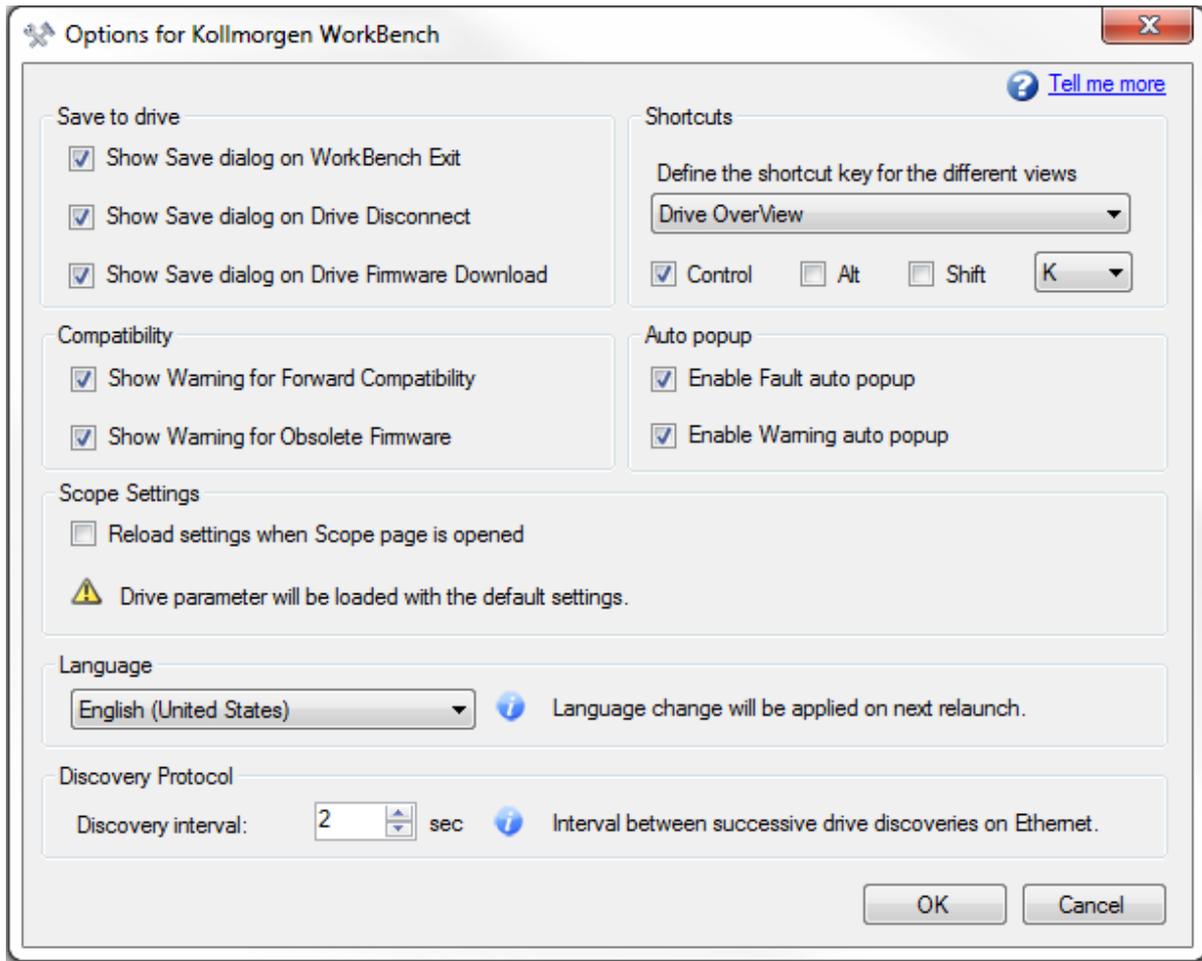


The **Save** options are applied as follows:

Button or Dialog Box	Description
Show Save dialog on WorkBench exit	If this box is checked, then every time you exit WorkBench a dialog will ask you if you wish to save the drive parameters to nonvolatile memory. If this box is not checked, the dialog will not be shown.
Show Save dialog on Drive Disconnect	If this box is checked, then every time you disconnect from a drive a dialog will ask you if you wish to save the drive's parameters to nonvolatile memory. If this box is not checked the dialog will not be shown.
Show Save dialog on Drive Firmware Download	If this box is checked and any parameter is changed, then every time you download a firmware to a drive, a dialog will ask you if you wish to save the drive's parameters to nonvolatile memory. If this box is not checked, the dialog will not be shown.

When the **Scope Settings** box is checked the default drive settings will be overwritten with selected Scope setting parameters each time the Scope page is opened. Otherwise, the drive will with default drive settings. WorkBench is available in German and English. After making a selection from the **Language** drop down menu, click OK, and exit WorkBench. The next time WorkBench is started it will load with the selected language.

## 16.2 Save On Exit

When you exit WorkBench while connected to a drive, the following dialog box appears:

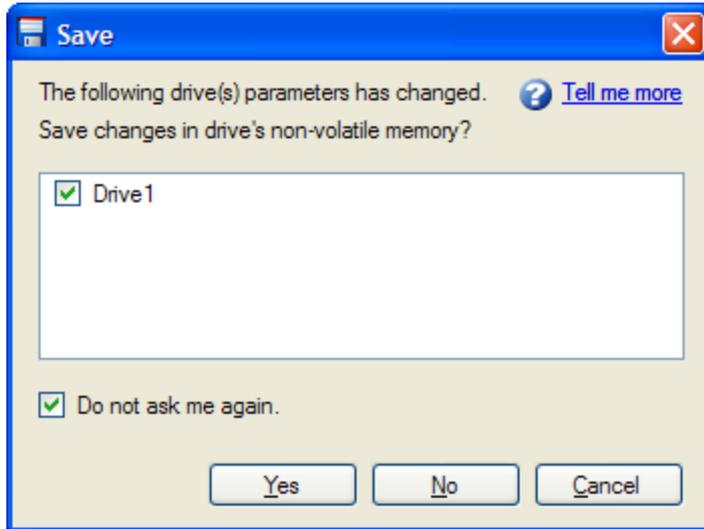


As you are working with a drive, all the changes you make are stored in the volatile memory within the drive. If you power cycle the drive or loose power to the drive then any changes you have made to the drive would be lost. You can save the drive parameters to nonvolatile memory at any time and these saved parameters will be restored when the drive next powers up.

While you are connected to the drive, WorkBench monitors all the changes you make to the drives parameters. An asterisk in the navigation tree shows if a parameter has been changed. If you do not change any drive parameters, this dialog will not be shown.

Button or Dialog Box	Description
Yes	Saves the parameters to the nonvolatile memory within the selected drives and then exits WorkBench.
No	WorkBench will exit. No drive parameters will not be saved to nonvolatile memory.
Cancel	This will stop the exit command and WorkBench will remain open.
Do not ask me again	If you check this WorkBench will not show this dialog again. There is an option in the Options dialogue to restore this setting.

## 16.3 Save On Disconnect

When you disconnect from the drive, you may see this dialog box:

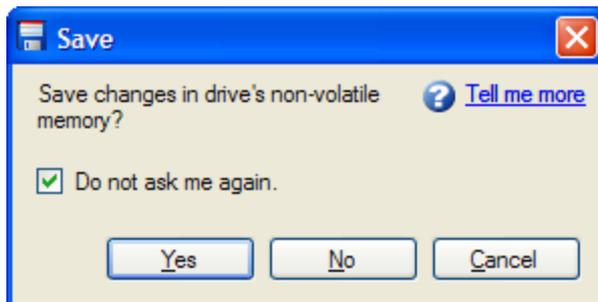


As you work with a drive, all the changes you make are stored in the volatile memory within the drive. If you restart the drive or lose power to the drive, then any changes you made to the drive would be lost. You can save the drive parameters to nonvolatile memory at any time, and these saved parameters will be restored when the drive next powers up.

While you are connected to the drive, WorkBench monitors all the changes you make to the drive parameters. An asterisk in the navigation tree shows if a parameter has been changed. If you do not change any drive parameters, this dialog box will not be shown.

Button or Dialog Box	Description
Yes	Saves the parameters to the nonvolatile memory within the drive and then finish disconnecting.
No	Disconnects the drive. The drive parameters are not saved to nonvolatile memory.
Cancel	Stops the disconnect command. You remain connected to the drive.
Do not ask me again	Does not display this dialog box again. If you check this box, WorkBench does not show this dialog again. The <b>Options</b> dialog includes a command to restore this setting.

## 16.4 Save On Firmware Download

When you download firmware to the drive, you may see this dialog box:

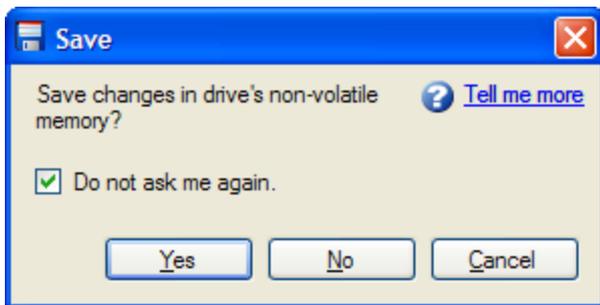

As you work with a drive, all the changes you make are stored in the volatile memory within the drive. If you restart the drive or lose power to the drive, then any changes you made to the drive are lost. To save these changes, you can save the drive parameters to nonvolatile memory at any time. If you save the changes to the nonvolatile memory, these saved changes will be restored when the drive next powers up.

While you are connected to the drive, WorkBench monitors all of the changes that you make to the drive parameters. An asterisk in the navigation tree indicates that a parameter has been changed. If you do not change any drive parameters, this dialog box will not be shown.

Button or Dialog Box	Description
Yes	Saves the parameters to the nonvolatile memory within the drive and then opens dialog box for the user to select the firmware file for downloading.
No	The drive parameters are not saved to nonvolatile memory. It opens dialog box for the user to select the firmware file for downloading.
Cancel	Stops the download command.
Do not ask me again	Does not display this dialog box again. If you check this box, WorkBench does not show this dialog again. The Options dialog includes a command to restore this setting.

## 16.5 TwinCAT Startup File


Generating a TwinCAT startup file stores the existing parameter configuration of a drive into xml format. This startup file can be used in applications which require specific static configuration written by a master in the initialization phase of the system.

### NOTE


Only parameters that are stored in non volatile memory are written. These parameters can be checked using the DRV.NVLIST (→ p. 677) command.

### 16.5.1 Generating File

To generate a TwinCAT startup file, select Tools from the WorkBench tool bar. Find the drive with the configuration you want to save, and select Export To File -> TwinCAT startup.

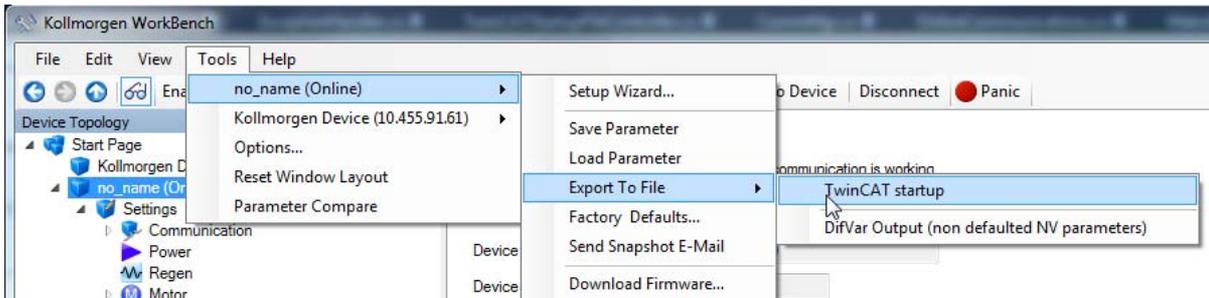

This will load the TwinCAT startup view which can be used to configure the conditions of the generated file:

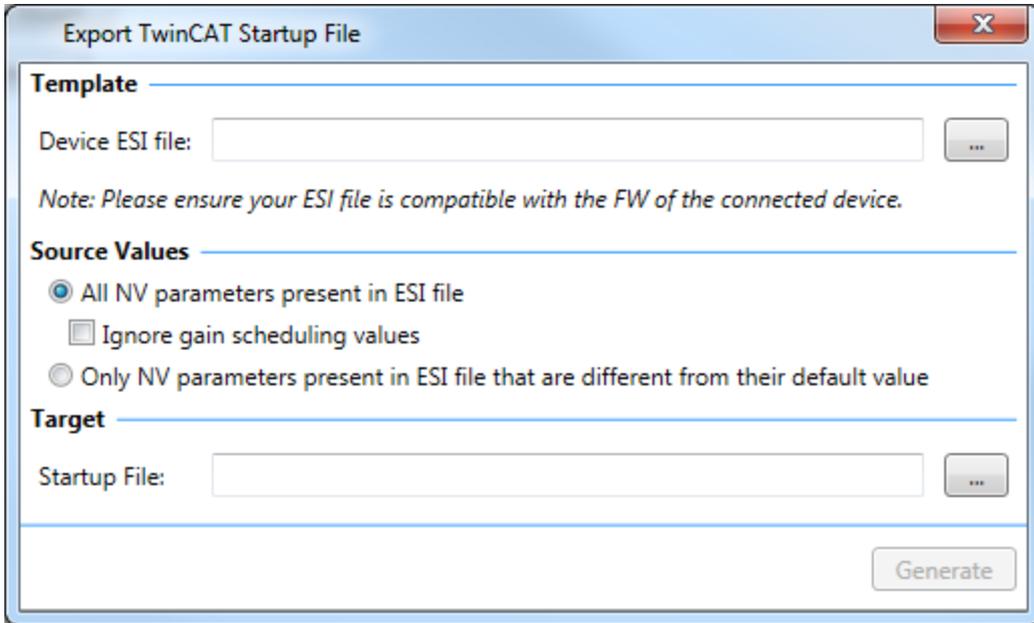

### 16.5.2 Integration in TwinCAT

Using the Startup tab in TwinCAT, right-click on the window and select Import from Xml... and select the generated file.

Transition	Protocol	Index	Data	Comment
<PS>	CoE	0x1C12:00	0x00 (0)	clear sm pdos (0x1C12)
<PS>	CoE	0x1C13:00	0x00 (0)	clear sm pdos (0x1C13)
<PS>	CoE	0x1C12:01	0x1701 (5889)	download pdo 0x1C12:01 i...
<PS>	CoE	0x1C12:00	0x01 (1)	download pdo 0x1C12 count
<PS>	CoE	0x1C13:01	0x1B01 (6913)	download pdo 0x1C13:01 i...
<PS>	CoE	0x1C13:00	0x01 (1)	download pdo 0x1C13 count
PS	CoE	0x36E9:00	0x00000010 (16)	FBUS.PARAM05
PS	CoE	0x204C:01	0x000000CD (205)	pv Scaling Factor Numerator
PS	CoE	0x204C:02	0x000000CC (204)	pv Scaling Factor Denomi...
PS	CoE	0x6091:01	0x00000001 (1)	Motor revolutions
PS	CoE	0x6091:02	0x00000001 (1)	Shaft revolutions
PS	CoE	0x6092:01	0x000000C8 (200)	Feed
PS	CoE	0x6092:02	0x00000001 (1)	Shaft Revolutions
PS	CoE	0x353B:00	0xFFFFFFFF (-1)	FB1.SELECT
PS	CoE	0x3451:00	0x01 (1)	MOTOR.AUTOSET
PS	CoE	0x3659:00	0x00000000 (0)	UNIT.ACCROTARY
PS	CoE	0x35CA:00	0x00001388 (5000)	UNIT.PIN
PS	CoE	0x35CB:00	0x00000001 (1)	UNIT.POUT
PS	CoE	0x3660:00	0x00000003 (3)	UNIT.PROTARY
PS	CoE	0x365F:00	0x00000000 (0)	UNIT.VROTARY
PS	CoE	0x3472:00	0x00000000 (0)	AIN.PSCALE
PS	CoE	0x3629:00	0x0000003C (60)	AIN.VSCALE
PS	CoE	0x3470:06	0x00000000 (0)	AOUT.CUTOFF
PS	CoE	0x3470:01	0x00 (0)	AOUT.MODE
PS	CoE	0x3471:00	0x00000000 (0)	AOUT.PSCALE
PS	CoE	0x3470:05	0x0000003C (60)	AOUT.VSCALE
PS	CoE	0x3460:05	0x00 (0)	CAP0.EVENT
PS	CoE	0x3460:03	0x00 (0)	CAP0.MODE
PS	CoE	0x3460:07	0x01 (1)	CAP0.PREEDGE
PS	CoE	0x3460:09	0x00 (0)	CAP0.PRESELECT
PS	CoE	0x3460:01	0x00 (0)	CAP0.TRIGGER
PS	CoE	0x3460:06	0x00 (0)	CAP1.EVENT
PS	CoE	0x3460:04	0x00 (0)	CAP1.MODE
PS	CoE	0x3460:08	0x01 (1)	CAP1.PREEDGE
PS	CoE	0x3460:0A	0x00 (0)	CAP1.PRESELECT
PS	CoE	0x3460:02	0x00 (0)	CAP1.TRIGGER

## 17 Tuning Your System

---

<b>17.1 Introduction .....</b>	<b>192</b>
<b>17.2 Slider Tuning .....</b>	<b>192</b>
<b>17.3 Using the Performance Servo Tuner .....</b>	<b>193</b>
<b>17.4 Tuning Guide .....</b>	<b>220</b>

## 17.1 Introduction

Most servo systems require some level of tuning (setting up the desired response of the system usually with the load attached). This can be done through several methods available within WorkBench.



**Slider Tuning** - Slider tuning offers a very simplistic approach to tuning and can get you underway quickly. With this method, just the proportional and integral gains are adjusted based on the desired bandwidth you wish to achieve. You can take into account your load inertia if it is known. None of the Bi-quad filters are impacted by the slider tuning.



**Performance Servo Tuner** - This is an easy way to get a more sophisticated tuning accomplished. The details of how the PST works are included in the advanced section of this subject. However, the PST approach is a simple one-button solution that lets the system configure all of the tuning parameters for you. The PST is a robust solution to get your system tuned and ready to operate in a wide variety of mechanical configurations and loads.

**Manual Tuning** - Certain applications may require manual tuning where you set the gains and filters based on the specific performance you are looking for. You may also need to "tweak" the tuning that was set up in either the slider or the PST section to optimize your application performance.

## 17.2 Slider Tuning

This view allows you to vary the tuning of your drive using the slider.



### Slider Tuning

[? Learn more about this topic](#)

Select the stiffness you would like.

Do you know your load inertia?

Load inertia:  kgcm<sup>2</sup>

Select desired bandwidth

For very heavily loaded systems.

Default. For heavily loaded or softly coupled systems.

For unloaded and lightly loaded systems.

Bandwidth:  Adjust the slider to your desired stiffness

1  300

### 17.2.1 Load Inertia

If you know your load inertia (LOAD.INERTIA (→ p. 948)), enter it in kgcm<sup>2</sup> for rotary motors, and kg for linear motors. If no load inertia is entered, WorkBench will assume a 1:1 ratio between your load inertia and motor inertia.

### 17.2.2 Gentle, Medium, and Stiff

These buttons select three of the most common bandwidths:

- Gentle works in all but the most challenging situations.
- Medium is the default and works in most situations.
- Stiff works for unloaded motors.

### 17.2.3 The Slider

As you drag the slider to the right, the stiffness increases. In many situations, you cannot drag the slider fully to the right side because the system will become unstable.

## 17.3 Using the Performance Servo Tuner

### 17.3.0.1 Overview

The Performance Servo Tuner (PST) tunes your system quickly and easily. The advanced technology in the PST achieves high performance and stability for both simple and complicated loads. It also collects frequency response data (bode plot) that can be used for advanced analysis. The PST can work in a “one button” mode that requires no customization. Settings can be also changed for an array of system requirements (Using the Performance Servo Tuner: Advanced (→ p. 196)).

#### NOTE

The PST will **not** work reliably on a vertical axis, since the motor may rest against an end stop. In this case, the inertia will not always be correctly identified.

The default PST settings tune systems quickly for good servo performance. If your tuning is not acceptable after running PST, try adjusting the following settings.


- The most common unacceptable tuning result is that the servo bandwidth is too high (very stiff and audibly noisy). To avoid this, try setting the gain margin to 16db and the phase margin to 55deg. This will result in a lower bandwidth and therefore less audible noise. It may also be softer on the system mechanics, but still offer exceptional performance. Use the motion scope to check settling times and overshoots on a typical move to measure performance.
- The PST collects data on the system as it runs. It is important for the PST to collect a robust data set. Try increasing FFT points to 16,384 and number of points to 250,000. This increases the data collection accuracy at low frequency excitations, which can improve the resulting tuning performance. Increasing FFT points and number of points also increases the data collection time. Timing requirements depend on the processing power of the PC running AKD Workbench. If the tuning is not complete after an extreme period of time, cancel the tuning and reduce the points. If possible, try running on a more powerful PC.

Look through the advanced tuning section for more information. Complex systems may require more adjustment.


### 17.3.0.2 Using the PST

The PST defaults to a “one button” mode, in which the PST is completely automatic after pushing the start button. In the **Settings** select your desired operation mode, navigate to the **Performance Servo Tuner** view, and then tune your system as follows:

1. Select whether you would like the drive to be tuned in **1-Velocity** or **2-Position** Mode. If the drive is in torque mode, the PST will tune in position mode by default. This is set by using the tool bar and changing the mode to either velocity or position. The drive must be disabled in order to change the operation mode.
2. Click **Start**.

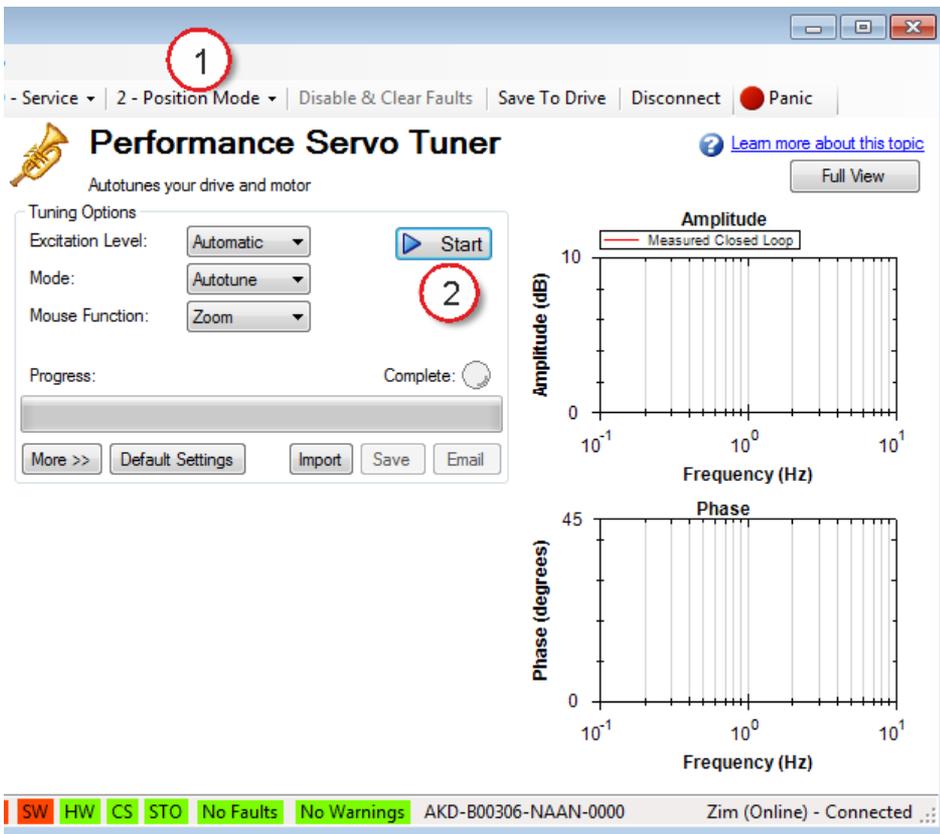


The PST will then perform several tests and display results as shown below. The progress bar (1) shows the relative progress of the PST, so you can estimate when the tuning will be finished. When the tuning is complete, the green **Complete** LED (2) illuminates, and a Bode plot (3) is displayed showing the frequency response of the tuned system.

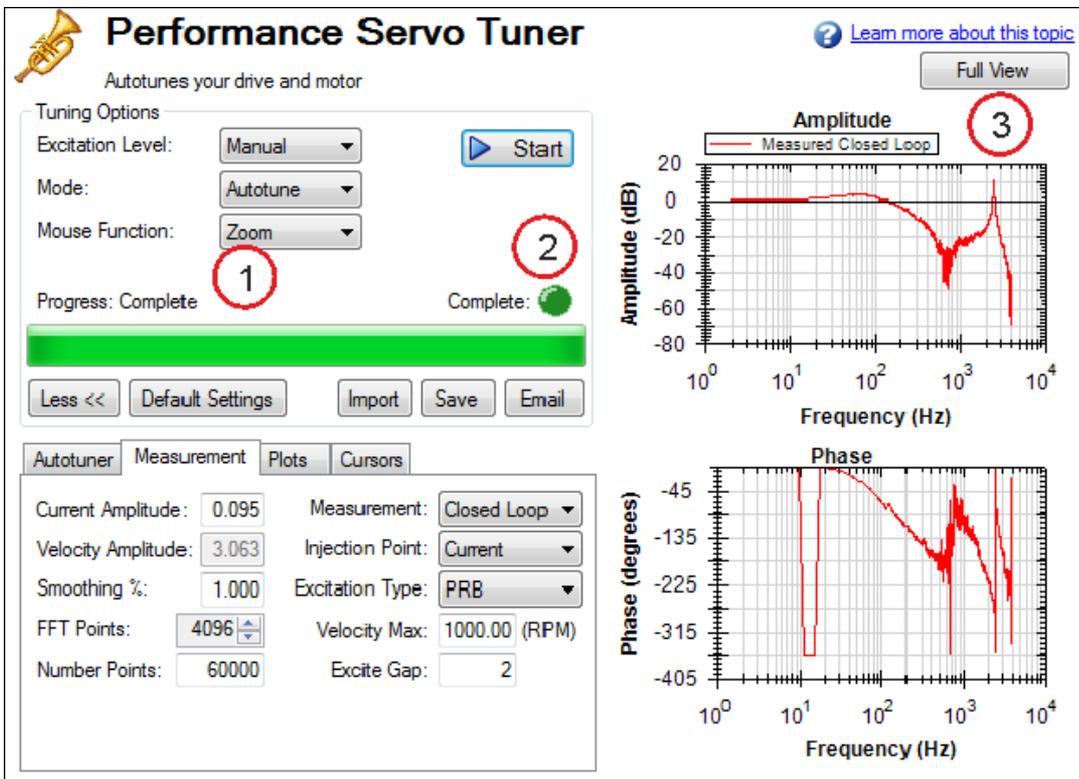


### Saving and Emailing Bode Plots


To save screenshots and raw data of a Bode plot, click on either **Save** (1), or **Email** (2).

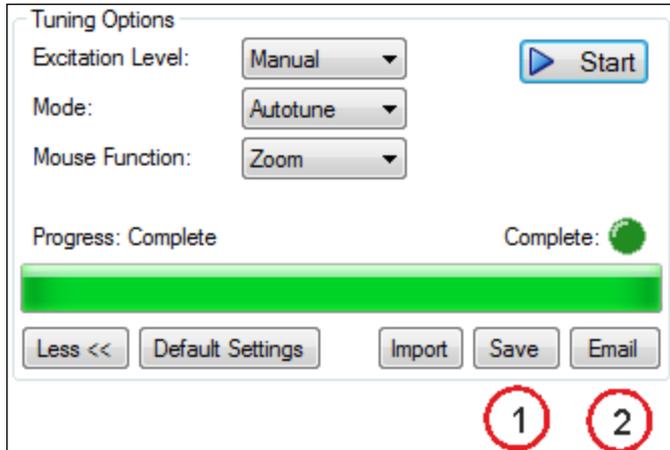

Clicking **Save** opens a prompt to select how to save the screenshot or data. Selecting BMP, JPG, PNG, EMF, or WMF saves the Bode plot as an image. Choosing CSV saves the raw data that is currently plotted as a comma delimited file. Click **Save** to save the file to your hard drive in the desired format.

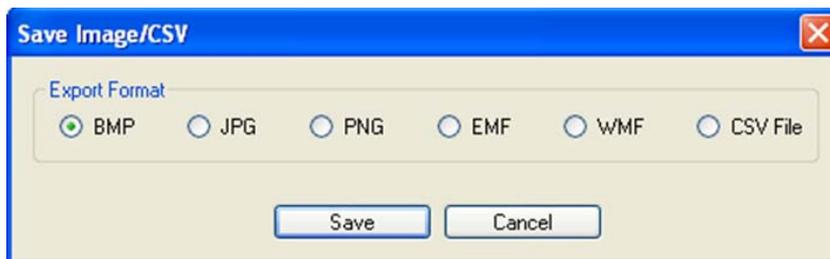

Clicking **Email** opens a similar prompt. Select the file format in which you wish to save the image or raw data, and an email will be created for you with the file automatically attached for your convenience. Click **Email** to create the email with the selected file attachment.

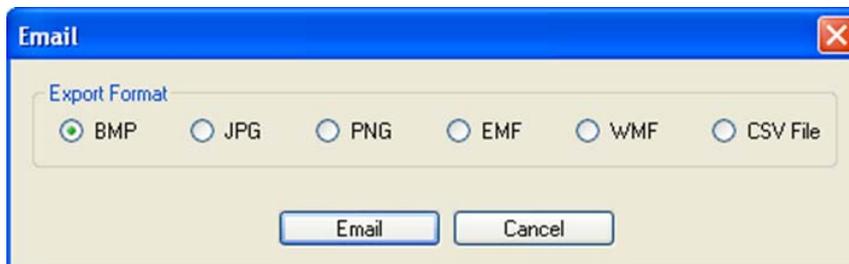

### Importing a Frequency Response

If you have previously saved a frequency response measurement into a CSV file, it can be imported for later viewing. Click the **Import** button, and browse to your saved CSV file. You can import while in offline mode for convenience. Importing a frequency response is useful for off-site developers to analyze a machine tool.

#### 17.3.0.3 Measurement Options

By default, the PST determines the excitation level automatically and autotunes the drive and motor.

The PST also allows you to enter a manual excitation level or to take only Bode measurements (without auto-tuning the system).

#### Using Manual Excitation Levels

By default, the PST is set to use the automatic excitation level. To obtain the automatic excitation level, the PST runs a friction test at the beginning to determine how much excitation is needed to break friction and get an accurate measurement.

To change this excitation level, click on the **Excitation Level** drop-down box (1), and select **Manual**. Then enter a new **Current Amplitude** (2) in amps.

Note: If the **Injection Point** is set to **Current**, then the **Current Amplitude** box will be enabled to enter an excitation level; if the **Injection Point** is set to **Velocity**, the **Velocity Amplitude** box will be enabled to enter an excitation level.

The screenshot displays the Performance Servo Tuner (PST) interface. On the left, the 'Tuning Options' panel includes 'Excitation Level' (Manual), 'Mode' (Autotune), and 'Mouse Function' (Zoom). A red circle '1' highlights the 'Start' button. Below this is a progress bar and buttons for 'Less <<', 'Default Settings', 'Import', 'Save', and 'Email'. The 'Measur' tab is selected, with a red circle '2' highlighting the 'Start' button. The 'Current Amplitude' is 0.095, 'Velocity Amplitude' is 3.063, and 'Injection Point' is 'Current'. On the right, two Bode plots are shown: 'Amplitude' (dB vs Hz) and 'Phase' (degrees vs Hz), both with logarithmic frequency axes. A 'Full View' button is located above the plots. At the bottom, a status bar shows 'SW HW CS STO No Faults No Warnings' and 'AKD-B00306-NAAN-0000'.

### 17.3.0.4 Taking a Bode Measurement without the PST

You may wish to take only the frequency response of a system, rather than using the PST. To take a frequency response measurement without the PST, click on the **Mode** drop-down box (1) and select **Bode Plot**, then click **Start** (2).

This screenshot shows the PST interface with the 'Mode' dropdown menu set to 'Bode Plot'. A red circle '1' highlights the 'Bode Plot' selection, and another red circle '2' highlights the 'Start' button. The 'Excitation Level' is 'Manual' and the 'Mouse Function' is 'Zoom'. The progress bar and control buttons are also visible.

### 17.3.1 Using the Performance Servo Tuner: Advanced


The Performance Servo Tuner (PST) can be set up to use specific modes or limits in tuning to provide tuning in ways you can control, while still taking advantage of the PST's ability to make decisions quickly and effectively for you.

To use the advanced modes of the PST, click the **More** button to display the additional features for advanced autotuning:

#### 17.3.1.1 Typical Cases for Advanced PST Use

## Tuning Systems with Low-Frequency Resonances

Systems with low-frequency resonances are challenging because low frequency data is difficult to measure. While the PST can tune these systems, you can expect lower system performance. If your system has a first anti-resonance of 30 Hz (pictured below), you can expect approximately 15 Hz (half the frequency of the first anti-resonance) of closed loop bandwidth.

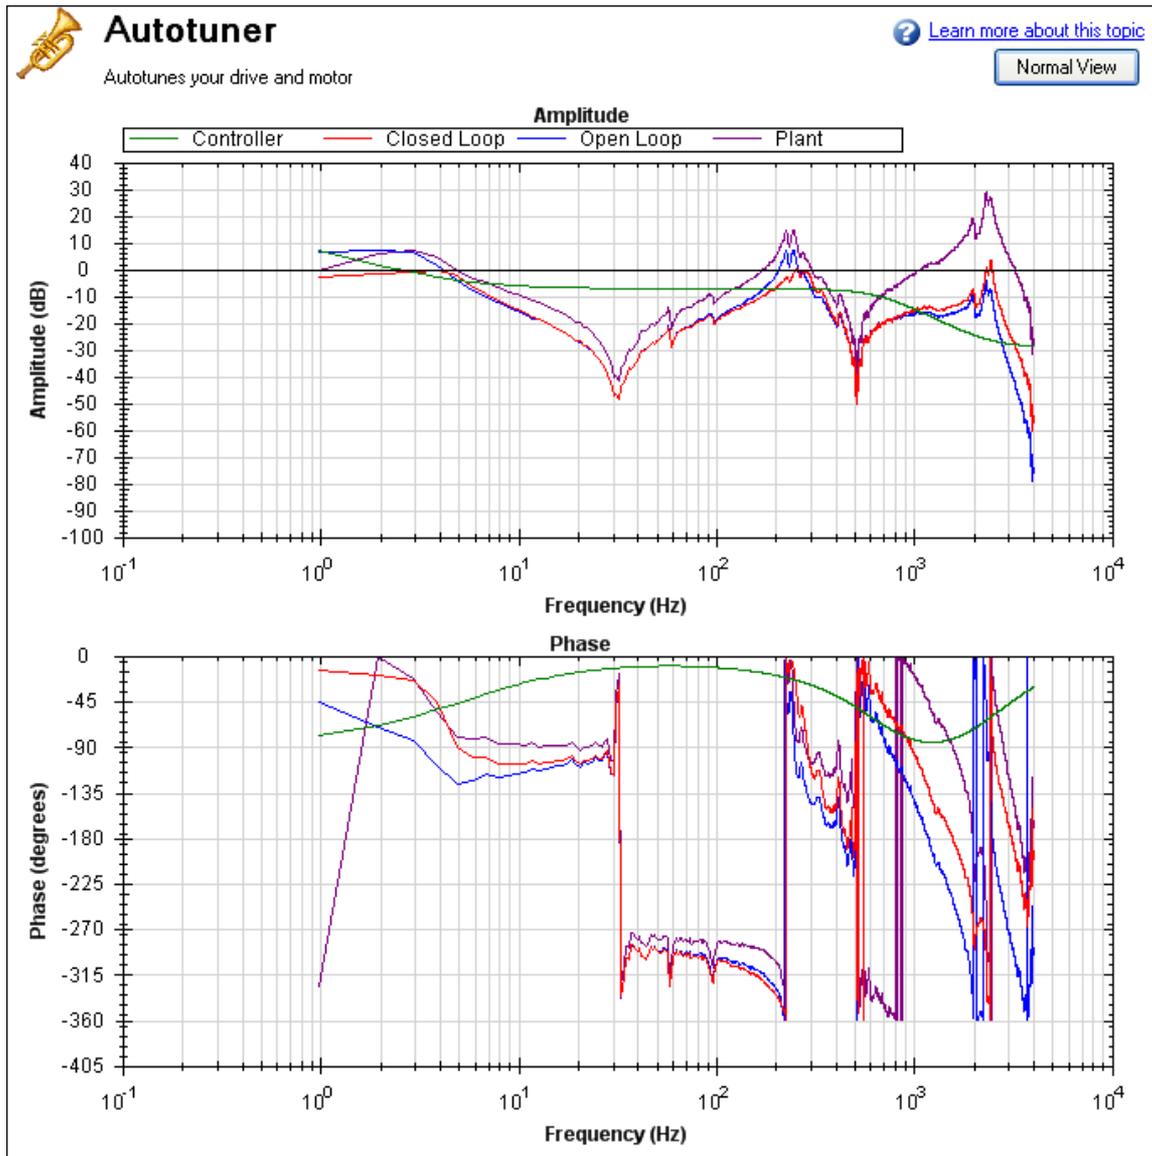


In addition, in order to accurately measure the low frequency resonances, the fast Fourier transform (FFT) resolution must be sufficiently fine to accurately measure the low-frequency resonance. A good place to start is to have an FFT resolution of 1/10 of the frequency of the lowest anti-node. In the case shown above, an anti-resonance of 30 Hz is present, so the resolution should be approximately 3 Hz FFT resolution. The PST can function with the resonance if it is accurately measured, as shown below. To adjust the FFT resolution, adjust **FFT Points** in the **Recording Options** tab as needed.


Autotuner	Measurement	Plots	Cursors
Current Amplitude:	0.095	Measurement:	Closed Loop
Velocity Amplitude:	3.063	Injection Point:	Current
Smoothing %:	1.000	Excitation Type:	PRB
FFT Points:	4096	Velocity Max:	1000.00 (RPM)
Number Points:	60000	Excite Gap:	2

### Tuning Systems with High-Frequency Resonances

Some systems have resonances at very high frequencies (greater than 1 kHz). When the resonance is this large, it can prove a challenge in tuning, because these systems generate high noise levels that are often audible. An example of a large resonance is shown below. This example is from a steel flywheel mounted to an AKM 22E motor. The source of the resonance is the spring mass relationship between the motor rotor, shaft, and flywheel.

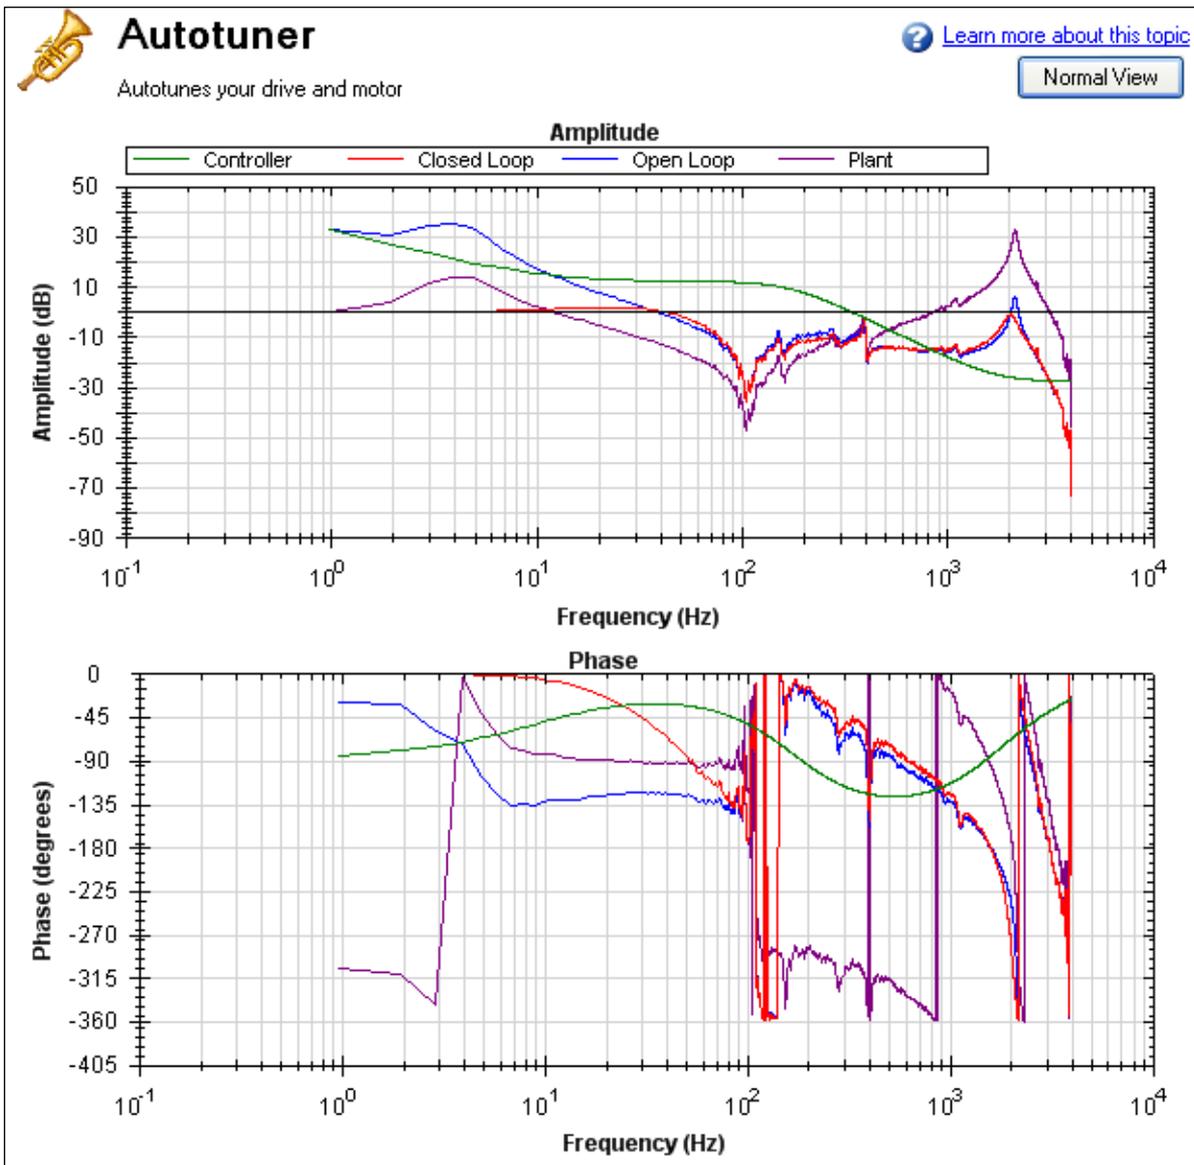


One way to resolve this problem is to use a low-pass filter in the feedback path. To use this filter, simply check the **Enable Lowpass Search** in the PST, which is the default behavior.

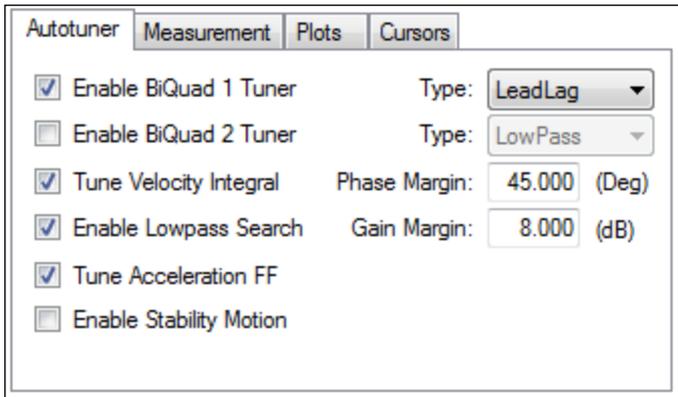

### Tuning systems with noisy frequency responses


When using a motor with a low-resolution incremental encoder or resolver, the high frequency response may be noisy. Below is a Bode plot created after autotuning of an incremental encoder with 8,192 counts per revolution.

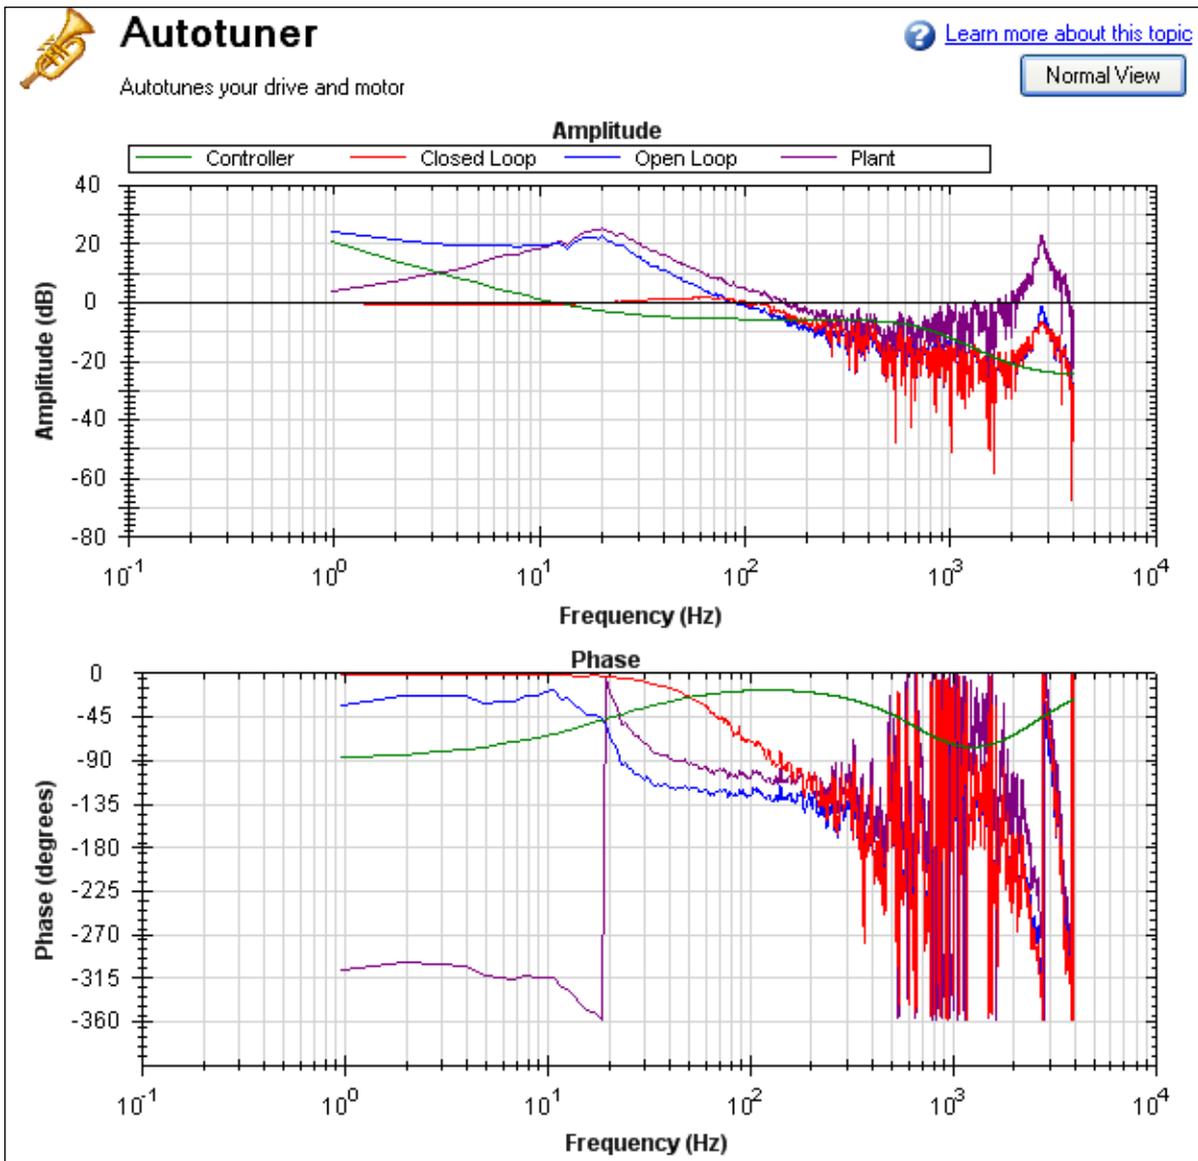

To make the Bode plot easier to read, increase the smoothing factor (1) in the advanced **Measurement Options**.

Autotuner		Measurement	Plots	Cursors
Current Amplitude:	0.095	Measurement:	Closed Loop ▾	
Velocity Amplitude:	3.063	Injection Point:	Current ▾	
Smoothing %:	4.000	Excitation Type:	PRB ▾	
FFT Points:	4096	Velocity Max:	1000.00 (RPM)	
Number Points:	60000	Excite Gap:	2	

After increasing the smoothing percentage, the Bode plot traces become cleaner and easier to read:

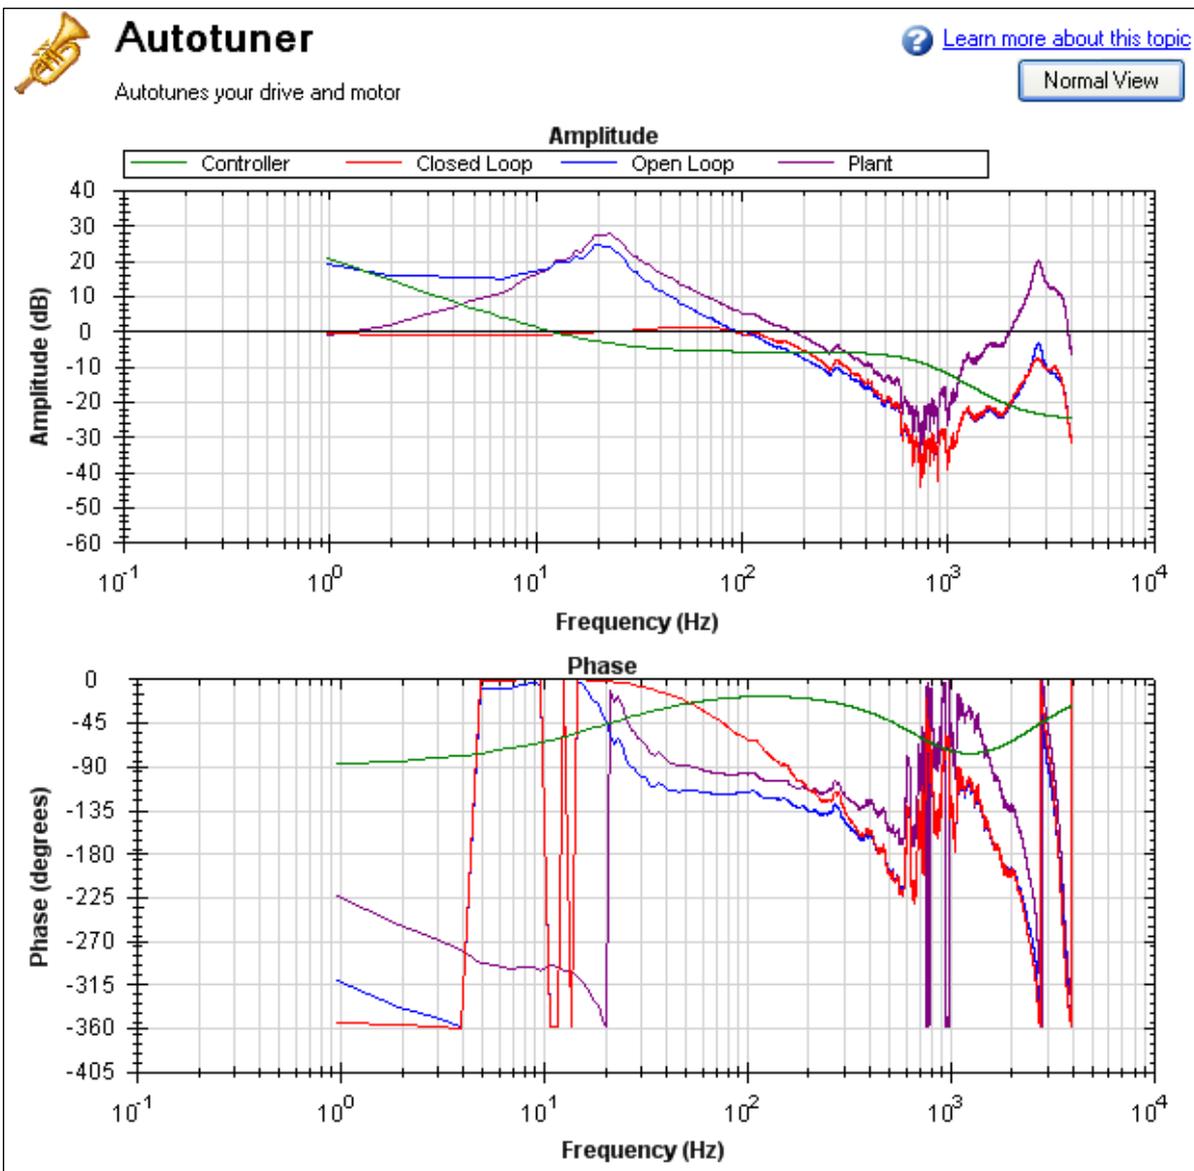

### 17.3.1.2 PST Options

When you click **More** in the PST view, the following options are displayed:

#### Enable BiQuad 1 Tuner

Check this box to use the first anti-resonance filter in the forward path (AR1). You can specify the type of filter to use in the **Type** box to the right of **Enable BiQuad 1 Tuner**.

#### Enable BiQuad 2 Tuner

Check this box to use the second anti-resonance filter in the forward path (AR2). You can specify the type of filter to use in the **Type** box to the right of **Enable BiQuad 2 Tuner**. Enabling this option may significantly slow your computer during this operation.

#### Biquad Type

For Biquad 1 and 2, you can choose what type of filter to implement. The four options are:

1. **LeadLag**: The LeadLag filter is the default, and will work for most servo systems.
2. **Lowpass**: A Lowpass filter requires the least amount of processing time. The PST will place the low-pass to get the maximum bandwidth possible.
3. **Resonator**: The Resonator filter is like a Notch filter with tunable bandwidth and notch depth. The Resonator takes longer to calculate than the LeadLag filter.
4. **Custom**: The Custom filter takes the longest to calculate and does not restrict the PST to a filter shape. This filter type provides excellent results, but may significantly slow your computer while the filter is calculated.

#### Tune Acceleration FF

This box turns on and off the acceleration feedforward tuner. If this box is checked, the PST will measure the inertia attached to the motor shaft, and using this measurement, will calculate an appropriate acceleration feedforward and write it to the drive (IL.KACFF (→ p. 906))

#### Enable Stability Motion

When this checkbox is checked, after the PST has completed, the PST will command a short move in the clockwise direction, then back to its origin and monitor the motor's parameters to determine if the tuning is stable. If an instability is detected, the drive will generate Fault F133 (→ p. 261): Instability during Autotune.

#### Phase and Gain Margins

The PST always ensures that the tuning satisfies stability criteria that can be adjusted in units of phase margin (in degrees) and gain margin (in dB). The PST uses default values for phase and gain margin, but you can adjust these values to ensure higher stability or to allow the PST to be more aggressive by using lower gain and phase margins.

#### Tune Velocity Integral

Check this box to tune VL.KI (velocity loop integral gain). If this box is unchecked, the PST will set VL.KI to zero.

#### Enable Low Pass Search

Check this to tune a fourth-order low pass filter in the feedback path (AR 3 and 4). If this box is unchecked, the PST will not modify the anti-resonance filters in the feedback path.

### 17.3.1.3 Measurement Options

The PST screen also provides options for measurements:

Autotuner	Measurement	Plots	Cursors
Current Amplitude: 0.095	Measurement: Closed Loop		
Velocity Amplitude: 3.063	Injection Point: Current		
Smoothing %: 1.000	Excitation Type: PRB		
FFT Points: 4096	Velocity Max: 1000.00 (RPM)		
Number Points: 60000	Excite Gap: 2		

#### Current Amplitude

This box sets the amplitude of the current used to excite the system during a current injection mode excitation. This amplitude applies to all excitation types when the **Injection Point** is set to **Current**. The **Current Amplitude** box is disabled if the **Injection Point** is set to anything else.

#### Velocity Amplitude


This box sets the amplitude of the velocity used to excite the system during a velocity injection mode excitation. This amplitude applies to all excitation types when the **Injection Point** is set to **Velocity**. The **Velocity Amplitude** box is disabled if the **Injection Point** is set to anything else.

#### Smooth %

This value applies a moving average smoothing filter to the frequency response gathered during autotuning. This process reduces noise in the frequency response that can occur when making short frequency response measurements, using low resolution encoders, conducting low amplitude frequency response tests, or for other reasons. The smoothing filter iterates through each frequency on the FFT plot. For each frequency, all frequencies within the **Smooth %** range will have their magnitudes averaged.


For example, if you smooth a Bode plot with 5% smoothing, at 100 Hz, it will average all the values between 95Hz and 105Hz; when the filter gets to 1000 Hz, the filter will average all the values between 950 Hz and 1050 Hz.

As an example, assume a noisy sine sweep signal and use a 5% smoothing factor. Below is a noisy signal with a range of 100 Hz to 1000 Hz.

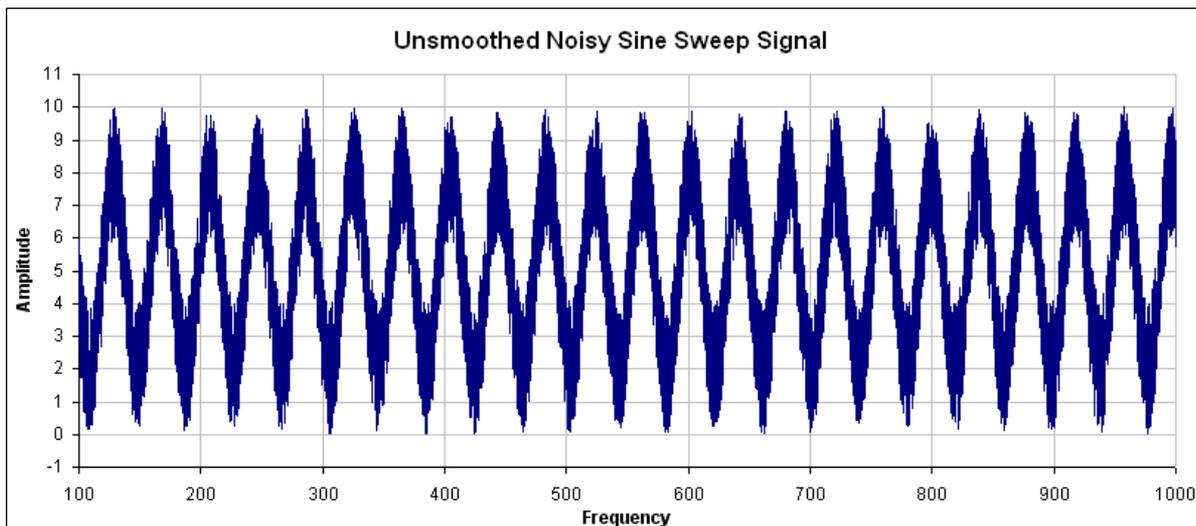


In this example, examining how the smoothing filter affects a single point shows how the smoothing filter works on a full plot. If you zoom in on 200 Hz +/- 5%, this gives a range of 190 Hz – 210Hz. The smoothing filter

averages this range of values and puts the average right on 200 Hz. The figure below shows the zoomed data around 200 Hz and the averaged value of all frequencies  $\pm 5\%$  (the red box illustrates the range of frequencies being smoothed).

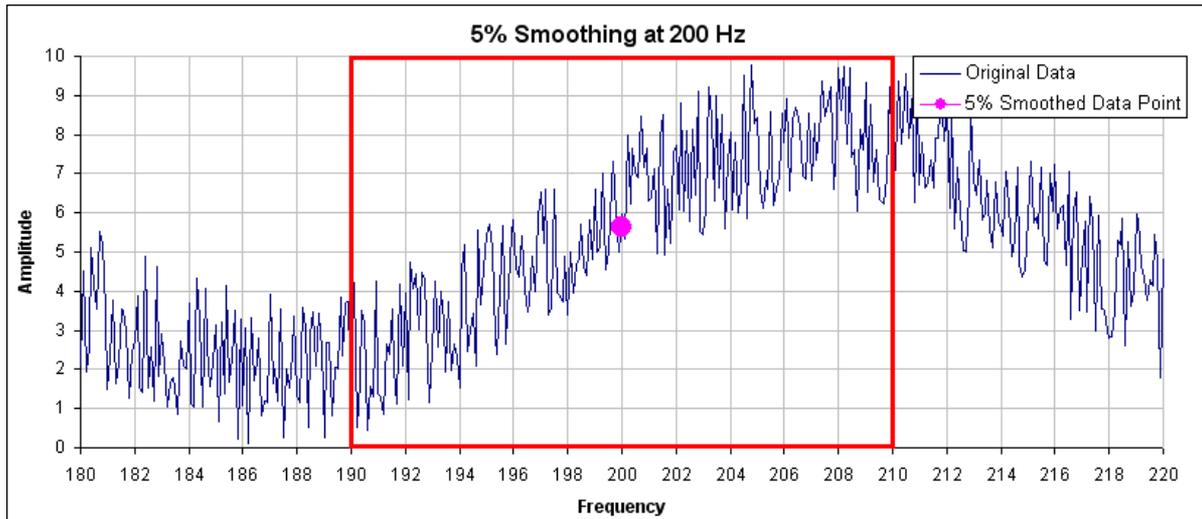


In the PST, the smoothing filter will do this analysis for every frequency point on the Bode plot. If the data is too noisy, then you can increase the smoothing percentage to smooth the noise out and see the underlying data patterns. A comparison of a system with 0.1% smoothing and 8% smoothing is shown below.

#### 0.1% smoothing

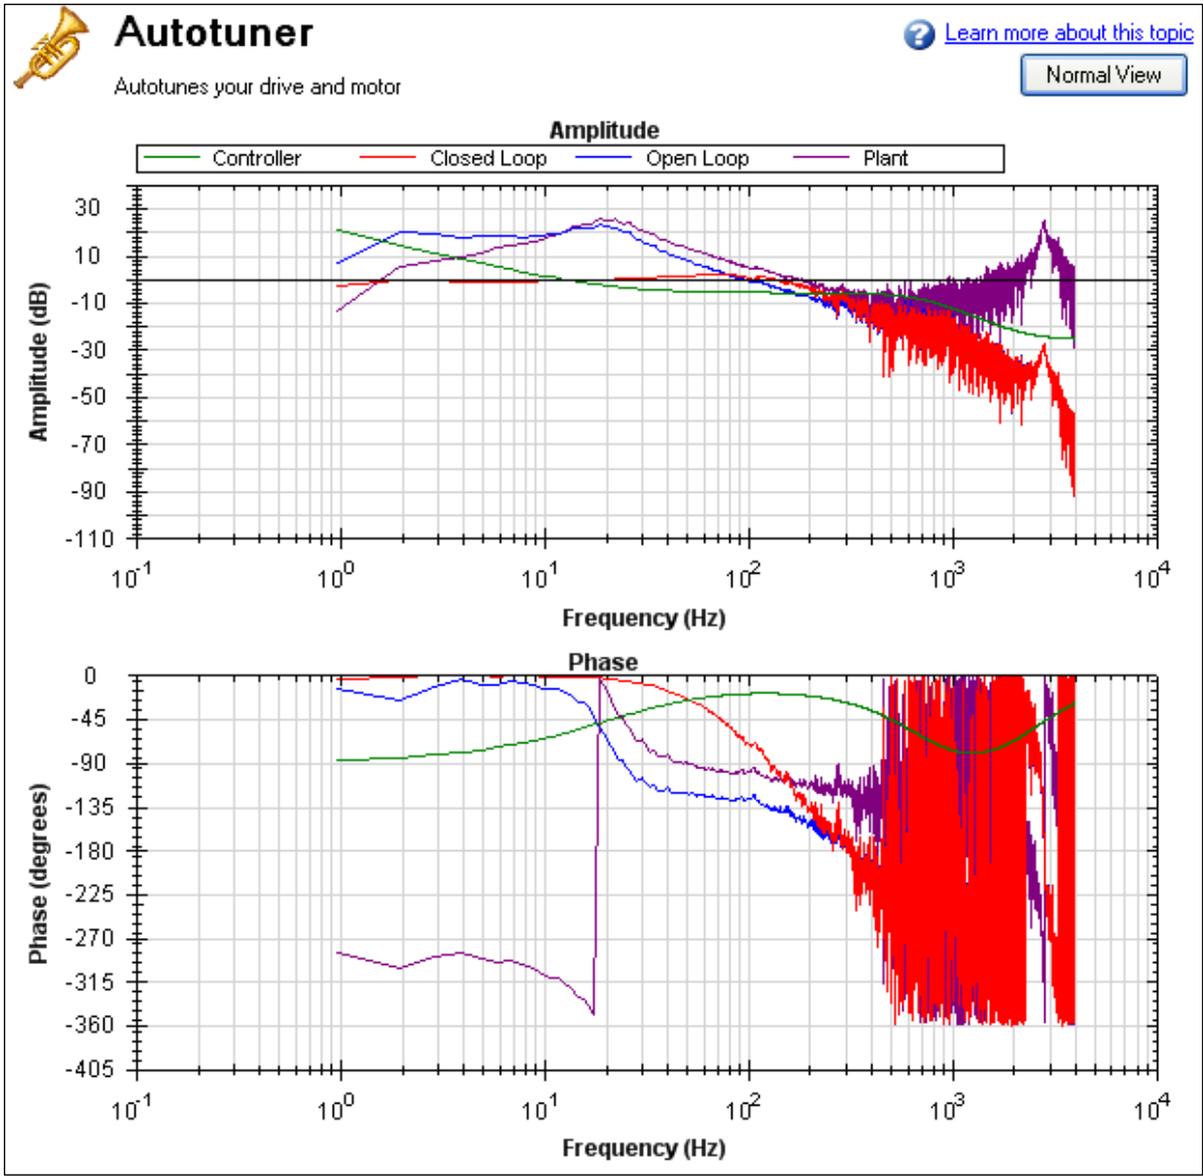

8% Smoothing

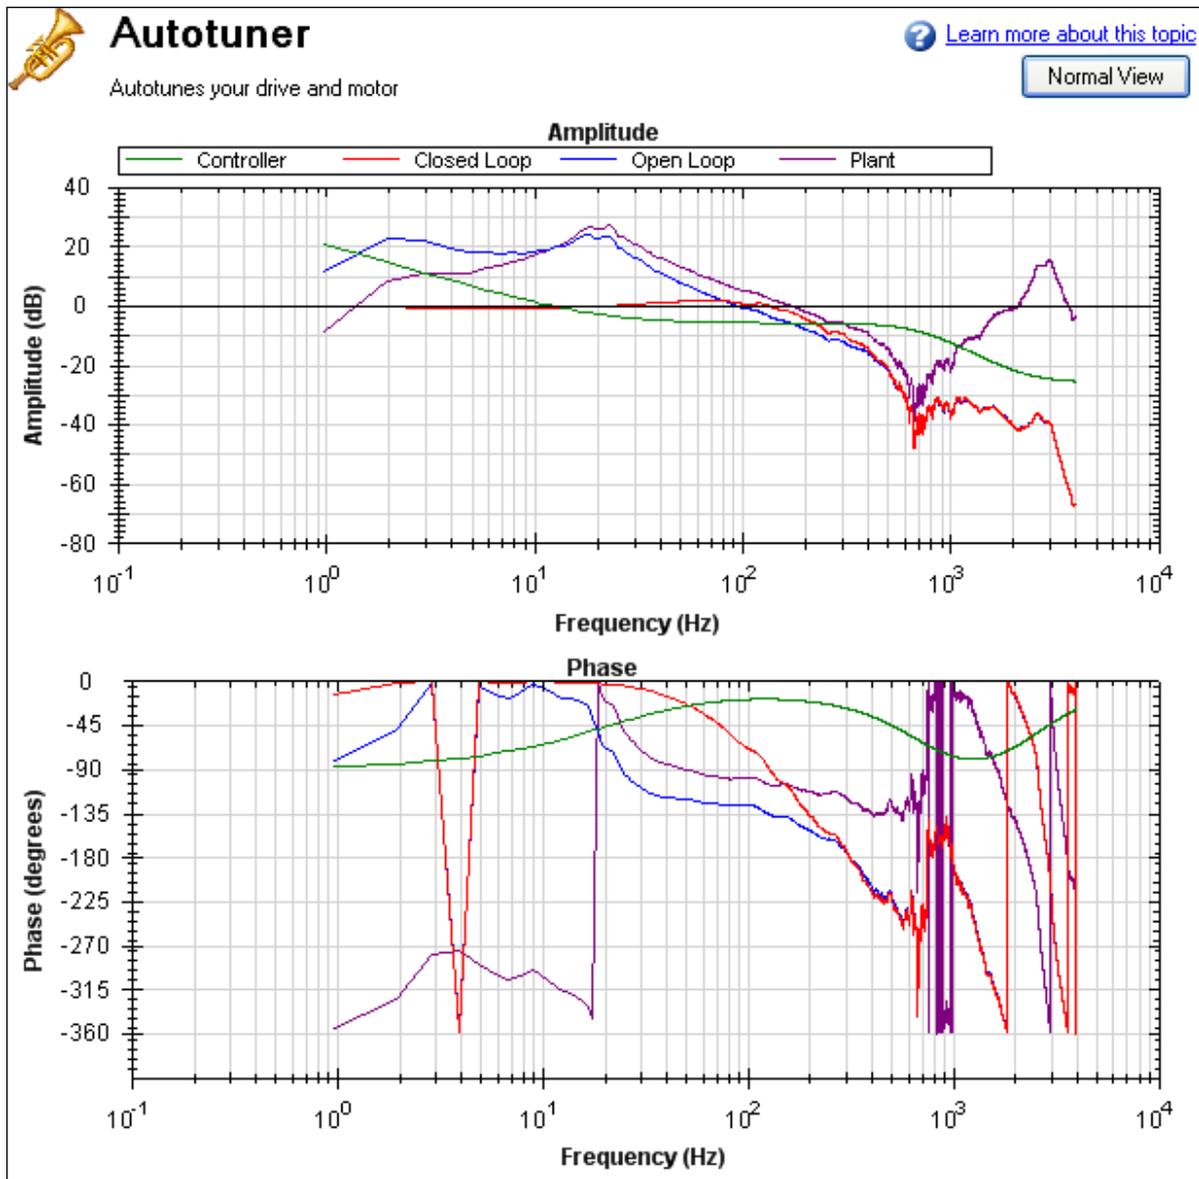

Note: Smoothing decreases the peaks of resonances; if smoothing is too high, a resonance may be completely hidden. If the PST cannot identify a resonance due to high smoothing, the system may become unstable.

### Measurement

This box sets the measurement type used during a measurement. The PST functions only if **Plant** measurement is selected; autotune does not function in other measurement modes.

- **Closed Loop** directly measures the closed loop frequency response of the servo.
- **Plant** directly measures the plant, including drive, motor, and mechanics coupled to the motor.
- **Controller** directly measures the controller response, which includes the tuning in the velocity and position loops, and anti-resonance filters 1 & 2.

### Injection Point

The **Injection Point** box sets the source location of the excitation used during autotuning. **Current** mode uses a torque disturbance at the torque output. During current injection point measurements, the excitation will use the **Current Amplitude** value to set the size of the excitation.

**Velocity** mode uses a velocity command to excite the system. During velocity injection point measurements, the excitation will use the **Velocity Amplitude** value to set the size of the excitation.

### Excitation Type

The **Excitation Type** box allows you to choose the type of excitation. Noise, pseudo random binary (PRB), and sine are the options available.

- **Noise** uses a pseudo random noise signal to excite the system. The signal varies between +/- current or velocity amplitude (depending on injection point). The signal contains a frequency spectrum that goes from a lower limit equal to:  
 $16,000/(\text{Excite Gap} * \text{Number Points}) \text{ Hz}$   
 to a higher limit equal to:  
 $(16,000/\text{Excite Gap}) \text{ Hz}$   
 The richness of the frequency spectrum comes from variance in the amplitude of the noise signal.
- **PRB** uses a pseudo random binary signal to excite the system. The signal is either + or – current or velocity amplitude (depending on the injection point). The signal contains a frequency spectrum that goes from a lower limit equal to the larger of:  
 $(16,000/(2^{\text{BODE.PRBDDEPTH}} (\rightarrow \text{p. 461}) * \text{Excite Gap}))$  or  $16,000/(\text{Excite Gap} * \text{Number Points}) \text{ Hz}$   
 to a higher limit equal to:  
 $(16,000/\text{Excite Gap}) \text{ Hz}$   
 $\text{BODE.PRBDDEPTH} (\rightarrow \text{p. 461})$  is set to 19 by the PST. The richness of the frequency spectrum comes from variance in the phase of the signal, not the amplitude.
- **Sine** requires that you specify the start frequency, end frequency, and frequency step size. The sine sweep takes significantly longer than a noise or PRB measurement, but is often cleaner. Be careful when selecting a step size: too large of a step size may miss important resonances, and too small of a step size increases measurement time.

### FFT Points

The **FFT Points** box is only visible and applicable in noise and PRB measurements. **FFT Points** sets the resolution of the FFT's measurement. The frequency resolution is equal to

$$16,000/(\text{Excite Gap} * \text{FFT Points})$$

By increasing **FFT Points**, the resolution becomes finer, but noise in the frequency response increases.

### Excite Gap

The **Excite Gap** box is only visible and applicable in noise and PRB measurements. This box sets how frequently the test excitation is updated. The excite gap minimum value is 1; this value is normally set to 2 for autotuning. The excite rate is  $16,000/\text{gap}$ . You can limit high frequency excitation by increasing the **Excite Gap** value.

### Number Points

The **Number Points** box is only visible and applicable in noise and PRB measurements. This box sets the length of recording while measuring the frequency response of the system. The measurement length is:

$$\text{Number Points} * \text{Excite Gap}/16,000 \text{ seconds}$$

### Velocity Max

The **Velocity Max** box allows the user to specify the maximum velocity the motor should be able to move while performing excitation. This box is not in effect for normal drive operation; it is only visible during the PST excitation phases. This value is implemented as soon as the PST begins, and as soon as the PST is finished, the previous overspeed threshold ( $\text{VL.THRESH} (\rightarrow \text{p. 1296})$ ) is restored.

Autotuner	Measurement	Plots	Cursors
Current Amplitude:	0.095	Measurement:	Closed Loop ▾
Velocity Amplitude:	3.063	Injection Point:	Current ▾
Smoothing %:	1.000	Excitation Type:	Sine ▾
Start Sine Freq:	1.000	Velocity Max:	1000.00 (RPM)
End Sine Freq:	8000.0	Turn Sine On	
Sine Step %:	6.000		
Current Freq:	0		

If **Excitation Type** box is set to **Sine**, different configuration options become available.


- **Start Sine Freq:** The Sine sweep test will begin at this frequency. The start frequency must be greater than zero and less than the end sine frequency. **Start Sine Freq** is only visible and applicable to Sine measurements.
- **End Sine Freq:** The Sine sweep test will end at this frequency. The end frequency must be less than or equal to 8,000, and more than the sine start frequency. **End Sine Freq** is only visible and applicable in Sine measurements
- **Sine Step %:** This box sets the sine step size. The sine sweep is discrete, not continuous. Each frequency is a multiple of the previous. For example, if the first frequency was 1 and the step size was 6%, the second frequency would be  $1 * 1.06 = 1.06$  Hz, the third frequency would be  $1.06 * 1.06 = 1.12$  Hz. This continues until the current frequency exceeds the **End Sine Frequency** value. **Sine Step %** is only visible and applicable in Sine measurements
- **Current Freq:** This field displays the current frequency of the sine sweep. **Current Freq** is only visible and applicable in Sine measurements
- **Turn Sine On:** This button allows the user to excite the system at a single sine frequency. When this button is pressed, it grays out boxes that do not apply. You may change the sine frequency and amplitude. To stop the sine excitation, click **Turn Sine Off**. **Turn Sine On** is only visible and applicable in Sine measurements.

Autotuner	Measurement	Plots	Cursors
Current Amplitude:	0.095	Measurement:	Closed Loop ▾
Velocity Amplitude:	3.063	Injection Point:	Current ▾
Smoothing %:	1.000	Excitation Type:	Sine ▾
Start Sine Freq:	1.000	Velocity Max:	1000.00 (RPM)
End Sine Freq:	8000.0	Turn Sine On	
Sine Step %:	6.000		
Current Freq:	0		

#### NOTE

When the sine excitation is used on low resolution encoders, high frequency excitation may cause less than 1 count of encoder movement. If this occurs, no movement is detected on the motor for that excitation frequency. If this occurs, a data point for that frequency will not be plotted, as this results in a calculation of 0dB for gain and -infinity for phase.

#### 17.3.1.4 Plot Options

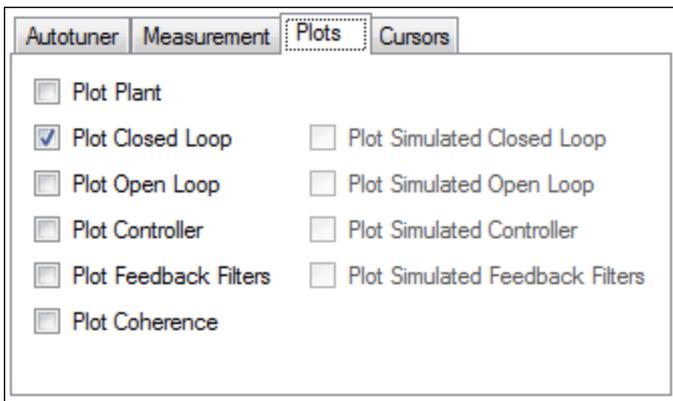

By default, only the measured closed loop plot is selected. You can control which of these responses are displayed on the Bode plot by checking or unchecking the **Plot Plant**, **Plot ClosedLoop**, **Plot Open Loop**, **Plot Controller**, and **Plot Coherence** checkboxes shown. The options **Plot Simulated Closed Loop**, **Plot Simulated Open Loop**, **Plot Simulated Controller**, and **Plot Simulated Feedback Filters** are only available in Bode plot mode, not PST mode.

**Coherence**

The coherence option is only available for noise and PRB measurements; it is not available for Sine excitation measurements.

Coherence is an indicator of how accurate your data is. For example, 0 dB (1 in linear numbers) means you have perfect coherence. Another way to think of this concept is that for one unit of input, you get one unit of output. Coherence is calculated as follows:

$$Coherence = \frac{(P_{xy} \times P_{xy}^*)^2}{(P_{xx} \times P_{xx}^*) + (P_{yy} \times P_{yy}^*)}$$

where:

Pxx = Power Spectral Density of Input signal


Pyy = Power Spectral Density of Output signal

Pxy = Cross Spectral Density of Input and Output


\* designates complex conjugate

**Cursors**

Enabling cursors allows you to note specific points of interest on the Bode plot and create a table of reference points in the summary table. To enable cursors, choose Cursors from the Mouse Function drop-down(1).

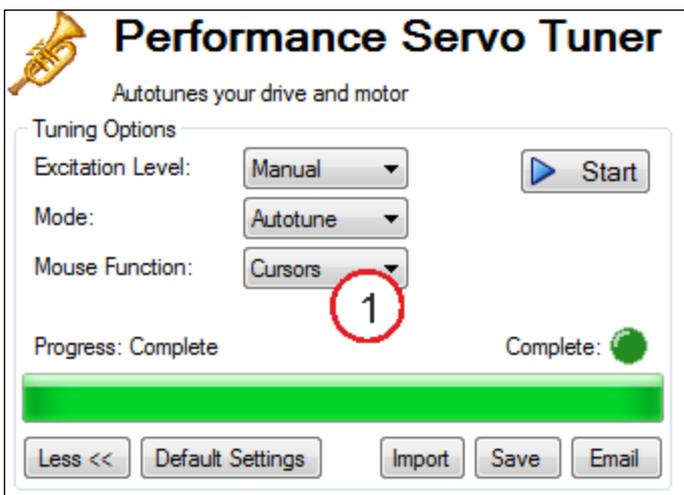

To move the cursor, move your mouse over the cursor in either the Amplitude (1), or Phase (2) plots, click and hold the left mouse button, and drag the cursor to a new location. Notice as you drag the mouse, the Frequency, Gain and Phase change in the summary window (3).

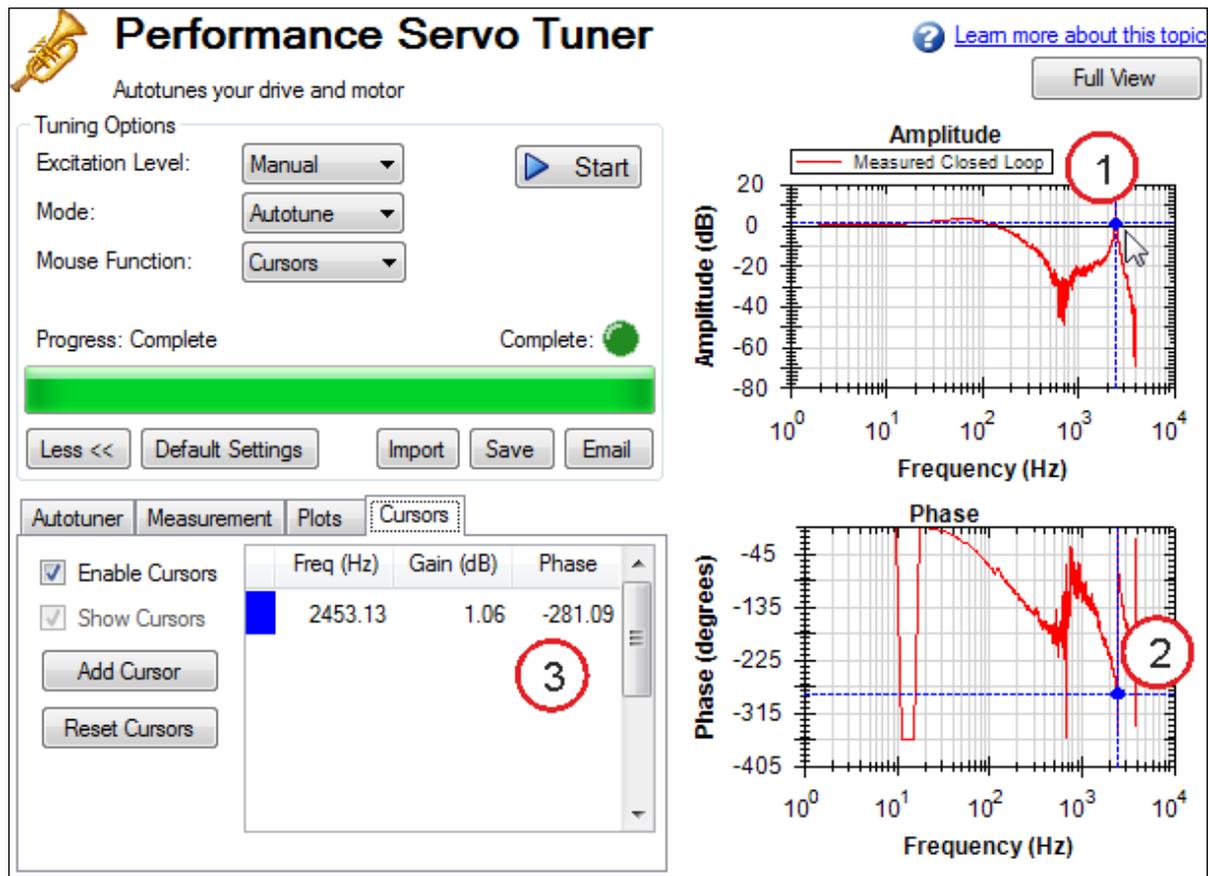

To add more cursors, click **Add Cursor**; you can add 10 cursors to the Bode Plot. When selecting a cursor, the cursor closest to the mouse will be selected. While dragging the cursor, the cursor will snap to the closest trace on the plot.

When cursors are enabled, zoom functions on the graph are disabled. To re-enable zooming, switch the Mouse Function to Zoom.

The dotted crosshair lines are only drawn for the active cursor selected; to remove all cursors from the screen, but retain their position, uncheck **Show Cursors**. To reset all cursors, click **Reset Cursors**.

Note: If a CSV file is saved or emailed after placing a cursor on the Bode plot, a cursor summary is included in the CSV raw data.

### 17.3.1.5 Resizing Bode Plots

In the PST view, the **Full View** and **Normal View** button (1) in the upper right of the window allows you to see the Bode Plot in greater or less detail. When viewing the Bode Plot in full view, the PST settings are hidden behind the Bode Plot. To access the PST settings, click the **Normal View** button in the upper right of the window.

#### Simple measurement normal view



# Performance Servo Tuner

Autotunes your drive and motor

[Learn more about this topic](#)

Full View

Tuning Options

Excitation Level:  ▶ Start

Mode:

Mouse Function:

Progress: Complete Complete:

Less << Default Settings Import Save Email

Autotuner | Measurement | Plots | Cursors



Current Amplitude:  Measurement:

Velocity Amplitude:  Injection Point:

Smoothing %:  Excitation Type:

FFT Points:  Velocity Max:

Number Points:  Excite Gap:

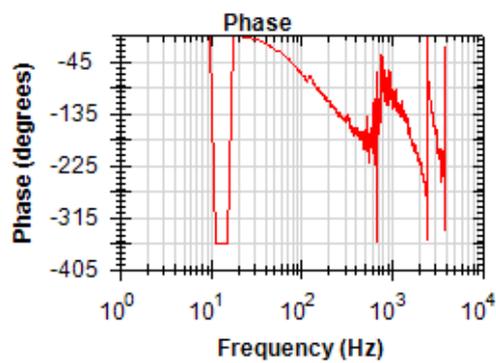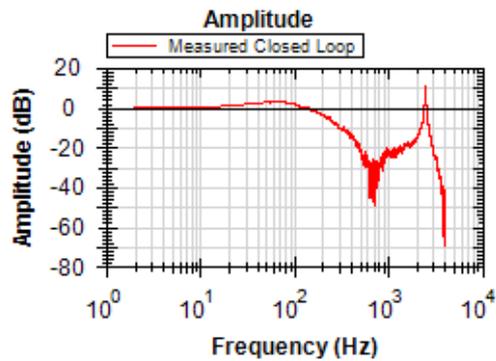

## Simple measurement full view





# Performance Servo Tuner

Autotunes your drive and motor

[Learn more about this topic](#)

Normal View

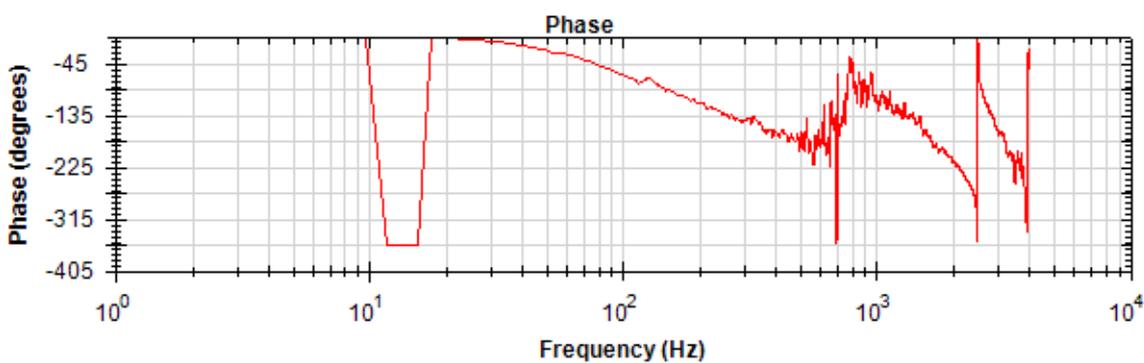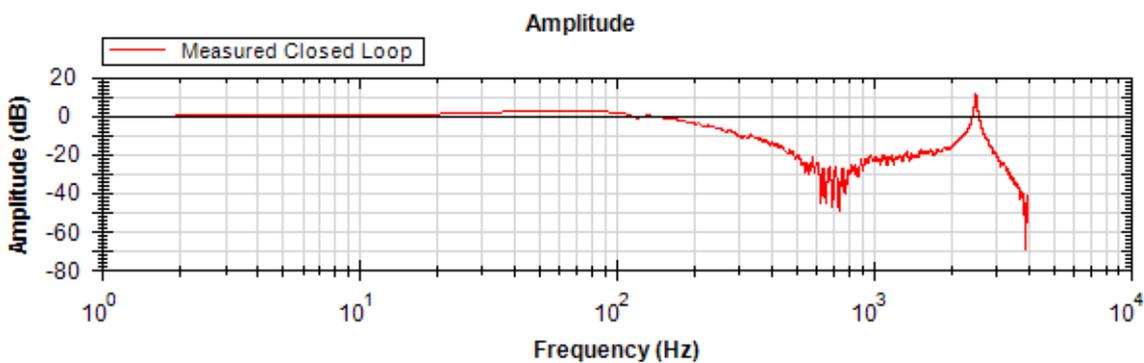


### Reading and Understanding the Bode Plot

You can operate the PST without understanding how to read a Bode plot; however, understanding Bode plots will help you to use more advanced tuning techniques, which are covered more in depth in the Tuning Guide (→ p. 220) documentation.


Four Bode plot traces are displayed by default:

1. Controller (green): This trace represents the frequency response of the tuning in the velocity loop and position Loop, this trace also includes anti-resonance filter 1 and 2 (also referred to as [C]).
2. Closed loop (red): This trace shows the frequency response of  $G/(1 + G * H)$  where  $G = C * P$ , and H is the frequency response of anti-resonance filters 3 and 4.
3. Open loop (purple): This trace shows the frequency response of  $G * H$ , where  $G = C * P$ , and H is the frequency response of anti-resonance filters 3 and 4.
4. Plant: This trace shows the frequency response of the mechanics of the drive and motor (also referred to as [P])

The diagram of the velocity loop on the drive below explains the frequency response that each of these traces represents: Tuning Guide (→ p. 220)

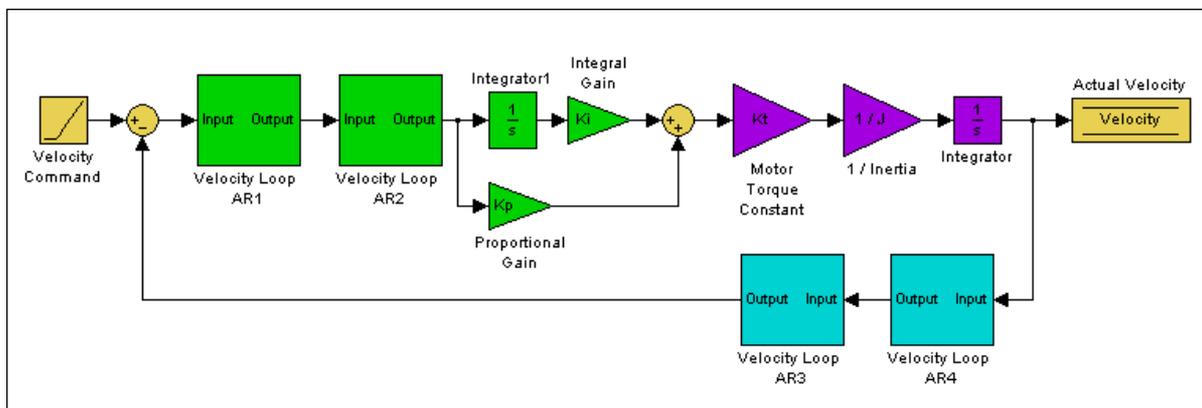

These blocks can be grouped into Controller, Plant, and Feedback sections:

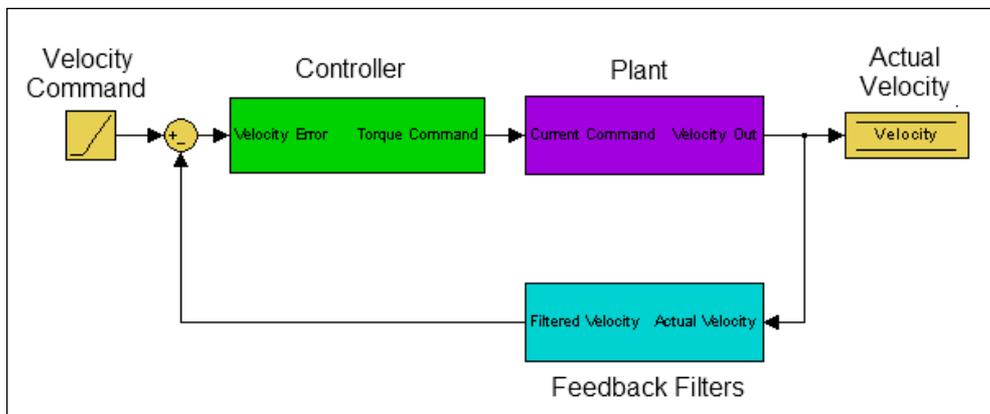

All of the green blocks have been grouped together to create the Controller [C]. The Controller is the portion of the control loop containing all velocity and position loop tuning, including the forward path filters.

All of the purple blocks have been combined to make the Plant [P]. The plant represents the mechanical and electrical properties of the motor, drive and any mechanical bodies attached to the motor.

The two feedback filters have been combined into one block. This value is never measured directly; however it contributes to both the Open Loop [G] and Closed Loop [T] frequency responses.

The definition of the Open Loop [G] frequency response is:


$$\text{Open Loop} = \text{Controller} \times \text{Plant} \times \text{Feedback Filters}$$

The definition of the Closed Loop [T] frequency response is:


$$ClosedLoop = \frac{Controller \times Plant}{1 + Controller \times Plant \times FeedbackFilters}$$

Below is a diagram of measurement points (input and output) for each of these frequency responses. The input and output markers have been color coded with the color they appear in the PST:

**Current Excitation:**

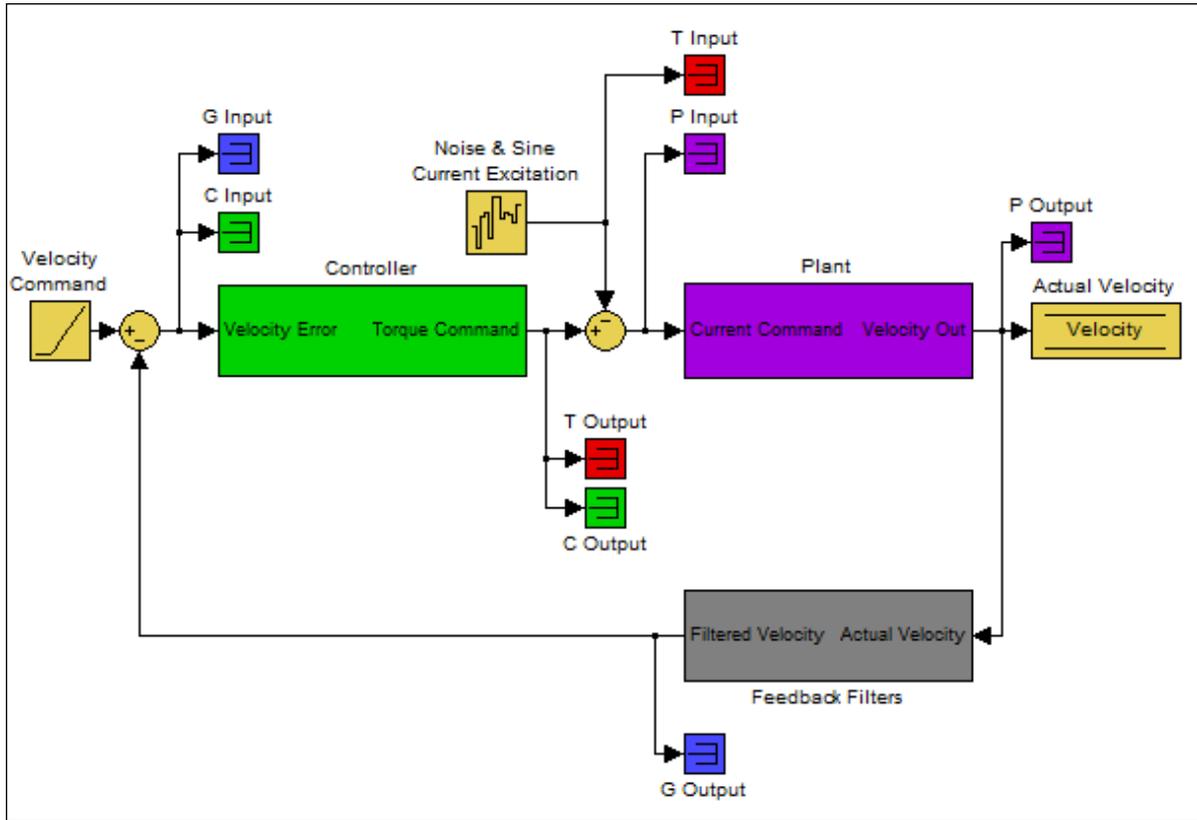

**Velocity Excitation:**

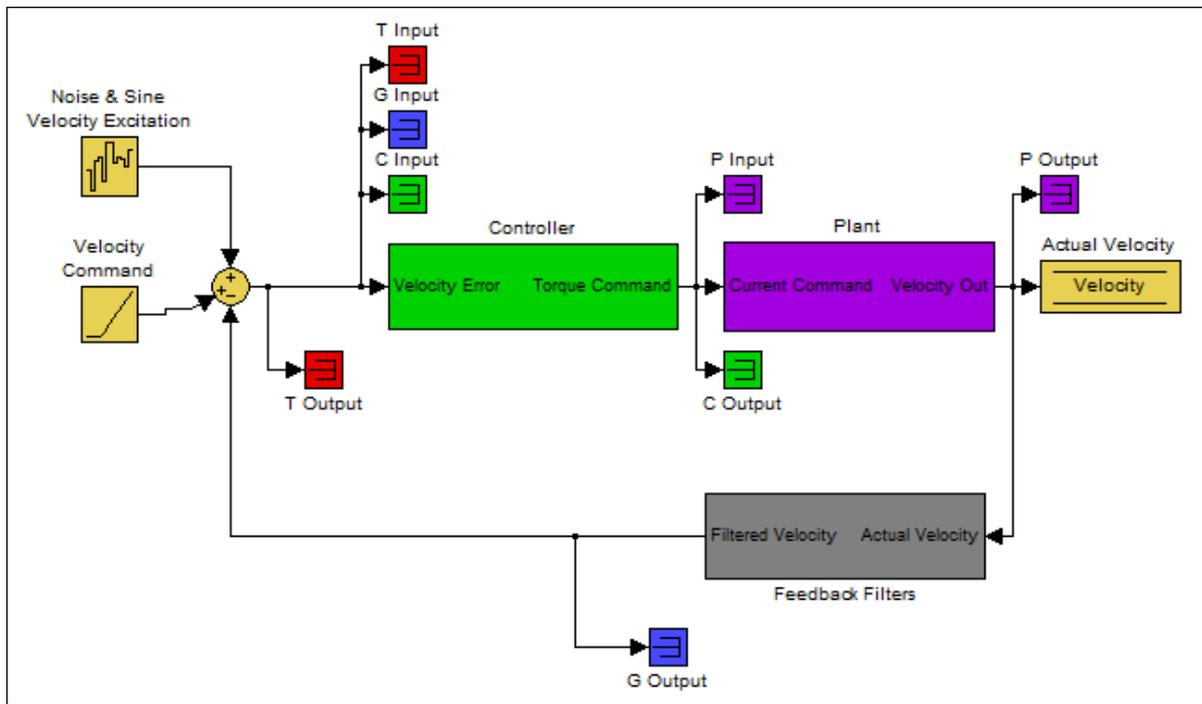


The resulting plots are the frequency response of output/input for each measurement.

For more information regarding these traces, please refer to the Tuning Guide (→ p. 220) documentation.

Below is a Bode plot of a motor with no load. The top plot is the magnitude plot (1); this plot shows the gain of the system with respect to frequency. This plot is often used to determine the bandwidth of the servo system.

The lower plot is the phase plot (2). This plot is used in conjunction with the magnitude plot to determine stability, and helps you to understand what kind of latencies exist in the servo system, or if latencies are induced by filters in the velocity loop.

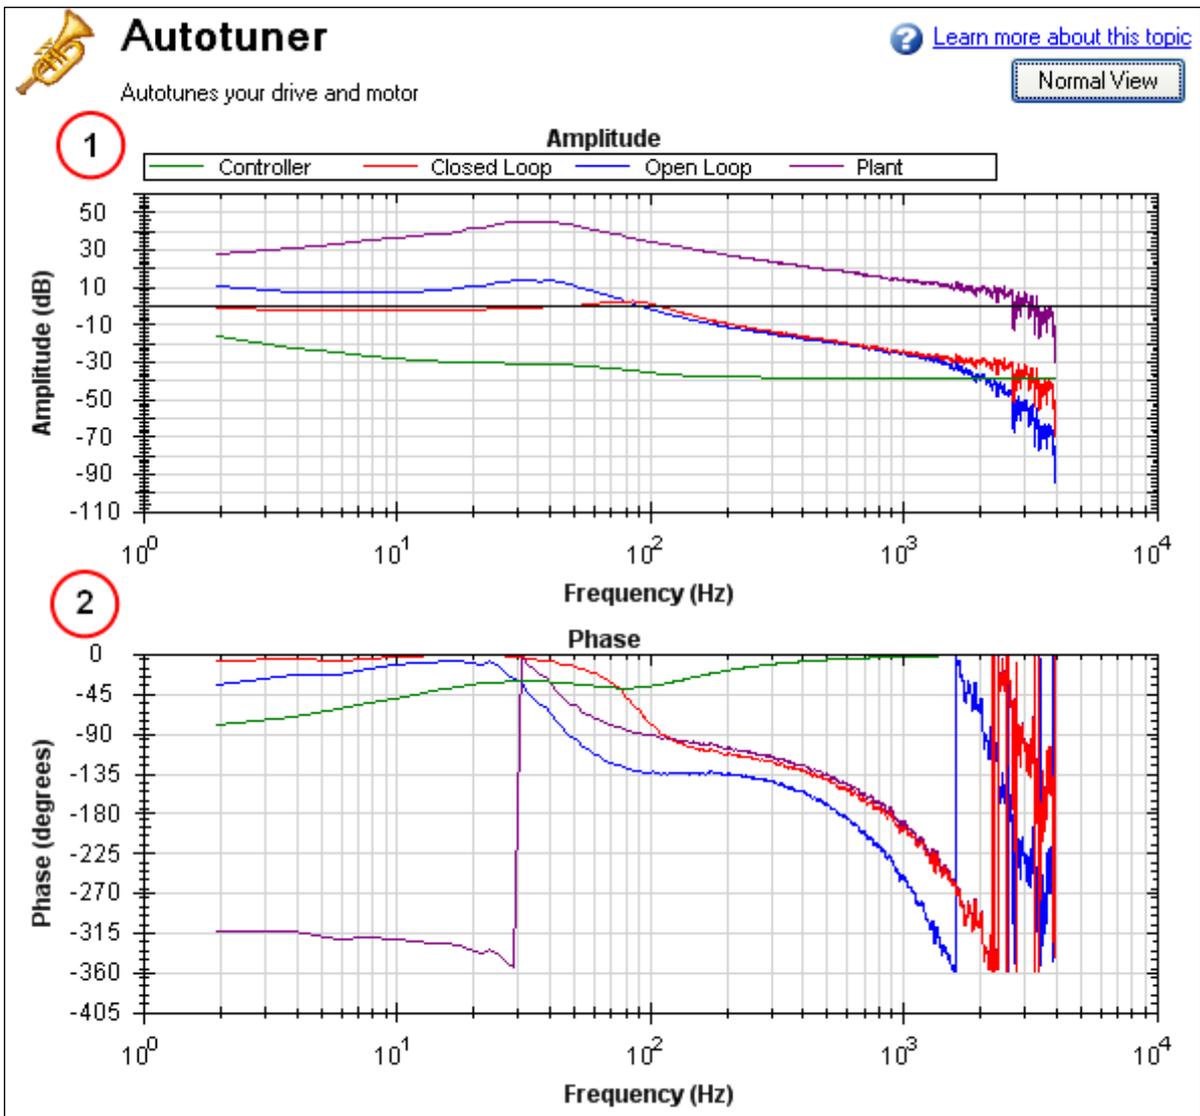

### Using the Performance Servo Tuner to Manually Tune Systems

Often, you must manually adjust a control loop in order to obtain optimal machine performance. You can use the Performance Servo Tuner (PST) interface to tune your control loop for best performance. A powerful feature of the manual tuning interface is the ability to simulate the frequency response before it is measured. This feature allows the user to take a base measurement, disable the motor, adjust tuning parameters, and simulate the frequency response of the motor without taking a new measurement. This process saves time and protects equipment from dangerous oscillations.

To begin the manual tuning process, put the Performance Servo Tuner into Bode Plot mode.

# Performance Servo Tuner

Autotunes your drive and motor

[Learn more about this topic](#)

Full View

Tuning Options



Excitation Level: Manual ▶ ▶▶ Start

Mode: Bode Plot ▶ **1**

Mouse Function: Zoom ▶

Progress: Complete ▶ Complete: ●

Less << Default Settings Import Save Email

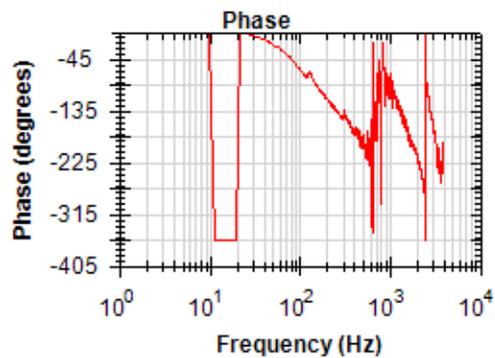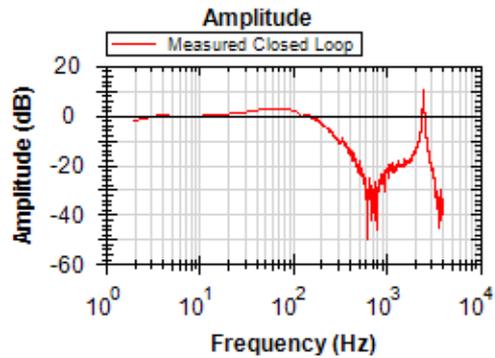

Measurement **Tuning** Plots Cursors

Current Amplitude: 0.095 Measurement: Closed Loop ▶

Velocity Amplitude: 6.600 Injection Point: Current ▶

Smoothing %: 1.000 Excitation Type: PRB ▶

FFT Points: 4096 ▶ Velocity Max: 1000.00 (RPM)

Number Points: 60000 Excite Gap: 2

Several differences exist between PST and Bode Plot Interfaces:

- When the PST is put into Bode Plot mode, the **Autotuner** tab is removed from the advanced features, and replaced with a **Tuning** tab.
- The **Plots** tab unlocks simulated traces for closed loop, open loop, controller, and feedback filters.

## Using the Tuning Simulation

To simulate tuning, there must be a valid Plant Plot in the PST (whether measured with a Bode Plot measurement or a full Autotune).

To selecting simulated plot traces, click on the **Plots** tab and check the following boxes:

Measurement **Tuning** **Plots** Cursors

Plot Plant

Plot Closed Loop  Plot Simulated Closed Loop

Plot Open Loop  Plot Simulated Open Loop

Plot Controller  Plot Simulated Controller

Plot Feedback Filters  Plot Simulated Feedback Filters

Plot Coherence


These selected boxes are the most common configuration for tuning; however, simulation will occur regardless of the checkboxes selected.

The boxes on the left plot the existing frequency response of the drive based on the tuning parameters that are loaded. The boxes marked "Simulated" (on the right) use the plant data from the measurement and the tun-

ing parameters in the PST to simulate the performance of those tuning parameters without loading them to the drive.


**Using the Performance Servo Tuner Manual Tuning Interface**

To use the PST manual tuning interface, click on the **Tuning** tab.

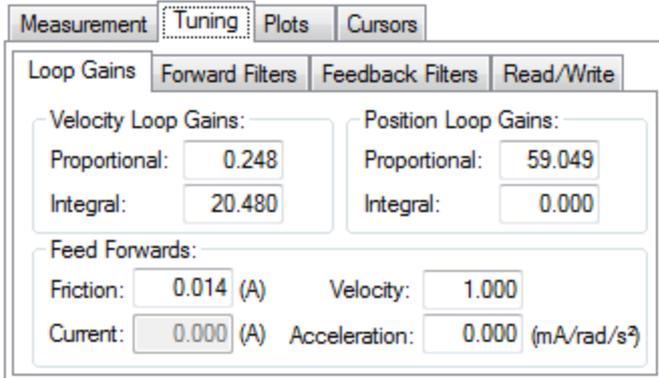

This tuning interface loads the tuning parameters on the drive each time a measurement is taken. Tuning parameters are split up into Loop Gains (Velocity Loop, Position Loop), Forward Path Biquad Filters, and Feedback Path Biquad Filters.

After modifying tuning gains, you must click on the **Read/Write** tab and click the **Write Tuning** button.

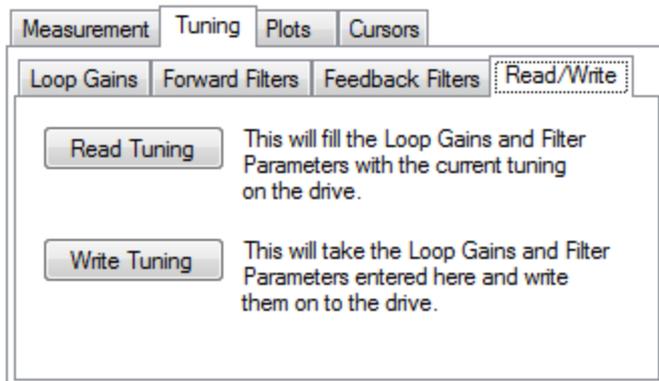


To restore the tuning on the drive to the PST interface, click the **Read Tuning** button.

Note: If tuning gains are modified and a Bode Measurement is made without clicking the **Write Tuning** button, the PST will overwrite the tuning gains in the interface with the tuning parameters on the drive.

**Simulating Modified Loop Gains with the Performance Servo Tuner**

Here is the frequency response of a test system after using the PST.

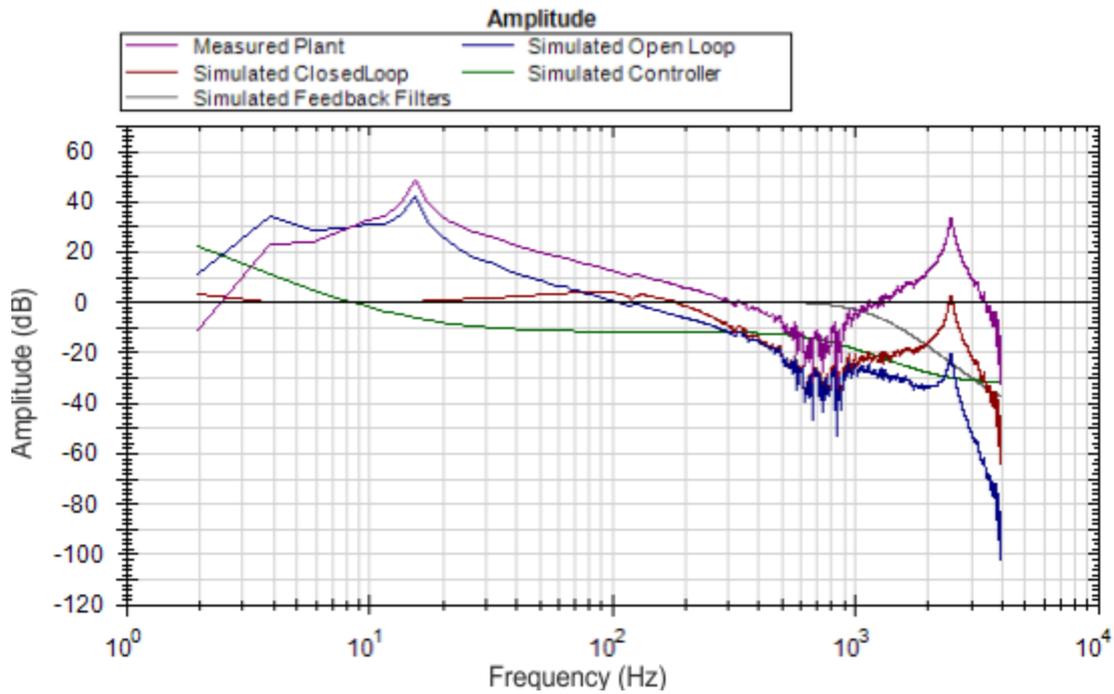


The Velocity Loop Proportional gain here is 0.248. If an application did not need to be tuned as stiff as this, then you could use the PST simulator to detune the motor to the desired bandwidth. A followup Bode Measurement can verify that the simulated response is correct.


Use the boxes in the **Loop Gains** tab to change tuning gains until the desired frequency response is achieved.

Measurement		Tuning		Plots		Cursors	
Loop Gains		Forward Filters		Feedback Filters		Read/Write	
Velocity Loop Gains:				Position Loop Gains:			
Proportional:	<input type="text" value="0.050"/>	Proportional:	<input type="text" value="59.049"/>				
Integral:	<input type="text" value="1.000"/>	Integral:	<input type="text" value="0.000"/>				
Feed Forwards:							
Friction:	<input type="text" value="0.014"/> (A)	Velocity:	<input type="text" value="1.000"/>				
Current:	<input type="text" value="0.000"/> (A)	Acceleration:	<input type="text" value="0.000"/> (mA/rad/s <sup>2</sup> )				


The de-tuning of velocity loop proportional and integral gains simulated that the bandwidth of the servo has been detuned from ~100 Hz to ~30 Hz.

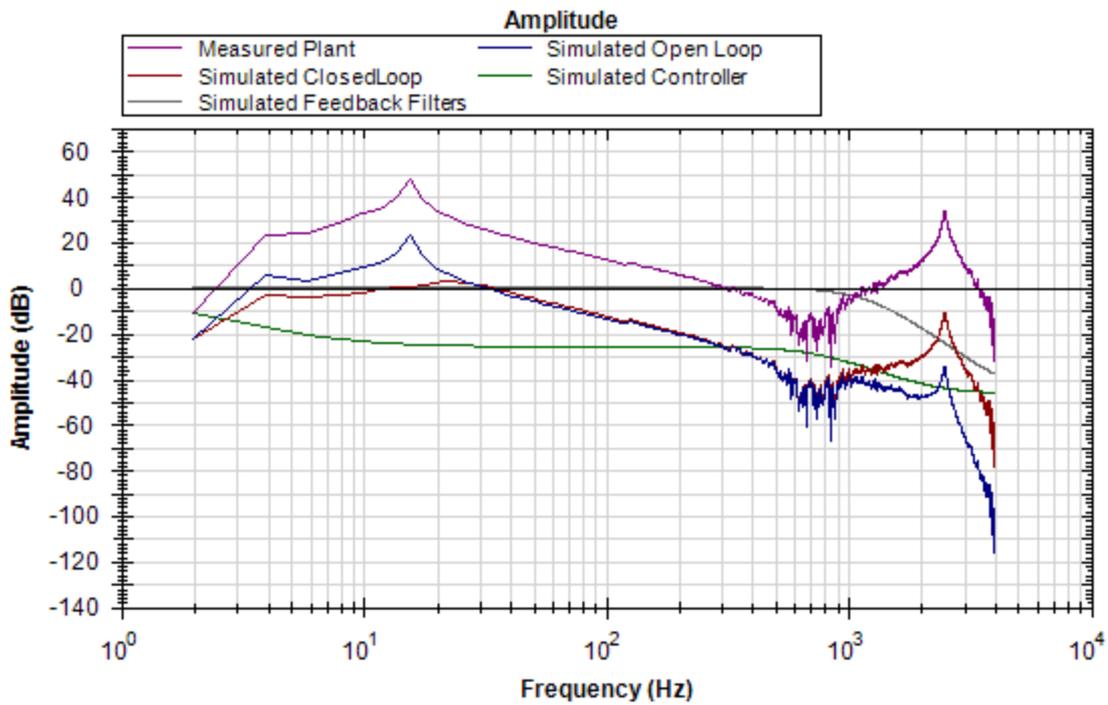

Next, write the tuning parameters to the drive using the **Write Tuning** button on the **Read/Write** tab.

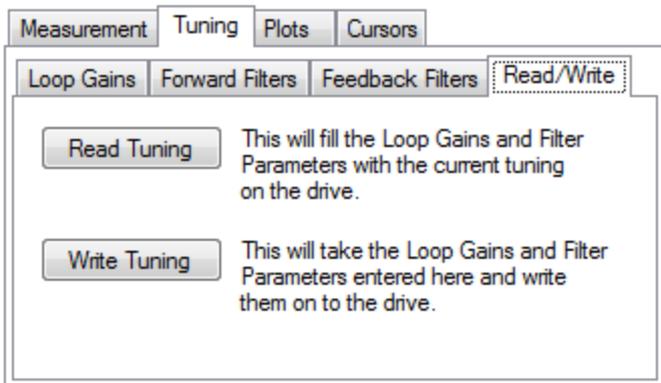

Now, complete a Bode Plot measurement to compare the simulated result with the new measured result.

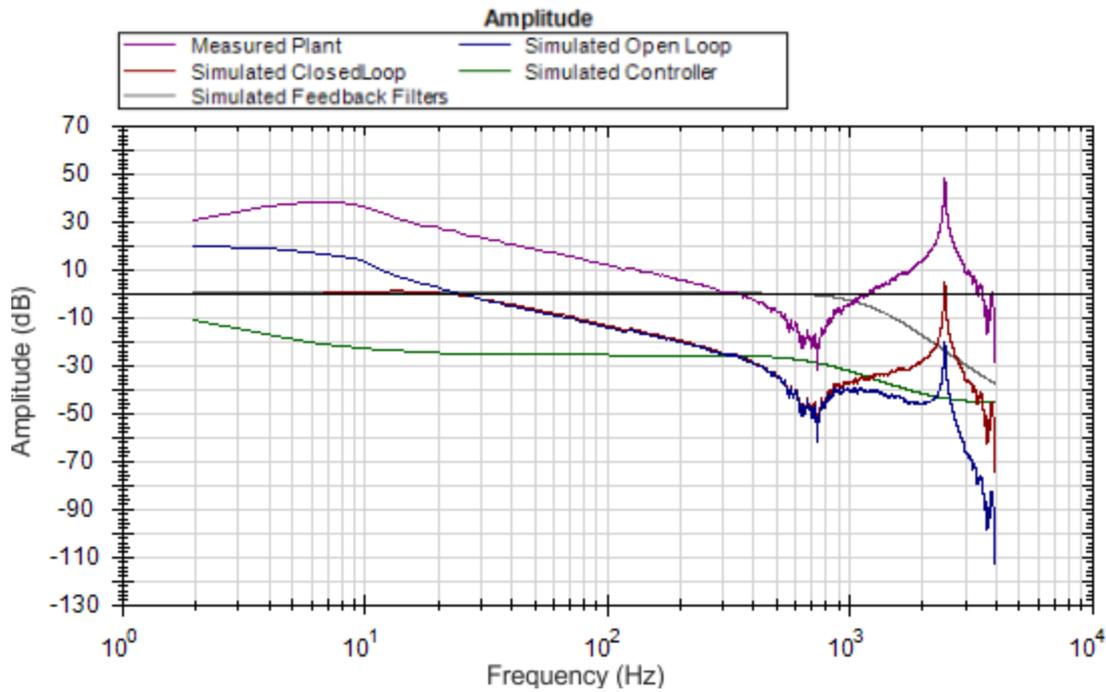


The new measured Bode Plot indicates we achieved slightly lower than 30 Hz bandwidth. The servo is stable, and tuning can be refined until desired performance is reached.

#### Simulating Filters with the Performance Servo Tuner

Resonances add many challenges to tuning a servo. Using the correct filter in an application can greatly improve system performance when resonances are present.

The Bode plot in this example shows a sharp, high-magnitude resonance at 2500 Hz. Because this is the only resonance, this is an indicator that a resonator (a tunable notch) filter may increase performance.


Click on the **Forward Filters** tab:

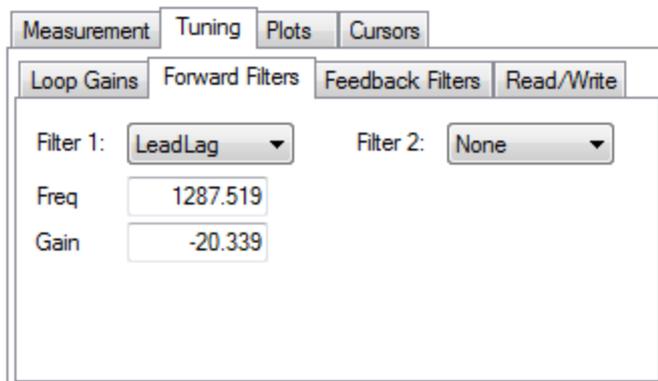


The results of the autotune are still on the drive, and provide adequate tuning. A lead lag filter is the default tuning filter, and is a good general case filter for most servo loops.

Because this test fixture has such a prominent single resonance, we can improve performance (and reduce noise) by placing a notch filter at this resonance.

By tuning a Resonator to best cancel the resonance in the plant, the resonance in the open loop, and therefore the closed loop can be minimized.

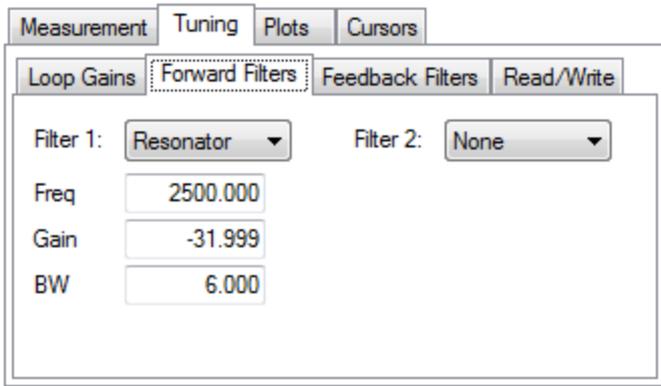

The resulting frequency response using the above resonator configuration is shown below:

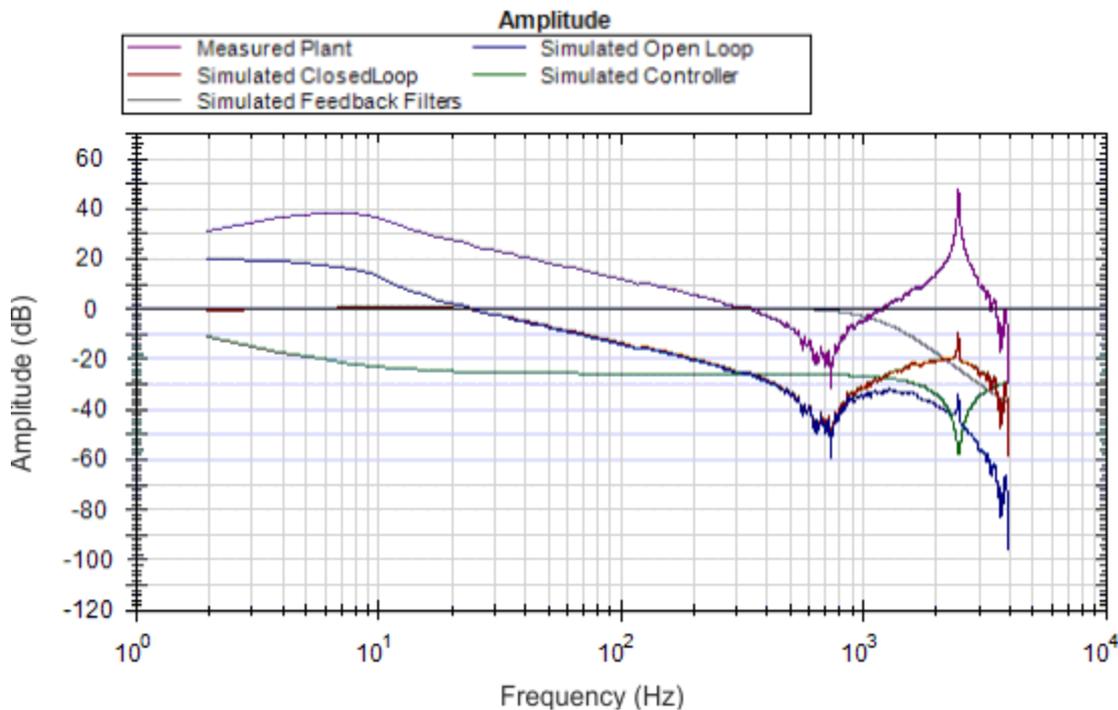

Notice the attenuation of the resonance in the blue and red traces (open loop and closed loop, respectively).

### Using Filters to Reduce Noise

To reduce noise, it is best to place filters in the feedback path. This placement attenuates the noise resulting from a noisy encoder being amplified by the current loop. This noise can be filtered by a forward path filter, however if a filter is placed in the forward path that introduces phase lag (like a lowpass), then your motion profile will exhibit that phase lag in the command signal. If the filter is placed in the feedback path, this lag will be avoided.

## 17.4 Tuning Guide

### 17.4.1 Overview

This section covers tuning the velocity and position loops in the AKD. Servo tuning is the process of setting the various drive coefficients that are needed for the drive to optimally control the servo motor for your application. There are different ways to tune, and several are covered here. We will give you guidance on what the different methods of tuning are and when to use them.

The AKD works in three major operation modes: torque, velocity, and position operation mode. No servo loop tuning is required for torque mode. Velocity loop and position loop tuning are covered below.

The AKD has an auto tuner that will provide the tuning that many applications will need. This section describes the tuning process and how to tune the AKD, specifically for cases where the user does not want to use the auto tuner.

Tuning in this section will focus on tuning in the time domain. This means that we will look at the velocity or position response vs. time as the criteria we use to decide how well tuned a control loop is tuned.

### 17.4.2 Determining Tuning Criteria

Choosing the proper specifications for a machine is a prerequisite for tuning. Unless you have a clear understanding of the type of performance needed to push the machine into production, the tuning process will cause more problems and headaches than it solves. Take time to layout ALL the requirements of the machine—nothing is too trivial to consider.

- Determine what the most important criteria are. The machine was likely designed and developed with a certain performance in mind. Include ALL performance criteria in the specification. Do not concern yourself with whether or not the criteria sound scientific. (i.e. If the motion needs to visibly look smooth, put it in the specification. If it can't have any noise, put it in the specification.) At the end of the development phase, the machine's performance should match the performance previously set in the specification. This will ensure that the machine meets its performance goals and that it is ready for production.
- Test the machine with realistic motion. Do not simply tune the machine to make short linear motion, when it will make long, s-curve motions in the real world. Unless you test the machine with realistic motion, there is no way to determine if it is ready for production.
- Determine some specific, quantitative criteria for identifying unacceptable motion. It's better to be able to tell when a motion is unacceptable than to try and figure out the exact point where acceptable motion becomes unacceptable. Here are some examples of motion criteria:
  1. +/- x position error counts during the entire motion.
  2. Settling within +/- x position error counts, within y milliseconds.
  3. Velocity tolerance of x% measured over y samples.
- It is important to focus on the things that will get the machine into production with reliable performance, based on a fundamental understanding of the system.

After you have constructed a detailed servo performance specification, you are now ready to start tuning your system.

### 17.4.3 Before You Tune

In the worst case, if something goes wrong during tuning, the servo can run away violently. You need to make sure that the system is capable of safely dealing with a servo run away. The drive has several features that can make a servo run away safer:

- Make sure that the limit switches turn the drive off when tripped. If a complete run away occurs, the motor can move to a limit switch very quickly.
- Make sure the max motor speed is set accurately. If a complete run away occurs, the motor can reach max speed quickly and the drive will then disable.


### 17.4.4 Closed Loop Tuning Methods

The closed loop control loop is responsible for the desired position and / or velocity (trajectory) of the motor and commanding the appropriate current to the motor to achieve that trajectory. The challenge in closed loop control loops is to make a system that not only follows the desired trajectory, but also is stable in all conditions and resist external forces, and do all of this at the same time.


When in velocity operation mode, only the velocity loop is tuned. When in position operation mode, both the velocity and position loops must be tuned.

#### 17.4.4.1 Tuning the Velocity Loop

The velocity loop on the AKD consists of a PI (proportional, integral) in series with two anti-resonance filters (ARF) in the forward path and two anti-resonance filters in series in the feedback path.

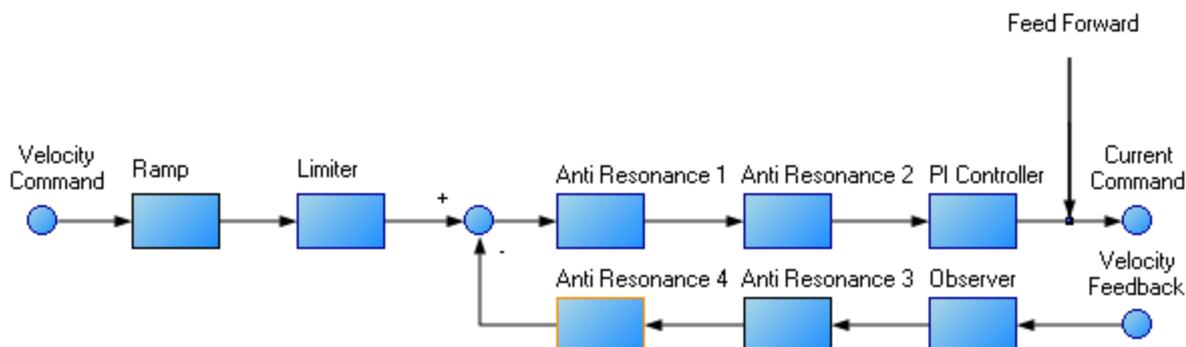

To perform basic tuning of the velocity loop, you can use just the PI block and set ARF1 and ARF2 to unity (no effect) and set the observer to 0 (no effect). Using just the PI block simplifies the process of tuning the velocity loop. To start tuning you can adjust the PI Controller block first. A simplified velocity loop without anti-resonant filters and observer is shown below. This is how you can think of the loop before the anti-resonant filters and observer is used.

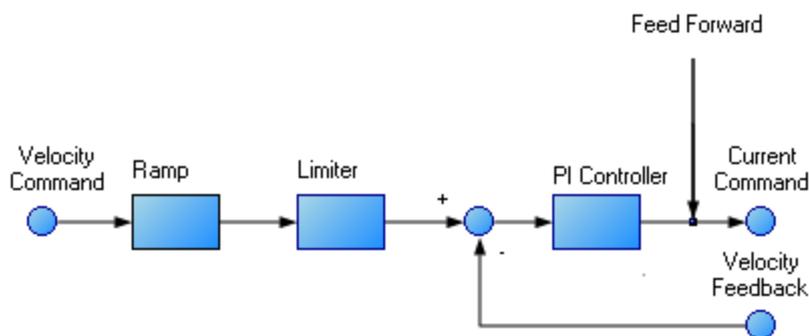

Procedure for simple velocity loop tuning:

1. Set DRV.OPMODE to velocity or position, as appropriate for your application. If DRV.OPMODE is set to position, set VL.KVFF to 1.0.
2. Set VL.KP to 0.
3. Set VL.KI to 0.
4. Set service motion to make a motion that is similar to the move speeds that will be used in the real application. Do not set the service motion to a speed higher than  $\frac{1}{2}$  of the maximum motor speed, to allow for safe overshoot during tuning. Set acceleration to an appropriate value for your application. Set service motion to reversing. Set time1 and time2 equal to 3 times the expected settling time for the system. 1.0 second is a reasonable value for time1 and time2, if you don't know the expected settling time.
5. Enable the drive and start the service motion. You should see no motion, as there are no velocity loop tuning gains at this point.
6. When adjusting VL.KP and VL.KI, below record VL.FB and VL.CMD. These are the traces that are used to determine the performance of the velocity loop.


Channels						
Time-base and Trigger						
Service Motion						
Servo Gains						
Observer						
All Gains						
AR F						
Id	Source	Color	Hide	Y Axis	Filter	Filter Freq...
1	Current feedback (IL.FB)	Red	<input type="checkbox"/>	Current	<input type="checkbox"/>	400
2	Velocity command (VL.CM...)	Green	<input type="checkbox"/>	Velocity	<input type="checkbox"/>	400
3	Velocity feedback (VL.FB)	Blue	<input type="checkbox"/>	Velocity	<input type="checkbox"/>	400
4	None	Purple	<input type="checkbox"/>	Default	<input type="checkbox"/>	400
5	None	Orange	<input type="checkbox"/>	Default	<input type="checkbox"/>	400
6	None	Yellow	<input type="checkbox"/>	Default	<input type="checkbox"/>	400

7. Adjust VL.KP. Keep increasing VL.KP by a factor of 2 until you either:


- Hear an objectionable noise from the system (buzzing, humming, etc) or
- See velocity overshoot. No velocity overshoot should be present when using only VL.KP.
- When you reach one of the limits above, decrease VL.KP to the value where there were no objectionable noises or overshoot.

8. Adjust VL.KI. Increase VL.KI by a factor of 1.5 until you either:

- Hear or see objectionable noise or shuddering from the system
- See > 15% overshoot
- Here is an example of 15% overshoot. This is zoomed in view of a service motion commanded to 1000 RPM (location 1), where the overshoot peaks at 1150 RPM (location 2).

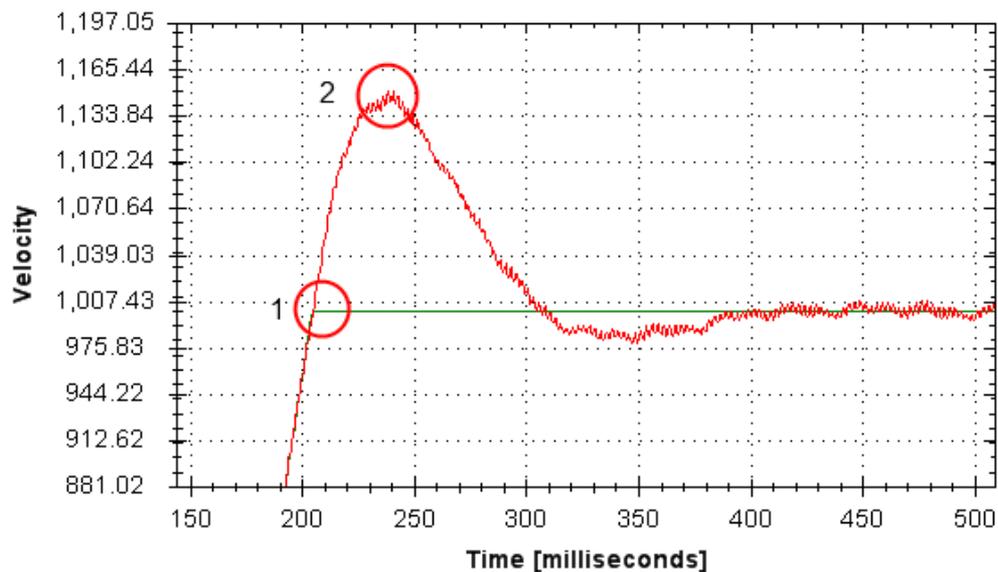

- Here is an example of 11 overshoots. Each overshoot is shown by a red circle.

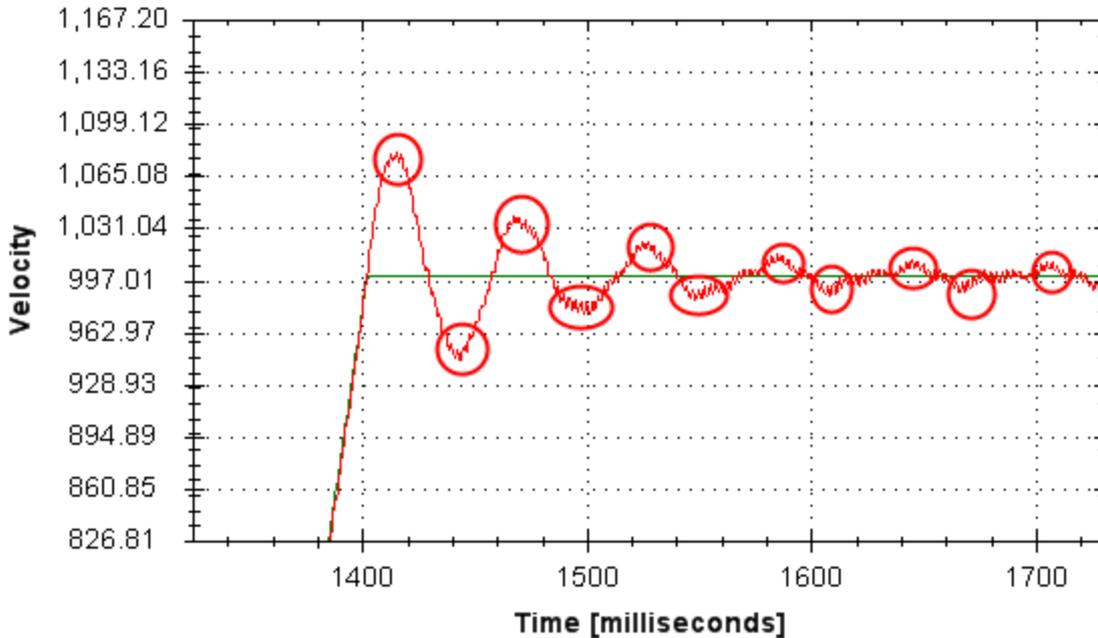


- When you reach one of the limits above, decrease VL.KI to the value where there were no objectionable noises or overshoot.

9. Stop the service motion

**17.4.4.2 Tuning the Position Loop**

The position loop is a second loop that builds upon a correctly tuned velocity loop to provide accurate control over position. The position loop is a simple element that consists of a PI loop. It is simplest to tune the P and I terms in the velocity loop and use only the P term in the position loop.

At most, use only three non-zero P and I terms from both the velocity loop and the position loop. One combination would be VL.KP, VL.KI, and PL.KP. Another valid combination would be VL.KP, PL.KP, and PL.KI. The VL.KP, VL.KI, and PL.KP combination is shown here.

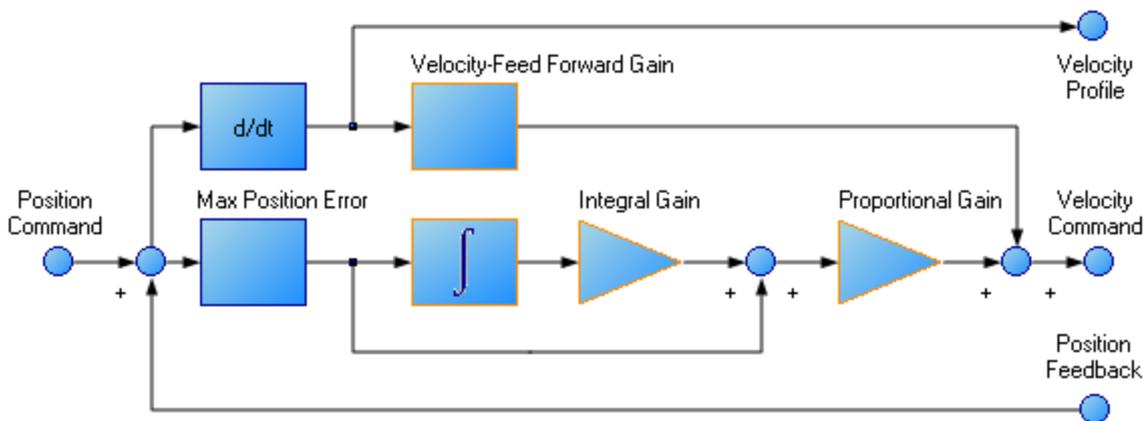

Procedure for tuning position loop:

- Set VL.KVFF to 1
- Increase PL.KP until either:
  - You see 25% overshoot, or
  - You see > 3 overshoots, or

- You hear objectionable noises from the system.
- When you reach one of the limits above, decrease PL.KP to the value where there were no objectionable noises or overshoot.


### 17.4.5 Torque Feedforward Tuning Methods

The torque based feedforward terms on the AKD effectively model the physics of your motor and allow the drive to command the appropriate current, even before the encoder has time to send data back to the drive. Torque based feedforward terms allow you to lower following error with virtually no stability penalty.

#### 17.4.5.1 Shape Based Feedforward Tuning

To adjust IL.KAFF:

- Tune the VL.KP and VL.KI as shown above in the velocity loop tuning section. Set DRV.OPMODE to velocity (or set PL.KP and PL.KI to 0 and vl.kvff to 1).
- Set up a short, repeating service motion with accelerations that are representative of the moves you will use in your application (exact values for acceleration are not critical).
- Turn up IL.KAFF until the position error (PL.ERR) is proportional to the inverted velocity command. The adjustment of IL.KAFF will focus on removing bumps on acceleration and deceleration. The picture below has an ideal value of IL.KAFF of 1.7.

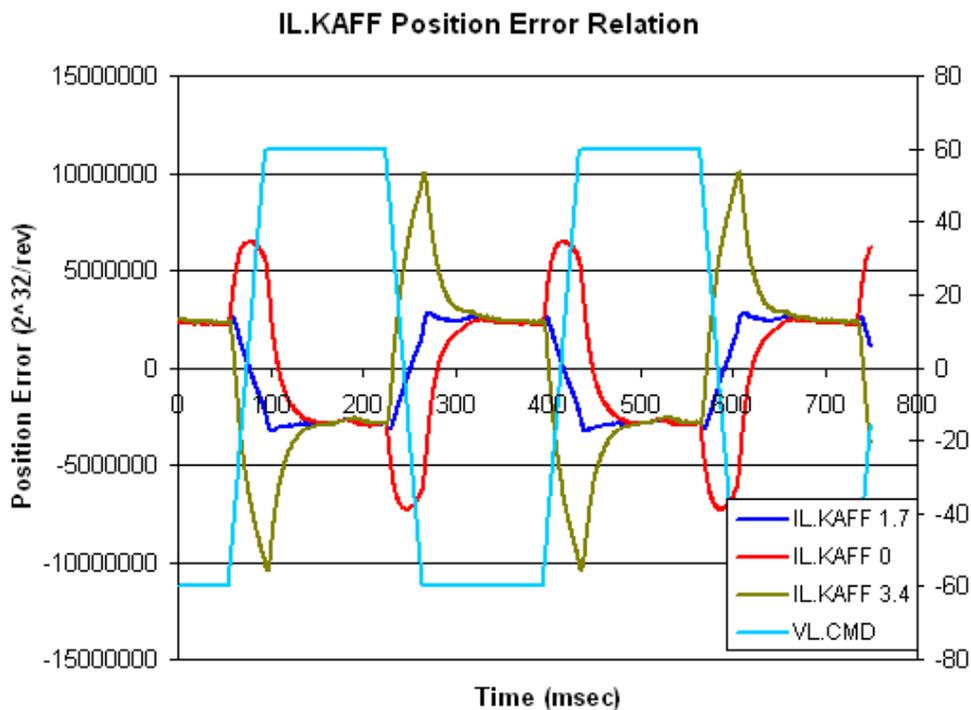

### 17.4.6 Using Anti-Resonance Filters


The AKD has four anti-resonance filters. Two filters are in the forward path and two are in the feedback path.

#### Similarities

- Both types are typically used to enhance stability and performance of the system.

#### Differences


- Forward path filters result in higher phase lag in closed loop system response.
- Forward path filters limit spectrum from reaching the motor / feedback path filters only filter the feedback after it has been to the motor.

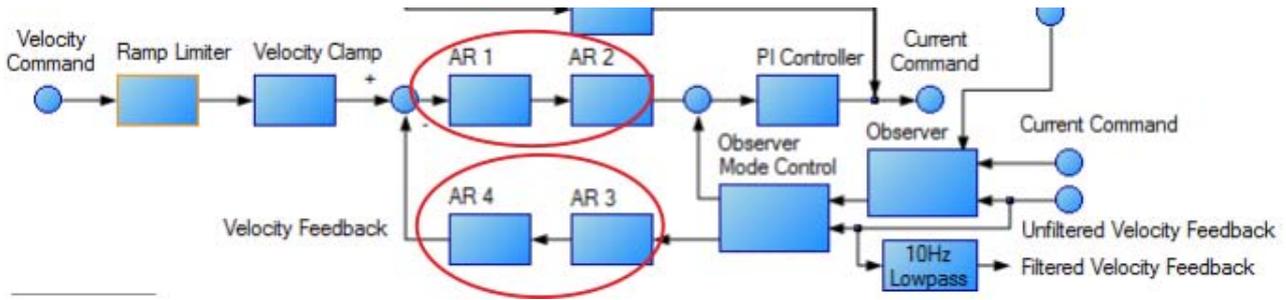

### 17.4.6.1 Types of Anti-Resonance Filters

#### Low Pass

A low pass filter allows signals through below a corner frequency and attenuates the signals above the same corner frequency. The behavior at the corner frequency can be specified with the low-pass Q.

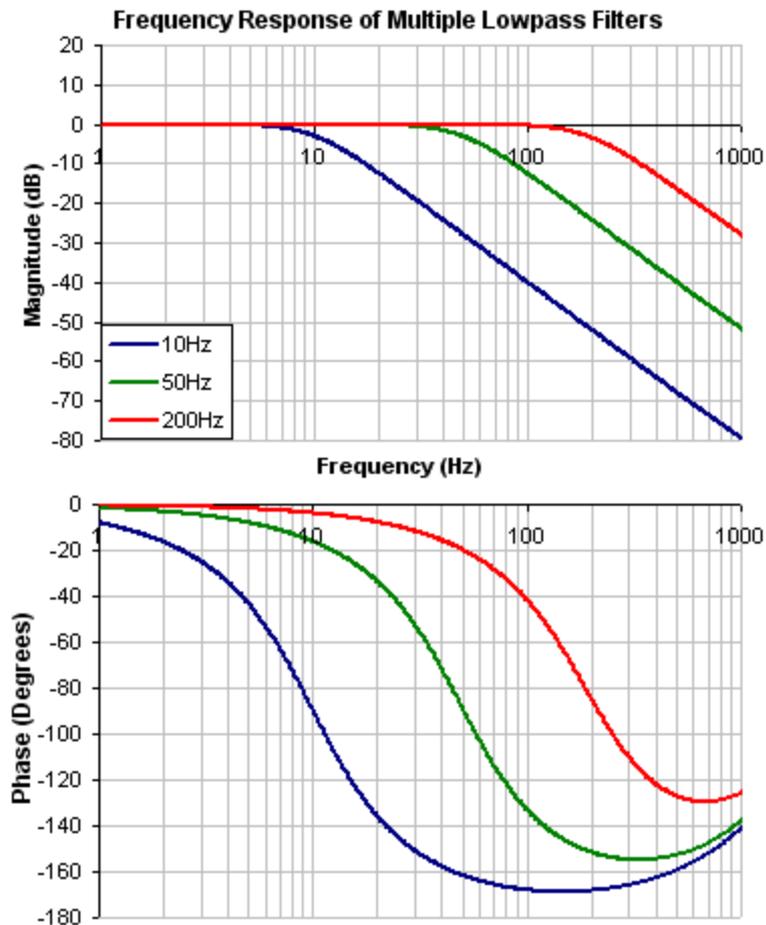

To specify a lowpass filter, you must specify the frequency and Q for both the zero and pole on anti-resonance filter 1. To do this, see the following example using the terminal commands that sets:

- Filter Type = Biquad
- Zero frequency = 700 Hz (This is the Lowpass cutoff frequency)
- Zero Q = 0.707

- Pole frequency = 5000 Hz
- Pole Q = 0.707

VL.ARTYPE1 0

VL.ARZF1 700


VL.ARZQ1 0.707

VL.ARPF1 5000

VL.ARPQ1 0.707

### Lead Lag

A lead lag filter is a filter that has 0 dB gain at low frequencies and a gain that you specify at high frequencies. You also specify the frequency that the gain at which the transition occurs.

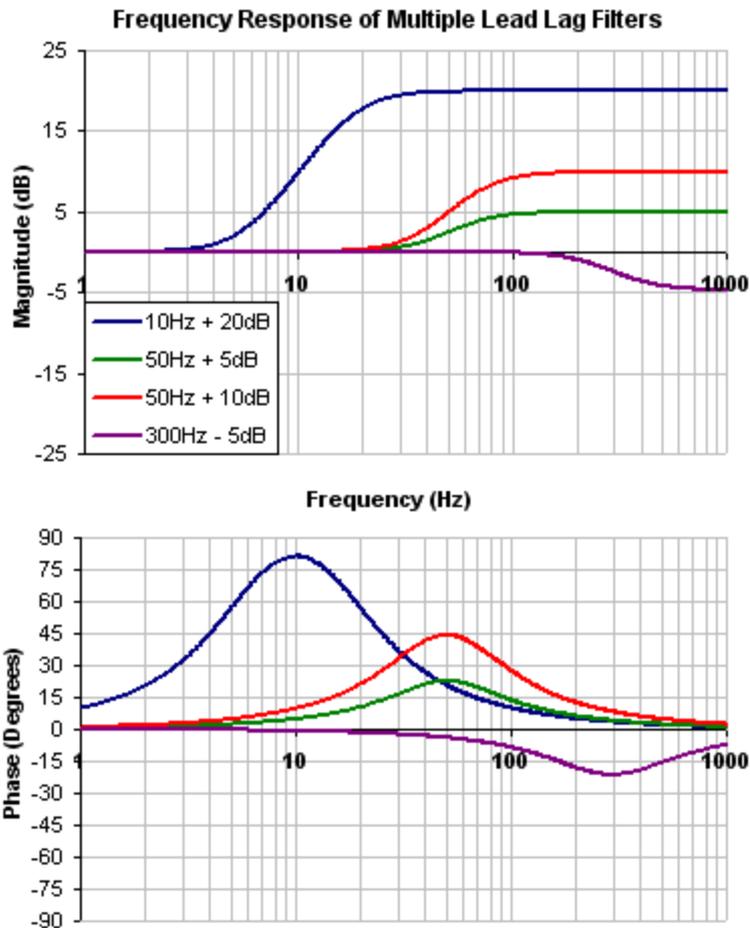

To specify a Lead Lag filter, you must specify the Center Frequency and high frequency Gain (dB). To do this, see the following example by clicking on the Velocity Loop:

Click on Velocity Loop (1), then select the AR1 Tab (2), using the Filter Type drop-down, select Lead Lag (3), lastly, enter the desired Center Frequency and Gain of the Lead Lag filter (4).

Device Topology

- Start Page
- no-name (Offline)\*
  - Settings
    - Communication
    - Power
    - Motor
    - Feedback 1
    - Feedback 2
    - Foldback
    - Brake
    - Units
    - Modulo
    - Limits
    - Home
    - Current Loop
      - Velocity Loop** 1
      - Service Motion
      - Encoder Emulation (X9 Cf)
      - Analog Input
      - Analog Output
      - Digital I/O
      - Programmable Limit Switch
      - Enable/Disable
      - Position Capture
      - Motion Profile Table
      - Performance Servo Tuner
      - Slider Tuning
      - Motion Tasks
      - Drive Motion Status
      - Faults and Warnings

## Velocity Loop

The parameters for controlling the velocity of the motor.

Ramp Limiter | Velocity Clamp | **AR Filter** | PI Controller | Observer | Source | Status

Select AR Type:

AR 1	Lead Lag
AR 2	Unity Gain
AR 3	Low Pass
AR 4	Unity Gain

Filter Type: 3 - Lead Lag 3 Less <<

Edit Parameters

Center Frequency: 500,000 4


Gain (dB): 0,000

Numerator: Frequency: 500,000 Hz Q: 0,500

Denominator: Frequency: 500,000 Hz Q: 0,500

### Notch

A notch filter changes gain at a specific frequency. You specify the frequency at which the gain change occurs (Frequency (Hz)), how wide of a frequency range the cut occurs (Q), and how much the gain changes (Notch Depth (dB)).

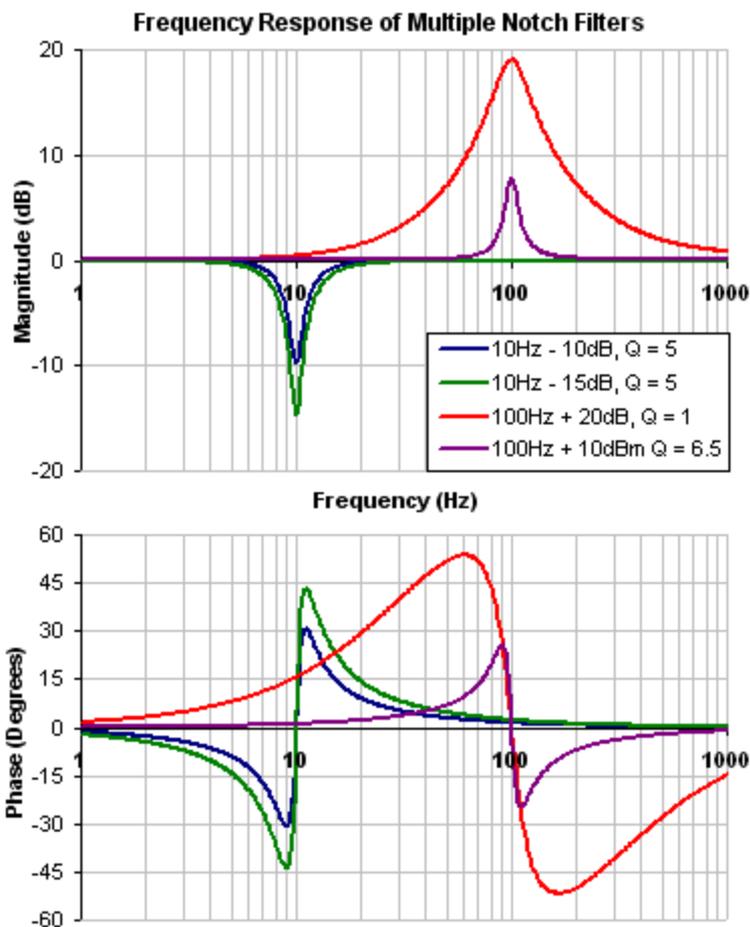

To specify a notch filter, you must specify the Frequency (Hz), Depth (dB) and Width (Q) of the notch. To do this, see the following example by clicking on the Velocity Loop:

Click on Velocity Loop (1), then select the AR1 Tab (2), using the Filter Type drop-down, select Notch (3), lastly, enter the desired Frequency, Depth and Q of the Notch filter (4).

The screenshot displays the 'Velocity Loop' configuration window. On the left, the 'Device Topology' tree shows the 'Velocity Loop' selected and circled in red (1). The main area shows a block diagram of the velocity control loop, including blocks for Ramp Limiter, Velocity Clamp, AR Filter (AR 1-4), PI Controller, Observer, and 10Hz Lowpass. Below the diagram, the 'AR Filter' configuration panel is shown. In this panel, the 'AR 1 Notch' filter is selected in a table (2). The 'Filter Type' is set to '2 - Notch' (3). The 'Edit Parameters' section shows the following values: Frequency (Hz) = 500,000, Depth (dB) = 0,000, and Q = 0,600 (4). The Numerator and Denominator sections are also visible, both set to 500,000 Hz.

## Biquad


A biquad is a flexible filter that can be thought up as being made up of two simpler filters; a zero (numerator) and a pole (denominator). In fact, the pre-defined filters mentioned above are really just special cases of the biquad.

Both the zero (numerator) and the pole (denominator) have a flat frequency response at low frequencies and a rising frequency response at high frequencies. The transition frequency and damping must be specified for both the numerator and denominator.


Analyzing the numerator and denominator, the frequency response calculation is simple:

If the numerator and denominator are plotted in dB, the biquad response is numerator – denominator. Understanding how the numerator and denominator work is crucial in understanding how a biquad frequency response is created.

Below is an example of a biquad filter similar to a Lead Lag filter type. To help understand how to determine the frequency response of the biquad, the numerator and denominator response have been plotted. If the denominator is subtracted from the numerator, the biquad response is the result.

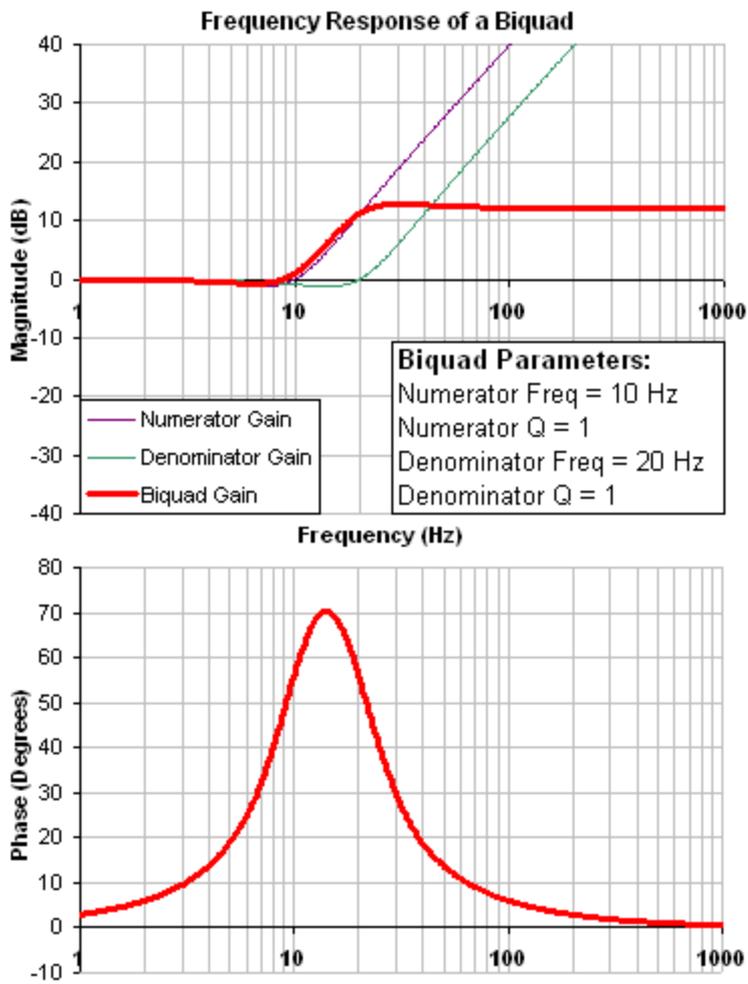


The biquad filter is very flexible, which allows custom filters to be designed. Below is an example of a resonance filter using a biquad. Notice how the high Q values affect the numerator and denominator. This gives a biquad frequency response similar to a mechanical resonance.

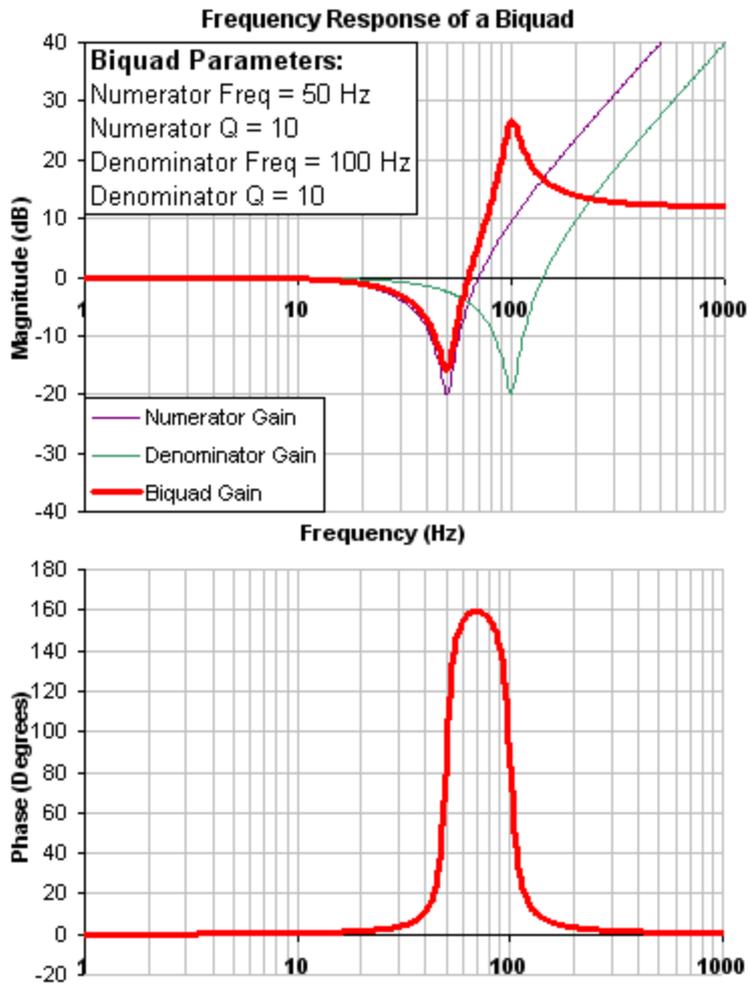

The previous two examples used a numerator frequency lower than the denominator frequency, yielding a positive gain in high frequencies. If the denominator frequency is lower than the numerator frequency, then high frequencies will have a negative gain.

Below is an example where the numerator frequency is higher than the denominator. Notice the high frequencies have a negative gain.

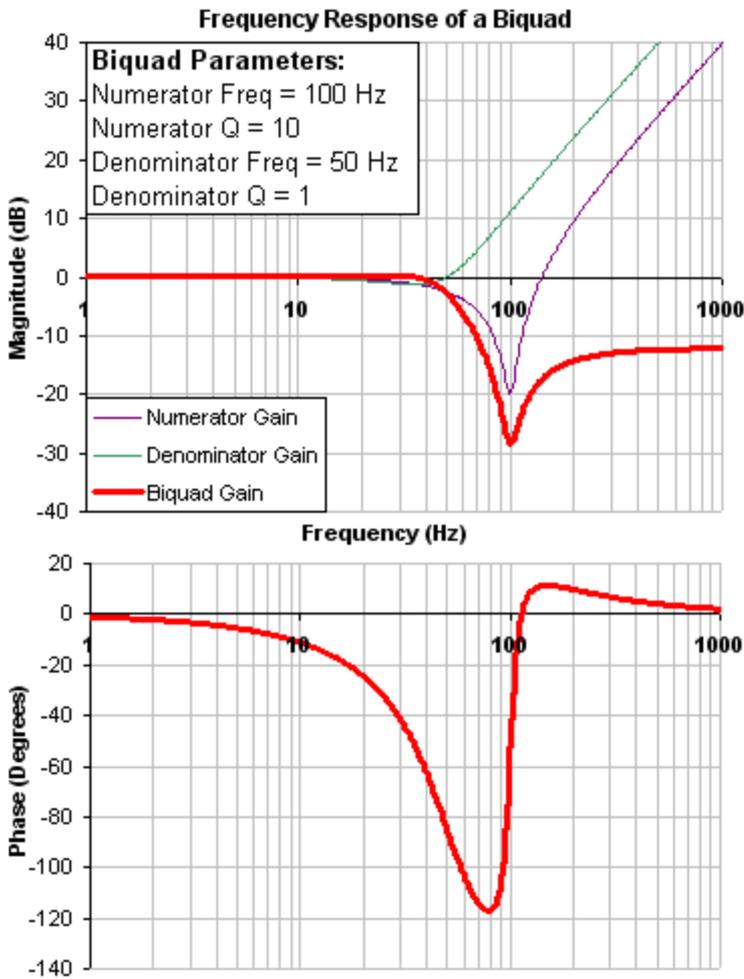

To specify a biquad filter, you must specify the frequency and Q for both the zero and the pole on anti-resonance filter 3. To do this, see the following example using the terminal commands that sets:

- o Filter Type = Biquad
- o Zero frequency = 100 Hz
- o Zero Q = 0.7
- o Pole frequency = 1000 Hz
- o Pole Q = 0.8

```
VL.ARTYPE3 0
VL.ARZF3 100
VL.ARZQ3 0.7
VL.ARPF3 1000
VL.ARPQ3 0.8
```

### 17.4.6.2 Biquad Calculations

In the s-domain, the linear biquad response is calculated:

$$\text{Biquad Frequency Response} = \frac{s^2 + \frac{\omega_N}{Q_N} s + \omega_N^2}{s^2 + \frac{\omega_D}{Q_D} s + \omega_D^2}$$

To convert from idealized s-domain behavior to a more realistic z-domain behavior, we convert using a pole / zero transform. To calculate the frequency response for an individual frequency:

$$t = 62.5 \mu \text{sec}$$

$$N_{Rad} = 1 - (2Q_N)^{-2}$$

$$N_{2Unscaled} = 1$$

$$\text{if}(N_{Rad} > 0): N_{1Unscaled} = -2e^{-2\omega_N \zeta_N t} \cos(\omega_N t \sqrt{1 - \zeta^2})$$

$$\text{if}(N_{Rad} \leq 0): N_{1Unscaled} = -2e^{-2\omega_N \zeta_N t} \cosh(\omega_N t \sqrt{1 - \zeta^2})$$

$$N_{0Unscaled} = e^{-2\omega_N \zeta_N t}$$

$$D_{Rad} = 1 - (2Q_D)^{-2}$$

$$D_2 = 1$$

$$\text{if}(D_{Rad} > 0): D_1 = -2e^{-2\omega_D \zeta_D t} \cos(\omega_D t \sqrt{1 - \zeta^2})$$

$$\text{if}(D_{Rad} \leq 0): D_1 = -2e^{-2\omega_D \zeta_D t} \cosh(\omega_D t \sqrt{1 - \zeta^2})$$

$$D_0 = e^{-2\omega_D \zeta_D t}$$

$$N_{Scale} = \frac{N_{0Unscaled} + N_{1Unscaled} + N_{2Unscaled}}{D_0 + D_1 + D_2}$$

$$N_2 = N_{2Unscaled} / N_{Scale}$$

$$N_1 = N_{1Unscaled} / N_{Scale}$$

$$N_0 = N_{0Unscaled} / N_{Scale}$$

$$\angle_z = \omega t = 2\pi * freq * t$$

$$Num_{Re} = N_2 \cos(2\angle_z) + N_1 \cos(\angle_z) + N_0$$

$$Num_{Im} = N_2 \sin(2\angle_z) + N_1 \sin(\angle_z)$$

$$Den_{Re} = D_2 \cos(2\angle_z) + D_1 \cos(\angle_z) + D_0$$

$$Den_{Im} = D_2 \sin(2\angle_z) + D_1 \sin(\angle_z)$$

$$Gain_{dB} = 20 \log_{10} \left( \frac{\sqrt{Num_{Re}^2 + Num_{Im}^2}}{\sqrt{Den_{Re}^2 + Den_{Im}^2}} \right)$$

$$Phase_{deg} = \frac{180}{\pi} \left( \tan^{-1} \left( \frac{Num_{Re}}{Num_{Im}} \right) - \tan^{-1} \left( \frac{Den_{Re}}{Den_{Im}} \right) \right)$$

### 17.4.6.3 Common Uses Of Anti-Resonance Filters

Low pass filters in the feedback path. This is a common way to deal with noisy feedback sensors. When used in combination with noisy feedback sensors, significant reduction in audible noise can result.

Lead / lag filters in the forward path. This is a common way to achieve phase lead for control loops without exciting high frequency resonances.

Low pass filters in the forward path. This is a common way to limit high frequency energy from reaching a system that can not productively use energy at these high frequencies. This is also used to lower the effect of system resonances over a wide range of frequencies.

Notch filters are used to cancel system resonances. Notch filters are designed to be the opposite in amplitude of system resonances. Notch filters are applied to very specific frequencies, and therefore you must know your system resonance frequencies accurately to use them effectively.

## 18 Scope

### 18.1 Overview

The scope allows you to plot up to six different parameters from the drive. Use **Full View** and **Normal View** to toggle between the scope setup (normal) and a larger view of only the scope output (full). You can configure, save, and restore scope settings from the normal view. The lower right corner of the normal view also includes a box that indicates status and drive and scope control buttons (**Enable Drive**, **Start Recording**, and **Refresh**).

### 18.2 Using the Scope

You can set up scope plots using the tabs summarized below:

Tab	Function
Channels	Select data source, plot axes, and plot appearance.
Time Base and Trigger	Select how much data to record and when to start recording the data.
Service Motion	Generate basic motion.
Servo Gains	Adjust the servo loop gains.
All Gains	View all current tuning gains in the drive and manually edit gains.
AR1, AR2, AR3, AR4	Adjust filter settings.
Save and Print	Save the plot as a raw data file or as an image file; email the plot; print the plot; open the data file in Excel.
Measure	Display basic data read from the plots.
Cursors	Turn on the cursors and view the data at the cursor positions.
Display	Pan, zoom, and control the grid and background color.

#### 18.2.1 Scope Channels Tab

The **Channels** tab allows you to select and record up to six channels simultaneously. Select the data to record for each channel from the lists in the **Source**, **Color**, **Y-axis**, and **Filter** and **Filter Frequency** columns. Once a recording is shown on the scope screen, you can click **Hide** to remove a channel from the scope display.

Channels						
Id	Source	Color	Hide	Y Axis	Filter	Filter Frequency
1	Current feedback (IL.FB)	Red	<input type="checkbox"/>	Current	<input type="checkbox"/>	400
2	Velocity command (VL.CM...)	Green	<input type="checkbox"/>	Velocity	<input type="checkbox"/>	400
3	Velocity feedback (VL.FB)	Blue	<input type="checkbox"/>	Velocity	<input type="checkbox"/>	400
4	None	Purple	<input type="checkbox"/>	Default	<input type="checkbox"/>	400
5	None	Purple	<input type="checkbox"/>	Default	<input type="checkbox"/>	400
6	None	Orange	<input type="checkbox"/>	Default	<input type="checkbox"/>	400

##### 18.2.1.1 Source Column

To set a channel to record, click the source you want to set and choose the appropriate channel. You can choose from None (no data is collected on that channel), preset trace types, or enter a user defined trace. Choosing "<User Defined>" allows you to record data from pre-defined locations. These locations are provided by the factory to collect less common values.

Channels						
Time-base and Trigger						
Service Motion						
Motion Tasks						
Servo Gains						
Observer						
All Gains						
Id	Source	Color	Hide	Y Axis	Filter	Filter Frequency
1	Analog input signal (AIN.V)	Red	<input type="checkbox"/>	Analog I/O	<input type="checkbox"/>	400
2	Analog input signal (AIN.V)	Green	<input type="checkbox"/>	Velocity	<input type="checkbox"/>	400
3	Analog output user value (f)	Blue	<input type="checkbox"/>	Velocity	<input type="checkbox"/>	400
4	Analog output value (AOUT)	Purple	<input type="checkbox"/>	Default	<input type="checkbox"/>	400
5	Bus voltage (VBUS.VALUE)	Pink	<input type="checkbox"/>	Default	<input type="checkbox"/>	400
6	Current - U winding of motor	Purple	<input type="checkbox"/>	Default	<input type="checkbox"/>	400
	Current - V winding of motor	Orange	<input type="checkbox"/>	Default	<input type="checkbox"/>	400
	Current command (IL.CMD)	Orange	<input type="checkbox"/>	Default	<input type="checkbox"/>	400

### 18.2.1.2 Color Column

For valid sources, you can click on the color in the Color tab and choose a different color than the default, or create a custom color.

### 18.2.1.3 Hide Column

You can check the **Hide** box to hide a given plot trace. This feature can make it easier to focus on specific data as needed.

### 18.2.1.4 Y-Axis Column

The Y-axis column allows you to choose on which Y-axis the channel will be displayed. Several predefined Y-axis groups exist. Click on the item in the column to change the label for the trace.

### 18.2.1.5 Filter and Filter Frequency Column

Check this box and use the frequency column to apply a low pass filter to the data collected. The filter is applied when the data is collected. It is not applied to data already collected if this is checked after the data is collected.

## 18.2.2 Measure Tab

The measure tab displays basic data reads from the plots.

### 18.2.2.1 AC RMS and True RMS


In the measure tab, there is a column for AC RMS and a column for True RMS. True or full RMS is the full heating value of a signal and includes any DC terms in the value. AC RMS removes any DC value and gives only the RMS value as a measure of a signal's standard deviation.

$$\text{True RMS} = \sqrt{\text{Sum}(x[n]^2)/N} \text{ where } N \text{ is number of points}$$

$$\text{AC RMS} = \sqrt{(\text{True RMS})^2 - (\text{dc or average value})^2}$$

## 18.2.3 Scope Time-base and Trigger Tab

Use the **Time-base and Trigger** tab to select how much data to record and when to start (trigger) recording the data. You can set length of recording in ms and the sampling frequency in Hz. The number of samples is a calculated value displayed for reference. The trigger can be set to trigger immediately when you click **Start Recording** or to trigger when a specified value for a given signal is reached. The default **Time-base and Trigger** view specifies recording time, sampling frequency, and either an immediate trigger or a trigger based on a specified signal. Click the **More** button in this view to specify a given number of samples, sampling frequency, sampling interval, and access additional trigger options.

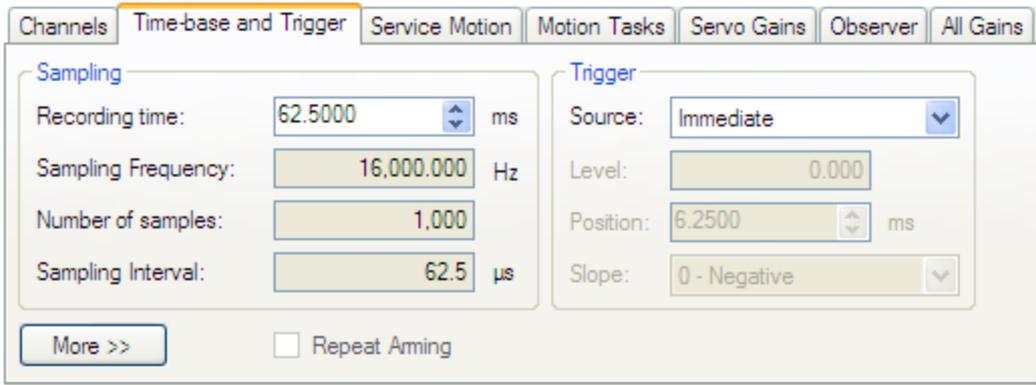


In this tab, you can set length of recording in ms and the sampling frequency in Hz. The number of samples is a calculated value displayed for reference. You can also choose the trigger source to be **Immediate** (triggers as soon as you click the **Start Recording** button) or to be one of many predefined sources.

If you choose a source other than **Immediate**, you can set the level, position, and slope for the trigger value.

- Level sets the value of the source that triggers the recording to start.
- Position sets the amount of time that the scope displays before the trigger occurred.
- Slope sets whether the source data must pass the level value in a positive or negative direction.

An example of triggering is shown below:

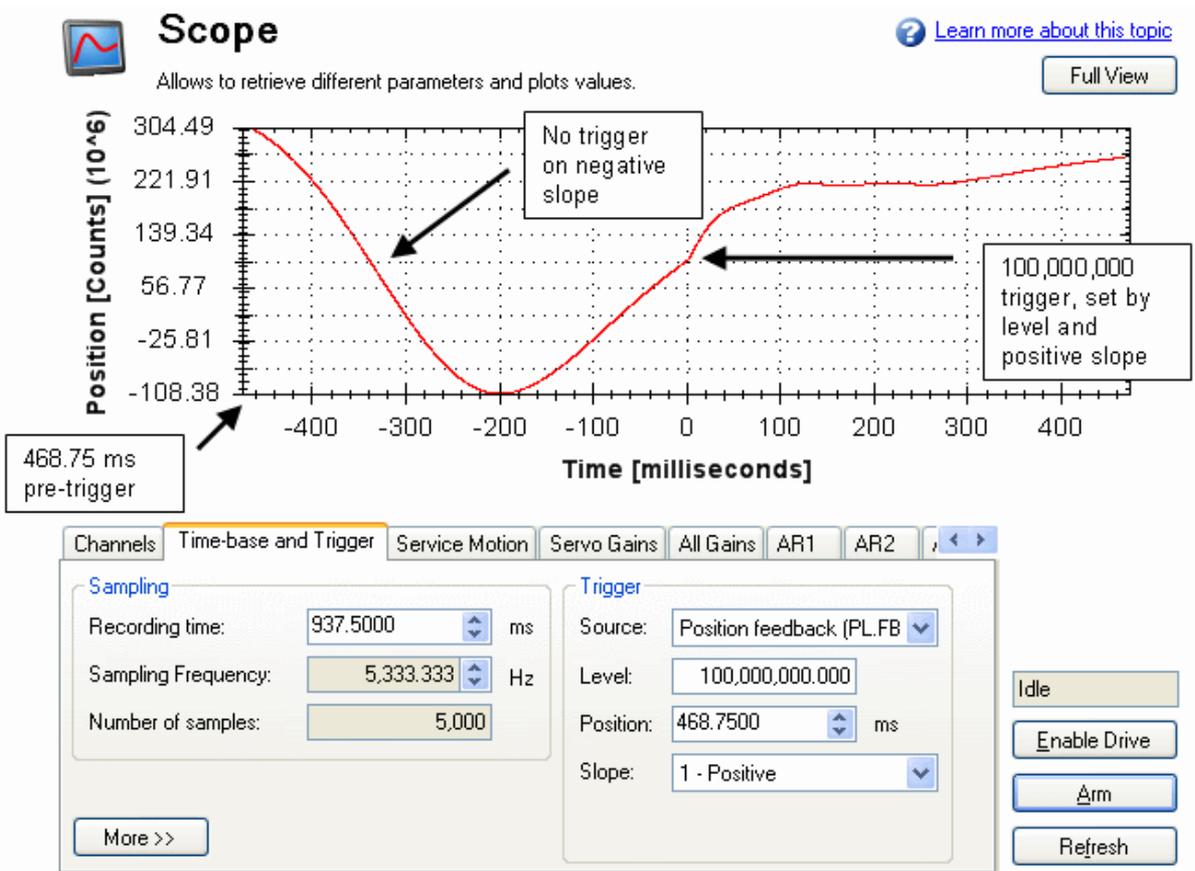

### 18.2.3.1 Scope Time-base and Trigger, More View

Click **More** to display additional options for configuring the time-base and trigger.

Channels	Time-base and Trigger	Service Motion	Motion Tasks	Servo Gains	Observer	All Gains
<b>Sampling</b> Recording time: <input type="text" value="62.5000"/> ms Sampling Frequency: <input type="text" value="16,000,000"/> Hz Number of samples: <input type="text" value="1,000"/> Sampling Interval: <input type="text" value="62.5"/> $\mu$ s <input type="button" value="Less &lt;&lt;"/> <input type="checkbox"/> Repeat Arming		<b>Trigger</b> Type: <input type="text" value="0 - Immediate"/> Source: <input type="text" value="IL_FB"/> Level: <input type="text" value="0.000"/> Position: <input type="text" value="10"/> % Slope: <input type="text" value="0 - Negative"/>				


In the **Sampling** area of this view, you can specify the recording length by entering a sampling frequency and a number of samples. Here, the recording time is a calculated value displayed for reference.

### What is triggering?

Triggering allows you to precisely control the start point of data collected in the scope. For example, if you are looking for a large spike, you can set the trigger to start the scope to begin recording when it sees the large spike. This section describes the triggering functionality of the scope.

### Test Signal

As an example, it is useful to examine variations on a record of a test signal that generates a sawtooth signal. The signal starts at 0 and increases by one every drive sample (1/16,000 second) to a maximum of 9, and then returns to 0. This signal continues indefinitely. The record of this signal is shown below.

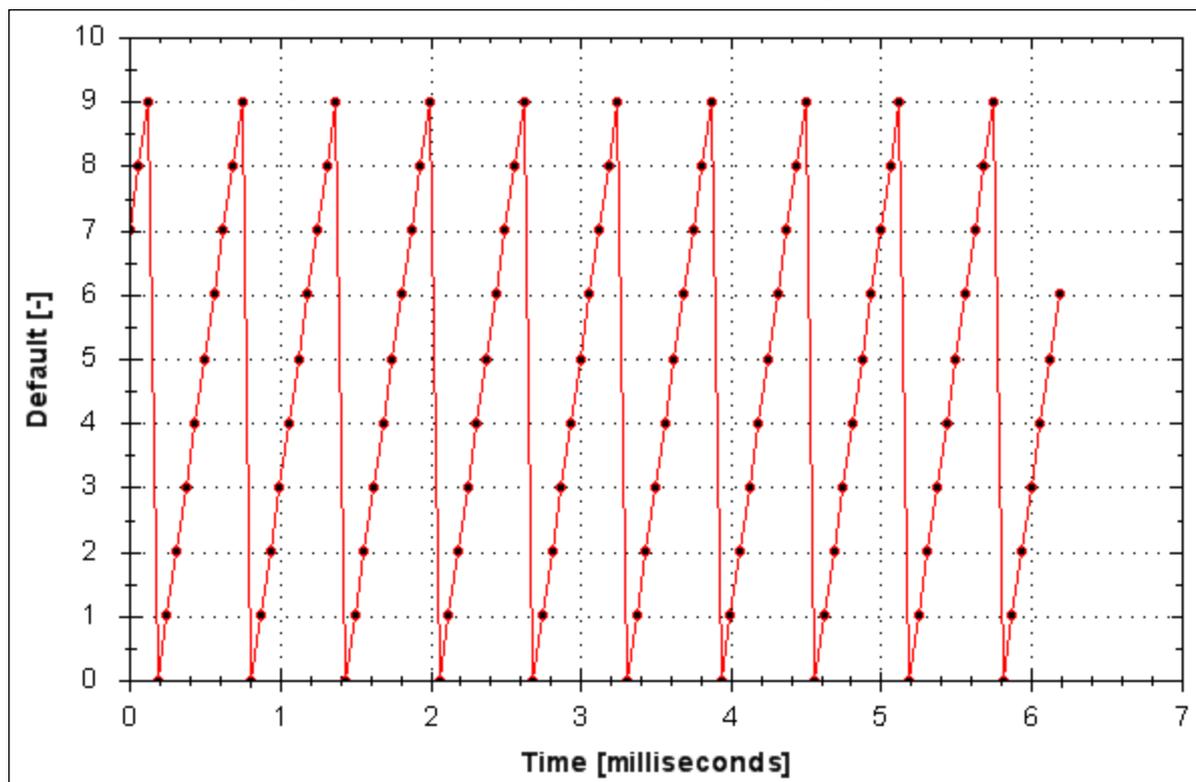

#### 18.2.3.2 Trigger Type

The **Trigger** area in the **More** view offers more flexibility than the default view. You can specify four types of trigger types (REC.TRIGTYPE):

- **Immediate - 0.** This mode will start recording as soon as the recording command (REC.TRIG) is received by the drive.
- **Command / On Next Command - 1.** This trigger type lets you specify a trigger on the next telnet command received by the drive. This is useful in a telnet session via Hyperterminal (or a similar program). WorkBench is constantly sending telnet commands, so this is not typically used in a WorkBench session.
- **Parameter / On Source Signal - 2.** This trigger type lets you specify a trigger source and set of conditions to trigger recording of data. This is very similar to the triggering used on oscilloscopes.
- **Boolean - 3.** This trigger type lets you trigger on a boolean (0 or 1), such as drive active status.


### 18.2.3.3 Trigger Position

Trigger Position (REC.TRIGPOS) allows you to collect data that occurs before the trigger occurs. If you have a rare condition, you may want to see the conditions that led up to it. Trigger position lets you control how much signal is collected before the trigger condition occurred.

Trigger position is specified in units of percent (%). If you specify a trigger position of X% , X% of the data is before 0 ms in the data time and 100-X% (the rest of the data) is at or greater than 0 ms. In the picture below, trigger position is set to 25% (REC.TRIGPOS 25).

In the WorkBench scope, the 0 time point is clear. When collecting the data via REC.RETRIEVE or similar commands, the time is not returned, so some caution should be used when the trigger point is important to understand.

Trigger position is not used in trigger type "Immediate" (TRIGTYPE 0).

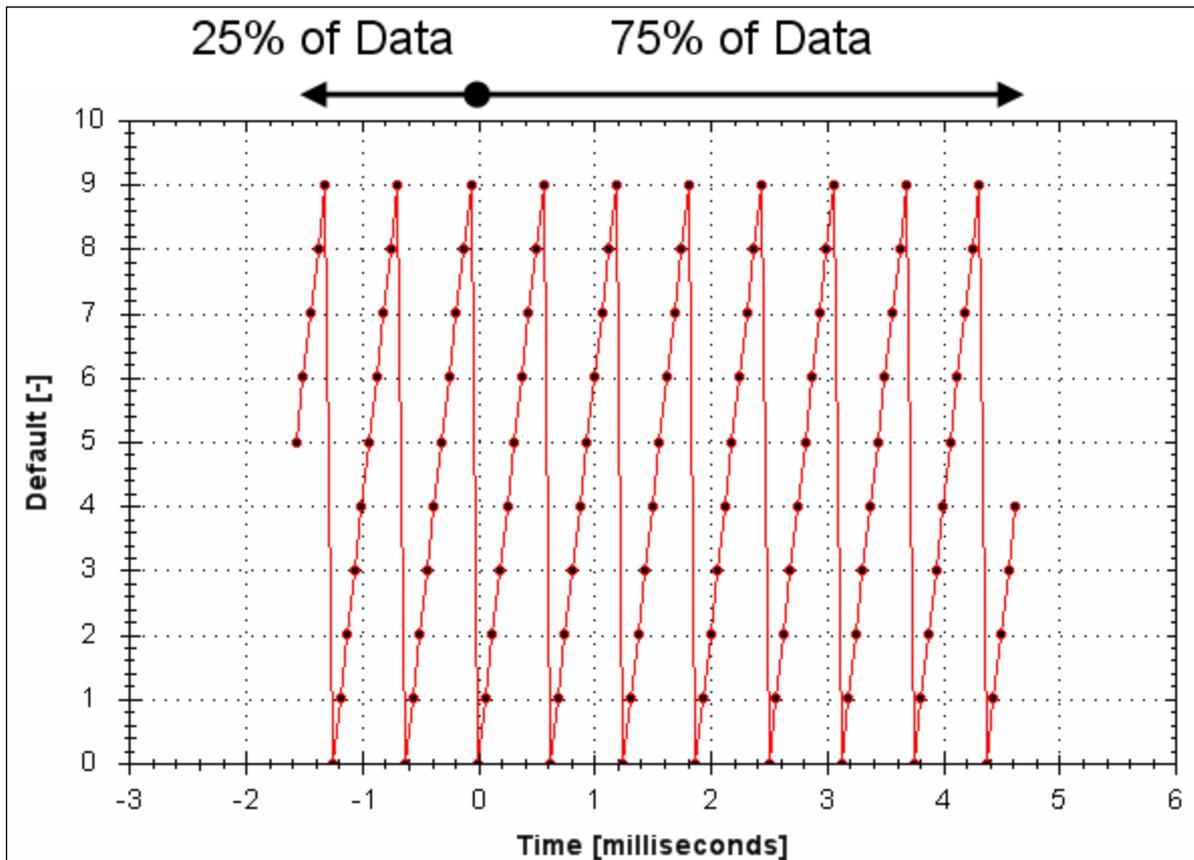

### 18.2.3.4 Trigger Value


The trigger value (REC.TRIGVAL) specifies a target value that should trigger the recording to start. The trigger value is used in trigger type Parameter / On Next Signal only.

The trigger value is not used in the boolean trigger type. Use the trigger slope to set the polarity of the boolean trigger.

When the trigger slope is positive, the trigger value will trigger when:

- The trigger source is less than the trigger value in the previous recording sample
- The trigger source is greater than or equal to the trigger value in the current recording sample

Below is an example showing triggering of trigger value of 3 (REC.TRIGVAL 3) and positive trigger slope (REC.TRIGSLOPE 1). You can see that the recording triggers at time zero when the source reaches the value of 3.

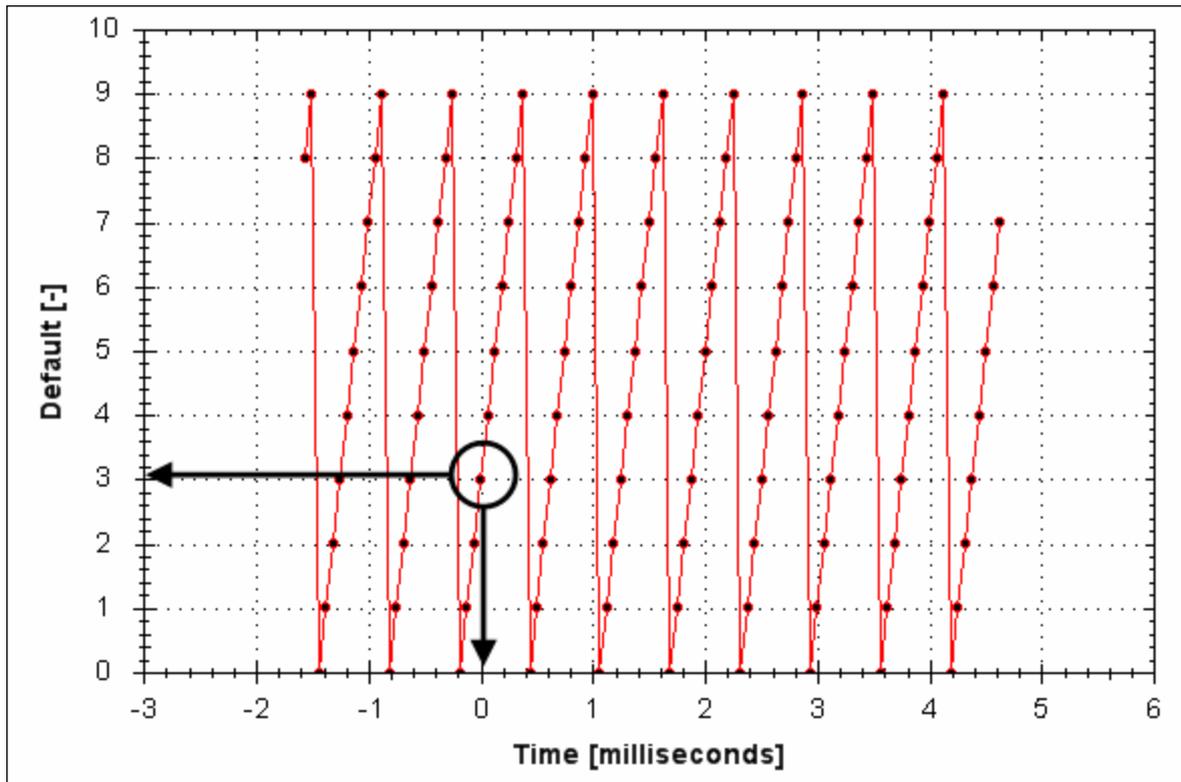


When the trigger slope is negative, the trigger value will trigger when:

- The trigger source is greater than the trigger value in the previous recording sample.
- The trigger source is less than or equal to the trigger value in the current recording sample.

#### 18.2.3.5 Effects of Recorder Gap

When the recording rate is less than 16,000 Hz (REC.GAP > 1), there can be some impact on the triggering of the recorder. When using pretriggering and a recording rate of less than 16,000 Hz, the trigger only evaluates every N samples, where N is the value of REC.GAP. Two effects result from this condition:

1. You cannot be sure of the moment that the recorder is triggered any closer than N samples. An example of this is shown below where the trigger value is set to 3, the trigger slope is positive and the recorder gap is 2. Both examples are the same data, but one instance collected and triggered on the odd data. The other example collected and triggered on the even data.

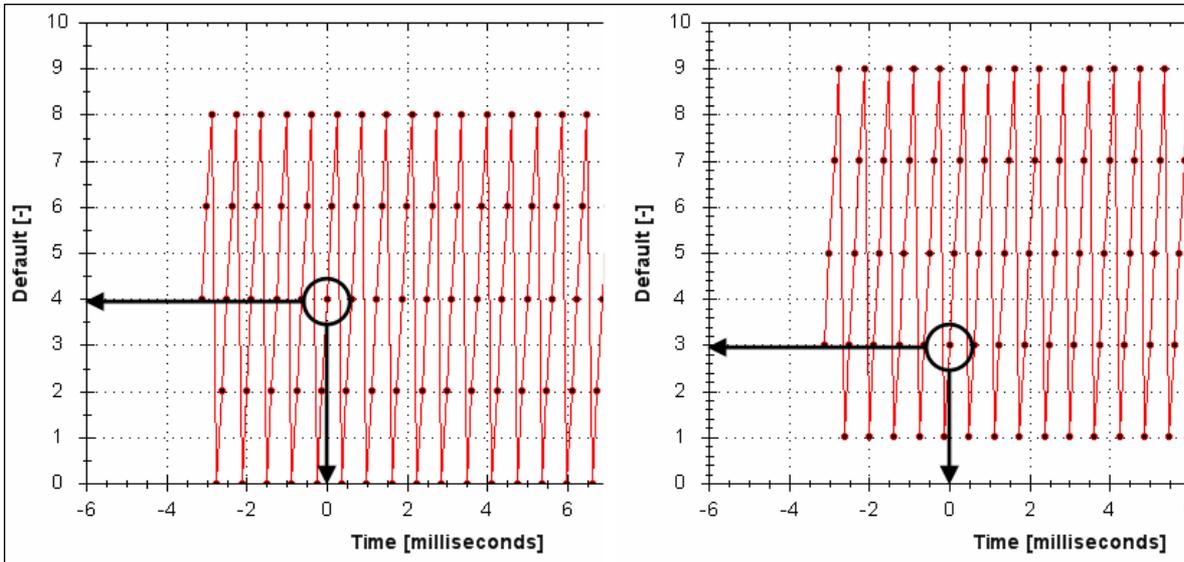

2. You can miss triggers, whose duration is less than N samples, where N is the value of REC.GAP. This is because the trigger is only evaluated every N samples.

A workaround for the above effects is available by setting the recorder trigger position to zero (REC.TRIGPOS 0). This eliminates conflicts between pretrigger and post-trigger timing and will guarantee trigger evaluation every sample, eliminating the cases above.

### 18.2.3.6 Trigger Slope

Trigger Slope specifies whether you trigger on a positive or negative change in the trigger source. The effect of the trigger slope is different for trigger type Boolean and On Next Signal modes.

#### Boolean Trigger Type

When using Boolean type:


- A positive slope will trigger when the trigger source is 1
- A negative slope will trigger when the trigger source is 0

The boolean trigger type is a state trigger. There is no need to transition from 0 to 1 to trigger with the positive slope. If the trigger source is 1 from the start, the positive slope will immediately trigger.

#### On Next Signal Trigger Type


The “On Next Signal” trigger type allows you to specify if the recorder should trigger when the signal crosses the trigger level in the positive or negative direction. The signal only needs to reach the trigger level; it does not need to pass the trigger level.

In the examples below, the trigger value is set to 3 (REC.TRIGVAL 3.000). You can see that with positive slope, the trigger occurs exactly when the signal transitions from 2 to 3, because it reached 3. The negative slope case triggers when the signal transitions from 9 to 0, because it crossed 3 on the way.

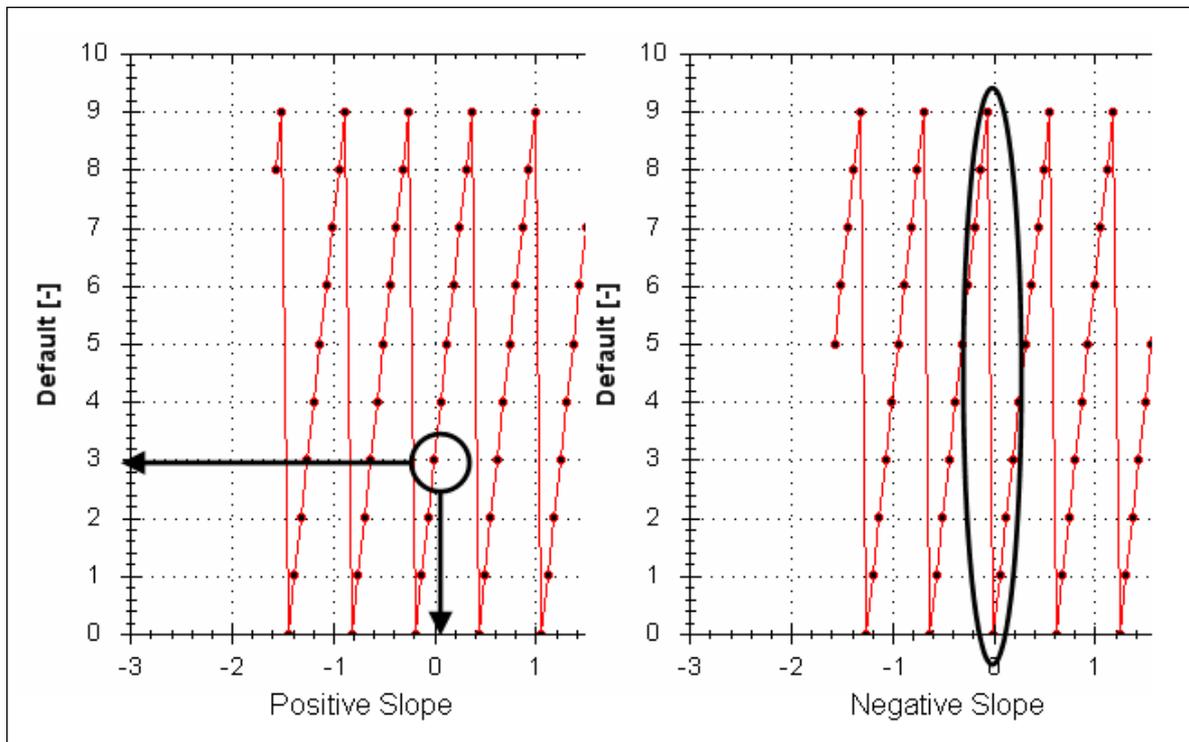

### 18.3 Scope Settings

Scope settings are used to store and retrieve the scope parameters. You can save multiple settings, called "presets", under different names. You can save, delete, import, or export the presets. The settings are stored in WorkBench project file (default.wbproj) and settings are common to all the drives in WorkBench.

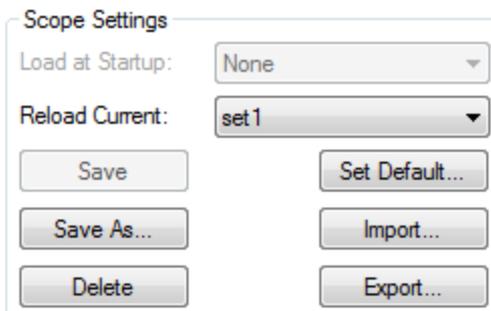


#### 18.3.1 Load a setting (preset) to Scope screen

In Scope Settings section, the existing presets are listed in the **Select Setting** box. To load a setting to the scope screen, select the desired preset from the **Select Setting** list.

#### 18.3.2 Create a new preset

1. Modify any scope parameters.
2. Select the **Settings** tab.
3. Click **Save As**. The following dialog is displayed:

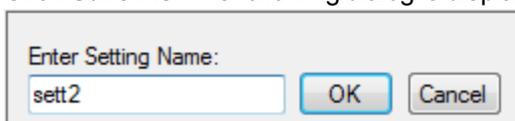

4. Enter the setting name and click **OK**. The current settings are saved as a preset with the given name and displayed in the list.


### 18.3.3 Save or delete preset

**Save** saves any modification to the open preset. **Delete** deletes the open preset.

### 18.3.4 Import preset

Import the presets contained in the selected settings file as follows:

1. Click on Import button and the following dialog will be displayed.

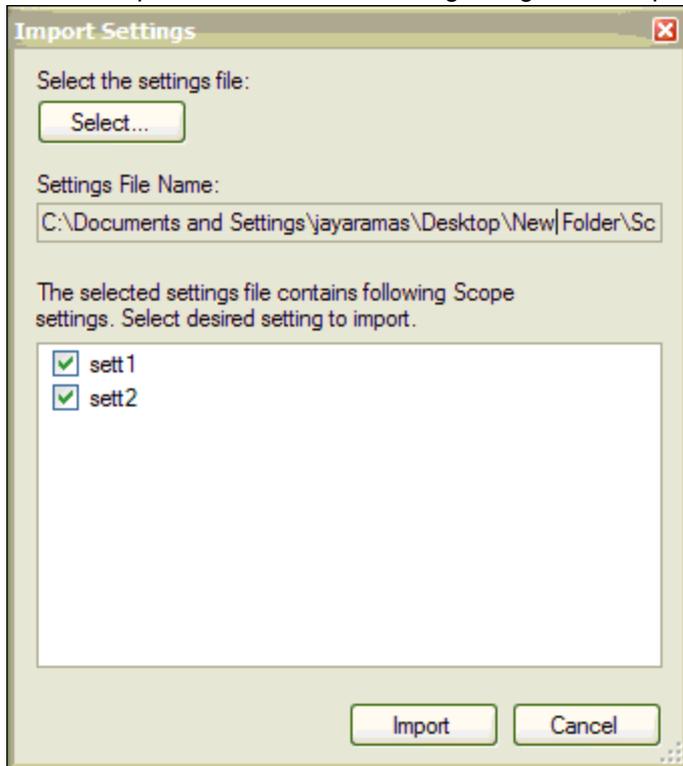


2. Select the settings file by clicking "Select..." button.
3. All the scope presets will be displayed contained in the selected settings file.
4. Select/Deselect the presets and then click on Import.
5. If preset name already exists in application the confirmation message will be shown to user to replace it or to ignore.

### 18.3.5 Export preset

Export a preset to a file as follows:

1. Click **Export** and the following dialog is displayed:

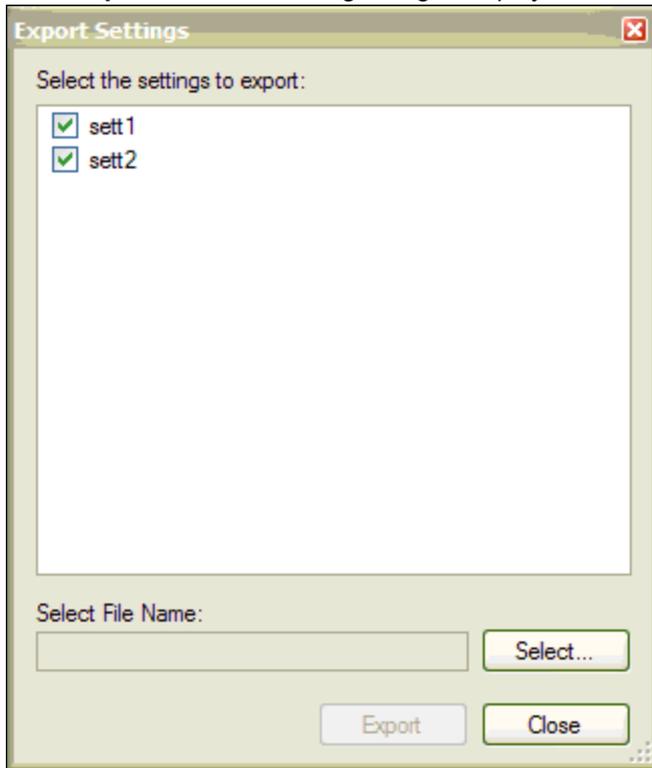

2. The existing presets are displayed and user can select/deselect the preset to export.
3. Select the file name to export.
4. Click **Export** to export the selected presets to a file.

### 18.3.6 Scope axis scaling and zooming


The scope provides two mechanisms for determining how you view the data:

- Scaling: you can choose the scale for the different axes.
- Zooming: you can choose a particular portion of the scope that you want to observe more in details, and then come back to previous scaling.

Two different scaling modes are provided on each axis:

- Manual: you can determine the minimum and maximum value of the axis (X or Y axis).
- Scale to fit: the program will compute a scale for this axis that will display all the curves bound to it (X or Y axis).

These functionalities are accessible through the contextual menu when right-clicking in the axis zone. A simple left-click in the axis zone will provide the manual range functionality. A supplementary functionality allows you to perform a scale to fit on all axes is also available, which allows a good overview.

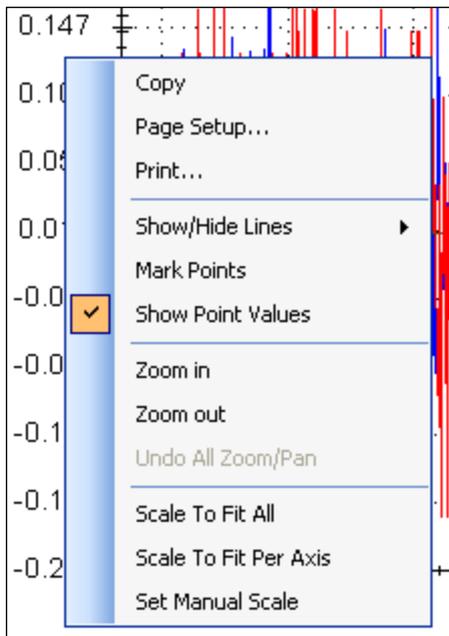


The zoom functionality allows you to navigate in a portion of the graphic. When you reset the zoom, the initial scales are shown.

In the display tab, when “Remember Axis Scale” is set, the scales of the axes are kept between two sequential recordings. You can fine tune the scale to visualize a particular behavior and record a second time and see the same behaviour without having to redo all the tuning. When not checked, a scale to fit all will be performed after each record. This setting is reset when exiting WorkBench and should be explicitly set at next startup.

### 18.3.7 Manual range per axis

After recording data, right click anywhere on the y-axis and select **Set Manual Scale** to open a dialog box to set the range for the axis. Enter the Y-axis minimum value and Y-axis maximum value. Click **OK** to reset the Y-axis to new range.

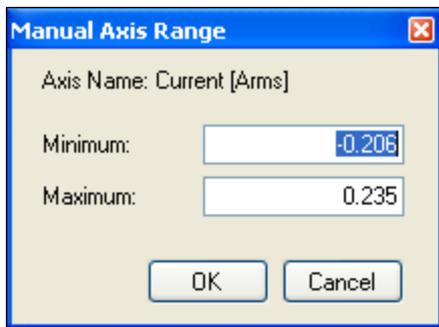

### 18.3.8 Unit display on Y axis

The unit on the Y-axis is displayed if all scope signals units are identical for that Y-axis. If different units apply to different signals, the units are displayed as [-]. For example, if the velocity Y-axis has signals VL.FB and IL.CMD, then the unit displayed is [-], since the units for these parameters are different. If IL.CMD is hidden, then the correct unit for VL.FB, rpm, is displayed.

#### Related Parameters:

BODE Parameters (→ p. 441)

## 19 Using Parameters and the Terminal Screen

---

<b>19.1 Terminal</b> .....	<b>248</b>
<b>19.2 Viewing Parameters</b> .....	<b>251</b>
<b>19.3 Parameter List</b> .....	<b>251</b>
<b>19.4 Parameter Load/Save</b> .....	<b>253</b>
<b>19.5 Parameter Comparer</b> .....	<b>253</b>

## 19.1 Terminal

### 19.1.1 Overview

The terminal mode provides a quick and easy way to issue commands to the drive directly. Typically used by "power users" who are familiar with the command set, the terminal mode can help in setup, troubleshooting, and other diagnostic actions. When using the terminal mode, WorkBench shows the parameter and command set in a popup view and uses an autocomplete tool to help you select the proper parameter or command. Right-click in the command entry area to open a popup menu for editing commands and for clearing the screen. The terminal also provides a macro editor that allows a series of commands to be executed via a single command (called a macro). Macros are useful when you must frequently execute a sequence of commands.

### 19.1.2 Using the Terminal

Click Terminal in the navigation tree to issue parameters and commands in the terminal mode. You can enter parameters and commands at the prompt as shown in this example:

**Terminal**  
A command line interface to the drive. Type a command and press return.

```
-->DRV.EN
-->MT.LOAD
-->MT.MOVE 1
-->drv.stop|
```

DRV.STOP	Stop current motion
DRV.TEMPERATURES	Temperatures
DRV.VER	Drive version
DRV.VERIMAGE	Version as it is written in the flash
DRV.WARNINGS	Drive warnings
DRV.ZERO	Drive zero mode
FB1.BISSBITS	Position Feedback Number of Biss Sensor Bits
FB1.ENCRESP	Position feedback rotary encoder resolution
FB1.HALLSTATE	Hall inputs state
FB1.IDENTIFIED	Position feedback type identified
FB1.INITSIGNED	Initial feedback value(signed/unsigned)
FB1.MECHPOS	Position feedback - mechanical position
FB1.MEMVER	Position feedback memory version
FB1.OFFSET	Position feedback offset
FB1.ORIGIN	Initial feedback position

Macro 1   Macro 2   Macro 3   Macro 4   Macro 5   Edit Macros...

The terminal supports the following keyboard shortcuts:

Keyboard Shortcut	Description
F2	Executes the last command.
Up Arrow	Gets the previous command from the command history.
Down Arrow	Gets the next command from the command history.

Keyboard Shortcut	Description
CTRL+J	Shows the list of commands that the drive supports.
CTRL+L	Opens the Parameter Load/Save view.
ESC	Hides the command list if command list is open. Clears the line if command list is not open.
Enter (Return)	Executes the current command. This command sends the text you have typed to the drive and then prints the text the drive returns on the next line.

### 19.1.3 Macros

Macros are a short sequence of instructions that can be sent to the drive using a single button. You can create up to five macros within the terminal mode using the macro editor. Each of the macros can be given a name and will appear as a button below the Terminal screen area. When you select the button, the command set tied to that macro will appear in the Terminal area and the commands will be executed. If there are commands which are not entered correctly, the terminal screen area will indicate the errors.

You can access macros and the macro editor from the buttons are located at the bottom of the terminal screen. Click a macro button to execute the associated macro. The **Edit Macros** button opens the macro editor used to create and edit macros. You can also assign custom names to the macro buttons with this editor.

#### Creating a Macro from Terminal commands

You can create a macro from a sequence of terminal commands as follows:

1. Enter the sequence of commands.



## Terminal

A command line interface to the drive. Type a command and press return.

```
Motion 1-->DRV.EN
Motion 1-->MT.LOAD
Motion 1-->MT.MOVE 1
-->
```

Motion 1

Macro 2


Macro 3

Macro 4

Macro 5

Edit Macros...

2. Copy the sequence of commands, then click **Edit Macro**. Select a macro from the tree on the left, then paste the sequence of commands into the Commands area of the Edit Macros window.

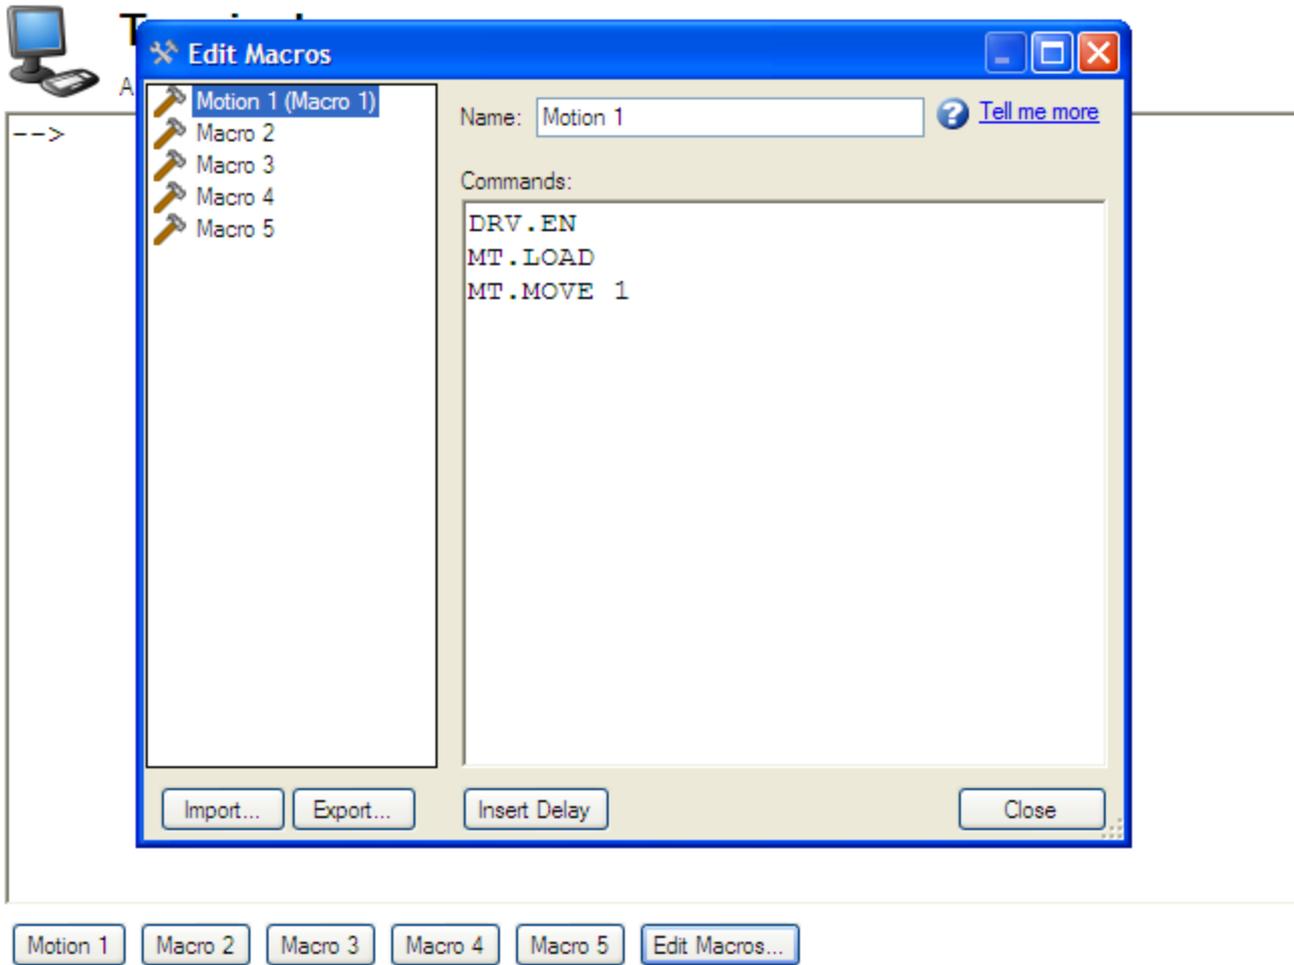

3. Select **Save** to save your macro.

### Macro Editor

The macro editor allows you to create and modify up to five macros. WorkBench automatically saves the macros that you create. If you exit WorkBench and then start WorkBench again, the macros you defined will still be available.

To create or edit a macro from the editor, open the **Terminal** screen and click on **Edit Macros** (located at the bottom of the screen). Select the macro you wish to edit from the tree on the left, then use the features described below to build the macro. You can add comments in the macro after the ";" symbol.

Button or Dialog Box	Description
Name	Allows you to give each macro a unique name. This name will be shown on the button in the terminal view.
Commands	Displays the commands that are sent to the drive when you use this macro. The response from the drive is displayed in the terminal.
Import	Overwrites the selected macro with the contents of a macro file exported from another computer.
Export	Sends the selected macro to a text file to that you can import into WorkBench running on another computer.

Button or Dialog Box	Description
Insert Delay	Inserts a step into the macro that causes a delay for a specified number of milliseconds before continuing. A line that starts with #delay 5000 will pause the execution of the macro for 5000 milliseconds.
Close	Closes this window and returns to the terminal view.

## 19.2 Viewing Parameters

You can view and edit parameters in the **Parameters** screen. You can view and write parameters in the **Terminal** screen.

## 19.3 Parameter List

This screen displays a list of the current values of all the parameters that the drive supports. You can sort some of the rows by clicking the column headers.



## Parameters

This page lists all the current values of all the drive parameters on the drive.

Full Name	Value	Units	Parameter	Read/Write
<b>Analog Input</b>				
Analog input low pass filter cutoff freq...	5,000.000	Hz	AIN.CUTOFF	read-write
Analog input signal deadband	0.000	V	AIN.DEADBAND	read-write
Analog Input Deadband Mode	0 - Deadband		AIN.DEADBANDMO...	read-write
Analog input torque scale	0.001	Arms/V	AIN.ISCALE	read-write
Analog input mode	1 - Command Source		AIN.MODE	read-write
Analog input offset	0.000	V	AIN.OFFSET	read-write
Analog input position scale	0.000	Counts16...	AIN.PSCALE	read-write
Analog input signal	0.000	V	AIN.VALUE	read-only
Analog input velocity scale	0.060	rpm/V	AIN.VSCALE	read-write
<b>Analog Output</b>				
<b>Bode</b>				
<b>Bus Volts</b>				
<b>Controlled Stop</b>				
<b>Current Loop</b>				
<b>Digital Input</b>				
<b>Digital Output</b>				
<b>Drive</b>				
<b>Electronic Gearing</b>				
<b>Fieldbuses</b>				
<b>GUI Parameters</b>				
<b>Hardware Limit Switches</b>				
<b>Homing</b>				
<b>TCP/IP</b>				
<b>Motion Tasks</b>				
<b>Motor</b>				
<b>Position Capture</b>				
<b>Position Feedback</b>				
<b>Position Loop</b>				
<b>Programmable Limit Switches</b>				
<b>Recorder</b>				
<b>Regen Resistors</b>				
<b>Service Motion</b>				
<b>Software Limit Switches</b>				
<b>Units</b>				
<b>Velocity Loop</b>				
<b>Wake &amp; Shake</b>				
<b>Misc</b>				

Button or Dialog Box	Description
Refresh	Reads all the parameters from the drive and update the contents of the table.
Print	Sends the data that you see on the screen to the printer.
eMail	Opens an email message and attaches a comma separated file to the email message.

Button or Dialog Box	Description
More/Less	Adds two more columns to the table with the range and default values for each parameter.

## 19.4 Parameter Load/Save

To copy a configuration (all the device parameters that are stored in the device's nonvolatile memory) from one device to another, click the **Save to File** button on the first device and then use the **Load from File** on the second device. If you wish the second device to keep these new parameters after the device is turned off, then you can save the parameters to the nonvolatile memory with **Save To Device**.

Button or Dialog Box	Description
Save To File	Copies all the device parameters and creates a file.
Load From Device	Sets all the device parameters within the device to the values contained within the file you select.
Save to Device	Saves all device parameters into the nonvolatile memory of the device. Each time the device powers on, it will start with these saved parameters.
Default	Returns all the device parameters back to their default values. Any changes you have made are lost.

### 19.4.1 Loading an Incompatible File

If the parameter file from a different model type is loaded to an AKD or AKD-N, a warning will display notifying the user, but the load can still be performed.

If the parameter file from a different model type is loaded to an AKD-C, the load will be blocked by WorkBench. Only AKD-C parameter files can be loaded to an AKD-C.

## 19.5 Parameter Comparer


The **Parameter Comparer** tool is used to compare the parameters or motion tasks of different drives. You can select this tool from the menu bar, **Tools> Parameter Comparer**.

Parameters can be compared between the following:

- Drives and Drives (Online / Offline)
- Drives and Files
- File and Drives
- File and Files

The **Parameter Comparer** screen includes the three sections shown below:

- Reference Parameter Selection
- Target Parameter Selection
- Comparison Display

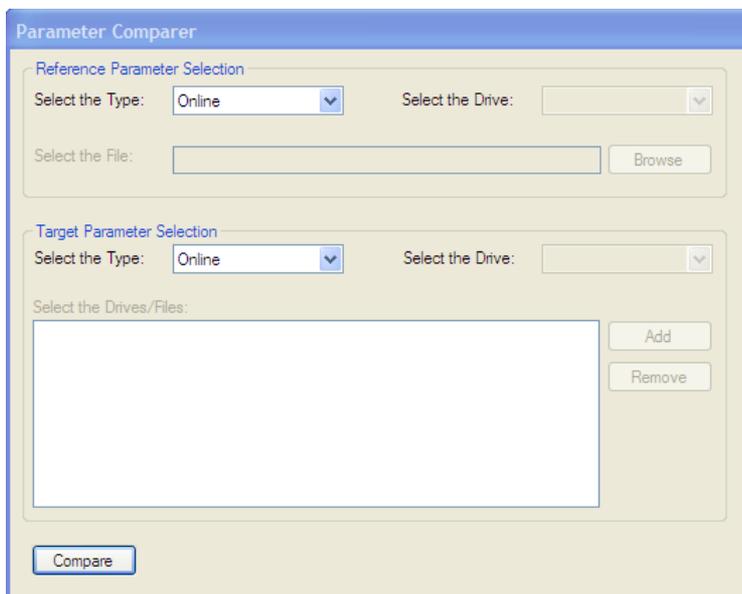


### 19.5.1 Reference Parameter Selection

You can select the drive type (Online/Offline) or File Selection to compare in the Reference Parameter Selection area.

When a device type (Online/Offline) is selected, the devices connected to the WorkBench are displayed in the **Select the Device** box. By default, the first device is selected. If no devices are connected, then the **Select the Device** box will be disabled.

If **File Selection** is chosen from the **Select the Type** box, then the **Select the Device** box is disabled and the **Select the File** box becomes enabled to browse to the parameter file (\*.AKD).

A warning message is displayed if you select an incorrect file, as shown below:

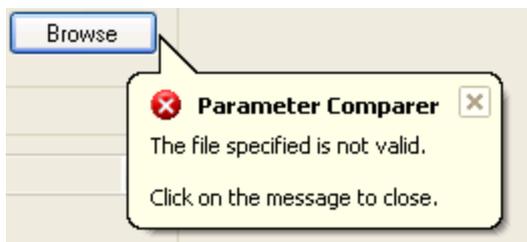

### 19.5.2 Target Parameter Selection

**Target Parameter Selection** includes the following:

- **Select the Type** box to select the type (Drive (online/offline) and File).
- **Select the Device** box to select the devices connected to WorkBench.
- **Select the Device/Files** box to load files or drives which are to be compared.
- **Add** button to add Drives/Files selected to the list box.
- **Remove** button to remove the selected item from the list box.

Many target devices/files parameters can be compared with one reference device/file parameters as shown below.

**Parameter Comparer**

**Reference Parameter Selection**

Select the Type:  Select the Drive:

Select the File:

**Target Parameter Selection**

Select the Type:  Select the Drive:

Select the Drives/Files:

One	<input type="button" value="Add"/>
Two	
Three	<input type="button" value="Remove"/>

**Parameter Comparer**

**Reference Parameter Selection**

Select the Type:  Select the Drive:

Select the File:

**Target Parameter Selection**


Select the Type:  Select the Drive:

Select the Drives/Files:

C:\Parameter1.akd	<input type="button" value="Add"/>
C:\ParameterNV.akd	<input type="button" value="Remove"/>

### 19.5.3 Display the comparison

Clicking **Compare** displays the comparison shown below:

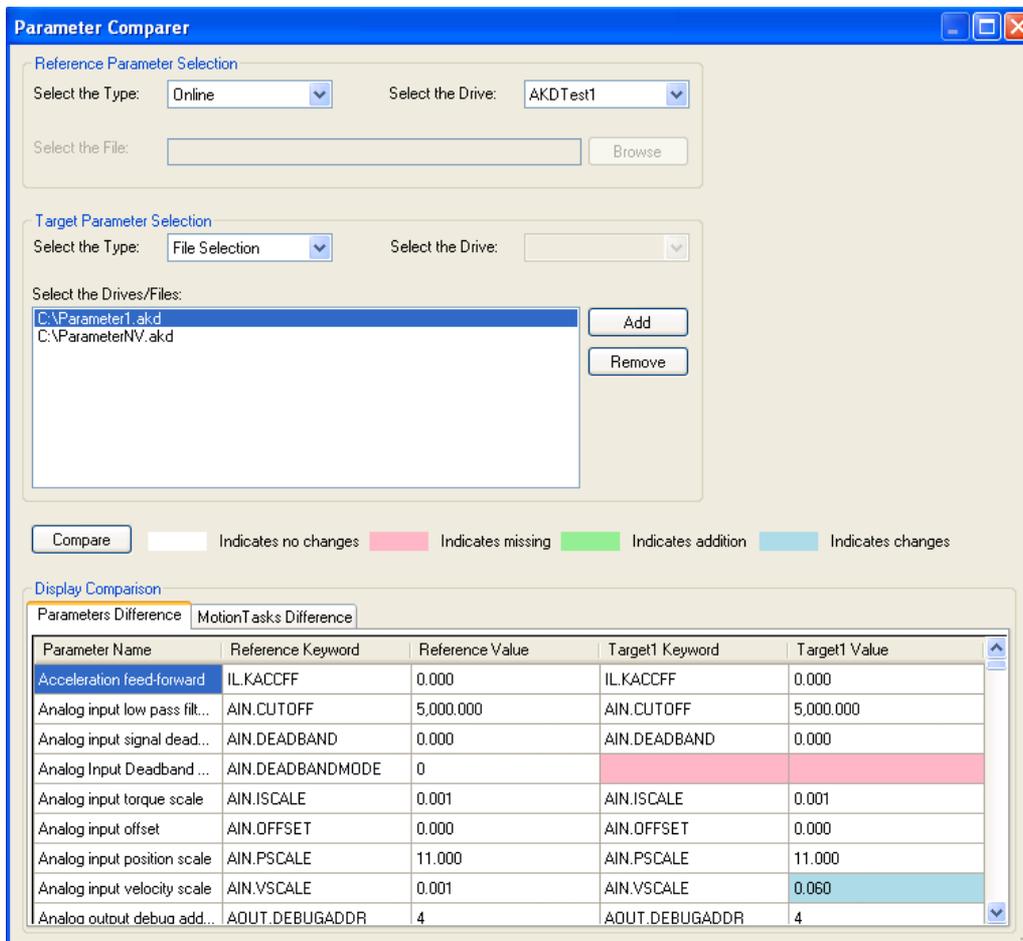

**Display Comparison** contains two sections:


- Parameters Difference
- Motion Tasks Difference

Each of these sections displays:

- Parameter name
- Reference keyword
- Reference value
- Target keyword
- Target value

#### 19.5.4 Motion Task Comparison

**Motion Task Comparison** is displayed as shown below:

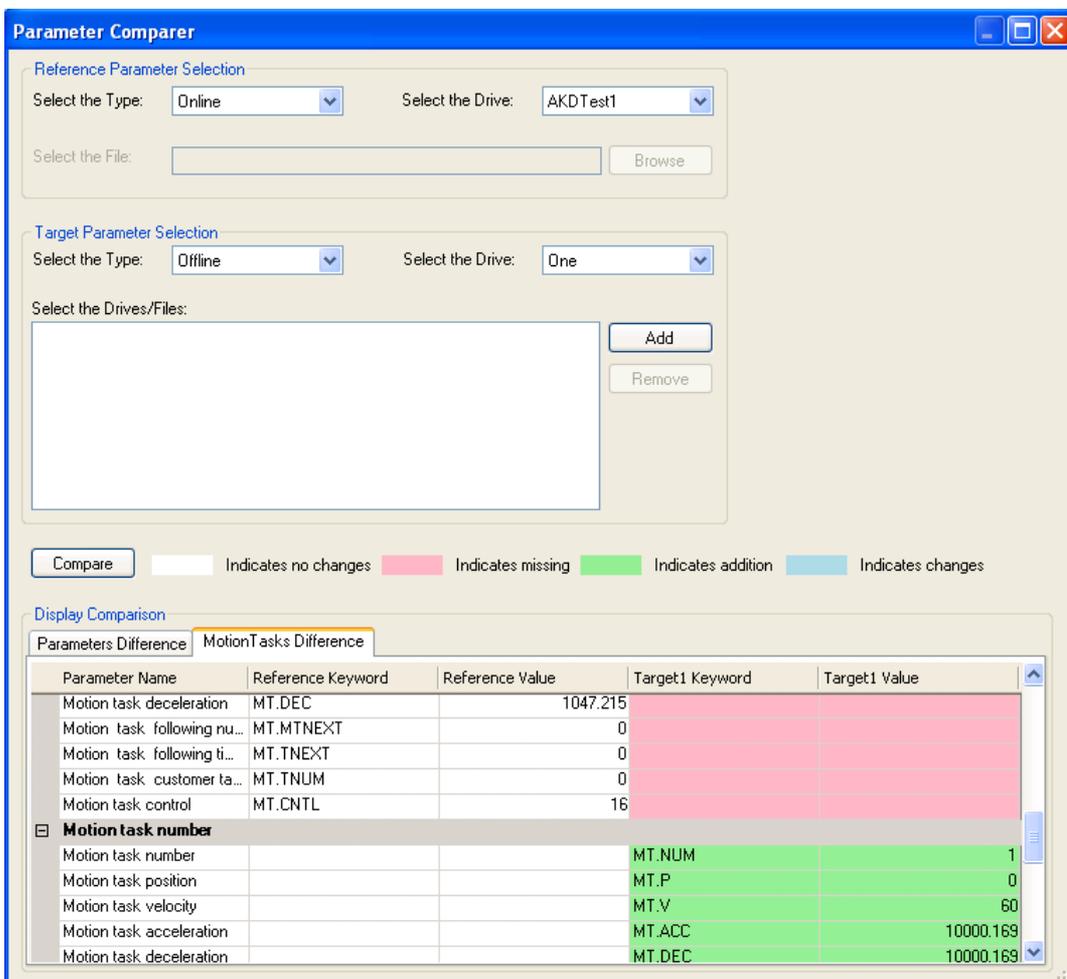

A separate section is shown for each motion task.

**Motion Tasks Difference** and **Parameters Difference** are color coded as shown in the table below.

	Keyword exists in the reference file /drive and does not exist in the Target files/drives.
	Parameter does not exist in reference file/drive and exists in Target files/drives.
	Keyword exists in both reference and target files/drives, and the value or the parameter keyword changes.
	Reference and target parameter do not vary.

If you click the **Compare** button without selecting the drive or file, you will receive a message prompting you to make a selection.

## 20 Faults and Warnings

---

<b>20.1</b>	<b>Fault and Warning Messages</b> .....	<b>259</b>
<b>20.2</b>	<b>Additional fault messages AKD-T</b> .....	<b>278</b>
<b>20.3</b>	<b>SD Card Errors</b> .....	<b>279</b>
<b>20.4</b>	<b>Clearing Faults</b> .....	<b>279</b>
<b>20.5</b>	<b>Parameter and Command Error Messages</b> .....	<b>280</b>
<b>20.6</b>	<b>CANopen Emergency Messages and Error Codes</b> .....	<b>284</b>
<b>20.7</b>	<b>Unknown Fault</b> .....	<b>291</b>

## 20.1 Fault and Warning Messages

When a fault occurs, the drive fault relay is opened, the output stage is switched off (motor loses all torque), or the load is dynamically braked. The specific drive behavior depends on the type of fault. The LED display on the front panel of the drive shows the number of the fault that occurred. If a warning is issued prior to the fault, the warning is shown on the LED and has the same number as the associated fault. Warnings do not trip the power stage of the drive or fault relay output.

The left side of the LED displays F for a fault or n for a warning. The right side displays the fault or warning number as follows: 1-0-1-[break]. The highest priority fault is displayed on the LED. Multiple faults may be present when a fault condition is occurring. Check the AKD WorkBench Fault Screen or read the status of DRV.FAULTS through the controller or HMI for the entire list of faults.

Once the fault cause is remedied, you can clear the fault using any one of the following methods:

For more detailed information on clearing drive faults, see Clearing Faults.

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
..		1. 24V Control Power input voltage dip. or 2. Auxillary encoder 5V (X9-9) shorted.	1. Insure adequate 24V supply current capacity for the system. or 2. Check and fix X9 wiring.	N/A
F0		Reserved.	N/A	N/A
F101	Firmware incompatible.	Installed firmware is not compatible with the drive hardware.	Load compatible firmware into the drive.	Disable power stage
n101	The FPGA is a lab FPGA.	The FPGA is a lab version FPGA.	Load the released FPGA version that is compatible with the operational firmware.	None
F102	Resident Firmware failed.	Software failure detected.	Restart drive. If issue persists, contact technical support.	Disable power stage
n102	Operational FPGA is not a default FPGA.	The FPGA minor version is larger than the operational firmware default FPGA minor version	Load the released FPGA version that is compatible with the operational firmware.	None
F103	Resident FPGA failed.	Software failure detected. Load resident FPGA failure occurred (several cases according to flowchart, including incompatible image to FPGA type and fieldbus type).	Restart drive. If issue persists, contact technical support.	Disable power stage
F104	Operational FPGA failed.	Software failure detected. Load operational FPGA failure occurred (several cases according to flowchart).	Restart drive. If issue persists, contact technical support.	Disable power stage

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F105	NV Memory Stamp.	Non-volatile memory stamp is corrupted or invalid.	Reset the drive to default memory values using Parameter Load in WorkBench.	Disable power stage
F106	NV Memory Data (might occur when downloading firmware).	Non-volatile memory data is corrupted or invalid. When this fault occurs after a firmware download, it is not an indication of a problem (clear the fault and perform a "save" to the drive).	Reset the drive to default memory values using Parameter Load in WorkBench.	Disable power stage
n107	Positive switch.	Positive software position limit is exceeded.	Move the load away from the limits.	Controlled stop
n108	Negative switch.	Negative software position limit is exceeded.	Move the load away from the limits.	Controlled stop
F121	Homing Error.	Drive did not finish homing sequence.	Check homing sensor, homing mode, and homing configuration.	Controlled stop
F123 n123	Invalid motion task.	Invalid motion task.	Check motion task settings and parameters to make sure that the values entered will produce a valid motion task.	Disable power stage
F125 n125	Fieldbus Sync frames lost.	The fieldbus lost synchronization.	Check fieldbus connection (X5 and X6 if you are using EtherCAT; X12 and X13 if you are using CANopen) or the settings of your EtherCAT or CANopen master.	Controlled stop
F126 n126	Bode plot too much movement.	Too much movement was created during a Bode plot. Motor is unstable and is not following drive instructions.	Check that the system is closed loop stable. Refer to the system tuning guide.	Dynamic braking
F127	Incomplete Emergency Procedure.	Incomplete emergency stop procedure (problem with the emergency stop motion task).	Disconnect power from drive and check emergency stop procedure.	Dynamic braking
F128	Mpoles / Fpoles not integer.	Ratio of motor poles to feedback poles must be a whole number.	Change to a compatible feedback device.	Disable power stage
F129	Fieldbus Heartbeat lost.	Heartbeat lost.	Check CANopen cabling. Reduce bus load or increase the heartbeat update time.	Controlled stop

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F130	Secondary feedback supply over current.	5V power supply was shorted out on X9.	Check X9 connection.	Disable power stage
F131	Secondary feedback A/B line break.	Problem in secondary feedback detected.	Check secondary feedback (X9 connection).	Disable power stage
F132	Secondary feedback Z line break.	Problem in secondary feedback detected.	Check secondary feedback (X9 connection).	Disable power stage
F133	Fault number changed to F138. See F138 for details.			Disable power stage
F134	Secondary feedback illegal state.	Feedback signals were detected in an illegal combination.	Check X9 connection.	Disable power stage
F135 n135	Fault on FB2 is preventing remote commutation for FB1.	Attempt to issue motion task before the axis is homed. Axis must be homed before motion task can start.	Change opmode or home axis.	Disable power stage
F136	Firmware and FPGA versions are not compatible.	The FPGA version does not match the firmware FPGA version constants.	Load the FPGA version that is compatible with the firmware.	Disable power stage
n137	Homing and feedback mismatch	The configured homing mode is not supported by the motor feedback type used.	Change homing mode.	None
F138	Instability during auto-tune.	Drive current (IL.CMD) or velocity feedback (VL.FB) exceeds allowable limit (BODE.IFLIMIT or BODE.VFLIMIT). This fault only occurs in BODE.MODE 5. This fault often occurs when complex mechanics, belts, and compliant loads are present.	Change BODE.MODE if appropriate. If BODE.MODE 5 is appropriate and the fault occurs at the end of an Autotuning, then the motor is not robustly stable. You can manually adjust Autotuner settings. Manual tuning may be required to make the motor stable.	Controlled stop

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F139	Target position was overshoot due to invalid motion task activation.	The drive cannot decelerate from its current speed to reach the end point of the second motion task without moving past it. Increase the deceleration rate in the move or trigger the move earlier.	Change Motion task profile and clear fault with <code>DRV.CLRFAULTS</code> . Or change the value of <code>FAULT139.ACTION = 1</code> to ignore this condition.	Disable power stage
n140	<code>VBUS.HALFVOLT</code> has changed. Save the parameters and reboot the drive.	The user has changed the numerical value of <code>VBUS.HALFVOLT</code> . This change only takes effect after a <code>DRV.NVSAVE</code> command and after rebooting the AKD.	Save the parameters in the non-volatile memory via a <code>DRV.NVSAVE</code> command and turn off/on the 24[V] power supply in order to reboot the drive or restore the original setting of <code>VBUS.HALFVOLT</code> .	None
n151	Not enough distance to move; motion exception.	For trapezoidal and customer table motion tasks: The target velocity specified in the motion task cannot be reached via using the selected acceleration and deceleration since the distance to travel is not sufficient. For a 1:1 profile: The selected acceleration and deceleration will be extended since there is too much distance to travel and the motion task would exceed its maximum allowed velocity.	Activation of any new motion or using of <code>DRV.CLRFAULTS</code> will clear the warning. Check motion task settings and parameters to make sure that the values entered will produce a valid motion task.	None

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
n152	Not enough distance to move; following motion exception.	A new motion task activated, when one motion task is already active and the target position specified in the motion task parameters cannot be reached with specified target velocity, acceleration and deceleration parameters. The motion task will directly decelerate to into the target position or ramps down to velocity 0 and start another move to reach target position of the next motion task.	Activation of any new motion or using of DRV.CLRFAULTS will clear the warning. Check motion task settings and parameters to make sure that the values entered will produce a valid motion task.	None
n153	Velocity limit violation, exceeding max limit.	A new target velocity calculated internally due to an exception, and is being limited due to user velocity limit.	Activation of any new motion or using of DRV.CLRFAULTS will clear the warning. Check motion task target velocity settings and parameters to make sure that the values entered will not exceed the VL.LIMITP and VL.LIMITN setting.	None
n154	Following motion failed; check motion parameters.	Activation of the following motion task failed due to incompatible parameters, or motion task does not exist.	Activation of any new motion or using of DRV.CLRFAULTS will clear the warning. Check following motion task settings and parameters to make sure that the values entered will produce a valid motion task.	None
n156	Target position crossed due to stop command.	The motion task crosses the target position after triggering a DRV.STOP command. This situation can happen when processing a change-on-the-fly motion task and triggering a DRV.STOP command close to the target position of the currently running motion task.	Activation of any new motion or using of DRV.CLRFAULTS will clear the warning.	None

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
n157	Homing index pulse not found.	A homing mode with index detection is activated, and index pulse is not detected while moving across the range determined by the hardware limit switches.	Activation of any new motion or using of DRV.CLRFAULTS will clear the warning.	None
n158	Homing reference switch not found.	A homing mode with reference switch detection is activated and the reference switch is not detected while moving across the range determined by the hardware limit switches.	Activation of any new motion or using of DRV.CLRFAULTS will clear the warning.	None
n159	Failed to set motion task parameters	Invalid motion task parameters assignment. This warning can appear upon an MT.SET command.	Activation of any new motion or using of DRV.CLRFAULTS will clear the warning. Check motion task settings and parameters.	None
n160	Motion task activation failed.	Activation of the motion task failed due to incompatible parameters, or motion task does not exist. This warning can appear upon an MT.MOVE command.	Activation of any new motion or using of DRV.CLRFAULTS will clear the warning. Check motion task settings and parameters to make sure that the values entered will produce a valid motion task.	None
n161	Homing procedure failed.	Homing error observed during the operation of homing procedure.	Activation of any new motion or using of DRV.CLRFAULTS will clear the warning.	None
n163	MT.NUM exceeds limit.	This warning appears with n160. This warning is triggered when you try to trigger a motion task > 128 (such as MT.MOVE 130).	Trigger only motion tasks between 0 and 128. Activation of any new motion or using of DRV.CLRFAULTS will clear the warning.	None
n164	Motion task is not initialized.	This warning appears with n160. This warning is triggered when you try to trigger a non-initialized motion task.	Initialize the motion task first before starting the task. Activation of any new motion or using of DRV.CLRFAULTS will clear the warning.	None

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
n165	Motion task target position is out.	This warning appears with n160. This warning is triggered when you try to trigger a motion task with an absolute target position outside of the selected modulo range (see also MT.CNTL).	Move the absolute target position of the motion task within the modulo range. Activation of any new motion or using of DRV.CLRFAULTS will clear the warning.	None
n168	Invalid bit combination in the motion task control word.	This warning appears with n160. This warning is triggered when you try to trigger a motion task with an invalid bit combination in the motion task control word (see also MT.CNTL).	Correct the MT.CNTL setting for the specific motion task. Activation of any new motion or using of DRV.CLRFAULTS will clear the warning.	None
n169	1:1 profile cannot be triggered on the fly.	This warning appears with n160. This warning is triggered when you try to trigger a 1:1 profile table motion task while another motion task is currently running.	1:1 profile table motion tasks should be started from velocity 0. Activation of any new motion or using of DRV.CLRFAULTS will clear the warning.	None
n170	Customer profile table is not initialized.	This warning appears with n160. This warning is triggered when you try to trigger a motion task that uses a customer profile table for generating the velocity profile and when the selected profile table is empty (see MT.CNTL and MT.TNUM).	Change the MT.TNUM parameter for this specific motion task in order to use an initialized profile table. Activation of any new motion or using of DRV.CLRFAULTS will clear the warning.	None
n175		Clamping torque not reached at fixed stop.	Check fixed stop configuration. Check if fixed stop is mounted properly.	None
F176		Fixed stop has broken off.	Check that fixed stop is mounted properly. If mounted properly, the fixed stop monitor window ( MT.FIXEDSTOPMONITORWINDOW (→ p. 1052)) is too small.	Disable power stage
F178		Axis reached the target position without stopping at fixed stop.	Check that fixed stop is mounted properly.	Disable power stage

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F201	Internal RAM failed.	Hardware failure detected.	Restart drive. If issue persists, contact technical support.	Disable power stage
F202	External RAM failed.	Hardware failure detected.	Restart drive. If issue persists, contact technical support.	Disable power stage
F203	Code Integrity failed.	Software failure detected. FPGA register access failure occurred.	Restart drive. If issue persists, contact technical support.	Disable power stage
F204 to F232	EEPROM failure detected	EEPROM failure detected	Restart drive. If issue persists, exchange drive.	Disable power stage
F234-F237 n234-n237	Temperature sensor high.	High temperature limit reached.	Check cabinet ventilation system.	Disable power stage
F240-F243 n240-n243	Temperature sensor low.	Low temperature limit reached.	Check cabinet ventilation system.	Disable power stage
F245	External Fault.	This fault is user generated and is caused by user settings.	Users can configure a digital input to trigger this fault (DINx.MODE = 10). The fault occurs according to this input setting. Clear the input to clear the fault.	Disable power stage
F247	Vbus read is out of thresholds.	Hardware problem in bus measurement.	Troubleshoot and repair hardware problem.	Disable power stage
F248	Option board EEPROM corrupted.	EEPROM failure detected.	Restart drive. If issue persists, exchange drive.	Disable power stage
F249	Option board downstream checksum.	Communications with the I/O on the option board failed.	DRV.CLRFAULTS. If issue persists If issue persists, contact technical support.	Disable power stage
F250	Option board upstream checksum.	Communications with the I/O on the option board failed.	DRV.CLRFAULTS. If issue persists If issue persists, contact technical support.	Disable power stage
F251	Option board watchdog.	Communications with the I/O on the option board failed.	DRV.CLRFAULTS. If issue persists If issue persists, contact technical support.	Disable power stage
F252	Firmware and option board FPGA types are not compatible.	The option board FPGA is not compatible with this hardware.	Download the correct firmware file for this drive.	Disable power stage

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F253	Firmware and option board FPGA versions are not compatible.	The version of the option board FPGA is not compatible with this firmware.	Download the correct firmware file for this drive.	Disable power stage
F301 n301	Motor overheated.	Motor overheated.	Check ambient temperature. Check motor mounting heat sink capability	Disable power stage
F302	Over speed.	Motor exceeded VL.THRESH value.	Increase VL.THRESH or lower velocity command.	Dynamic braking
F303	Run away.	Motor did not follow command values.	Current command to the motor is too high for too long. Reduce servo gains, or reduce command trajectory aggressiveness.	Controlled stop
F304 n304	Motor Foldback.	Maximum motor power has been exceeded; the power has been limited to protect the motor	Motion is requiring too much power. Change move profile to reduce load on motor. Check for load jamming or sticking. Check that current limits are set correctly.	Controlled stop
F305	Brake open circuit.	Motor brake open circuit. Fault threshold is 200 mA.	Check cabling and general functionality. For special low current brake applications, the F305 fault can be bypassed using the setting motor.brake = 100.	Dynamic braking
F306	Brake short circuit.	Motor brake short circuit.	Check cabling and general functionality.	Dynamic braking
F307	Brake applied during Enable-State.	Motor brake closed unexpectedly.	Check cabling and general functionality.	Dynamic braking
F308	Voltage exceeds motors rating.	Drive bus voltage exceeds the motor's defined voltage rating.	Make sure that the motor fits the driving rating.	Disable power stage
n309	Motor I2t load. reduce load	Motor I2t load (IL.MI2T) has exceeded the warning threshold IL.MI2TWTRESH. This warning can only be generated in the case that the motor protection mode IL.MIMODE has been set to 1.	Reduce the load of the drive by adjusting lower acceleration / deceleration ramps.	None
F312	Brake released when it should be applied.	Brake disengaged unexpectedly.	Check cabling and general functionality.	Controlled stop
F401	Failed to set feedback type.	Feedback is not connected or wrong feedback type selected	Check primary feedback (X10 connection).	Dynamic braking

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F402	Analog signal amplitude fault.	Analog signal amplitude is too low. Analog fault (resolver signal amplitude or sin/cos amplitude)	Check primary feedback (X10 connection), resolver and sine/cos encoder only.	Dynamic braking
F403	EnDat communication fault.	General communication problem with feedback.	Check primary feedback (X10 connection), EnDat only	Dynamic braking
F404	Illegal Hall state (111, 000).	Hall sensor returns invalid Hall state (111, 000); either all Hall sensors are on or off. Legal Hall states are 001, 011, 010, 110, 100, and 101. This fault can be caused by a broken connection in any one of the Hall signals.	Check the feedback wiring; check all feedback connectors to ensure all pins are positioned correctly.	Dynamic braking
F405	BiSS watchdog fault.	Bad communication with the feedback device.	Check primary feedback (X10 connection), Biss only.	Dynamic braking
F406	BiSS multi cycle fault.			
F407	BiSS sensor fault.			
F408- F416	SFD feedback fault.	Bad communication with the SFD device.	Check primary feedback (X10 connection). If fault persists, internal feedback failure. Return to manufacturer for repair.	Dynamic braking
F417	Broken wire in primary feedback.	In primary feedback, a broken wire was detected (incremental encoder signal amplitude).	Check feedback cable continuity.	Dynamic braking
F418	Primary feedback power supply.	Power supply fault for primary feedback.	Check primary feedback (X10 connection).	Dynamic braking
F419	Encoder init procedure failed.	Phase find procedure did not complete successfully.	Check encoder wiring, reduce/balance motor load prior to phase finding.	Disable power stage
F420	FB3 Endat communication fault.	A communication error was detected with the EnDat 2.2 device connected to the X9 connector.	Check pinout and FB3 configuration and reconnect feedback. If problems persist, contact customer support.	Dynamic braking
F421	SFD resolver sensor fault.	Sensor or sensor wiring failure inside motor.	Try resetting the fault. If it reappears return motor for repair.	Dynamic braking
F423	NV Failure – Multiturn Overflow.	The position saved in memory is corrupted.	Home axis or disable multiturn overflow. If the fault persists, send the drive for repair.	Disable power stage

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F438 n439	Deviation from predicted trajectory fault.	Motor did not follow command values. Motor exceeded maximum allowed position following error (numeric).	Check for increased load, jamming or sticking. Is position error set too low?	Controlled stop
F439 n439	Following error magnitude fault.	Motor did not follow command values. Motor exceeded maximum allowed position following error (user).	Check feedback commutation setup and tuning parameters.	Controlled stop
F450	Following error presentation.	Motor did not follow command values. Motor exceeded maximum allowed position following error (presentation).	Check feedback commutation setup and tuning parameters.	Controlled stop
F451 n451	Feedback battery fault.	The external battery voltage is too low. The F451 fault is generated if the AKD is not powered. The n451 warning is generated if the AKD is powered. This fault can be inhibited with FAULT451.ACTION.	Check or replace the external battery.	Dynamic braking
F452	Multitum overflow not supported with this feedback.	Non-multitum feedback is connected while FB1.PMTSAVEEN is active.	Connect multitum feedback to the drive or disable multitum overflow.	Disable power stage
F453	Tamagawa communication fault (timeout).	Bad communication with the feedback device. Cabling or shielding fault, or internal feedback failure.	Check the cabling to the drive and if the problem persists then return the feedback to the manufacturer for repair.	Dynamic braking
F454	Tamagawa communication fault (transfer incomplete).			
F456	Tamagawa communication fault (CRC).			
F457	Tamagawa communication fault (start timeout).			
F458	Tamagawa communication fault (UART Overrun).			
F459	Tamagawa communication fault (UART Framing).			

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F460	Tamagawa encoder fault (over speed).	This fault is generated when the shaft is rotated above a maximum speed that can be maintained while the external battery is powered and the drive is powered off.	Reset the fault on the drive with DRV.CLRFAULTS.	Dynamic braking
F461	Tamagawa encoder fault (counting Error).	When the feedback is powered on the position (within one revolution) was incorrect because of a problem with the feedback device.	Reset the fault on the drive with DRV.CLRFAULTS, if the problem persists then clean the feedback code plate.	Dynamic braking
F462	Tamagawa encoder fault (counting overflow).	Multi-turn counter has overflowed.	Reset the fault on the drive with DRV.CLRFAULTS.	Dynamic braking
F463	Feedback overheat fault.	The temperature of the encoder substrate exceeds overheating detection temperature during main power-on.	Reset the fault on the drive with DRV.CLRFAULTS after temperature of encoder is lowered.	Dynamic braking
F464	Tamagawa encoder fault (multi-turn error).	Any bit-jump occurs in the multi-turn signal during main power-on.	Return to the origin. Reset the fault on the drive with DRV.CLRFAULTS.	Dynamic braking
F465	Excessive shock detected by feedback device.	1. Excessive shock from an impact or vibration has caused an error in the feedback device. or 2. Internal error in the feedback device mechanism, resulted in bad position data.	1. Reduce external impacts to the motor housing and shaft. Tune the control loops filters. Reduce gains, particularly feed forward gains. Reduce maximum commanded acceleration. or 2. Replace the feedback device.	Dynamic braking
F467	Feedback fault on feedback 1 (See FB1.FAULTS for details).	The feedback device malfunctioned.	Check FB1.FAULTS for detailed fault information.	Dynamic braking
F469	FB1.ENCRE is not power of two, Remote Commutation not possible.	Feedback Type 43 requires that the feedback resolution be a power of two. Feedback Type 43 is not supported for all feedback resolutions.	If the remote feedback device's resolution is a power of two, enter that value in FB1.ENCRE. Otherwise, choose a feedback device with a supported resolution (power of two) and enter that value in FB1.ENCRE.	Dynamic braking
F470	Feedback fault on feedback 3.	Feedback is not connected or general communication problem.	Check tertiary feedback (X9 connection)	Dynamic braking

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F473	Wake and Shake - Insufficient movement	There was less movement than defined by WS.DISTMIN.	Increase WS.IMAX and/or WS.T. Or try using WS.MODE 1 or 2.	Disable power stage
F475	Wake and Shake - Excess movement	WS.DISTMAX has been exceeded in WS.MODE 0. Or more than 360 degrees was traveled in WS.MODE 2.	Increase WS.DISTMAX value or reduce WS.IMAX or WS.T. Wake and Shake is not supported for vertical/overhung loads.	Disable power stage
F476	Wake and Shake - Fine-Coarse delta too large.	The angle difference between the coarse and fine calculation was larger than 72 deg.	Modify WS.IMAX or WS.T and try again.	Disable power stage
F478 n478	Wake and Shake - Over speed	WS.VTHRESH was exceeded.	Increase WS.VTHRESH value or reduce WS.IMAX or WS.T.	Disable power stage
F479 n479	Wake and Shake - Loop angle delta too large.	The angle between complete loops was larger than 72 deg.	Modify WS.IMAX or WS.T and try again.	Disable power stage
F480	Field bus command velocity too high.	Fieldbus command velocity exceeds VL.LIMITP.	Lower fieldbus command trajectory, or increase the value of VL.LIMITP.	Disable power stage
F481	Field bus command velocity too low.	Fieldbus command velocity exceeds VL.LIMITN.	Increase fieldbus command trajectory, or decrease the value of VL.LIMITN.	Disable power stage
F482	Wake and Shake - Commutation not initialized.	The motor requires the commutation initialization (there are no encoder commutation tracks, Hall sensors, etc.) and no successful Wake and Shake sequence has been performed	Clear any faults, activate the Wake and Shake procedure (WS.ARM) and enable the drive.	Disable power stage
F483	Wake and Shake - Motor U phase missing.	No current was detected in the motor's U phase during Wake and Shake initialization (Mode 0 only).	Check the motor connections and WS.IMAX (very low current may produce this error).	Disable power stage
F484	Wake and Shake - Motor V phase missing.	No current was detected in the motor's V phase during Wake and Shake initialization (Mode 0 only).	Check the motor connections and WS.IMAX (very low current may produce this error).	Disable power stage

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F485	Wake and Shake - Motor W phase missing.	No current was detected in the motor's W phase during Wake and Shake initialization (Mode 0 only).	Check the motor connections and WS.IMAX (very low current may produce this error).	Disable power stage
F486	Input change rate exceeds maximum speed of emulated encoder.	Motor velocity exceeds the maximum speed the emulated encoder output can generate.	Reduce value of DRV.EMUEPULSEWIDTH.	Controlled stop
F487	Wake and Shake - Validating Positive Movement Failed.	After applying a positive current, motor moved in the wrong direction.	Check motor phase wiring and motor encoder wiring is correct.	Disable power stage
F489	Wake and Shake - Validating Negative Movement Failed.	After applying a negative current, motor moved in the wrong direction.	Check motor phase wiring and motor encoder wiring is correct.	Disable power stage
F490	Wake and Shake - Validating Comm. angle timed out.	During one of the W&S validation stages, the drive stopped responding to commands.	Contact customer support.	Disable power stage
F491	Wake and Shake - Validating Comm. angle moved too far - Bad Comm Angle.	After applying a current, the motor moved too far (>15 electrical degrees).	This indicates a poor motor phase angle was found by Wake and Shake. Revise Wake and Shake parameters, and re-run Wake and Shake.	Disable power stage
F492	Wake and Shake - Validating Comm. angle required more than MOTOR.ICONT	A current larger than MOTOR.ICONT was used to excite the motor.	This indicates one of the following: <ul style="list-style-type: none"> <li>Phase angle is incorrect due to a bad wake and shake.</li> <li>Motor has very high friction requiring high current to break free.</li> <li>Motor power cable is disconnected or improperly wired.</li> </ul>	Disable power stage
F493	Invalid commutation detected - motor accelerating in the wrong direction. Motor phase may be incorrect.	The velocity of the motor exceeded WS.CHECKV and the sign of the current was not equal to the sign of motor acceleration or the sign of motor velocity for a period of time larger than WS.CHECKT.	<ol style="list-style-type: none"> <li>1. Check motor phase wiring</li> <li>2. Re-configure wake and shake (if Mode 0 or 1 is used)</li> <li>3. Re-run wake and shake to determine correct commutation angle</li> </ol>	Dynamic braking

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F501 n501	Bus over voltage.	Bus voltage too high. Usually, this problem is load related.	Reduce load or change motion profile. Check system regen capacity; add capacity if needed. Check mains voltage.	Disable power stage
F502	Bus under voltage. Warning issued prior to fault.	Bus voltage below threshold value.	Check mains voltage.	Controlled stop
F503 n503	Bus capacitor overloaded.	Single phase AC input on a drive only rated for three-phase input or excessive single-phase power load.	Check mains voltage.	Controlled stop
F504- F518	Internal supply voltage fault	Internal supply voltage fault detected	Check wiring for electromagnetic compatibility (EMC). If issue persists exchange drive.	Controlled stop
F519	Regen short circuit.	Regen resistor short circuit.	Regen IGBT short circuit. Contact technical support.	Disable power stage
F521 n521	Regen over power.	Too much power stored in regen resistor.	Either get larger regen resistor or use DC bus sharing to dissipate power.	Disable power stage
F523	Bus over voltage FPGA.	Bus over voltage hard fault.	Check mains voltage and check system brake capacity.	Disable power stage
F524 n524	Drive Foldback.	Maximum drive power has been exceeded. The power has been limited to protect the drive.	Motion requires too much power. Change profile to reduce load .	Controlled stop
F525	Output over current.	Current exceeds drive peak.	Check for short or feedback faults.	Disable power stage
F526	Current sensor short circuit.	1. Current sensor short circuit. 2. Motor cable plugged in upside down	1. Restart drive. If issue persists, contact technical support. 2. Plug in cable right-side up.	Disable power stage
F527	Iu current AD converter stuck.	Hardware failure detected.	Restart drive. If issue persists, contact technical support.	Disable power stage
F528	Iv current AD converter stuck.	Hardware failure detected.	Restart drive. If issue persists, contact technical support.	Disable power stage
F529	Iu current offset limit exceeded.	Hardware failure detected.	Restart drive. If issue persists, contact technical support.	Disable power stage

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F530	Iv current offset limit exceeded.	Hardware failure detected.	Restart drive. If issue persists, contact technical support.	Disable power stage
F531	Power stage fault.	Hardware failure detected.	Restart drive. If issue persists, replace drive.	Disable power stage
F532	Drive motor parameters setup incomplete.	Before a motor can be enabled, you must configure a minimum set of parameters. These parameters have not been configured.	Issue the command <code>DRV.SETUPREQLIST</code> to display the list of the parameters that you must configure. Configure these parameters either manually or automatically. You can manually configure these parameters in three ways: (1) set each parameter individually; (2) use the setup wizard to select the motor; or (3) select the motor type from the motor data base in the Motor window ( <code>MOTOR.AUTOSET</code> must be set to 0 (off)). If you use the Motor window, you must first select the feedback type. If the motor has Biss Analog, Endat, or SFD feedback (feedback with memory), then these parameters are set automatically when <code>MOTOR.AUTOSET</code> is set to 1 (on).	Disable power stage
F534	Failed to read motor parameters from feedback device.	Motor either does not have motor feedback memory, or the motor feedback memory is not programmed properly so the parameters cannot be read.	Try to read parameters again by clicking the <b>Disable</b> and <b>Clear Faults</b> button, or by issuing the <code>DRV.CLRFAULTS</code> command. If this attempt is not successful, then set <code>MOTOR.AUTOSET</code> to 0 (off) and program the parameters using the setup wizard or manually set up the parameters. If the motor has motor memory (Biss Analog, Endat, and SFD motors have motor memory), return the motor to have the memory programmed.	Dynamic braking
F535	Power-board over-temperature fault.	The power-board temperature sensor indicates more than 85 °C.	Reduce the load of the drive or ensure better cooling.	Disable power stage
F536	Standby power supply fault.	Standby voltage circuit overloaded.	Check total 24 V power load of AKD-N in the strings (sum of drive and motor brake supply).	Disable Drives
F537	Precharge fault.	Precharge process could not be performed in a reasonable amount of time.	Look for a shortcut in the string (cable) or exchange hardware	Disable Drives and Unpower Strings

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F541	AC input phase 1 missing.	Mains supply failure detected, phase L1 missed.	Check power connector and power source.	Disable Drives and Unpower Strings
F542	AC input phase 2 missing.	Mains supply failure detected, phase L2 missed.	Check power connector and power source.	Disable Drives and Unpower Strings
F543	AC input phase 3 missing.	Mains supply failure detected, phase L3 missed.	Check power connector and power source.	Disable Drives and Unpower Strings
F545	String current over peak limit	String current is higher than AKD-C Rated Peak Current.	Lower AKD-N current limits to prevent overdrawing AKD-C current	Disable Drives and Unpower Strings
F546	String current over continuous limit	String current is higher than AKD-C Rated Continuous Current ( $I^2T$ ).	Lower AKD-N current limits to prevent overdrawing AKD-C current	Disable Drives and Unpower Strings
F560	Regen near capacity, could not prevent over voltage.	An F501 Bus Over Voltage has occurred while the Regen Resistor was at or above 75% of its dissipation capacity.	Increase the size of regen resistor to be able to dissipate more power.	Disable power stage
F561	More than 8 AKD-Ns connected at string2	Too many drives on string 2.	Reduce NSDs on String 2 to 8 or less	Disable Drives and Unpower Strings
F562	More than 8 AKD-Ns connected at string1	Too many drives on string 1.	Reduce NSDs on String 1 to 8 or less	Disable Drives and Unpower Strings
F564	Number of connected nodes on string 1 has decreased.	Drive has been removed from string 1.	Investigate AKD-N Ethercat communication, determine where network connection failed.	Disable Drives and Unpower Strings

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F565	Number of connected nodes on string 2 has decreased.	Drive has been removed from string 2.	Investigate AKD-N Ethercat communication, determine where network connection failed.	Disable Drives and Unpower Strings
F570	Phase loss.	Phase loss detected.	Check mains power voltage. Fault action configurable by FAULT570.ACTION (→ p. 716).	Disable power stage
n582	Velocity has been limited commutation speed to less than 600Hz to meet ECCN 3A225 requirements.	Motor Velocity has exceeded the allowed commutation speed (599Hz).	Refer to ECCN 3A225 Limitations for Induction Motors (→ p. 74).	Velocity command will be clamped at ECCN 3A225 regulation.
n601	Modbus data rate is too high.	Modbus controller data rate is too high.	Reduce data rate.	Disable power stage
F602	Safe torque off.	Safe torque off function has been triggered.	Reapply supply voltage to STO if safe to do so.	Disable power stage
n603	OPMODE incompatible with CMDSOURCE	This warning is generated when the drive is enabled and the gearing command source is selected at the same time as torque or velocity op-mode.	Select a different DRV.OPMODE and DRV.CMDSOURCE combination.	Disable power stage
n604	EMUEMODE incompatible with DRV.HANDWHEELSRC.	Emulated encode mode is incompatible with the selected handwheel source.	Select a compatible emulated encode mode or change handwheel source.	Disable power stage
F621	Control Board CRC fault.	Communications with the Power Board Failed	DRV.CLRFAULTS. If issue persists, contact technical support.	Disable power stage
F623	Power Board CRC fault.			
F624	Power Board Watchdog fault.			
F625	Power Board Communication fault.			
F626	Power Board FPGA not configured.			
F627	Control Board Watchdog fault.			
F628	AKD-C Front door packet not received on String 1.	A data packet has not been received by the AKD-N or AKD-C (String 1)	Check cables and clear the fault.	Disable Drives and Unpower Strings

Fault	Message/Warning	Cause	Remedy	Drive Response to Fault
F629	AKD-C Front door packet not received on String 2.	A data packet has not been received by the AKD-C (String 2)	Check cables and clear the fault.	Disable Drives and Unpower Strings
F630	FPGA cyclic read fault.	FPGA-to-firmware data access error.	DRV.CLRFAULTS. If issue persists, contact technical support.	Disable Power Stage
F701	Fieldbus Runtime.	Runtime communication fault.	Check fieldbus connections (X11), settings, and control unit.	Controlled stop
F702 n702	Fieldbus Communication lost.	All fieldbus communication was lost.	Check fieldbus connections (X11), settings, and control unit.	Controlled stop
F703	Emergency timeout occurred.	Motor did not stop in the timeout defined.	Change timeout value, change stop parameters, improve tuning.	Disable power stage

## 20.2 Additional fault messages AKD-T

AKD BASIC runtime faults are displayed in the two-digits 7-segment display of the drive:



The additional runtime fault messages for AKD-T are coded with numbers starting from F801. All faults activate the fault relay and can be cleared with `DRV.CLRFAULTS`.

### NOTE

More information about error messages, causes, remedy and clearing errors can be found in the WorkBench online help.

Remedy for all errors: clear error, fix user program, recompile, download and attempt to run the program again.

Error	Description
F801	Divide by zero.
F802	Stack Overflow.
F803	Insufficient Memory.
F804	No interrupt handler defined.
F805	Interrupt error.
F806	Max string length exceeded.
F807	String overflow.
F808	Array out of bounds.
F809	Feature not supported.
F810	Internal firmware/hardware error.
F812	Parameter not supported.
F813	Parameter access error.
F814	Data not found.
F815	Data invalid.
F816	Data too high.
F817	Data too low.
F818	Param type out of range.
F819	Data not divisible by 2.
F820	Invalid position modulo setting.
F821	Cannot read from command.
F823	Enable Drive first.
F824	<code>DRV.OPMODE</code> must be 2 (position).
F825	<code>DRV.CMDSOURCE</code> must be 5 (program).
F826	Cannot execute during a move.
F827	Writing to read-only parameter.
F828	Disable Drive first.
F829	Opcode not supported - upgrade firmware.
F830	No negative values allowed.

Error	Description
F831	BASIC program is invalid. May need firmware upgrade.
F832	BASIC program is missing.
F901	Too many cams.

### 20.3 SD Card Errors

Fault	Message/Warning	Cause	Remedy
E0011	Drive enabled! Disable drive first.	Cannot perform SD.SAVE or SD.LOAD while drive is enabled.	Disable drive.
E0064	Cannot execute when program is running.	Program is running.	Stop program.
E0066	Command is password protected	The BASIC program in drive is password protected.	De-activate password protection from program.
E0082	SD Card is not inserted. With I/O option card only.	No SD card inserted or SD card inserted with wrong orientation.	Insert SD card with correct orientation.
E0083	SD Card is write protected. With I/O option card only.	SD card protection clip in wrong position.	Remove write protection from SD card.
E0084	SD Card hardware not installed.	No I/O option board installed or SD card device faulty.	-
E0095	File not found on SD Card. With I/O option card only.	SD card damaged or filename has been changed manually or deleted.	-
E0096	File error trying to access the SD Card. With I/O option card only.	File on SD card can't be read.	-
E0097	File system error accessing the SD card. With I/O option card only.	File system on SD card can't be read.	Use supported SD cards only (see SD Card Slot in Installation Manual)
E0098	A parameter could not be set in the drive. With I/O option card only.	-	-
E0099	There was an error writing to a file on the SD Card. With I/O option card only.	-	-
E0100	SD Card read/write in progress. With I/O option card only.	-	Wait until read/write process is done.
E0101	There was an error accessing the BASIC binary file. With I/O option card only.	Basic program file couldn't be read.	-
E0102	BASIC program missing or invalid.	SD.SAVE and SD.LOAD are not possible if a BASIC program does not exist.	

### 20.4 Clearing Faults

 
You can clear drive faults in several ways:

1. using the WorkBench toolbar
2. using the WorkBench terminal screen
3. using the CANopen interface
4. using an external digital signal

In the first three methods, clearing the fault automatically disables the drive (by issuing the DRV.DIS command). After the fault is cleared, you must then enable the drive again (by issuing the DRV.EN command). In the fourth method, clearing the fault does not automatically disable the drive. Once the fault is cleared, the drive will immediately become enabled again when no fault conditions exist.

The external digital signal method is useful when the application does not require a field bus, therefore the controller cannot issue fieldbus commands (for example, DRV.EN). The fault clearing function is simpler in this case. The controller can clear a fault condition with a single output and no fieldbus command is required. The hardware enable input is still utilized for safety. Many machines are set to disable when a fault occurs, therefore, the enable circuit is connected only after the fault clear circuit is toggled.

1. Using the WorkBench toolbar. Click the **Clear Fault** button to clear the fault, then click the **Enable** button to enable the drive again.



2. Using an ASCII command. In WorkBench terminal screen, enter DRV.CLRFAULTS, then enter DRV.EN to enable the drive.
3. Using the CANopen interface (Object 6040h: Controlword DS402). The ASCII control commands are built up from the logical combination of the bits in the control word and external signals (enable output stage). You can configure the **Reset Fault** bits in the control word to clear the fault. See 1 Object 6040h: Control word (DS402) in the CANopen manual for details on clearing faults using this method. After the fault is cleared, you must enable the drive.
4. Using an external digital signal. First, provide a disable command to the drive, since this command is not automatically issued when the fault is cleared using an external digital signal. You must provide this disable command after the drive has disabled itself and before the clear fault command is issued in order for the clear fault command to be accepted.

Digital input mode 1 clears a fault condition. In the WorkBench terminal screen, enter DINx.MODE 1, with x set to the corresponding digital input number. See the AKD Installation Manual (Digital Inputs (X7/X8) (→ p. 112)) for digital input numbers and corresponding pin connections.

Example:

DIN2.MODE 1 sets digital input 2 (pin 9 on connector X7) to perform the clear fault function. Any free digital input shown in Table x can be set to mode 1 (Reset faults).

## 20.5 Parameter and Command Error Messages

Error Message	Meaning	Remedy	Occurrence
Error: Parameter or command was not found.	Parameter or command string was not recognized as a known command.	Check the entered string for accuracy. Consult the reference guide or enter DRV.LIST in the WorkBench terminal screen to find valid parameters and commands.	General.
Error: Not a trigger parameter.	Parameter cannot be used for triggering the scope.	Use a different parameter as a trigger value.	Recorder parameters.
Error: Parameter not recordable.	Parameter cannot be scoped.	Do not scope this parameter.	Recorder parameters.

Error Message	Meaning	Remedy	Occurrence
Error: Wrong argument for parameter or command.	Argument was not accepted.	Check the entered argument for accuracy. Consult the reference guide or enter DRV.LIST in the WorkBench terminal screen to find valid parameter and command arguments.	General.
Error: No arguments allowed for parameter or command.	Parameter or command supports no arguments.	Enter parameter or command again with no arguments.	Commands and read-only parameters
Error: Too many arguments for parameter or command.	Too many arguments provided for this parameter or command.	Enter again with fewer arguments.	All parameters and commands with no or one argument.
Error: No float allowed.	Float number was entered, but only integer numbers are allowed.	Enter integer value instead.	All parameters and commands with integer arguments.
Error: Parameter or command is read-only.	Argument was not accepted because the parameter or command is read-only.	Enter again with no arguments.	Commands and all read-only parameters.
Error: Parameter is temporarily write protected.	Argument was not accepted because the parameter is currently read-only.	Check reference guide or WorkBench help to determine if the parameter is read-only, read-write, or nonvolatile.	Some parameters that come from the Smart Feedback Device (SFD).
Error: Argument greater than maximum value.	Entered argument was beyond maximum value.	Enter a value that is within the allowable range. See reference guide or WorkBench help for ranges.	Commands and read-write parameters.
Error: Too many characters in parameter or command.	Parameter or command string was too long.	Shorten string and enter again.	General.
Error: Argument less than minimum value.	Entered argument was too small.	Enter value that is within the limits.	Commands and read-write parameters.
Error: Argument is out of data range.	Entered argument was not within the data range limits.	Enter value that is within the limits.	Commands and read-write parameters.
Error: Parameter or command is password protected.	Use of this parameter or command requires a password.	Contact technical support to obtain password. Enter valid password.	Password protected parameters and commands.
Error: Wrong operation mode for parameter or command.	Requested parameter or command cannot be performed in this operation mode.	Change to valid operation mode.	

Error Message	Meaning	Remedy	Occurrence
Error: Drive enabled. Disable drive and continue.	Action can only be performed if drive is disabled.	Disable drive and repeat action.	
Error: Drive disabled. Enable drive and continue.	Action can only be performed if drive is enabled.	Enable drive and repeat action.	
Error: Data value is invalid.	Entered data was not valid.	Provide valid data.	
Error: Argument must be an even number.	Argument is not an even number.	Enter a value divisible by two without remainder.	
Error: Argument must be an odd number.	Argument must be an odd number.	Enter a value not divisible by two with remainder.	
Error: Axis is not homed.	Axis is not homed.	Home axis and repeat action.	
Error: All recorder channels empty.	No data is specified to record.	Specify the data to be recorded and start again.	Recorder commands.
Error: Process already active.	Required action is already running.	Wait until action is finished and start again if needed.	
Error: Motor is currently in motion.	Action can only be performed if motor is not moving.	Stop motion and repeat action.	Motion tasks, service motion, and others.
Error: EEPROM is bad or does not exist.	EEPROM is damaged.	Restart drive. If fault persists, replace the drive and consult technical support.	
Error: Unknown board.			
Error: Fault exists. Correct fault condition and then clear faults.	A fault is present in the system.	Clear the fault, disable the drive, and then enable the drive again.	
Error: Cannot clear faults. Issue software or hardware disable first.		Clear hardware or software enable and repeat action.	
Error: EEPROM is busy.			
Error: Invalid motor/feedback poles ratio.			
Error: Unknown Fault.	Situation should not happen.	Clear fault. If fault recurs, consult technical support.	Unknown.
Error: Invalid motor/feedback poles ratio.			

Error Message	Meaning	Remedy	Occurrence
Error: Invalid motion task parameter.			
Error: Invalid motion task number.			
Error: Invalid motion task velocity.			
Error: Invalid motion task acceleration or deceleration.			
Error: Invalid motion task customer profile table number.			
Error: Invalid motion task following number.			
Error: Function not available for the active command source.			
Error: Invalid Bode plot mode for this function.			
Error: Invalid sine-sweep Bode plot mode.			
Error: Bode plot start frequency greater than or equal to end frequency.			
Error: Function not available while a controlled stop is in process.			
Error: Not enough memory available.			
Error: Function not available while a Bode-plot measurement is active.			
Error: lu/lv offset calculation not finished.			

Error Message	Meaning	Remedy	Occurrence
Error: Buffer overflow.			
Error: Cannot save to EEPROM while inrush relay is closed.			
Error: Test mode is off.			
Error: Cannot change digital input mode. Issue software or hardware disable first.			
Error: Internal drive procedure active: controlled stop, burn-in, phase find, or zero.			
Error: General motion fault.			

## 20.6 CANopen Emergency Messages and Error Codes

Emergency messages are triggered by internal equipment errors. They have a high ID-priority to ensure quick access to the bus. An emergency message contains an error field with pre-defined error/fault numbers (2 bytes), an error register (1byte), the error category (1 byte), and additional information. Error numbers 0000h to 7FFFh are defined in the communication or drive profile. Error numbers FF00h to FFFFh have manufacturer-specific definitions.

Error Code	Fault/Warning	Description
0x0000	0	Emergency error free.
0x1080	-	General Warning.
0x1081	-	General Error.
0x3110	F523	DC Bus link over voltage FPGA.
0x3120	F247	DC Bus link voltage exceed allowed thresholds.
0x3130	F503	DC Bus link capacitor overload.
0x3180	n503	Warning: DC Bus link capacitor overload.
0x3210	F501	DC Bus link over-voltage.
0x3220	F502	DC Bus Link under-voltage.
0x3280	n502	Warning: DC Bus Link under-voltage.
0x3281	n521	Warning: Dynamic Braking I <sup>2</sup> T.
0x3282	F519	Regen short circuit.
0x3283	n501	Warning: DC Bus link over-voltage.
0x4210	F234	Excessive temperature, device (control board).

Error Code	Fault/Warning	Description
0x4310	F235	Excessive temperature, drive (heat sink).
0x4380	F236	Power temperature sensor 2 high.
0x4381	F237	Power temperature sensor 3 high.
0x4382	F535	Power board overtemperature.
0x4390	n234	Warning: Control temperature sensor 1 high.
0x4391	n235	Warning: Power temperature sensor 1 high.
0x4392	n236	Warning: Power temperature sensor 2 high.
0x4393	n237	Warning: Power temperature sensor 3 high.
0x4394	n240	Warning: Control temperature sensor 1 low.
0x4395	n241	Warning: Power temperature sensor 1 low.
0x4396	n242	Warning: Power temperature sensor 2 low.
0x4397	n243	Warning: Control temperature sensor 1 low.
0x4398	F240	Control temperature sensor 1 low.
0x4399	F241	Power temperature sensor 1 low.
0x439A	F242	Power temperature sensor 2 low.
0x439B	F243	Power temperature sensor 3 low.
0x5113	F512	5V0 under voltage.
0x5114	F505	1V2 under voltage.
0x5115	F507	2V5 under voltage.
0x5116	F509	3V3 under voltage.
0x5117	F514	+12V0 under voltage.
0x5118	F516	-12V0 under voltage.
0x5119	F518	Analog 3V3 under voltage.
0x5180	F504	1V2 over voltage.
0x5181	F506	2V5 over voltage.
0x5182	F508	3V3 over voltage.
0x5183	F510	5V0 over voltage.
0x5184	F513	+12V0 over voltage.
0x5185	F515	-12V0 over voltage.
0x5186	F517	Analog 3V3 over voltage.
0x5530	F105	Hardware memory, non-volatile memory stamp invalid.
0x5580	F106	Hardware memory, non-volatile memory data.
0x5590	F204	Control board EEPROM read failed.
0x5591	F205	Control board EEPROM corrupted serial num stamp.
0x5592	F206	Control board EEPROM corrupted serial num data.
0x5593	F207	Control board EEPROM corrupted parameter stamp.
0x5594	F208	Control board EEPROM corrupted parameter data.
0x5595	F219	Control board EEPROM write failed.

Error Code	Fault/Warning	Description
0x55A0	F209	Power board EEPROM read failed.
0x55A1	F210	Power board EEPROM corrupted serial num stamp.
0x55A2	F212	Power board EEPROM corrupted serial num data.
0x55A3	F213	Power board EEPROM corrupted parameter stamp.
0x55A4	F214	Power board EEPROM corrupted parameter data.
0x55A5	F230	Power board EEPROM write failed.
0x55A6	F232	Power board EEPROM invalid data.
0x55B0	F248	Option board EEPROM corrupted.
0x55B1	F249	Option board upstream checksum.
0x55B2	F250	Option board upstream checksum.
0x55B3	F251	Option board watchdog.
0x55B8	F252	Firmware and option board FPGA types are not compatible.
0x55B9	F253	Firmware and option board FPGA versions are not compatible.
0x55C0	F621	Control Board CRC fault.
0x55C1	F623	Power Board CRC fault.
0x55C2	F624	Power Board Watchdog fault.
0x55C3	F625	Power Board Communication fault.
0x55C4	F626	Power Board FPGA not configured.
0x55C5	F627	Control Board Watchdog fault.
0x55C6	n103	Warning: Resident FPGA .
0x55C7	n104	Warning: Operational FPGA .
0x6380	F532	Drive motor parameters setup incomplete.
0x7180	F301	Motor overheat.
0x7182	F305	Motor Brake open circuit.
0x7183	F306	Motor Brake short circuit.
0x7184	F307	Motor Brake applied during enable state.
0x7185	F436	EnDAT overheated.
0x7186	n301	Warning: Motor overheated.
0x7187	F308	Voltage exceeds motor rating.
0x7188	F560	Regen near capacity, could not prevent over voltage.
0x7189	F312	Brake released when it should be applied.
0x7305	F417	Broken wire in primary feedback.
0x7380	F402	Feedback 1 Analog signal amplitude default.
0x7381	F403	Feedback 1 EnDat communication fault.
0x7382	F404	Feedback 1 illegal hall state.
0x7383	F405	Feedback 1 BiSS watchdog.
0x7384	F406	Feedback 1 BiSS multi cycle.
0x7385	F407	Feedback 1 BiSS sensor.

Error Code	Fault/Warning	Description
0x7386	F408	Feedback 1 SFD configuration.
0x7387	F409	Feedback 1 SFD UART overrun.
0x7388	F410	Feedback 1 SFD UART frame.
0x7389	F412	Feedback 1 SFD UART parity.
0x738A	F413	Feedback 1 SFD transfer timeout.
0x738C	F415	Feedback 1 SFD mult. corrupt position.
0x738D	F416	Feedback 1 SFD Transfer incomplete.
0x738E	F418	Feedback 1 power supply fault.
0x738F	F401	Feedback 1 failed to set feedback.
0x7390	n414	Warning: SFD single corrupted position.
0x7391	F419	Encoder init procedure failed.
0x7392	F534	Failed to read motor parameters from feedback device.
0x7393	F421	SFD position sensor fault.
0x7394	F463	Tamagawa encoder: overheat.
0x7395	n451	Warning: Tamagawa encoder battery.
0x7396	n423	Warning: Non volatile memory error, multiturn overflow.
0x7398	F135	Homing is needed.
0x7399	F468	FB2.Source not set.
0x739A	F469	FB1.ENCRES is not power of two.
0x739B	F423	Non volatile memory error, multiturn overflow.
0x739C	F467	Hiperface DSL fault.
0x739D	F452	Multiturn overflow not supported with this feedback.
0x739E	F465	Excessive shock detected by feedback device.
0x73A0	F453	Tamagawa encoder: communication timeout.
0x73A1	F454	Tamagawa encoder: communication transfer incomplete.
0x73A2	F456	Tamagawa encoder: communication CRC.
0x73A3	F457	Tamagawa encoder: communication start timeout.
0x73A4	F458	Tamagawa encoder: communication UART overrun.
0x73A5	F459	Tamagawa encoder: communication UART framing.
0x73A6	F460	Tamagawa encoder: over speed.
0x73A7	F461	Tamagawa encoder: contouring error.
0x73A8	F462	Tamagawa encoder: counting overflow.
0x73A9	F464	Tamagawa encoder: multiturn error.
0x73AA	F451	Tamagawa encoder: battery.
0x73B0	F486	Motor velocity exceeds emulated encoder maximum speed.
0x73B8	F420	FB3 EnDat communication fault.
0x73C0	F473	Wake and Shake. Insufficient movement.
0x73C1	F475	Wake and Shake. Excessive movement.

Error Code	Fault/Warning	Description
0x73C2	F476	Wake and Shake. Fine-coarse delta too large.
0x73C3	F478	Wake and Shake. Overspeed.
0x73C4	F479	Wake and Shake. Loop angle delta too large.
0x73C5	F482	Commutation not initialized.
0x73C6	F483	Motor U phase missing.
0x73C7	F484	Motor V phase missing.
0x73C8	F485	Motor W phase missing.
0x73C9	n478	Warning: Wake and Shake. Overspeed.
0x73D0	F487	Wake and Shake. Validating positive movement failed.
0x73D1	F489	Wake and Shake. Validating negative movement failed.
0x73D2	F490	Wake and Shake. Validating commutation angle time out.
0x73D3	F491	Wake and Shake. Validating commutation angle moved too far.
0x73D4	F492	Wake and Shake. Validating commutation angle required more than MOTOR.ICONT.
0x73D5	F493	Invalid commutation detected, motor accelerates in wrong direction.
0x8130	F129	Life Guard Error or Heartbeat Error.
0x8180	n702	Warning: Fieldbus communication lost.
0x8280	n601	Warning: Modbus data rate is too high.
0x8311	F304	Motor foldback.
0x8331	F524	Drive foldback.
0x8380	n524	Warning: Drive foldback.
0x8381	n304	Warning: Motor foldback.
0x8382	n309	Warning: Motor I <sup>2</sup> t load.
0x8383	n580	Warning: Using derivate of position when using sensorless feedback type in position mode.
0x8384	n581	Warning: Zero velocity when using induction sensorless feedback type in position mode.
0x8480	F302	Over speed.
0x8481	F703	Emergency timeout occurred while axis should disable.
0x8482	F480	Fieldbus command velocity too high.
0x8483	F481	Fieldbus command velocity too low.
0x8582	n107	Warning: Positive software position limit is exceeded.
0x8583	n108	Warning: Negative software position limit is exceeded.
0x8611	F439	Following error (user).
0x8685	F138	Instability during autotune.
0x8686	n151	Warning: Not enough distance to move; Motion Exception.
0x8687	n152	Warning: Not enough distance to move; Following Motion Exception.

Error Code	Fault/Warning	Description
0x8688	n153	Warning: Velocity Limit Violation, Exceeding Max Limit.
0x8689	n154	Warning: Following Motion Failed; Check Motion Parameters.
0x868A	n156	Warning: Target Position crossed due to Stop command.
0x86A0	n157	Warning: Homing Index pulse not found.
0x86A1	n158	Warning: Homing Reference Switch not found.
0x86A2	n159	Warning: Failed to set motion task parameters.
0x86A3	n160	Warning: Motion Task Activation Failed.
0x86A4	n161	Warning: Homing Procedure Failed.
0x86A5	F139	Target Position Over Short due to invalid Motion task activation.
0x86A6	n163	Warning: MT.NUM exceeds limit.
0x86A7	n164	Warning: Motion task is not initialized.
0x86A8	n165	Warning: Motion task target position is out.
0x86A9	n167	Warning: Software limit switch traversed.
0x86AA	n168	Warning: Invalid bit combination in the motion task control word.
0x86AB	n169	Warning: 1:1 profile cannot be triggered on the fly.
0x86AC	n170	Warning: Customer profile table is not initialized.
0x86AD	n171	Warning: Motion task activation is currently pending
0x86AE	n135	Warning: Homing is needed.
0x86AF	n174	Warning: Homing maximum distance exceeded
0x86B0	F438	Following error (numeric).
0x8780	F125	Fieldbus synchronization lost.
0x8781	n125	Warning: Fieldbus synchronization lost.
0x8AF0	n137	Warning: Homing and feedback mismatch.
0xFF00	F701	Fieldbus runtime.
0xFF01	F702	Fieldbus communication lost.
0xFF02	F529	Iu current offset limit exceeded.
0xFF03	F530	Iv current offset limit exceeded.
0xFF04	F521	Regen over power.
0xFF07	F525	Output over current.
0xFF08	F526	Current sensor short circuit.
0xFF09	F128	MPOLES/FPOLES not an integer.
0xFF0A	F531	Power stage fault.
0xFF0B	F602	Safe torque off.
0xFF0C	F131	Secondary feedback A/B line break.
0xFF0D	F130	Secondary feedback supply over current.
0xFF0E	F134	Secondary feedback illegal state.
0xFF0F	F245	External fault.
0xFF10	F136	Firmware and FPGA versions are not compatible.

Error Code	Fault/Warning	Description
0xFF11	F101	Firmware type mismatch.
0xFF12	n439	Warning: Following error (user).
0xFF13	n438	Warning: Following error (numeric).
0xFF14	n102	Warning: Operational FPGA is not a default FPGA.
0xFF15	n101	Warning: The FPGA is a laboratory FPGA.
0xFF16	n602	Warning: Safe torque off.
0xFF17	F132	Secondary feedback Z line break.
0xFF18	n603	Warning: OPMODE incompatible with CMDSOURCE.
0xFF19	n604	Warning: EMUEMODE incompatible with DRV.HANDWHEELSRC.

## **20.7 Unknown Fault**

This fault message occurs when an undefined fault condition is encountered.

### **20.7.1 Remedies**

1. Click **Clear Fault**.

## 21 Troubleshooting the AKD

Drive problems occur for a variety of reasons, depending on the conditions in your installation. The causes of faults in multi-axis systems can be especially complex. If you cannot resolve a fault or other issue using the troubleshooting guidance presented below, customer support can give you further assistance.

Problem	Possible Causes	Remedy
HMI message: Communication fault	<ul style="list-style-type: none"> <li>wrong cable used, cable plugged into wrong position on drive or PC</li> <li>wrong PC interface selected</li> </ul>	<ul style="list-style-type: none"> <li>plug cable into the correct sockets on the drive and PC</li> <li>select correct interface</li> </ul>
Drive does not enable	<ul style="list-style-type: none"> <li>HW Enable not wired</li> <li>HW or SW Enable not set</li> </ul>	<ul style="list-style-type: none"> <li>connect HW Enable (X8 pin 4)</li> <li>Apply 24V to HW Enable and select SW Enable in WorkBench / Field-bus</li> </ul>
Motor does not rotate	<ul style="list-style-type: none"> <li>drive not enabled</li> <li>software enable not set</li> <li>break in setpoint cable</li> <li>motor phases swapped</li> <li>brake not released</li> <li>drive is mechanically blocked</li> <li>motor pole no. set incorrectly</li> <li>feedback set up incorrectly</li> </ul>	<ul style="list-style-type: none"> <li>apply ENABLE signal</li> <li>set software enable</li> <li>check setpoint cable</li> <li>correct motor phase sequence</li> <li>check brake control</li> <li>check mechanics</li> <li>set motor pole no.</li> <li>set up feedback correctly</li> </ul>
Motor oscillates	<ul style="list-style-type: none"> <li>gain is too high (speed controller)</li> <li>feedback cable shielding broken</li> <li>AGND not wired up</li> </ul>	<ul style="list-style-type: none"> <li>reduce VL.KP (speed controller)</li> <li>replace feedback cable</li> <li>join AGND to CNC-GND</li> </ul>
Drive reports following error	<ul style="list-style-type: none"> <li>I<sub>rms</sub> or I<sub>peak</sub> set too low</li> <li>current or velocity limits apply</li> <li>accel/decel ramp is too long</li> </ul>	<ul style="list-style-type: none"> <li>verify motor/drive sizing</li> <li>verify that IL.LIMITN/P, VL.LIMITN/P are not limiting the drive</li> <li>reduce DRV.ACC/DRV.DEC</li> </ul>
Motor overheating	<ul style="list-style-type: none"> <li>motor operating above its rating</li> <li>motor current settings incorrect</li> </ul>	<ul style="list-style-type: none"> <li>verify motor/drive sizing</li> <li>verify motor continuous and peak current values are set correctly</li> </ul>
Drive too soft	<ul style="list-style-type: none"> <li>K<sub>p</sub> (speed controller) too low</li> <li>K<sub>i</sub> (speed controller) too low</li> <li>filters set too high</li> </ul>	<ul style="list-style-type: none"> <li>increase VL.KP (speed controller)</li> <li>increase VL.KI (speed controller)</li> <li>refer to documentation regarding reducing filtering (VL.AR*)</li> </ul>
Drive runs roughly	<ul style="list-style-type: none"> <li>K<sub>p</sub> (speed controller) too high</li> <li>K<sub>i</sub> (speed controller) too high</li> <li>filters set too low</li> </ul>	<ul style="list-style-type: none"> <li>reduce VL.KP (speed controller)</li> <li>reduce VL.KI (speed controller)</li> <li>refer to documentation regarding increasing filtering (VL.AR*)</li> </ul>
During installation, the message "Please wait while the installer finishes determining your disk space requirements" appears and never disappears.	<ul style="list-style-type: none"> <li>MSI installer issue.</li> <li>Harddisk space not sufficient</li> </ul>	<ul style="list-style-type: none"> <li>Cancel the installation and relaunch the installer (you may need to try several times, the problem is random).</li> <li>Make sure that you have enough disk space on your hard disk (~500MB).</li> </ul>

## 22 Firmware and Firmware Updates

---

<b>22.1</b>	<b>Downloading Firmware</b> .....	<b>294</b>
<b>22.2</b>	<b>Forcing the drive into firmware download mode</b> .....	<b>295</b>
<b>22.3</b>	<b>Invalid Firmware</b> .....	<b>296</b>
<b>22.4</b>	<b>Unsupported Firmware</b> .....	<b>296</b>
<b>22.5</b>	<b>Incompatible Firmware</b> .....	<b>297</b>
<b>22.6</b>	<b>International Export Restrictions</b> .....	<b>298</b>

## 22.1 Downloading Firmware

To download firmware, click **More** on the **AKD Overview** screen (see Device Overview (→ p. 56)). The information displayed includes the current firmware version. Click **Download** to display the **Download Firmware** view and update the firmware.

When you download the firmware, you may see a **Save** dialog box; see Save On Firmware Download (→ p. 188) for more information about saving your drive configuration prior to a firmware download.

During the download, you cannot perform any actions with the drive.

**CAUTION** While WorkBench is downloading firmware to your drive, do not remove the 24 V logic power. If you remove the 24 V logic power during a firmware download, a severe drive crash can occur. If a crash occurs, the drive will restart in a special mode and WorkBench will prompt you to reload the firmware.

During the firmware download, the Download Firmware view displays a progress bar and the following messages as the download proceeds:

1. **Reading the firmware file.** This step duration depends on where the file is physically stored.
2. **Resetting the drive.** This step takes about 10 seconds.
3. **Erasing the old firmware.** This step takes about 20 seconds.
4. **Downloading the new firmware to the drive.** The drive downloads the new firmware and then programs the new firmware into the nonvolatile memory of the drive. This step takes about 20 seconds.
5. **Resetting the drive.** This step takes about 10 seconds.

During the download process, the drive LED displays [dL]. Additional codes may appear during the download; see AKD Display Codes (→ p. 36) for a description of display codes related to a firmware download.

### 22.1.1 AKD-C and AKD-N Firmware Download

A firmware download to an AKD-C will automatically disable the AKD-Ns on string 1 and 2.

Downloading firmware to one or more AKD-Ns will cause the AKD-C to enter download mode, and all AKD-Ns on its strings will be disabled and disconnected from the network. After all the drives have finished downloading, the AKD-C will return to its previous mode and reconnect to the network. The reboot of the AKD-Ns is controlled by the AKD-C.

**NOTE** To update the firmware of multiple AKD-Ns the AKD-C must not already be in download mode (DL on the LED display).

#### 22.1.1.1 Firmware Download over EtherCAT for AKD-C and AKD-N

Run the following procedure with the EtherCAT master to update the firmware using FoE (File transfer over EtherCAT).

1. Set AKD-C and all AKD-Ns into bootstrap mode.
2. Update the AKD-C and AKD-Ns with the new firmware using FoE.

**NOTE** After the FoE download(s) are completed, the AKD-C and AKD-Ns will stay in bootstrap mode.

3. When the EtherCAT master requests a state change from bootstrap to INIT for all devices, the AKD-C and AKD-Ns will perform a coldstart.
4. After the coldstart, the AKD-C and AKD-Ns are in INIT mode.

### 22.1.2 WorkBench and Firmware Compatibility

WorkBench is compatible with all previous drive firmware versions. WorkBench forward compatibility, however, cannot be ensured. When a behavior in the firmware changes, an older WorkBench version may not function correctly with the new firmware. Kollmorgen recommends that you update WorkBench when you install new firmware.

Please check for latest version of WorkBench on the Kollmorgen website:

<http://www.kollmorgen.com/akd>

## 22.2 Forcing the drive into firmware download mode

### 22.2.0.1 Forced download of AKD firmware.

In most cases, you can download firmware using the WorkBench without setting the hardware into a specific download state. If you are unable to connect to WorkBench for some reason, the following “forced firmware download” procedure is needed.

Power the AKD unit down then:

- Depress the B1 button (display of IP Address Button) while powering up the drive. Continue to depress the button until the drive display shows "d3" (5-10 sec).
- Once the display on the drive shows "d3", have the EtherNet cable connected to the drive Point to Point.
- The drive can now be connected to WorkBench in download mode.
- Select the firmware to be downloaded; click **Open** to start the process.

WorkBench will display the **Disconnected** view. See the screenshots below for the download connection sequence.

**Disconnected**  
You are disconnected from the drive (169.254.250.154)

Why is this drive disconnected?  
WorkBench lost communication with the drive.

You have the following choices:

1. Connect to the drive.  
#1
2. Delete this drive from your list of drives.

Following the setup of the "d3" mode

- #1. select the normal connect button.
- #2. select the name of drive identified by the Workbench as "DownloadFW"
- #3. The select the connect button at the bottom of the screen.

**Connect To A Drive**

You can either select a drive from the list of drives found on your network or enter the address. [Tell me more](#)

WorkBench has found the following drives. [Is your device is not shown?](#)

Name	Status	IP Address	MAC Address
DownloadFW	Free	169.254.250.154	00-23-1B-00-52-9A

Specify Address:


Network Connections

Name	Status	Device Name	IP Address
Local Area Connection 8	Connected	Broadcom NetXtreme 57xx Gi...	169.254.83.36
Local Area Connection 9	Disconnected	Bluetooth Personal Area Netw...	
Wireless Network Connectio...	Connected	Intel(R) PRO/Wireless 3945A...	10.8.36.158

#3

[Learn more about this topic](#)

The **Firmware Download** view appears next. See the screenshot below for the firmware selection and download sequence.

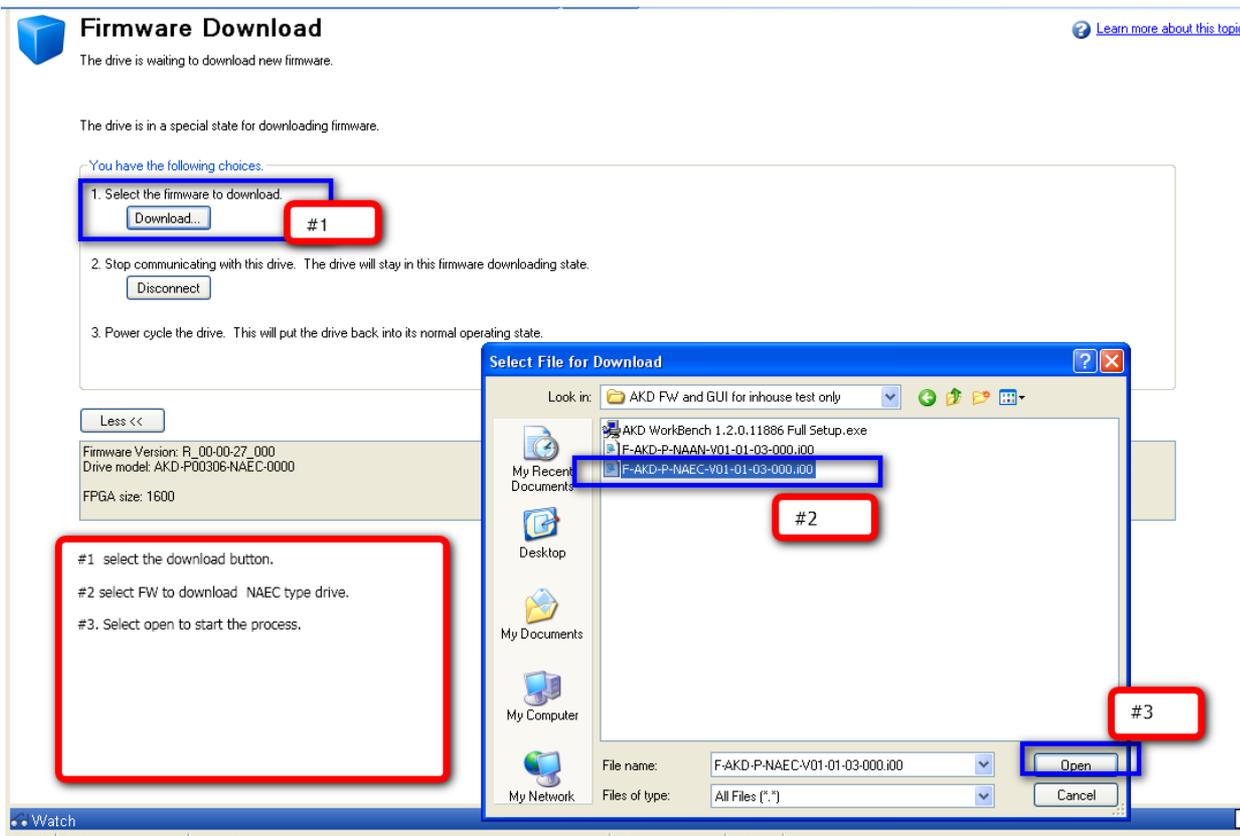

- Next, the **Downloading Firmware** view appears and the progress bar displays the firmware download progress.
- Once the download is complete, open the **AKD Overview** screen. The **Firmware Version** box displays the new firmware version, which confirms your successful download.

### 22.3 Invalid Firmware

When WorkBench connects to a drive, it checks to make sure that the drive is executing a valid version of the drive firmware. If the drive is executing firmware earlier than version 1-01-00-000, then WorkBench cannot operate correctly and shows these options.

Button	Description
Download	This command allows you to select a different version of the firmware and download it to the drive.
Disconnect	This command stops all communications with the drive and return to the disconnected state.

### See Also

Unsupported Firmware (→ p. 296) | Incompatible Firmware (→ p. 297)

### 22.4 Unsupported Firmware

When WorkBench connects to a drive, it checks to make sure that the drive is executing a supported version of the drive firmware. If the firmware version is newer than WorkBench can recognize, the following warning is displayed.



## Unsupported Firmware

[Learn more about this topic](#)

The firmware running on this drive is not fully supported by WorkBench

WorkBench checks that the firmware running this drive is compatible with this version of WorkBench. The firmware version is newer than the latest version WorkBench knows about, some features may not be fully supported.

Firmware Version:

You have the following choices.

1. Click on the below link to get fully supported WorkBench.

[Kollmorgen WorkBench](#)

2. Continue to proceed.

3. Stop communicating with this drive.

Do not warn me again

Some features available in your firmware may not be fully supported by your WorkBench version. Choose one of the three options available on the warning screen:

Option	Description
1	Provides link to download the latest version of WorkBench from kollmorgen.com.
2	Connects to the drive regardless of unsupported firmware.
3	Disconnects from the drive.

## See Also

Invalid Firmware (→ p. 296) | Incompatible Firmware (→ p. 297)

## 22.5 Incompatible Firmware

If your BASIC firmware is incompatible, an incompatibility error will display in the program view.



### Program View

Program View is disabled

**The connected drive contains an old firmware (1.8.0.4) which is incompatible with this version of WorkBench.**

To use Program View

- a. Upgrade your drive's firmware to the latest version (minimum 1.9.0.0).
- b. Use an older WorkBench version (1.8.0) with this drive.

We recommend to upgrade the firmware...

[Get latest firmware](#)

[Get older WorkBench for BASIC](#)

[More information](#)

This error is due to major WorkBench and compiler changes since your last firmware update, causing your current firmware to be incompatible with your current WorkBench version. These changes improved the product's ability to handle revision control of the language. However, the improvement also required changes

in how WorkBench and firmware communicate, which caused the incompatibility. The improvement will allow the editor to recognize the firmware version being used and auto-recognize the parameters and commands inherent to that firmware. This allows better use of mis-matching WorkBench and firmware versions in the future.

See VM.PGMCOMPILERVERSION (pg 1) and VM.PGMERRORLIST (pg 1) for more information on using this new feature.

### 22.5.1 Resolving Incompatible Firmware

If your firmware is incompatible, we recommend upgrading the AKD BASIC's firmware to version 1.9 or later in order to take advantage of the new feature and allow seamless integration moving forward.

If the product using AKD BASIC is deep in its product lifecycle, or there are version controls in place that prevent changes to the machine device firmware, upgrading the firmware may not be suitable. In this case, downgrading to an older version of WorkBench (version 1.8.0.32358 or earlier) is recommended.

#### NOTE

It is not necessary to uninstall your current WorkBench version in order to install an older version. Multiple versions of WorkBench can be installed simultaneously on one PC.

To upgrade to the latest firmware version, please visit the AKD BASIC [software/firmware tab](#) on kollmorgen.com.

To downgrade to an older version of WorkBench, please visit the [AKD BASIC archive tab](#) on kollmorgen.com.

### See Also

Unsupported Firmware (→ p. 296) | Invalid Firmware (→ p. 296)

## 22.6 International Export Restrictions

AKD firmware has been updated according to regulation ECCN 3A225 Limitations for Induction Motors (→ p. 74). Loading old firmware onto new hardware will result in an incompatibility notice.

Kollmorgen recommends updating to firmware version 1.13. Patched versions of older firmware (versions 1.10, 1.11 and 1.12) which support ECCN 3A225 are also available on [kollmorgen.com](#).

For more information regarding this product update, visit <http://kdn.kollmorgen.com/content/dual-use-changes>.

### See Also


ECCN 3A225 Limitations for Induction Motors (→ p. 74)

## 23 Connection Diagrams

---


23.1	Connection diagram AKD-x00306, AKD-x00606 .....	300
23.2	Connection diagram AKD-x01206 .....	301
23.3	Connection diagram AKD-x02406 and AKD-x00307 to 02407 .....	302
23.4	24 V auxiliary supply (X1) .....	303
23.5	Motor Power Connection (X2) .....	303
23.6	External regen resistor (X3) .....	305
23.7	DC Bus link (X3, X14) .....	307
23.8	Mains supply connection (X3, X4) .....	309
23.9	I/O Connection .....	312
23.10	Analog Output (X8, X23) .....	316
23.11	Analog Input (X8, X24) .....	317
23.12	Command encoder signal connection .....	318
23.13	Pulse / Direction signal connection .....	320
23.14	CW / CCW signal connection .....	321
23.15	Feedback connector (X10) .....	322
23.16	Feedback connector (X9) .....	322
23.17	Feedback connector (X7) .....	323

### 23.1 Connection diagram AKD-x00306, AKD-x00606

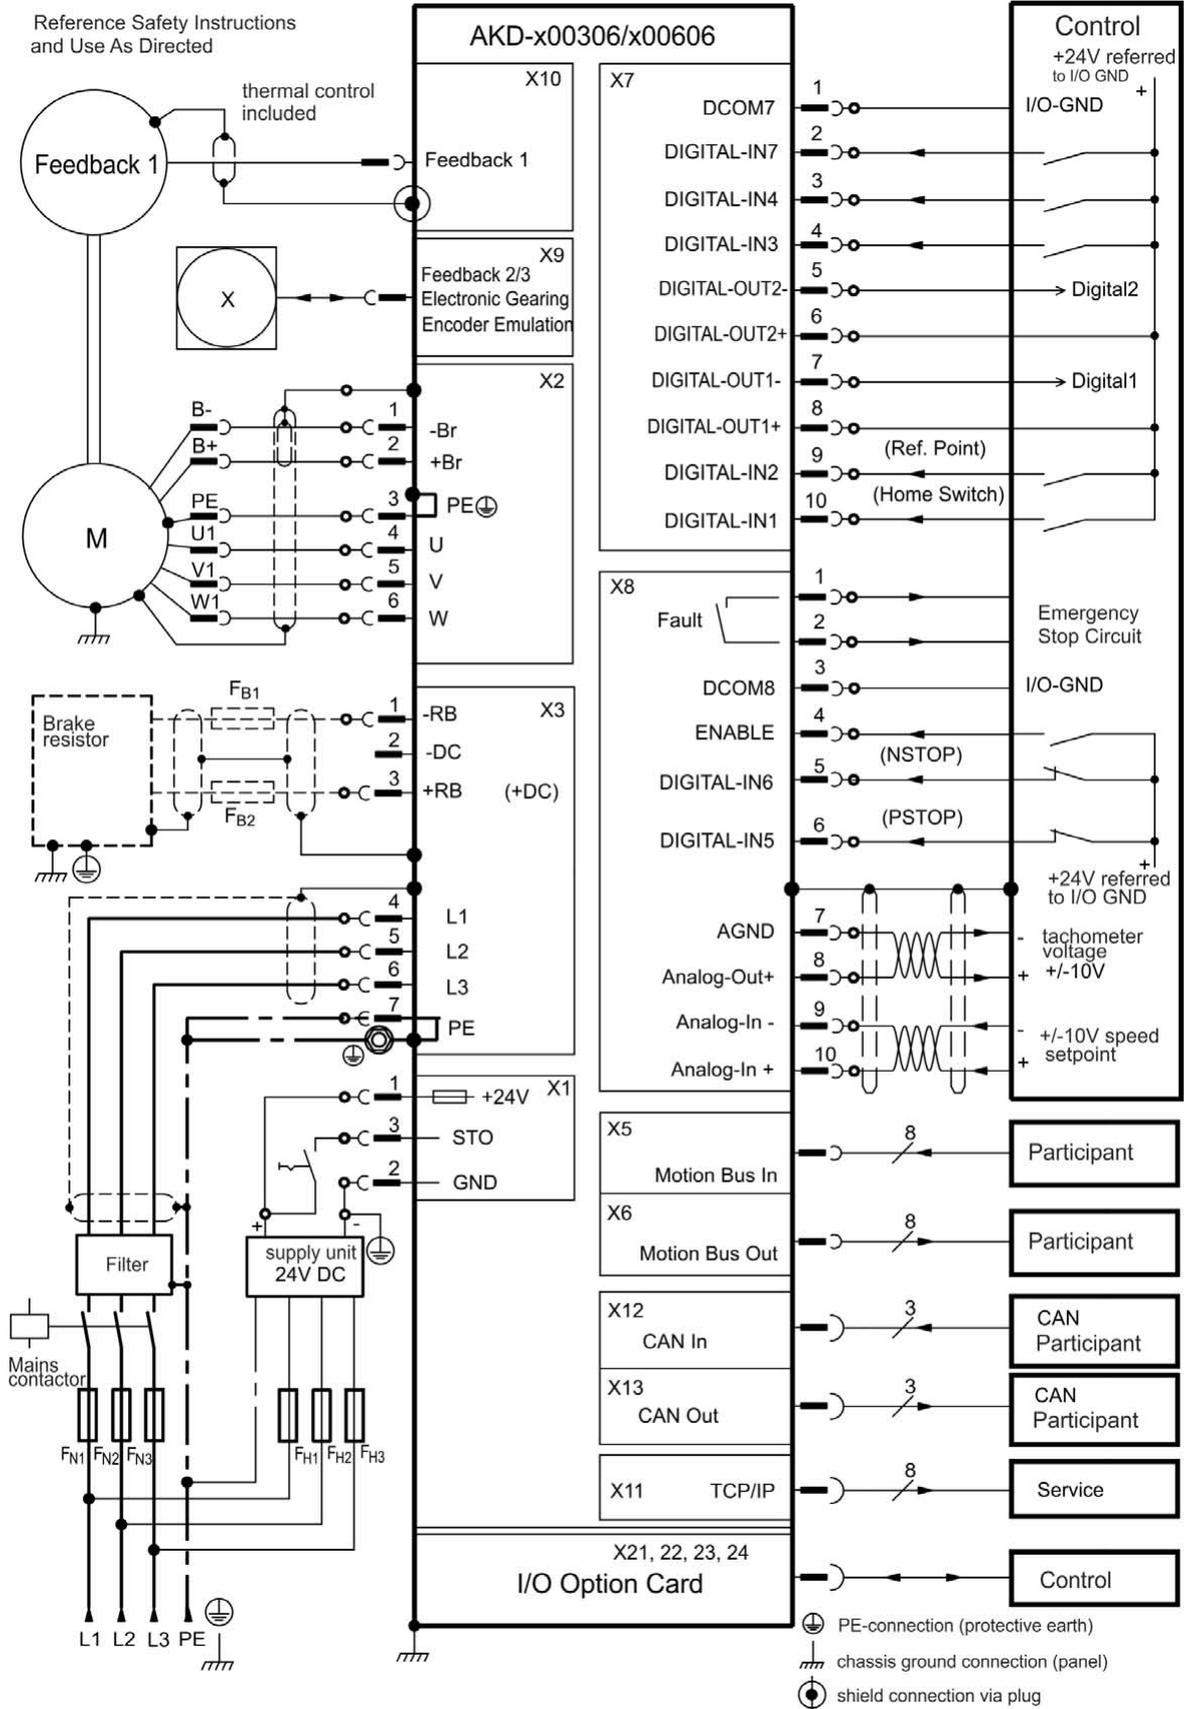


The I/O option is available for AKD-T drives only.

### 23.2 Connection diagram AKD-x01206

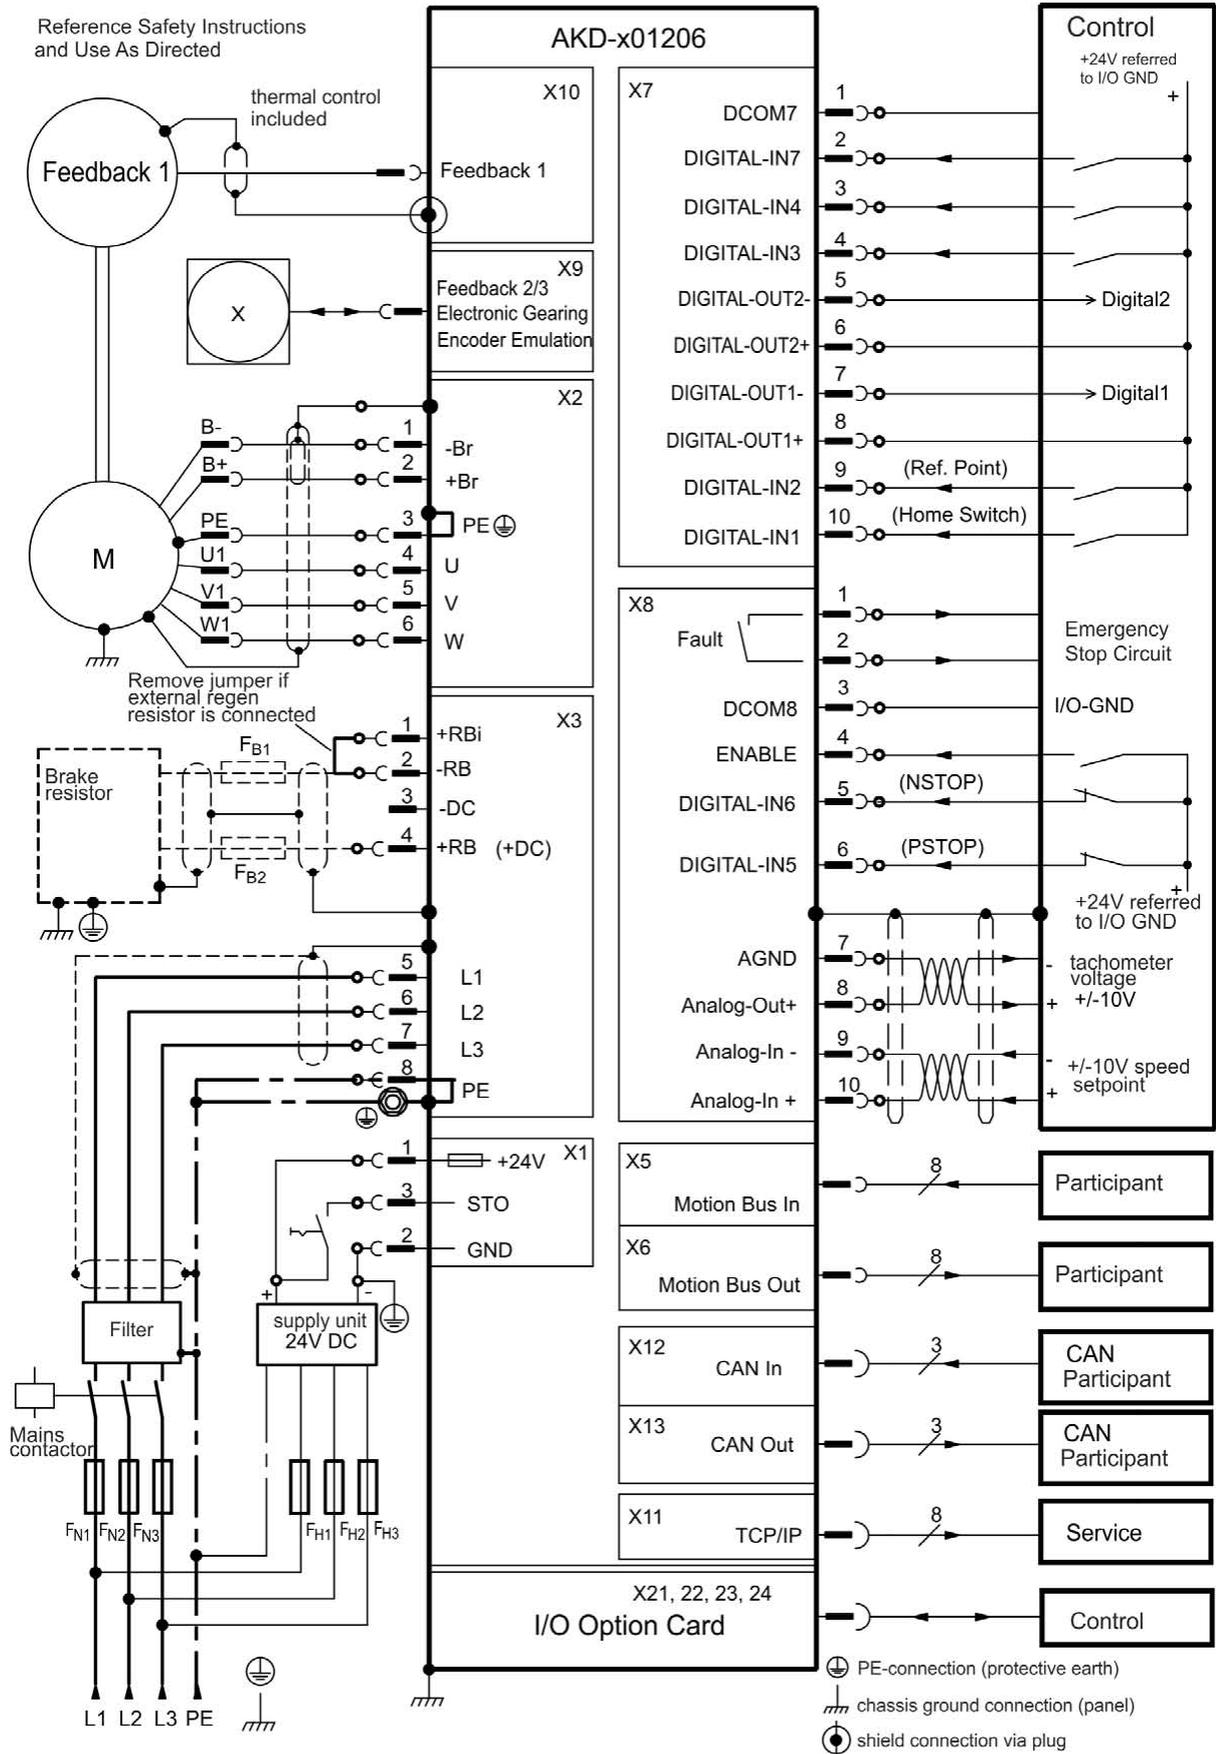

The I/O option is available for AKD-T drives only.


### 23.3 Connection diagram AKD-x02406 and AKD-x00307 to 02407

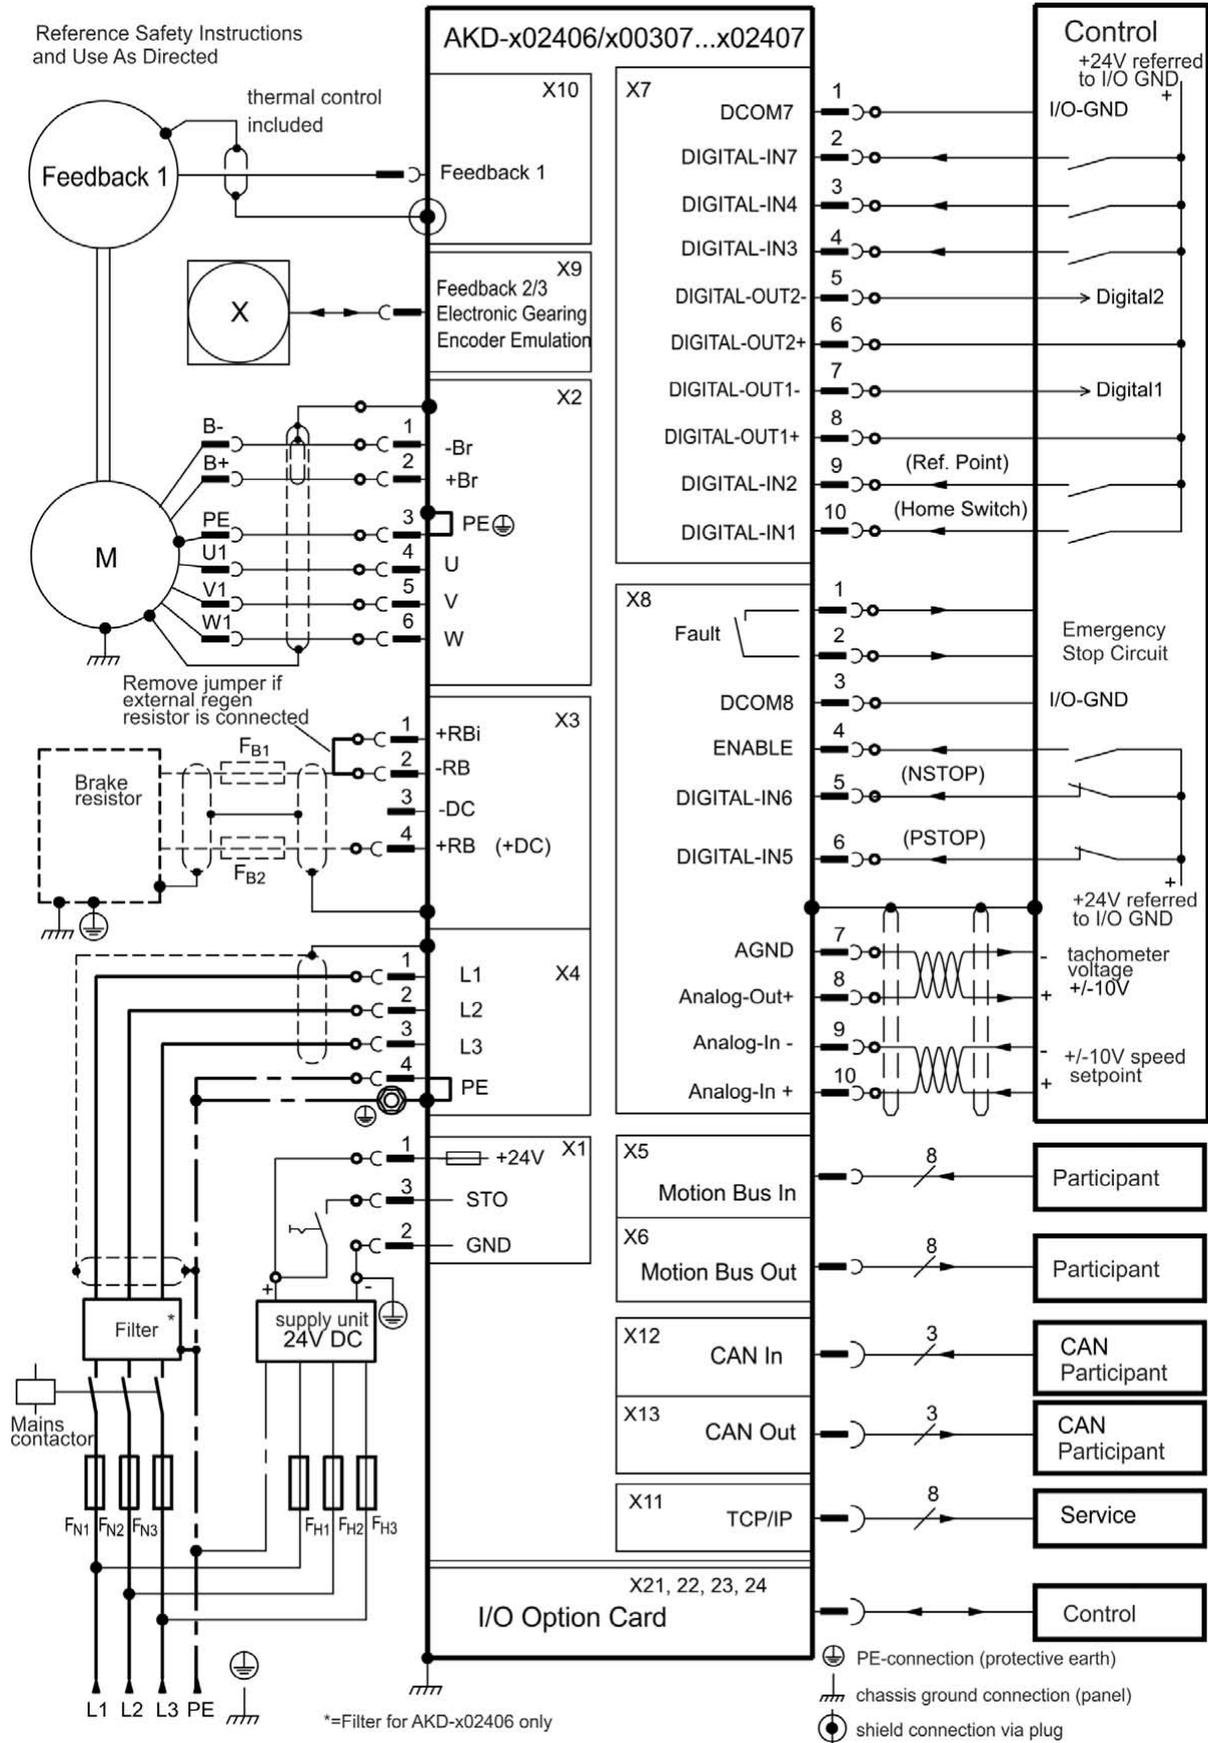

The I/O option is available for AKD-T drives only.

## 23.4 24 V auxiliary supply (X1)

The following diagram describes external 24 VDC power supply, electrically isolated, for example, via an isolating transformer. The required current rating depends on the use of motor brake and option card .

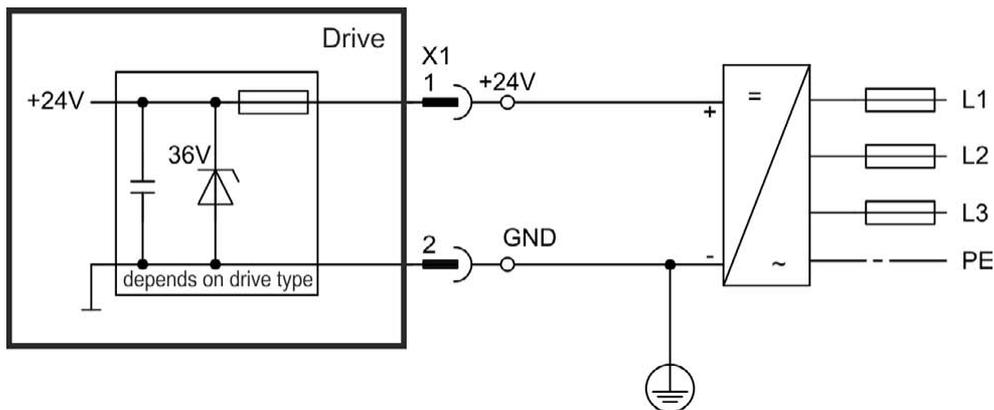

### 23.4.1 AKD-x003 to 024, connector X1



Pin	Signal	Description
1	+24	+24 VDC Auxiliary voltage
2	GND	24V Supply GND
3	STO	STO enable (Safe Torque Off)

### 23.4.2 AKD-x048, connector X1



Pin	Signal	Description
1	+24 V	+24 VDC Auxiliary voltage
2	GND	24V Supply GND
3	STO +24V	STO+24 VDC Auxiliary voltage
4	STO GND	STO Supply GND
5	STO-Status 1	Safe Torque Off status channel 1
6	STO-Enable 1	Safe Torque Off enable channel 1
7	STO-Status 2	Safe Torque Off status channel 2
8	STO-Enable 2	Safe Torque Off enable channel 2

## 23.5 Motor Power Connection (X2)

Together with the motor supply cable and motor winding, the power output of the drive forms an oscillating circuit. Characteristics such as cable capacity, cable length, motor inductance, and frequency determine the maximum voltage in the system.

The AKD drive is able to protect the connected motor from overloading, if the parameters are set correctly and the thermal protection sensor is connected and supervised. With Kollmorgen motors the valid data are automatically set by the internal motor database. With motors from other manufacturers the data from the nameplate must be entered to the referring fields in the motor view of the Kollmorgen setup software WorkBench.

**NOTICE**


The dynamic voltage rise can lead to a reduction in the motor operating life and, on unsuitable motors, to flashovers in the motor winding.

- Only install motors with insulation class F (acc. to IEC60085) or above.
- Only install cables that meet the requirements .


**NOTICE**

With long motor cables leakage currents endanger the output stage of the drive. For cable lengths from 25 m to 50 m, a motor choke (3YL) must be wired into the motor cable (near the drive). Refer to your regional Accessories Manual for Kollmorgen chokes.


**Cable length  $\leq$  25 m**

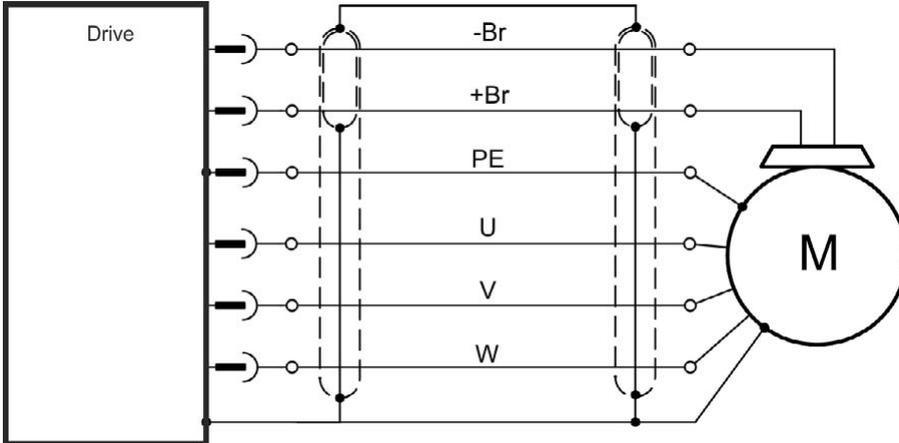


**Cable length  $>$  25 m**

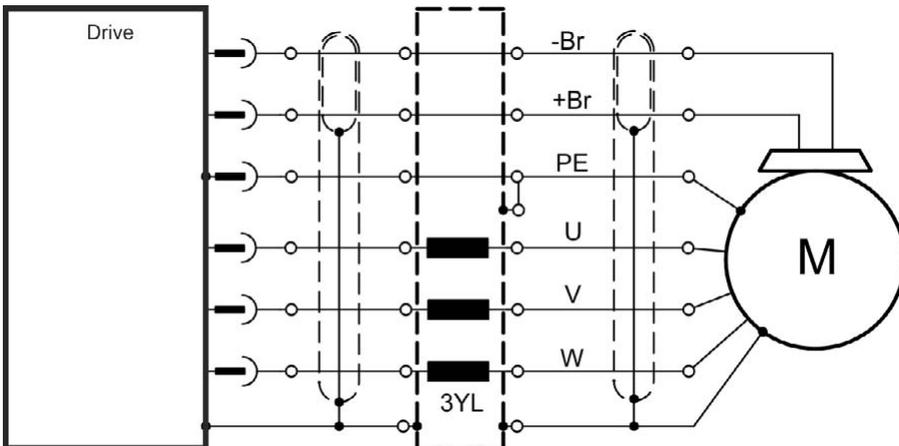


### 23.5.1 AKD-x003 to 024, power connector X2

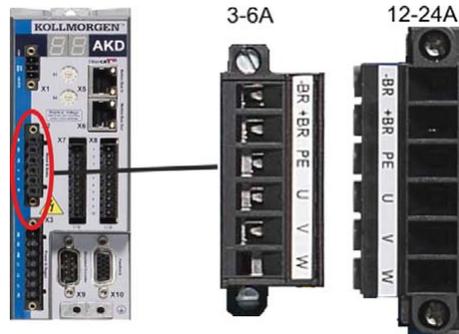


Pin	Signal	Description
1	-BR	Motor holding brake (→ p. 1)
2	+BR	Motor holding brake (→ p. 1)
3	PE	Protective earth (motor housing)
4	U	Motor phase U
5	V	Motor phase V
6	W	Motor phase W

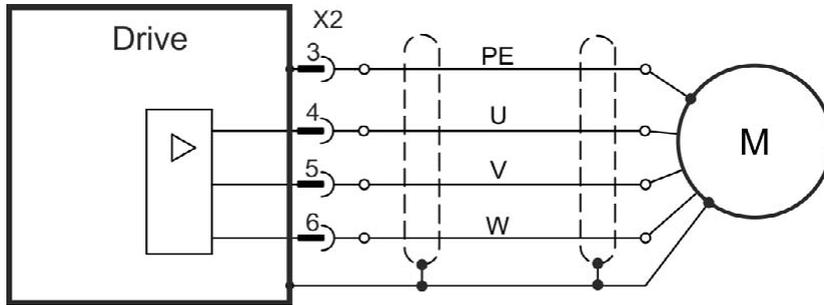

### 23.5.2 AKD-x048, power connector X2

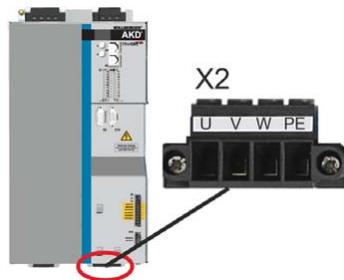


Pin	Signal	Description
1	U	Motor phase U
2	V	Motor phase V
3	W	Motor phase W
4	PE	Protective earth (motor housing)

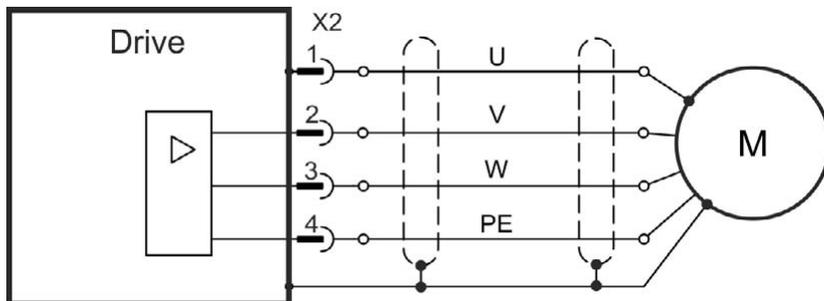

## 23.6 External regen resistor (X3)

For technical data on the brake circuit . Fusing (such as fusible cut-outs) to be provided by the user .

### 23.6.1 AKD-x003 to 024, regen connector X3

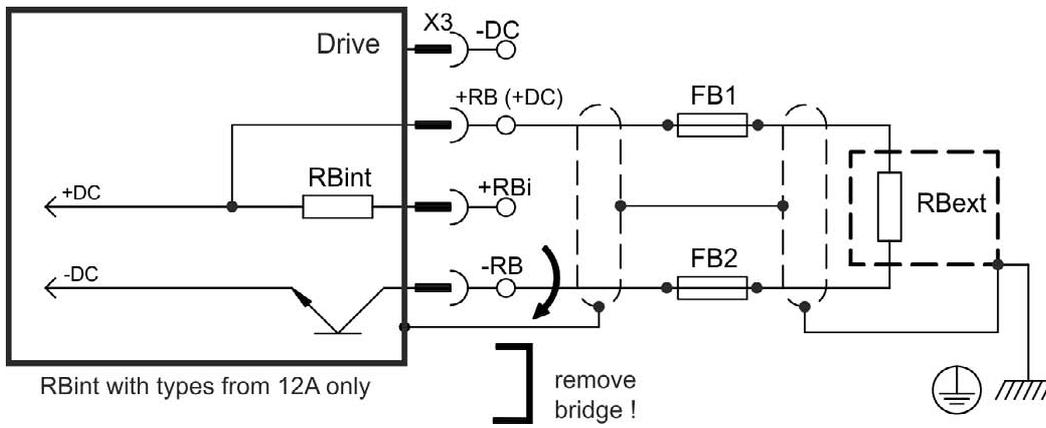


AKD-x00306 to AKD-x00606 (X3)

Pin	Signal	Description
1	-RB	External Regen Resistor negative
3	+RB	External Regen Resistor positive



AKD-x1206 (X3)



Pin	Signal	Description
1	+Rbint	Internal Regen Resistor positive
2	-RB	External Regen Resistor negative
4	+RB	External Regen Resistor positive

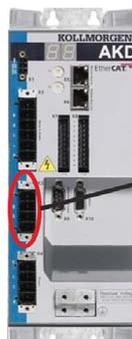

AKD-x02406 & AKD-x-00307 to 02407 (X3)

Pin	Signal	Description
2	-RB	External Regen Resistor negative
4	+RB	External Regen Resistor positive

### 23.6.2 AKD-x048, regen connector X3

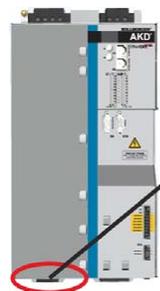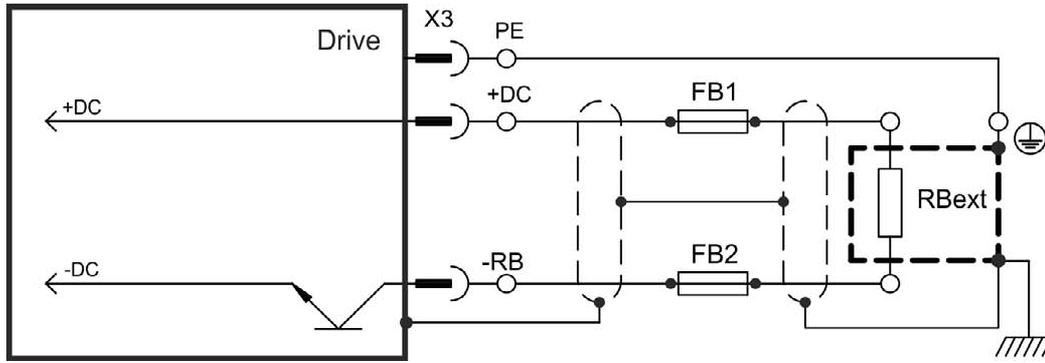

AKD-x04807		
Pin	Signal	Description
1	PE	Protective Earth
2	-RB	External Regen Resistor negative
3	+DC	External Regen Resistor positive


### 23.7 DC Bus link (X3, X14)

The DC bus link can be connected in parallel so that the regen power is divided between all the drives that are connected to the same DC bus link circuit. Every drive must have its own power connection to mains voltage, even if the DC bus link is used. Drives working regeneratively very often should be placed beside drives, which need energy. That reduces current flow on longer distances.


- The sum of the rated currents for all of the drives connected in parallel to an AKD-x003 to 024 must not exceed 48 A.  
Use 6 mm<sup>2</sup>, unshielded single cores with a max. length of 200 mm; use 6 mm<sup>2</sup> shielded cables for longer lengths. In this case no fuse for line protection is required.
- The sum of the rated currents for all of the AKD-x048 connected in parallel to an AKD-x048 must not exceed 96 A.  
Use 16 mm<sup>2</sup>, unshielded single cores with a max. length of 30 mm; use 16 mm<sup>2</sup> shielded cables for longer lengths.

**NOTICE** The drives can be destroyed, if DC bus link voltages are different. Only drives with mains supply from the same mains (identical mains supply voltage) may be connected by the DC bus link. DC bus link connection of AKD-x048 to other drives than AKD-x048 is not allowed.

**NOTICE** The phase lost/ main control is not working on DC-Bus connected drives. A phase lost on a drive inside a DC Bus connection will be not detected. External phase monitoring to prevent overload of the rectifier is recommended.

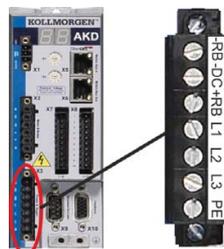

AKD-x00306 to AKD-x00606 (X3)		
Pin	Signal	Description
2	-DC	DC-Link Bus negative
3	+DC (+RB)	DC-Link Bus positive

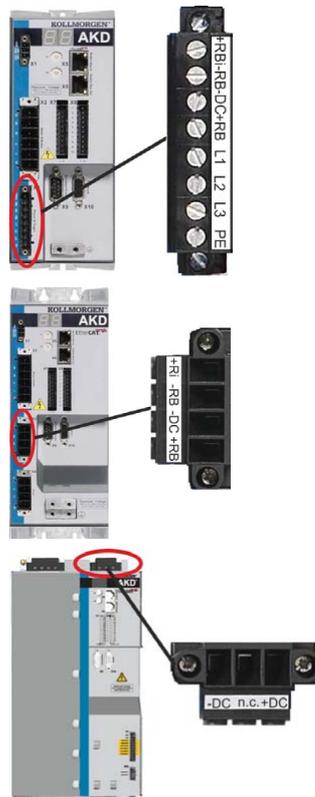


AKD-x01206 (X3)		
Pin	Signal	Description
3	-DC	DC-Link Bus negative
4	+DC (+RB)	DC-Link Bus positive


AKD-x02406 & AKD00307 to AKD02407 (X3)		
Pin	Signal	Description
3	-DC	DC-Link Bus negative
4	+DC (+RB)	DC-Link Bus positive

AKD-x04807 (X3)		
Pin	Signal	Description
1	-DC	DC-Link Bus negative
2	n.c.	not connected
3	+DC	DC-Link Bus positive

### 23.7.1 DC Bus topology with Y connectors

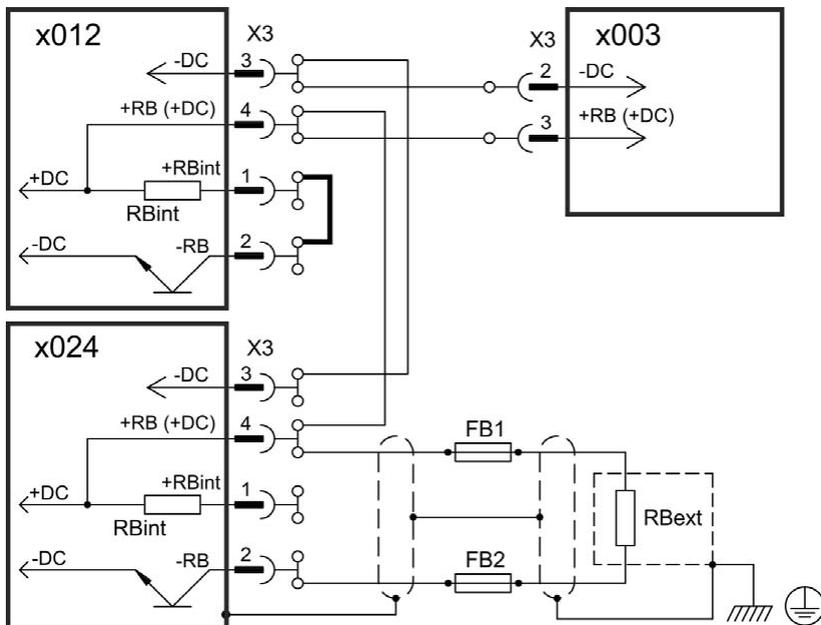


Without DC Bus fuses, other devices can become damaged or destroyed if, for example, a device fails due to an internal short circuit. If multiple drives are connected in parallel, then it is usual to insert DC Bus fuses ( ) between groups of drives (with a group consisting of two or three devices, depending on the current) in order to limit any possible resulting damage. Fuses cannot avoid damage by current peaks completely.

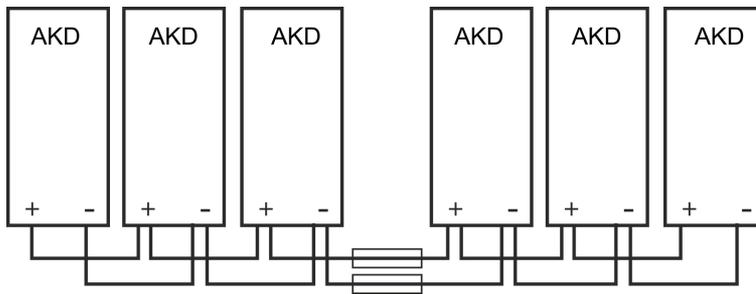

### 23.7.2 DC Bus topology with busbar

This wiring does not require Y connectors. If a device fails due to a short-circuit, only its DC Bus fuses ( ) are tripped and the rest of the network continues uninterrupted. The solid busbars can conduct significantly larger currents, because the compensating current does not flow through the connector as above. For this reason, almost as many drives as desired can be connected in parallel in this form. This arrangement is frequently also useful for connecting KCM capacitor modules.

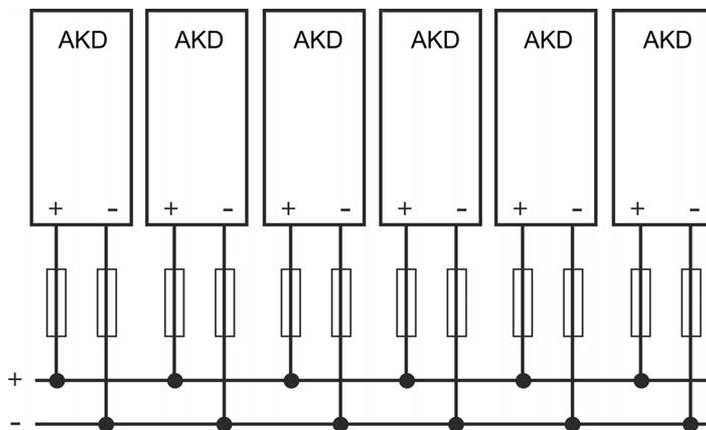


### 23.8 Mains supply connection (X3, X4)

Drives in the AKD series can be supplied as follows:

- AKD-xzzz06: 1 or 3 phase industrial supply networks (not more than 200 kA symmetrical rated current at 120 V and 240 V).
- AKD-xzzz07: 3 phase industrial supply networks (not more than 200 kA symmetrical rated current at 240 V, 400 V and 480 V).

Connection to other voltage types of supply networks is possible with an additional isolating transformer (→ p. 1). Periodic overvoltages between phases (L1, L2, L3) and the housing of the drive must not exceed 1000 V peak. In accordance with IEC 61800, voltage spikes (< 50 µs) between phases must not exceed 1000 V. Voltage spikes (< 50 µs) between a phase and the housing must not exceed 2000 V.

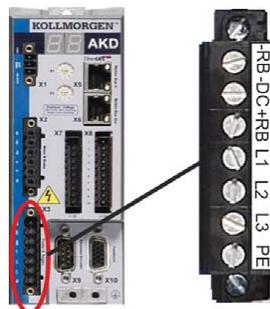

AKD-x00306 to AKD-x00606 (X3)		
Pin	Signal	Description
4	L1	Line 1
5	L2	Line 2
6	L3	Line 3
7	PE	Protective Earth




AKD-x01206 (X3)		
Pin	Signal	Description
5	L1	Line 1
6	L2	Line 2
7	L3	Line 3
8	PE	Protective Earth

AKD-x02406 & AKD-x00307 to AKD-x02407 (X4)		
Pin	Signal	Description
1	L1	Line 3
2	L2	Line 2
3	L3	Line 1
4	PE	Protective Earth

AKD-x04807 (X4)		
Pin	Signal	Description
1	L1	Line 1
2	L2	Line 2
3	L3	Line 3
4	PE	Protective Earth


### 23.8.1 Three phase connection (all AKD types)

- Directly to 3-phase supply network, supply networks
- Filtering for AKD-xzzz06 to be provided by the user.
- Fusing (such as fusible cut-outs) to be provided by the user .

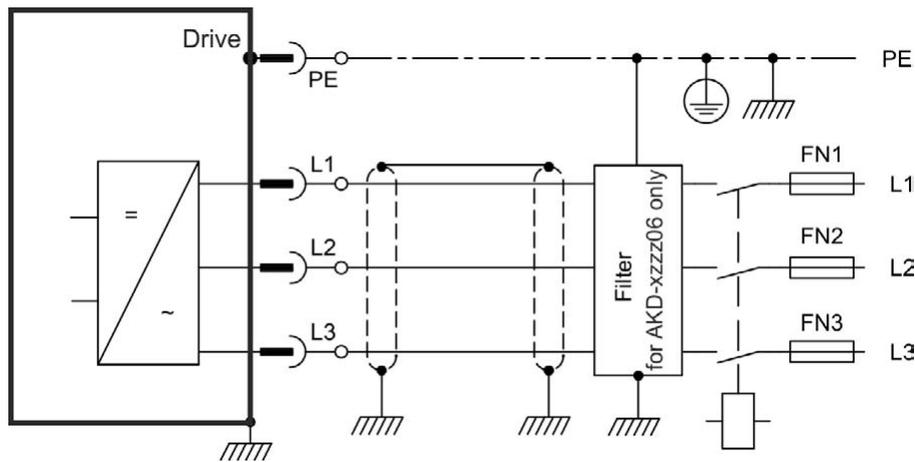

### 23.8.2 Single/Dual phase connection (AKD-x00306 to AKD-x01206 only)

- Directly to single-phase supply network ( $120\text{ V}_{-10\%}$  to  $240\text{ V}^{+10\%}$ ) with neutral line or  
Directly to two-phase supply network ( $120\text{ V}_{-10\%}$  to  $240\text{ V}^{+10\%}$ ) without neutral line
- Supply networks
- Leave L3 open circuit
- Filtering to be provided by the user.
- Fusing (such as fusible cut-outs) to be provided by the user

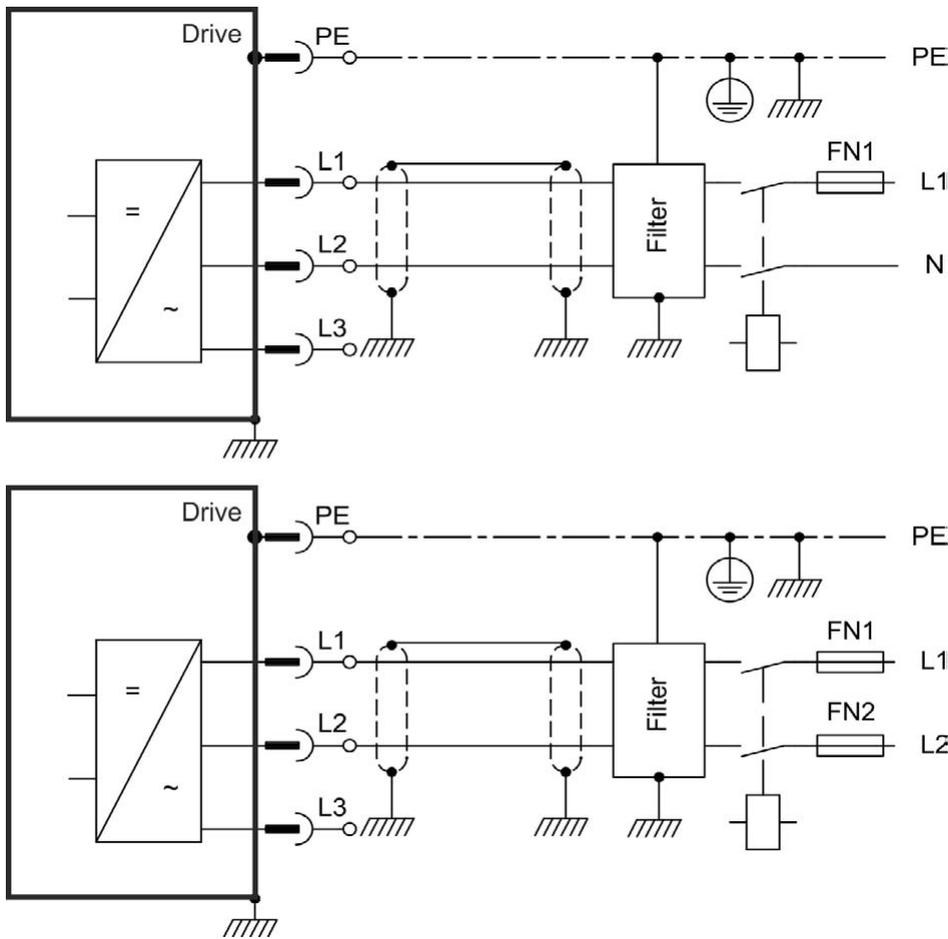


## 23.9 I/O Connection

### 23.9.1 Overview

#### 23.9.1.1 I/O connectors X7 and X8 (all AKD variants)

Standard digital and analog I/O signals are connected to X7 and X8.

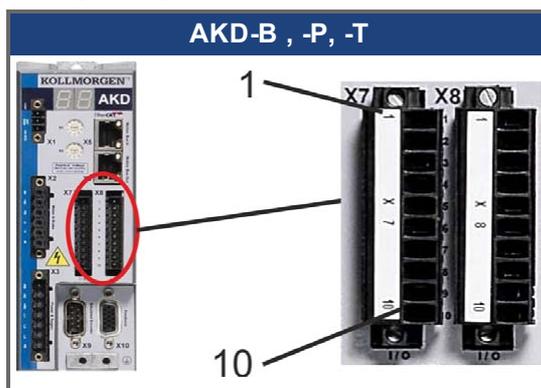

Conn.	Pin	Signal	Abbreviation	Function
X7	1	Digital Common X7	DCOM7	Common line for X7 pins 2, 3, 4, 9, 10
X7	2	Digital Input 7	DIGITAL-IN 7	Programmable

Conn.	Pin	Signal	Abbreviation	Function
X7	3	Digital Input 4	DIGITAL-IN 4	Programmable
X7	4	Digital Input 3	DIGITAL-IN 3	Programmable
X7	5	Digital Output 2-	DIGITAL-OUT2-	Programmable
X7	6	Digital Output 2+	DIGITAL-OUT2+	Programmable
X7	7	Digital Output 1-	DIGITAL-OUT1-	Programmable
X7	8	Digital Output 1+	DIGITAL-OUT1+	Programmable
X7	9	Digital Input 2	DIGITAL-IN 2	Programmable,fast
X7	10	Digital Input 1	DIGITAL-IN 1	Programmable,fast
X8	1	Fault Relay Output	Fault Relay Out-put	Fault Relay Output
X8	2	Fault Relay Output	Fault Relay Out-put	Fault Relay Output
X8	3	Digital Common X8	DCOM8	Common line for X8 pins 4, 5, 6
X8	4	Digital Input 8	DIGITAL-IN 8	Output stage enable, not programmable
X8	5	Digital Input 6	DIGITAL-IN 6	Programmable
X8	6	Digital Input 5	DIGITAL-IN 5	Programmable
X8	7	Analog Ground	AGND	Analog GND
X8	8	Analog Output +	Analog-Out	Actual velocity voltage
X8	9	Analog Input -	Analog-In-	Velocity set point
X8	10	Analog Input +	Analog-In+	


Digital common lines for X7 and X8 are not common to each other.

The DCOMx line should be connected to the 0V of the I/O supply when using sensors of type "Source" with digital inputs.

The DCOMx line should be connected to the 24V of the I/O supply when using sensors of type "Sink" with digital inputs.

### 23.9.1.2 I/O connectors X21, X22, X23 and X24 (AKD-T with I/O option card only)

The I/O option card offers four additional connectors X21, X22, X23, X24 for I/O signals.

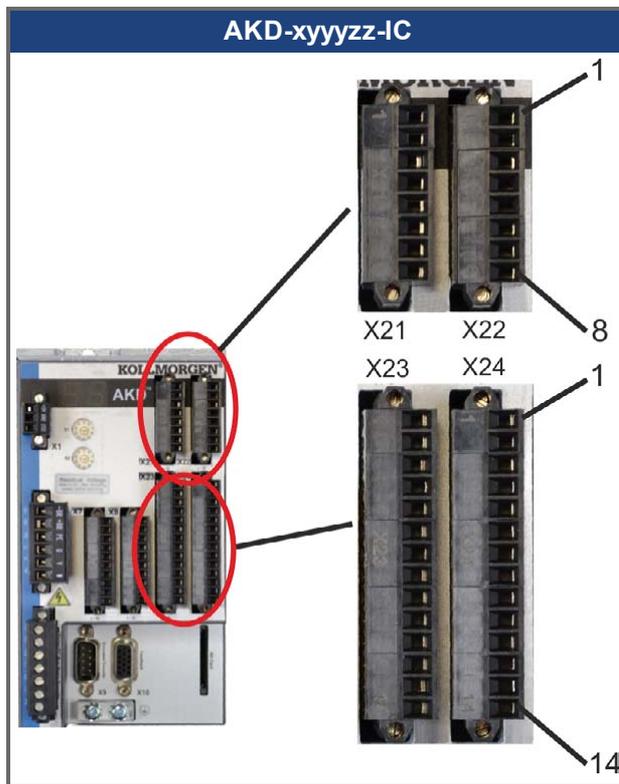


Conn.	Pin	Signal	Abbreviation	Function
X21	1	Digital Input 21	DIGITAL-IN 21	Programmable
X21	2	Digital Input 22	DIGITAL-IN 22	Programmable
X21	3	Digital Input 23	DIGITAL-IN 23	Programmable
X21	4	Digital Common X21/1_3	DCOM21.1_3	Common line for X21 pins 1, 2, 3
X21	5	Digital Input 24	DIGITAL-IN 24	Programmable
X21	6	Digital Input 25	DIGITAL-IN 25	Programmable
X21	7	Digital Input 26	DIGITAL-IN 26	Programmable
X21	8	Digital Common X21/5_7	DCOM21.5_7	Common line for X21 pins 5, 6, 7
X22	1	Digital Input 27	DIGITAL-IN 27	Programmable
X22	2	Digital Input 28	DIGITAL-IN 28	Programmable
X22	3	Digital Input 29	DIGITAL-IN 29	Programmable
X22	4	Digital Common X22/1_3	DCOM22.1_3	Common line for X22 pins 1, 2, 3
X22	5	Digital Input 30	DIGITAL-IN 30	Programmable
X22	6	Digital Input 31	DIGITAL-IN 31	Programmable
X22	7	Digital Input 32	DIGITAL-IN 32	Programmable
X22	8	Digital Common X22/5_7	DCOM22.5_7	Common line for X22 pins 5, 6, 7

Conn.	Pin	Signal	Abbreviation	Function
X23	1	Analog Output 2 +	Analog-Out2	Programmable
X23	2	reserved	n.c.	n.c.
X23	3	Analog Ground	AGND	Programmable
X23	4	reserved	n.c.	n.c.
X23	5	Digital Output 21+	DIGITAL-OUT 21+	Programmable
X23	6	Digital Output 21-	DIGITAL-OUT 21-	Programmable
X23	7	Digital Output 22+	DIGITAL-OUT 22+	Programmable
X23	8	Digital Output 22-	DIGITAL-OUT 22-	Programmable
X23	9	Digital Output 23+	DIGITAL-OUT 23+	Programmable
X23	10	Digital Output 23-	DIGITAL-OUT 23-	Programmable
X23	11	Digital Output 24+	DIGITAL-OUT 24+	Programmable
X23	12	Digital Output 24-	DIGITAL-OUT 24-	Programmable
X23	13	Relay Output 25	DIGITAL-OUT 25	Programmable, relay
X23	14	Relay Output 25	DIGITAL-OUT 25	Programmable, relay
X24	1	Analog Input 2+	Analog-In2+	Programmable
X24	2	Analog Input 2-	Analog-In2-	Programmable
X24	3	Analog Ground	AGND	Programmable
X24	4	reserved	n.c.	n.c.
X24	5	Digital Output 26+	DIGITAL-OUT 26+	Programmable
X24	6	Digital Output 26-	DIGITAL-OUT 26-	Programmable
X24	7	Digital Output 27+	DIGITAL-OUT 27+	Programmable
X24	8	Digital Output 27-	DIGITAL-OUT 27-	Programmable
X24	9	Digital Output 28+	DIGITAL-OUT 28+	Programmable
X24	10	Digital Output 28-	DIGITAL-OUT 28-	Programmable
X24	11	Digital Output 29+	DIGITAL-OUT 29+	Programmable
X24	12	Digital Output 29-	DIGITAL-OUT 29-	Programmable
X24	13	Relay Output 30	DIGITAL-OUT 30	Programmable, relay
X24	14	Relay Output 30	DIGITAL-OUT 30	Programmable, relay

### 23.9.1.3 I/O connectors X35 and X36 (AKD-M only)

AKD PDMM offers two additional connectors X35 and X36 for digital I/O signals.

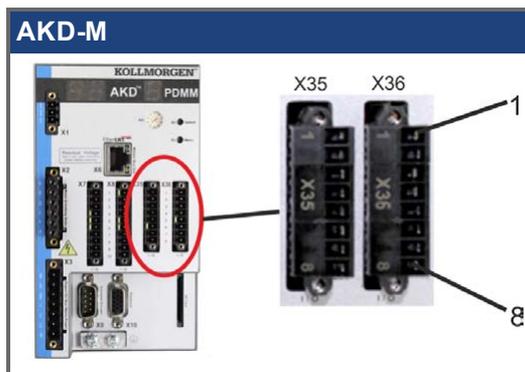

Conn.	Pin	Signal	Abbreviation	Function
X35	1	Digital Common X35	DCOM35	Common line for X35 pins 2, 3, 4
X35	2	Digital Input 21	DIGITAL-IN 21	Programmable
X35	3	Digital Input 22	DIGITAL-IN 22	Programmable
X35	4	Digital Input 23	DIGITAL-IN 23	Programmable
X35	5	n.c.	n.c.	-
X35	6	n.c.	n.c.	-
X35	7	Digital Output 21-	DIGITAL-OUT21-	Programmable
X35	8	Digital Output 21+	DIGITAL-OUT21+	Programmable
X36	1	Digital Common X36	DCOM36	Common line for X36 pins 2, 3, 4
X36	2	Digital Input 24	DIGITAL-IN 24	Programmable
X36	3	Digital Input 25	DIGITAL-IN 25	Programmable
X36	4	Digital Input 26	DIGITAL-IN 26	Programmable
X36	5	n.c.	n.c.	-
X36	6	n.c.	n.c.	-
X36	7	Digital Output 22-	DIGITAL-OUT22-	Programmable
X36	8	Digital Output 22+	DIGITAL-OUT22+	Programmable

Digital common lines for X35 and X36 are not common to each other.

The DCOMx line should be connected to the 0V of the I/O supply when using sensors of type "Source" with digital inputs.

The DCOMx line should be connected to the 24V of the I/O supply when using sensors of type "Sink" with digital inputs.


## 23.10 Analog Output (X8, X23)

Analog Outputs can be used to output converted analog values of digital measurements recorded in the drive. The standard drive offers one analog output on X8, drives with built-in I/O option card offer a second output on X23. A list of the pre-programmed functions is included in the WorkBench setup software.

### Technical characteristics

- Output voltage range referring to AGND:  $\pm 10$  V
- Resolution: 16 Bit and fully monotonic
- Unadjusted offset:  $< 50$  mV
- Offset drift typ:  $250 \mu\text{V}/^\circ\text{C}$
- Gain or slope tolerance:  $\pm 3\%$
- Nonlinearity:  $< 0.1\%$  of full scale or  $10$  mV
- Output impedance:  $110$  ohms
- Specification complies with IEC 61131-2 Table 11
- $-3$  dB Bandwidth:  $> 8$  kHz
- Maximum output current:  $20$  mA
- Capacitive load: any value but response speed limited by max Iout and by Rout
- Protected for short circuit to AGND

### Analog Output Wiring Diagram

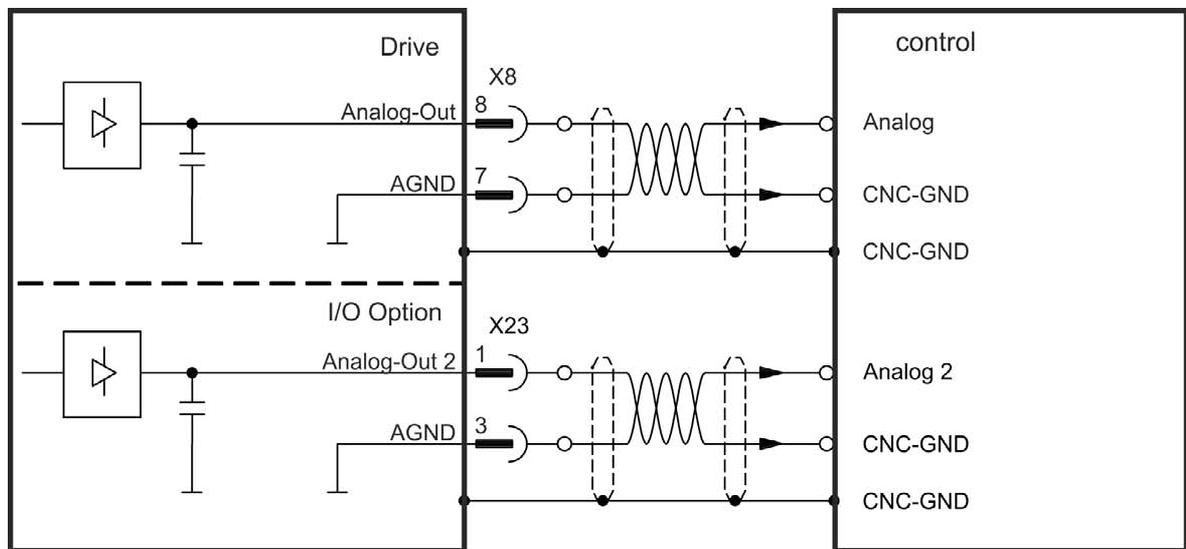


### 23.11 Analog Input (X8, X24)

The drive is fitted with differential inputs for analog torque, velocity, or position control. The standard drive offers one analog input on X8, drives with built-in I/O option card offer a second input on X24.

#### Technical characteristics

- Differential input voltage range:  $\pm 12.5$  V
- Maximum input voltage referring to I/O Return:  $-12.5, +16.0$  V
- Resolution: 16 Bit and fully monotonic
- Unadjusted offset:  $< 50$  mV
- Offset drift typ:  $250 \mu\text{V} / ^\circ\text{C}$
- Gain or slope tolerance:  $\pm 3\%$
- Nonlinearity:  $< 0.1\%$  of full scale or  $12.5$  mV
- Common Mode Rejection Ratio:  $> 30$  dB at  $60$  Hz
- Input impedance:  $> 13\text{k}$  Ohms
- Signal to noise ratio referred to full scale:
  - AIN.CUTOFF =  $3000$  Hz: 14 bit
  - AIN.CUTOFF =  $800$  Hz: 16 bit

### Analog Input Wiring Diagram

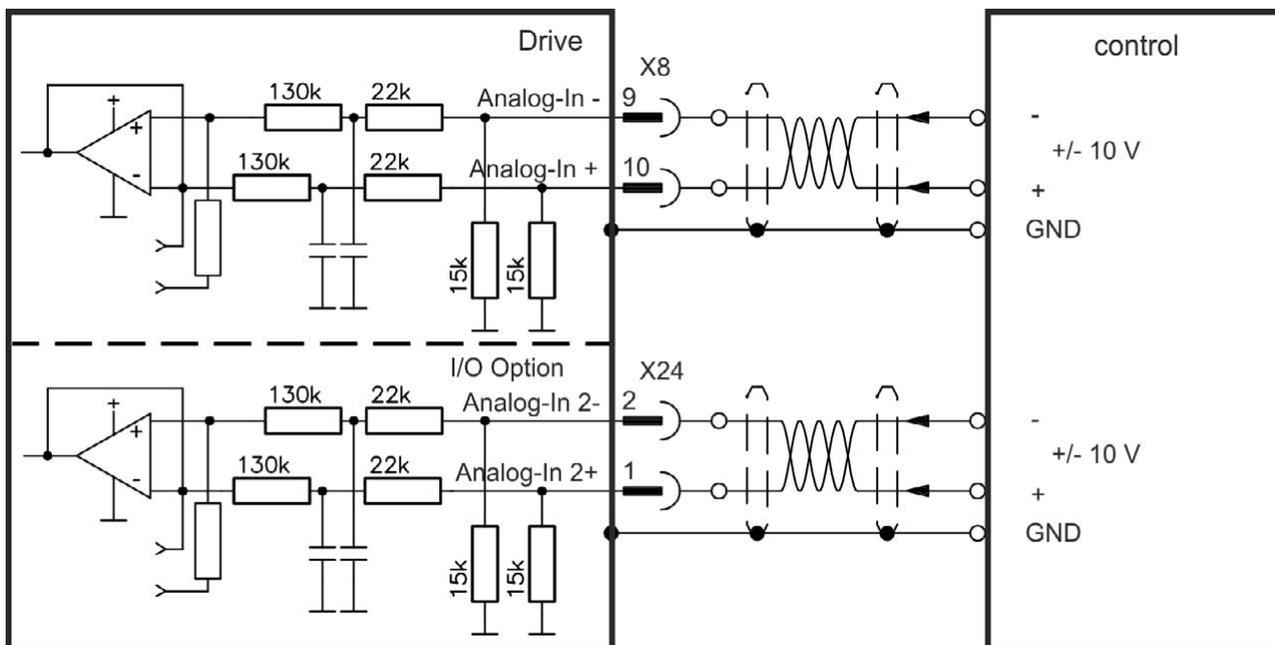

**Application examples for set point input Analog-In:**

- reduced-sensitivity input for setting-up/jog operation
- pre-control/override

**Defining the direction of rotation**

Standard setting: clockwise rotation of the motor shaft (looking at the shaft end) affected by positive voltage between terminal (+) and terminal (-)


To reverse the direction of rotation, swap the connections to terminals +/-, or change the DRV.DIR parameter in the “Feedback 1” screen page.

**23.12 Command encoder signal connection**

**23.12.1 Incremental encoder input 5 V (X9)**

A 5 V A quad B encoder, or the encoder emulation output of another drive can be connected to this input and used as a commander encoder, dual loop feedback, gearing or camming input. Don't use for primary motor feedback connection!


**Connection Diagram**

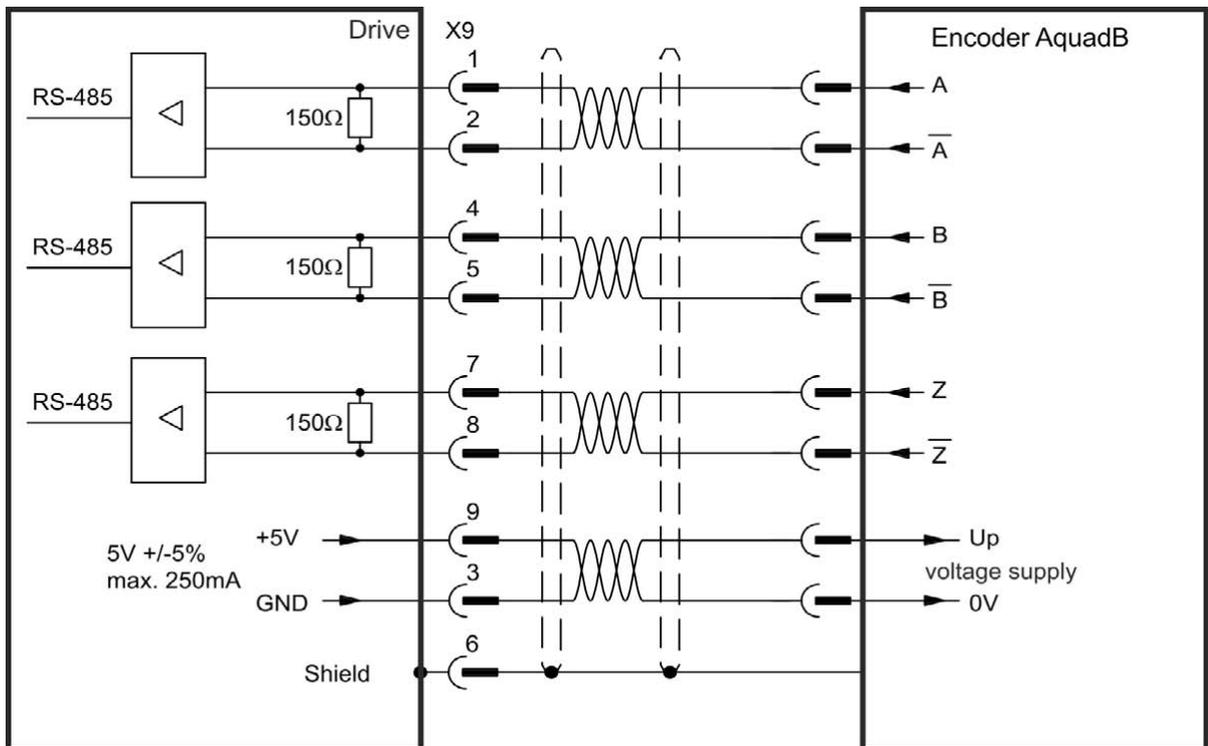

### 23.12.2 Incremental encoder input 24 V (X7)

A 24 V A quad B encoder can be connected to the digital inputs 1 and 2 and used as a commander encoder, dual loop feedback, gearing or camming input. Don't use for primary motor feedback connection!


#### Connection Diagram

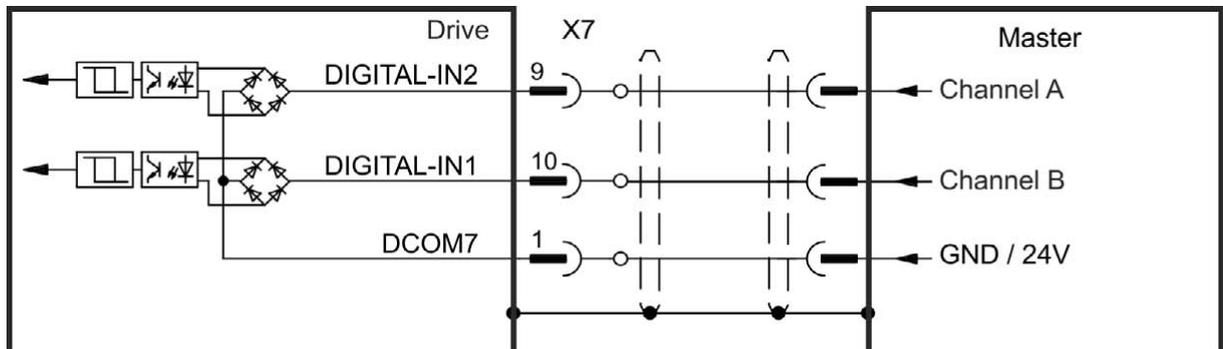

### 23.12.3 Encoder with EnDat 2.2 input 5 V (X9)

A single-turn or multi-turn encoder with EnDat 2.2 can be connected to this input and used as a commander encoder, dual loop feedback, gearing or camming input, or as primary motor feedback connection.


#### Connection Diagram

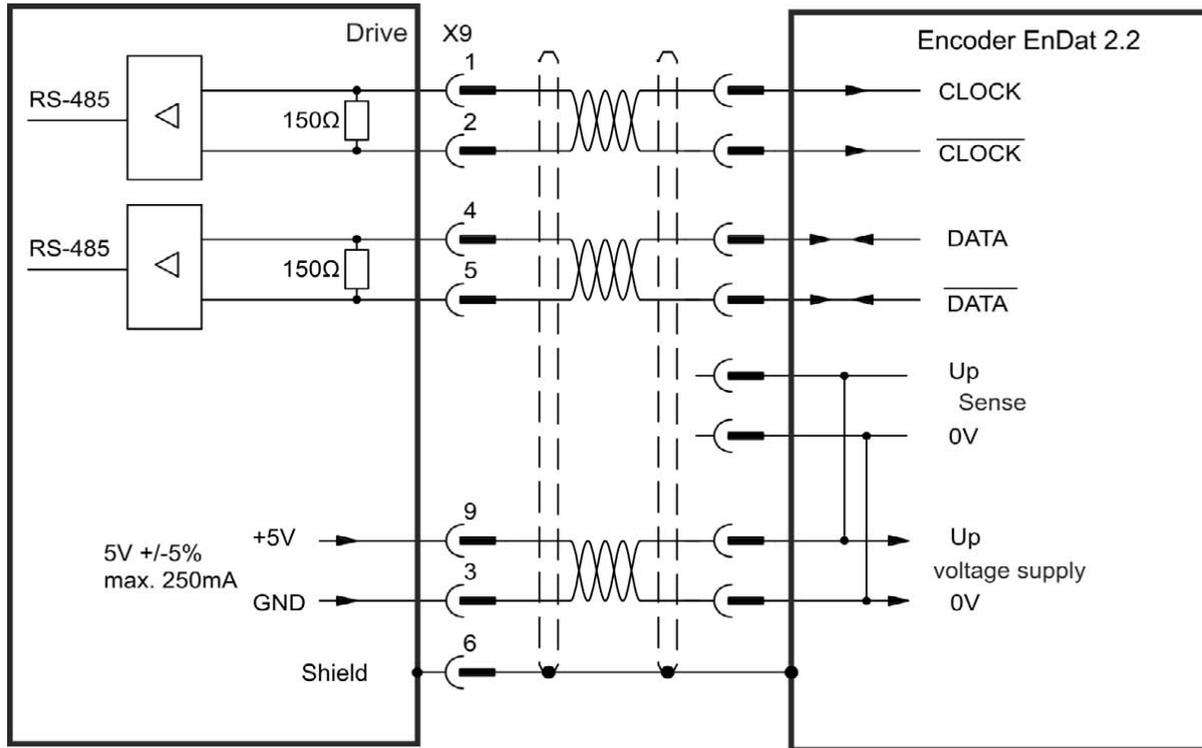

### 23.13 Pulse / Direction signal connection


The drive can be connected to a stepper-motor controller. Set parameters for the drive with WorkBench. The number of pulses can be adjusted, so that the drive can be adapted to match any stepper controller.

#### Speed profile and signal diagram

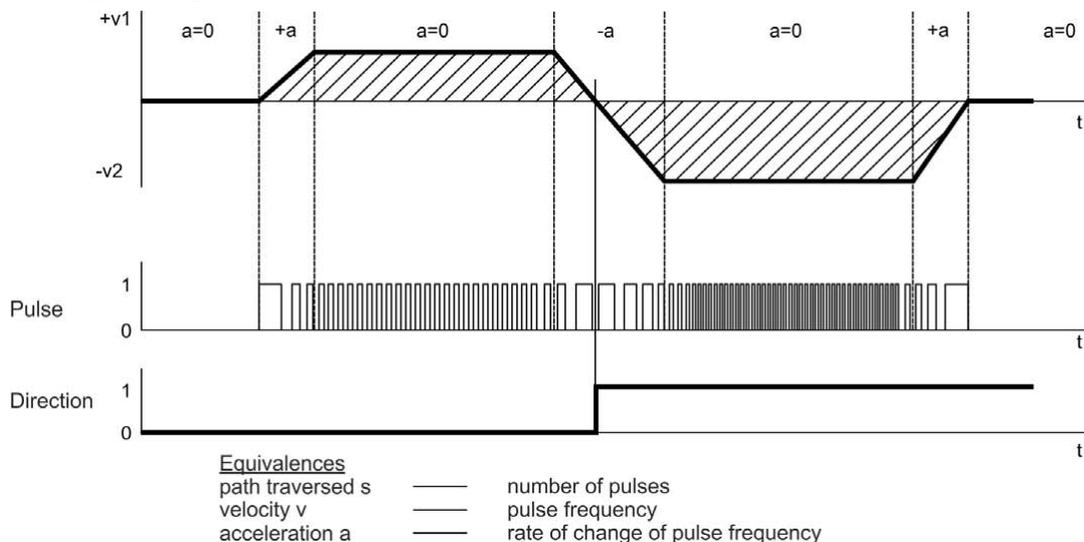


#### 23.13.1 Pulse / Direction input 5 V (X9)

Connection to 5 V signal level stepper-motor controllers.

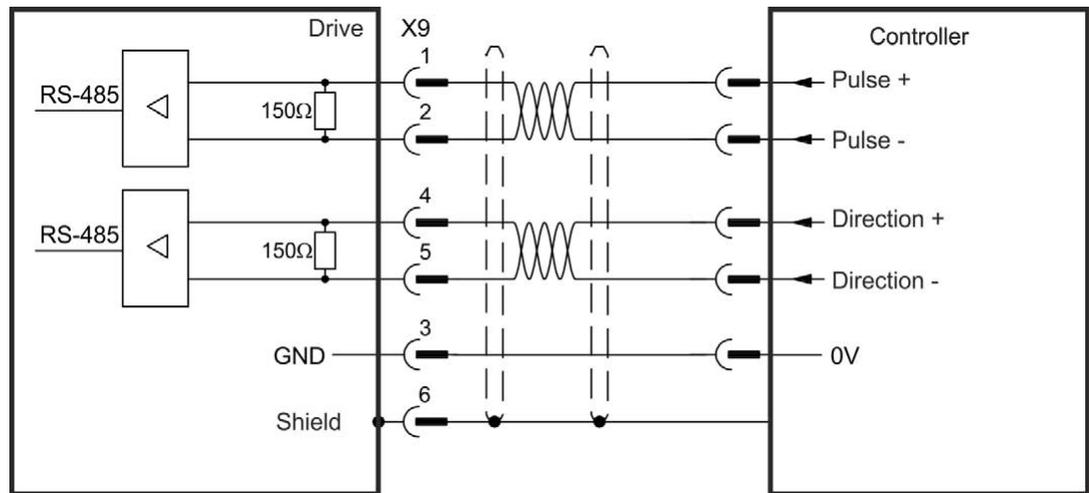

### 23.13.2 Pulse / Direction Input 5 V to 24 V (X7)


Connection industry standard 5V logic stepper-motor controllers with Pulse/Direction or Step/Direction outputs. Note that the X7 opto inputs can work with 5V up to 24V logic and so these inputs can be driven by 24V logic inputs as well.

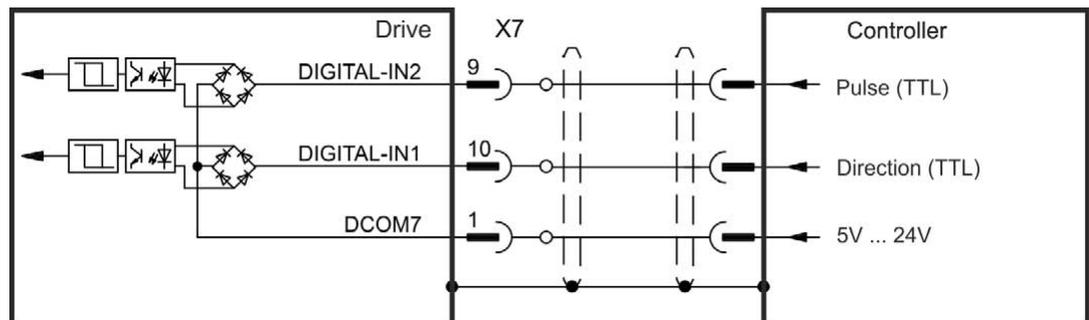

## 23.14 CW / CCW signal connection


### 23.14.1 CW / CCW input 5 V (X9)

The drive can be connected to a third-party controller which delivers 5 V CW/CCW signals

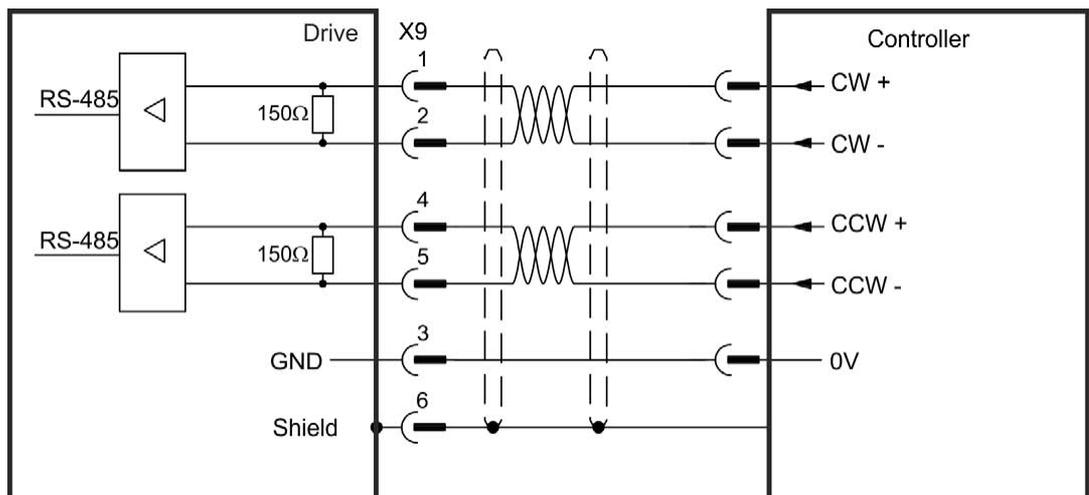


### 23.14.2 CW / CCW input 24 V (X7)

The drive can be connected to a third-party controller which delivers 24 V CW/CCW signals.

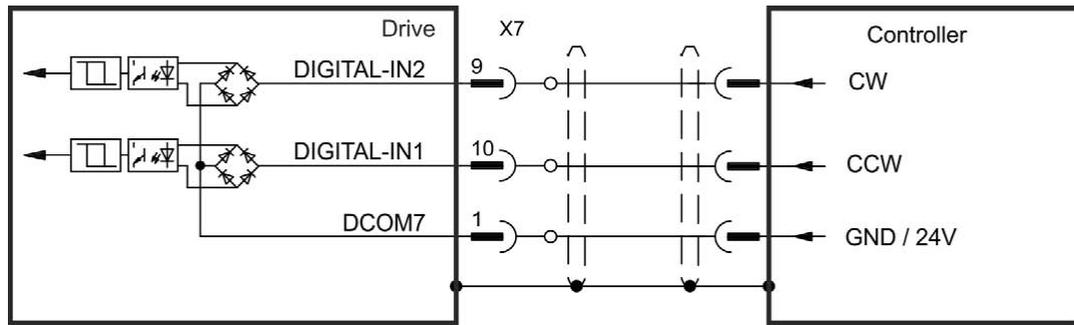


### 23.15 Feedback connector (X10)

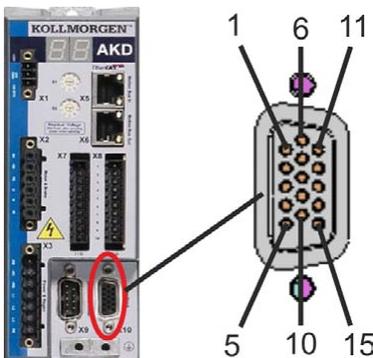

PIN	SFD	SFD/DSL	Resolver	BiSS B (analog)	BiSS C (digital)	EnDAT 2.1	EnDAT 2.2	Hiperface	Sine Enc. +Hall	Tamagawa Smart Abs*	Incr. Enc. +Hall
1	-	-	-	-	-	-	-	-	Hall U	-	Hall U
2	-	-	-	CLK+	CLK+	CLK+	CLK+	-	Hall V	-	Hall V
3	-	-	-	CLK-	CLK-	CLK-	CLK-	-	Hall W	-	Hall W
4	SEN+	-	-	SEN+	SEN+	SEN+	SEN+	SEN+	SEN+	SEN+	SEN+
5	SEN-	-	-	SEN-	SEN-	SEN-	SEN-	SEN-	SEN-	SEN-	SEN-
6	COM+	COM+	R1 Ref+	DAT+	DAT+	DAT+	DAT+	DAT+	Zero+	SD+	Zero+
7	COM-	COM-	R2 Ref-	DAT-	DAT-	DAT-	DAT-	DAT-	Zero-	SD-	Zero-
8	-	-	Thermal control (+)								
9	-	-	Thermal control (-)								
10	+5V	+5V	-	+5V	+5V	+5V	+5V	+8 to +9V	+5V	+5V	+5V
11	0V	0V	-	0V	0V	0V	0V	0V	0V	0V	0V
12	-	-	S1 SIN+	A+	-	A+	-	SIN+	A+	-	A+
13	-	-	S3 SIN-	A-	-	A-	-	SIN-	A-	-	A-
14	-	-	S2 COS+	B+	-	B+	-	COS+	B+	-	B+
15	-	-	S4 COS-	B-	-	B-	-	COS-	B-	-	B-


CLK = CLOCK, DAT = DATA, SEN = SENSE, \*= for AKD with "NB" (rev 8+) only

### 23.16 Feedback connector (X9)

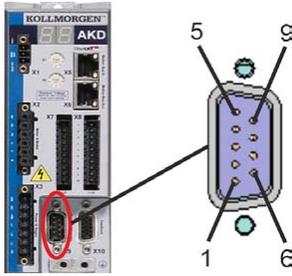

Pin	Pulse/Direction	CW/CCW	Incremental Encoder	Encoder with EnDat 2.2
1	Pulse+	CW+	A+	CLOCK+
2	Pulse-	CW-	A-	CLOCK-
3	GND	GND	GND	GND
4	Direction+	CCW+	B+	DATA+
5	Direction-	CCW-	B-	DATA-
6	Shield	Shield	Shield	Shield
7	-	-	Zero+	-
8	-	-	Zero-	-
9	-	-	+ 5 V (supply, output)	+5V (supply, output)

### 23.17 Feedback connector (X7)

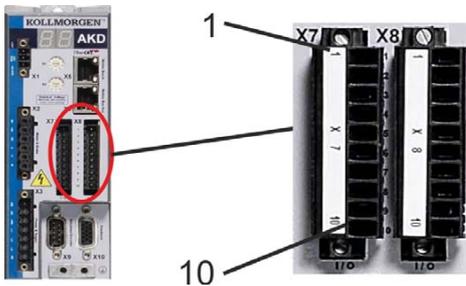

Pin	Pulse/Direction	CW/CCW	Incremental Encoder
9	Pulse	CW	Channel A
10	Direction	CCW	Channel B
1	Common	Common	Common

## 24 Fieldbus Manuals

This chapter contains links to the fieldbus manuals for AKD drives.

The fieldbus manuals describe the different options for connecting and communicating with the AKD drive. Links to these manuals are listed below

### 24.1 AKD Modbus Communication

This manual describes Modbus communication, a simple communication protocol used for reporting data from an industrial device to an HMI or PLC. This manual can be found here: Modbus (→ p. 327)

### 24.2 AKD EtherCAT Communication

This manual describes the installation, setup, range of functions, and software protocol for the EtherCAT AKD product series. The manual can be found online at: [Kollmorgen.com](http://Kollmorgen.com)

A pdf format is also available on the disk included with the drive.

### 24.3 AKD CANopen Communication

This manual describes the installation, setup, range of functions, and software protocol for the CANopen AKD product series. The manual can be found online at: [Kollmorgen.com](http://Kollmorgen.com)

A pdf format is also available on the disk included with the drive.

### 24.4 AKD PROFINET

This manual describes the installation, setup, range of functions, and software protocol for the PROFINET AKD product series. The manual can be found online at: [Kollmorgen.com](http://Kollmorgen.com)

A pdf format is also available on the disk included with the drive.

### 24.5 AKD SynqNet Communication

This manual describes the installation, setup, range of functions, and software protocol for the SynqNet AKD product series. The manual can be found online at: [Kollmorgen.com](http://Kollmorgen.com)

A pdf format is also available on the disk included with the drive.

### 24.6 AKD EtherNet/IP Communication

This manual describes the installation, setup, range of functions, and software protocol for the EtherNet/IP AKD product series. The manual can be found online at: [Kollmorgen.com](http://Kollmorgen.com)

A pdf format is also available on the disk included with the drive.

#### 24.6.1 AKD Modbus Communication

This manual describes Modbus communication, a simple communication protocol used for reporting data from an industrial device to an HMI or PLC. This manual can be found here: Modbus (→ p. 327)

#### 24.6.2 AKD EtherCAT Communication

This manual describes the installation, setup, range of functions, and software protocol for the EtherCAT AKD product series. The manual can be found online at: [Kollmorgen.com](http://Kollmorgen.com)

A pdf format is also available on the disk included with the drive.

#### 24.6.3 AKD CANopen Communication

This manual describes the installation, setup, range of functions, and software protocol for the CANopen AKD product series. The manual can be found online at: [Kollmorgen.com](http://Kollmorgen.com)

A pdf format is also available on the disk included with the drive.

#### **24.6.4 AKD PROFINET**

This manual describes the installation, setup, range of functions, and software protocol for the PROFINET AKD product series. The manual can be found online at: [Kollmorgen.com](http://Kollmorgen.com)

A pdf format is also available on the disk included with the drive.

#### **24.6.5 AKD SynqNet Communication**

This manual describes the installation, setup, range of functions, and software protocol for the SynqNet AKD product series. The manual can be found online at: [Kollmorgen.com](http://Kollmorgen.com)

A pdf format is also available on the disk included with the drive.

#### **24.6.6 AKD EtherNet/IP Communication**

This manual describes the installation, setup, range of functions, and software protocol for the EtherNet/IP AKD product series. The manual can be found online at: [Kollmorgen.com](http://Kollmorgen.com)

A pdf format is also available on the disk included with the drive.

This page intentionally left blank.

### 24.6.6.1 Modbus

#### Overview

Modbus is a simple communication protocol often used for reporting data from an industrial device to an HMI (see [HMI Modbus Communication with AKD](#)) or PLC. Modbus TCP extends the protocol to TCP/IP networks by embedding the same Protocol Data Unit within TCP/IP packets. The AKD supports a Modbus TCP service channel for connections with up to three masters.

Most drive parameters are supported over Modbus TCP (see Modbus Parameter Table) with the exception of commands which output character strings. For information about the Modbus protocol, please see: <http://www.Modbus.org/specs.php>.

#### Modbus Installation and Setup

Modbus TCP is provided over the service port on the top of the drive (X11 connector, the connector used for WorkBench). Connect the drive and a device such as an HMI to a working Ethernet network. For ease of testing and configuration, connect a PC running WorkBench to the same network.

After booting, the drive will flash its Ethernet IP address on the front display. The drive can be accessed at this address for Modbus on port 502. WorkBench uses the same address, but a different port number.

Once the devices are connected, the connected device can open a connection to the AKD using these settings:

- IP Address: read from drive display or Workbench connect screen
- Port: 502
- Add Modbus CRC code: No

#### Overview of Messaging

All parameters with an internal data width of 32-bit and lower are mapped to Modbus as 32-bit (2 register) values. The contents of both registers must be read or written in the same message, by setting the Starting Address to the lowest index of the parameter and the Quantity of Registers to two.

All parameters with an internal data width of 64-bit are mapped to Modbus as 64-bit (4 register) values. The contents of all four registers must be read or written in the same message by setting the Starting Address to the lowest index of the parameter and the Quantity of Registers to four.

Parameters are scaled as in the Terminal window of WorkBench, but note that floating point values are scaled by an additional factor of 1,000 to retain precision.

**NOTE** A read attempt of command or write-only parameters will return a value of zero.

#### Supported Functions

Two Modbus functions are currently supported:

- Read Holding Registers. Function code = 0x03 (3).
- Write Multiple Registers. Function code = 0x10 (16).

To allow only 32-bit and 64-bit access, the quantity of registers is limited to two registers for 32-bit variables and four registers for 64-bit variables. You can also read/write to a single register for certain parameters. Other quantities return an exception response.

#### Read Holding Registers (0x03)

This function code is used to read all registers of one drive parameter.

#### Request

Function Code	1 Byte	0x03
Starting Address	2 Bytes	0x0000-0xFFFF (see Modbus Parameter Table)
Quantity of Registers	2 Bytes	Two 32-bit values or four 64-bit values

**Normal Response**

Function Code	1 Byte	0x03
Byte Count	1 Byte	2 x N*
Register Value	N* x 2 Bytes	Data

\*N = Quantity of Registers

**Error Response**

Function Code	1 Byte	0x83
Exception Code	1 Byte	See Exception Response Codes (→ p. 329)

Following is an example of reading the position loop feedback PL.FB at index 588 (0x024C), with an actual value of 0x1 2A05 F200.

**Request**

Function	03
Starting Address	02 4C
Quantity of Registers	00 04

**Response**

Function	03
Byte Count	08
Register 588	00 00
Register 589	00 01
Register 590	2A 05
Register 591	F2 00

**Write Multiple Registers (0x10)**

This function code is used to write all registers of one drive parameter.

**Request**

Function Code	1 Byte	0x10
Starting Address	2 Bytes	0x0000-0xFFFF (see Modbus index in parameter lists)
Quantity of Registers	2 Bytes	2 (32-bit values) or 4 (64-bit values)
Byte Count	1 Byte	2 x N*
Register Value	N* x 2 Bytes	Data

\*N = Quantity of Registers

**Normal Response**

Function Code	1 Byte	0x10
Starting Address	2 Bytes	0x0000-0xFFFF
Quantity of Registers	2 Bytes	2 or 4

**Error Response**

Function Code	1 Byte	0x90
Exception Code	1 Byte	See Exception Response Codes (→ p. 329)

Following is an example of setting the mode of digital input 1 (DIN1.MODE) at index 122 (0x007A) to a value of 3.

**Request**

Function	10
Starting Address	00 7A
Quantity of Registers	00 02
Byte Count	04
Register 122	00 00
Register 123	00 03

**Response**

Function	10
Starting Address	00 7A
Quantity of Registers	00 02

**Exception Response Codes****Standard Codes**

Description	Exception Code
Illegal Function	1
Illegal data address	2
Illegal Data Value	3
Slave Device Failure	4
Acknowledge	5
Slave Device Busy	6
Memory Parity Error	8
Gateway Path Unavailable	10
Gateway Target Device Failed To Respond	11

**Manufacturer Codes**

Description	Exception Code
Illegal Block Size (must be two registers for 32-bit and four registers for 64-bit parameters)	32
Unknown Parameter (bad address)	33
Error Processing Command (such as "Data value is greater than maximum")	34
Byte Count field is invalid in request	35

**Reading Product Serial Numbers Over Modbus**

The following register addresses are used to read a serial number over Modbus.

Description	Modbus Register Address	Attribute
Amount of registers	6000	16 bit
Characters 1 and 2	6001	16 bit
Characters 3 and 4	6002	16 bit
Characters 5 and 6	6003	16 bit
Characters 7 and 8	6004	16 bit
Characters 9 and 10	6005	16 bit
Characters 11 and 12	6006	16 bit

For example, the product serial number "R-6789-12345" can be read as follows.

Modbus Register Address	Value
6000	6
6001	0x522D ("R-")
6002	0x3637 ("67")
6003	0x3839 ("89")
6004	0x2D31 ("-1")
6005	0x3233 ("23")
6006	0x3435 ("45")

### Modbus Dynamic Mapping

Modbus dynamic mapping allows you to map any of the fixed register addresses to a new register address. By re-ordering the sequence block, read/write access of the re-mapped parameters becomes possible.

In general, all parameters are mapped as 32-bit values and occupy at least two Modbus registers. Parameters with a 64-bit data width occupy four Modbus registers. All 64-bit parameters are also mapped as 32-bit value (two registers) starting at register address 2000 (see Modbus 64-bit Parameters to 32-bit Mapping (→ p. 357)).

### Configuring Dynamic Mapping

The start address for dynamically mapped registers is 8192 (0x2000).

Mapping works as follows:

1. Enable dynamic mapping by writing a 1 (as a 32-bit value) to register address 4096 (0x1000). Writing a 1 enables the configuration mode of dynamic mapping. Writing a zero puts it into "run" mode, in which you can use the mapped parameter.
2. The mapping is now register oriented. Next, write the valid fixed register address of the parameter you would like to map to an address starting at 8192. To map a 32-bit parameter, you must map the corresponding two registers.

Example

AOUT.VSCALE

Write 36 (hi-word) to address 8192 and 37 (lo-word) to address 8193.

The register oriented mapping allows you to optimize the data width for block transfers. To map a parameter with a data width of 16-bit, only the lo-word register needs to be mapped.

3. **Example**

MODBUS.DIO

Write 941 to address 8194

MODBUS.DIO fixed addresses are 940 (hi-word) and 941 (lo-word). Only the lo-word is of interest (16-bit value), because only the lo-word contains the actual value.

4. Disable dynamic mapping by writing a 0 (as a 32-bit value) to register address 4096 (0x1000). Disabling dynamic mapping puts it in a mode where you can now access the value of the mapped parameter and use the mapped register.

The fixed mapping starting at address 0 is still valid.

An example of the entire mapping process is included below:

#### Example

To re-map MODBUS.DIO (16-bit), MODBUS.DRVSTAT (16-bit), and DRV.MOTIONSTAT (32-bit):

1. Enable dynamic mapping.
2. Block write transfer to address 0x2000 (8192).  
Values: 941, 945, 268, 269
3. Modbus telegram:  
Function: 0x10; Address: 0x20, 0x00; Number of Registers: 0x00, 0x04; Data Length in Byte: 0x08;  
Data: 0x03, 0xAD, 0x03, 0xB1, 0x01, 0x0C, 0x01, 0x0d
4. Disable dynamic mapping.
5. Execute DRV.NVSAVE to store the mapping table non-volatile.
6. The re-mapped addresses are:  
0x2000 : MODBUS.DIO  
0x2001 : MODBUS.DRVSTAT  
0x2002 : DRV.MOTIONSTAT (hi-word)  
0x2003 : DRV.MOTIONSTAT (lo-word)

#### Saving and Resetting Dynamic Mapping

Use the following parameters to save and reset dynamic mapping:

- DRV.NVSAVE. Save parameters AND the dynamic mapping table non-volatile.
- DRV.RSTVAR. Set parameters to default value AND clear the dynamic mapping table.

#### Modbus Dynamic mapping through WorkBench Terminal

WorkBench provides an interface for configuring dynamic mapping. This allows you to save the dynamic mapping table in the WorkBench parameter file.

#### 24.6.7 Modbus Overview

A value is identified through a register address and each register is a 16 bit word. To guarantee backwards compatibility, each AKD parameter must have a fixed register address. However, the amount of registers needed to access a parameter depends on the parameter's data type. So if a parameter's data type is changed, the number of registers may change as well, which will result in different register addresses for all the following parameters. To avoid these register shifts, all parameters are mapped as either 32 bit words (2 registers) or 64 bit words (4 registers).

Modbus data is specified as big endian. A lower register address holds a higher rank of significance.

#### 32 bit example:

Register address 0 → high 16 bit word

Register address 1 → low 16 bit word

#### 24.6.8 Dynamic Mapping via Telnet

The following parameters can be set for dynamic mapping in WorkBench.

Parameter	Function
MODBUS.DYNMAP1	Enable dynamic mapping.
MODBUS.DYNMAP 0	Disable dynamic mapping.
MODBUS.CLRDYNMAP	Clear dynamic mapping table.

Map a complete parameter using register address. Map all registers from high to low.

**Example:**

PL.CMD (register address 570)

```

MODBUS.DYNMAP 1
MODBUS.CLRDYNMAP (optional)
MODBUS.ADDR8192 570
MODBUS.ADDR8193 571
MODBUS.ADDR8194 572
MODBUS.ADDR8195 573
...
MODBUS.DYNMAP 0

```

Map only the significant register from an 8 bit parameter. CAP0.EVENT, register address 58, is mapped as a 32 bit value. 58 is the high 16 bit word, and 59 is the low 16 bit word containing the parameter value. Only register 59 needs to be mapped:

```
MODBUS.ADDR8196 59
```

### Scaling Parameters

You can scale parameters accessed through Modbus. This scaling is independent from the units of UNIT.PIN and UNIT.POUT. Instead, the user units are defined by MODBUS parameters:

- MODBUS.PIN (default = 1)
- MODBUS.POUT (default = 1)
- MODBUS.PSCALE (default = 20)

With the default settings shown above, the units are as follows:

- Position [counts (PSCALE bit per rev)]
- Velocity [counts/sec]
- Acceleration / Deceleration [counts/sec<sup>2</sup>]
- Current (Torque) [mA]

#### 24.6.9 Modbus scaling example

If MODBUS.PSCALE = 20 then all position information is 20 bits.

```

POSITION = 2^20 COUNTS/REV
VELOCITY = 2^20 COUNTS/SEC
ACC/DEC = 2^20/SEC^2

```

This means that there will be 2<sup>20</sup> or 1,048,576 position units per rev. This affects all parameters (velocity is in position units/sec, accel and decel are in position units/sec<sup>2</sup>)

**NOTE**

With 20 bits per rev, and 32 bits of data available, you can have 32 bits-20 bits = 12 bits of

**NOTE** revs (4096 revs) before the 32 bit data is full and goes negative.

The other scaling factors in Modbus are MODBUS.PIN and MODBUS.POUT.

MODBUS.PIN and MODBUS.POUT are the scaling ratio to help relate the Modbus position resolution to the drive position units resolution (or simply scale Modbus User Units). It allows you to work in user units through Modbus.

For example, if you set up the drive user units to be 10,000 counts/rev:

```
UNIT.PIN = 10,000
```

```
UNIT.POUT = 1
```

Then to have Modbus reflect the same units, set up the Modbus units:

```
MODBUS.PIN = 2^MODBUS.PSCALE = 1,048,576
```

```
MODBUS.POUT = UNIT.PIN/UNIT.POUT * 1,000 = 10,000,000
```

```
'use this also to account for the lack of a decimal point in Modbus data
```

Then in Modbus:

```
Counts/rev = 10,000
```

```
' In Modbus you would read 10,000,000 but the data represents 10,000.000 since Modbus shows only integers.
```

### Modbus specific registers (Parameters)

The following parameters provide a shortcut to digital I/O, status information, and commands.

Parameter	Bit
MODBUS.DIO	Bit 0 to 6: DIN.STATES Bit 16 and 17: DOUT.STATES
MODBUS.DRVSTAT	Parameters collected: Bit 0: DRV.ACTIVE (drive active) Bit 1: STO.STATUS (STO status) Bit 2: HWLS.POSSTATE (positive HW limit) Bit 3: HWLS.NEGSTATE (negative HW limit) Bit 4: SWLS.STATE (positive SW limit) Bit 5: SWLS.STATE (negative SW limit)
MODBUS.DRV	Bit 0: DRV.STOP (write 1 to execute) Bit 1: DRV.EN (write 1 to enable drive) and DRV.DIS (write 0 to disable drive)
MODBUS.HOME	Bit 0: HOME.MOVE (write 1 to execute) Bit 1: HOME.SET (write 1 to execute)
MODBUS.MOTOR	Bit 0: MOTOR.BRAKE Bit 1: MOTOR.BRAKERLS

Parameter	Bit
MODBUS.MT	Bit 0: MT.CLEAR number from MT.NUM Bit 1: MT.CONTINUE Bit 2: MT.LOAD number from MT.NUM Bit 3: MT.SET Bit 4: MT.MOVE (number from MT.NUM) Note: when both bit 2 and 4 are set then MT.SET is executed first and MT.MOVE second to start the motion task.
MODBUS.SM	Bit 0: One direction (sets SM.MODE to either 0 or 1) Bit 1: Start move Edge-triggered: <ul style="list-style-type: none"> <li>• 0 → 1 : Start motion (execution of SM.MOVE)</li> <li>• 1 → 0 : Stop motion (execution of DRV.STOP)</li> </ul>

### 32-bit versus 16-bit Values

Modbus mirrors all parameters either as 32-bit or 64-bit values. The minimum data width of 32-bit supports backward compatibility, which means that if the internal data width changes, this change has no effect on the register address of consecutive parameters. Dynamic mapping allows you to map only the registers that are relevant to the application and thus reduces communication overhead.

### Mapping of 64-bit Parameters to 32-bit Parameters

All 64-bit parameters are mapped as 32-bit parameters starting at register address 2000. Only the 32-bit low word is mapped with the same scaling as the 64-bit parameter. Chapter 7 contains the general mapping table (chapter 7.2) and the 64-bit to 32-bit mapping table (chapter 7.3).

### Fault Registers

Fault registers MODBUS.FAULT1 (register address 954) to MODBUS.FAULT10 (register address 972) contain the fault state of the drive.

You can obtain the current fault state as follows:

1. Read MODBUS.FAULT1.
2. If MODBUS.FAULT1 is zero, then the drive is fault free.
3. A nonzero value of MODBUS.FAULT1 is a fault number.
4. If MODBUS.FAULT1 is nonzero, the following fault registers (MODBUS.FAULT2 to MODBUS.FAULT10) contain possible further fault numbers.
5. A value of zero indicates no further faults

### Mapping Table

The tables below show Modbus addresses and attributes. The attributes are described as follows:

Attribute	Description
64-bit Parameter	Parameter is internally a 64-bit parameter.
8-bit, 16-bit, 32-bit	Internal data size, mapped as 32-bit (2 registers).
64-bit	Internal data size, mapped as 64-bit (4 registers).
Low 32 bit word	Internally a 64-bit value, only the low 32-bit word is mapped (2 registers).
Signed	Sign bit is significant (negative/positive values are accepted).

Attribute	Description
Command	Executes a command.
Command, data width	Executes a command with numerical argument (for example, MT.NUM).

This page intentionally left blank.

Modbus Parameter Table

Parameter	Modbus Register Address	Is 64-bit?	Attributes
AIN.CUTOFF (→ p. 393)	0		32-bit
AIN.DEADBAND (→ p. 395)	2		16-bit
AIN.ISCALE (→ p. 399)	4		32-bit
AIN.OFFSET (→ p. 402)	6		16-bit, signed
AIN.PSCALE (→ p. 403)	8	Yes	64-bit, signed
AIN.VALUE (→ p. 405)	12		16-bit
AIN.VSCALE (→ p. 407)	14		32-bit
AIN.ZERO (→ p. 409)	16		Command
AOUT.ISCALE (→ p. 425)	18		32-bit
AOUT.MODE (→ p. 426)	20		16-bit
AOUT.OFFSET (→ p. 428)	22		16-bit, signed
AOUT.PSCALE (→ p. 429)	24	Yes	64-bit
AOUT.VALUE (→ p. 431)	28	Yes	64-bit, signed
AOUT.VALUEU (→ p. 432)	32	Yes	64-bit, signed
AOUT.VSCALE (→ p. 433)	36		32-bit
BODE.EXCITEGAP (→ p. 442)	38		8-bit
BODE.FREQ (→ p. 444)	40		32-bit
BODE.IAMP (→ p. 446)	42		32-bit, signed
BODE.INJECTPOINT (→ p. 452)	44		8-bit
BODE.MODE (→ p. 454)	46		8-bit
BODE.MODETIMER (→ p. 458)	48		32-bit
BODE.PRBDDEPTH (→ p. 461)	50		8-bit
BODE.VAMP (→ p. 463)	52	Yes	low 32-bit, signed
CAP0.EDGE (CAP0.EDGE, CAP1.EDGE (→ p. 470))	54		8-bit
CAP0.EN (CAP0.EN, CAP1.EN (→ p. 472))	56		8-bit
CAP0.EVENT (CAP0.EVENT, CAP1.EVENT (→ p. 474))	58		8-bit
CAP0.FILTER (CAP0.FILTER, CAP1.FILTER (→ p. 479))	60		8-bit
CAP0.MODE (CAP0.MODE, CAP1.MODE (→ p. 481))	62		8-bit
CAP0.PLFB (CAP0.PLFB, CAP1.PLFB (→ p. 483))	64	Yes	64-bit, signed
CAP0.PREEDGE (CAP0.PREEDGE, CAP1.PREEDGE (→ p. 485))	68		8-bit
CAP0.PREFILTER (CAP0.PREFILTER, CAP1.PREFILTER (→ p. 487))	70		8-bit
CAP0.PRESELECT (CAP0.PRESELECT, CAP1.PRESELECT (→ p. 489))	72		8-bit
CAP0.STATE (CAP0.STATE, CAP1.STATE (→ p. 491))	74		8-bit

Parameter	Modbus Register Address	Is 64-bit?	Attributes
CAP0.T (CAP0.T, CAP1.T (→ p. 493))	76		32-bit
CAP0.TRIGGER (CAP0.TRIGGER, CAP1.TRIGGER (→ p. 495))	78		8-bit
CAP1.EDGE	80		8-bit
CAP1.EN	82		8-bit
CAP1.EVENT	84		8-bit
CAP1.FILTER	86		8-bit
CAP1.MODE	88		8-bit
CAP1.PLFB	90	Yes	64-bit, signed
CAP1.PREEDGE	94		8-bit
CAP1.PREFILTER	96		8-bit
CAP1.PRESELECT	98		8-bit
CAP1.STATE	100		8-bit
CAP1.T	102		32-bit
CAP1.TRIGGER	104		8-bit
CS.DEC (→ p. 528)	106	Yes	64bit
CS.STATE (→ p. 530)	110		8-bit
CS.TO (→ p. 532)	112		32-bit
CS.VTHRESH (→ p. 534)	114	Yes	low 32-bit word
DIN.ROTARY (→ P. 541)	116		8-bit
DIN1.INV (DIN1.INV to DIN7.INV (→ p. 546))	120		8-bit
DIN1.MODE (DIN1.MODE TO DIN7.MODE (→ p. 548))	122		16-bit
DIN1.PARAM (DIN1.PARAM TO DIN7.PARAM (→ p. 552))	124	Yes	64-bit, signed
DIN1.STATE (DIN1.STATE TO DIN7.STATE (→ p. 555))	128		8-bit
DIN2.INV	130		8-bit
DIN2.MODE	132		16-bit
DIN2.PARAM	134	Yes	64-bit, signed
DIN2.STATE	138		8-bit
DIN3.INV	140		8-bit
DIN3.MODE	142		16-bit
DIN3.PARAM	144	Yes	64-bit, signed
DIN3.STATE	148		8-bit
DIN4.INV	150		8-bit
DIN4.MODE	152		16-bit
DIN4.PARAM	154	Yes	64-bit, signed
DIN4.STATE	158		8-bit

Parameter	Modbus Register Address	Is 64-bit?	Attributes
DIN5.INV	160		8-bit
DIN5.MODE	162		16-bit
DIN5.PARAM	164	Yes	64-bit, signed
DIN5.STATE	168		8-bit
DIN6.INV	170		8-bit
DIN6.MODE	172		16-bit
DIN6.PARAM	174	Yes	64-bit, signed
DIN6.STATE	178		8-bit
DIN7.INV	180		8-bit
DIN7.MODE	182		16-bit
DIN7.PARAM	184	Yes	64-bit, signed
DIN7.STATE	188		8-bit
DOUT.CTRL (→ p. 569)	190		8-bit
DOUT.RELAYMODE (→ p. 570)	192		8-bit
DOUT.STATES (→ p. 572)	194		8-bit
DOUT1.MODE (DOUT1.MODE to DOUT17.MODE )	196		8-bit
DOUT1.PARAM (DOUT1.PARAM AND DOUT2.PARAM (→ p. 575))	198	Yes	64-bit, signed
DOUT1.STATE (DOUT1.STATE AND DOUT2.STATE (→ p. 577))	202		8-bit
DOUT1.STATEU (DOUT1.STATEU AND DOUT2.STATEU (→ p. 578))	204		8-bit
DOUT2.MODE (DOUT1.MODE to DOUT17.MODE )	206		8-bit
DOUT2.PARAM (DOUT1.PARAM AND DOUT2.PARAM (→ p. 575))	208	Yes	64-bit, signed
DOUT2.STATE (DOUT1.STATE AND DOUT2.STATE (→ p. 577))	212		8-bit
DOUT2.STATEU (DOUT1.STATEU AND DOUT2.STATEU (→ p. 578))	214		8-bit
DRV.ACC (→ P. 593)	216	Yes	64-bit
DRV.ACTIVE (→ P. 595)	220		8-bit
DRV.CLRFAULTS (→ P. 599)	222		Command
DRV.CLRFAULTS (→ P. 600)	224		Command
DRV.CMDSOURCE (→ P. 604)	226		8-bit
DRV.DBILIMIT (→ p. 609)	228		32-bit
DRV.DEC (→ P. 611)	230	Yes	64-bit
DRV.DIR (→ p. 614)	234		8-bit
DRV.DIS (→ P. 616)	236		Command

Parameter	Modbus Register Address	Is 64-bit?	Attributes
DRV.DISMODE (→ p. 618)	238		8-bit
DRV.DISSOURCES (→ P. 620)	240		16-bit
DRV.DISTO (→ p. 624)	242		32-bit
DRV.EMUEDIR (→ p. 629)	244		8-bit
DRV.EMUEMODE (→ p. 631)	246		16-bit
DRV.EMUEMTURN (→ p. 634)	248		32-bit
DRV.EMUERES (→ p. 638)	250		32-bit
DRV.EMUEZOFFSET (→ p. 640)	252		16-bit
DRV.EN (→ P. 642)	254		Command
DRV.ENDEFAULT (→ p. 644)	256		8-bit
DRV.HANDWHEEL (→ p. 652)	258		32-bit
DRV.HWENMODE (→ p. 660)	260		8-bit
DRV.ICONT (→ P. 662)	262		32-bit, signed
DRV.IPEAK (→ P. 665)	264		32-bit, signed
DRV.IZERO (→ p. 666)	266		32-bit
DRV.MOTIONSTAT (→ P. 672)	268		32-bit
DRV.OPMODE (→ P. 682)	270		8-bit
DRV.RSTVAR (→ P. 685)	272		Command
DRV.STOP (→ P. 691)	274		Command
DRV.TYPE (→ p. 694)	276		8-bit
DRV.ZERO (→ p. 701)	278		8-bit
FB1.BISSBITS (→ p. 719)	280		8-bit
FB1.ENCREC (→ P. 722)	282		32-bit
FB1.IDENTIFIED (→ P. 731)	284		8-bit
FB1.INITSIGNED (→ p. 737)	286		8-bit, signed
FB1.MECHPOS (→ P. 740)	288		32-bit
FB1.ORIGIN (→ p. 746)	294	Yes	64-bit
FB1.PFIND (→ p. 750)	298		8-bit
FB1.PFINDCMDU (→ p. 751)	300		32-bit
FB1.POLES (→ P. 754)	302		16-bit
FB1.PSCALE (→ p. 756)	304		8-bit
FB1.RESKTR (→ p. 759)	306		16-bit
FB1.RESREFPHASE (→ p. 760)	308		32-bit, signed
FB1.SELECT (→ P. 761)	310		8-bit, signed
FB1.TRACKINGCAL (→ p. 764)	312		8-bit

Parameter	Modbus Register Address	Is 64-bit?	Attributes
FBUS.PARAM01 (FBUS.PARAM1 TO FBUS.PARAM10 (→ p. 800))	314		32-bit
FBUS.PARAM02	316		32-bit
FBUS.PARAM03	318		32-bit
FBUS.PARAM04	320		32-bit
FBUS.PARAM05	322		32-bit
FBUS.PARAM06	324		32-bit
FBUS.PARAM07	326		32-bit
FBUS.PARAM08	328		32-bit
FBUS.PARAM09	330		32-bit
FBUS.PARAM10	332		32-bit
FBUS.PLLTHRESH (→ p. 805)	354		16-bit
FBUS.SAMPLEPERIOD (→ p. 810)	356		8-bit
FBUS.SYNCACT (→ p. 813)	358		32-bit
FBUS.SYNCDIST (→ p. 814)	360		32-bit
FBUS.SYNCWND (→ p. 815)	362		32-bit
FBUS.TYPE (→ p. 816)	364		8-bit
GEAR.ACCMAX (→ p. 819)	366	Yes	64-bit
GEAR.DECMAX (→ p. 821)	370	Yes	64-bit
GEAR.IN (→ p. 823)	374		16-bit
GEAR.MODE (→ p. 825)	376		16-bit
GEAR.MOVE (→ p. 828)	378		Command
GEAR.OUT (→ p. 829)	380		16-bit, signed
GEAR.VMAX (→ p. 831)	382	Yes	low 32bit word,
HOME.ACC (→ p. 847)	384	Yes	64-bit
HOME.AUTOMOVE (→ p. 849)	388		8-bit
HOME.DEC (→ p. 851)	390	Yes	64-bit
HOME.DIR (→ p. 853)	394		16-bit
HOME.DIST (→ p. 855)	396	Yes	64-bit, signed
HOME.FEEDRATE (→ p. 857)	400		16-bit
HOME.IPEAK (→ p. 859)	402	Yes	64-bit, signed
HOME.MODE (→ p. 863)	406		16-bit
HOME.MOVE (→ p. 865)	408		Command
HOME.P (→ p. 866)	410	Yes	64-bit, signed
HOME.PERRTHRESH (→ p. 868)	414	Yes	64-bit, signed
HOME.SET (→ p. 870)	418		Command

Parameter	Modbus Register Address	Is 64-bit?	Attributes
HOME.V (→ p. 872)	420	Yes	Low 32-bit word
HWLS.NEGSTATE (→ p. 875)	422		8-bit
HWLS.POSSTATE (→ p. 876)	424		8-bit
IL.BUSFF (→ p. 879)	426		32-bit, signed
IL.CMD (→ P. 880)	428		32-bit, signed
IL.CMDU (→ P. 882)	430		32-bit, signed
IL.FB (→ P. 888)	432		32-bit, signed
IL.FF (→ p. 892)	434		32-bit
IL.FOLDFTHRESH (→ p. 894)	436		32-bit
IL.FOLDFTHRESHU (→ p. 896)	438		32-bit, signed
IL.FOLDWTHRESH (→ p. 898)	440		32-bit, signed
IL.FRCTION (→ p. 900)	442		32-bit
IL.IFOLD (→ p. 902)	444		32-bit
IL.IUFB (→ p. 904)	446		32-bit, signed
IL.IVFB (→ p. 905)	448		32-bit, signed
IL.KACFF (→ p. 906)	450		32-bit, signed
IL.KBUSFF (→ p. 908)	452		32-bit
IL.KP (→ P. 909)	454		16-bit
IL.KPDRATIO (→ P. 910)	456		32-bit
IL.KVFF (→ p. 918)	458		32-bit, signed
IL.LIMITN (→ P. 919)	460		32-bit, signed
IL.LIMITP (→ P. 921)	462		32-bit, signed
IL.MFOLDD (→ P. 923)	464		32-bit
IL.MFOLDR (→ P. 924)	466		32-bit
IL.MFOLDT (→ P. 925)	468		32-bit
IL.MIFOLD (→ P. 928)	470		32-bit
IL.OFFSET (→ p. 931)	472		32-bit, signed
IL.VCMD (→ P. 932)	474		16-bit, signed
IL.VUFB (→ P. 933)	476		16-bit, signed
IL.VVFB (→ P. 934)	478		16-bit, signed
MOTOR.AUTOSET (→ p. 964)	480		8-bit
MOTOR.BRAKE (→ p. 966)	482		8-bit
MOTOR.BRAKERLS (→ p. 970)	484		8-bit
MOTOR.CTF0 (→ p. 973)	486		32-bit
MOTOR.ICONT (→ p. 975)	488		32-bit
MOTOR.IDDATAVALID (→ p. 977)	490		8-bit

Parameter	Modbus Register Address	Is 64-bit?	Attributes
MOTOR.INERTIA (→ p. 984)	492		32-bit
MOTOR.IPEAK (→ p. 986)	494		32-bit
MOTOR.KT (→ p. 990)	496		32-bit
MOTOR.LQLL (→ p. 994)	498		32-bit
MOTOR.PHASE (→ P. 997)	500		16-bit
MOTOR.PITCH (→ P. 1001)	502		32-bit
MOTOR.POLES (→ P. 1002)	504		16-bit
MOTOR.R (→ P. 1004)	506		32-bit
MOTOR.RTYPE (→ p. 1006)	508		8-bit
MOTOR.TBRAKEAPP (→ P. 1010)	510		16-bit
MOTOR.TBRAKERLS (→ P. 1012)	512		16-bit
MOTOR.TBRAKETO (→ p. 1014)	990		32-bit, signed
MOTOR.TEMP (→ p. 1016)	514		32-bit
MOTOR.TEMPFAULT (→ p. 1019)	516		32-bit
MOTOR.TEMPWARN (→ p. 1021)	518		32-bit
MOTOR.TYPE (→ P. 1023)	520		8-bit
MOTOR.VMAX (→ p. 1025)	522		16-bit
MOTOR.VOLTMAX (→ P. 1027)	524		16-bit
MOTOR.VOLTMIN (→ p. 1029)	998		16-bit
MOTOR.VOLTRATED (→ p. 1031)	992		16-bit
MOTOR.VRATED (→ p. 1033)	994	Yes	64-bit, signed
MT.ACC (→ P. 1036)	526	Yes	64-bit
MT.CLEAR (→ P. 1038)	530		16-bit, signed
MT.CNTL (→ P. 1040)	532		32-bit
MT.CONTINUE (→ P. 1044)	534		Command
MT.DEC (→ P. 1045)	536	Yes	64-bit
MT.EMERGMT (→ P. 1047)	540		16-bit, signed
MT.LOAD (→ P. 1054)	542		Command
MT.MOVE (→ P. 1056)	544		Command 16-bit
MT.MTNEXT (→ p. 1058)	546		8-bit
MT.NUM (→ p. 1060)	548		8-bit
MT.P (→ P. 1061)	550	Yes	64-bit, signed
MT.SET (→ P. 1064)	554		Command 8-bit
MT.TNEXT (→ p. 1066)	556		16-bit
MT.TNUM (→ P. 1068)	558		8-bit
MT.TPOSWND (→ p. 1071)	560	Yes	64-bit, signed

Parameter	Modbus Register Address	Is 64-bit?	Attributes
MT.TVELWND (→ p. 1073)	564		32-bit
MT.V (→ P. 1074)	566	Yes	low 32-bit word
MT.VCMD (→ p. 1077)	568	Yes	low 32-bit word, signed
PL.CMD (→ P. 1084)	570	Yes	64-bit
PL.ERR (→ P. 1086)	574	Yes	64-bit
PL.ERRMODE (→ p. 1090)	578		8-bit
PL.ERRFTHRESH (→ p. 1088)	580	Yes	64-bit
PL.ERRWTHRESH (→ p. 1092)	584	Yes	64-bit
PL.FB (→ P. 1094)	588	Yes	64-bit, signed
PL.FBSOURCE (→ p. 1096)	592		8-bit
PL.INTINMAX (→ P. 1099)	594	Yes	64-bit
PL.INTOUTMAX (→ P. 1101)	598	Yes	64-bit
PL.KI (→ P. 1103)	602		32-bit
PL.KP (→ P. 1105)	604		32-bit
PL.MODP1 (→ p. 1107)	606	Yes	64-bit, signed
PL.MODP2 (→ p. 1109)	610	Yes	64-bit, signed
PL.MODPDIR (→ p. 1111)	614		8-bit
PL.MODPEN (→ p. 1113)	616		8-bit
PLS.EN (→ p. 1116)	618		16-bit
PLS.MODE (→ p. 1118)	620		16-bit
PLS.P1 (PLS.P1 TO PLS.P8 (→ p. 1120))	622	Yes	64-bit, signed
PLS.P2	626	Yes	64-bit, signed
PLS.P3	630	Yes	64-bit, signed
PLS.P4	634	Yes	64-bit, signed
PLS.P5	638	Yes	64-bit, signed
PLS.P6	642	Yes	64-bit, signed
PLS.P7	646	Yes	64-bit, signed
PLS.P8	650	Yes	64-bit, signed
PLS.RESET (→ p. 1122)	654		16-bit
PLS.STATE (→ p. 1124)	656		16-bit
PLS.T1 (PLS.T1 TO PLS.T8 (→ p. 1126))	658		16-bit
PLS.T2	660		16-bit
PLS.T3	662		16-bit
PLS.T4	664		16-bit
PLS.T5	666		16-bit

Parameter	Modbus Register Address	Is 64-bit?	Attributes
PLS.T6	668		16-bit
PLS.T7	670		16-bit
PLS.T8	672		16-bit
PLS.UNITS (→ p. 1128)	674		8-bit
PLS.WIDTH1 (PLS.WIDTH1 TO PLS.WIDTH8 (→ p. 1131))	676	Yes	64-bit, signed
PLS.WIDTH2	680	Yes	64-bit, signed
PLS.WIDTH3	684	Yes	64-bit, signed
PLS.WIDTH4	688	Yes	64-bit, signed
PLS.WIDTH5	692	Yes	64-bit, signed
PLS.WIDTH6	696	Yes	64-bit, signed
PLS.WIDTH7	700	Yes	64-bit, signed
PLS.WIDTH8	704	Yes	64-bit, signed
REGEN.POWER (→ P. 1159)	734	Yes	64-bit
REGEN.REXT (→ P. 1163)	738		16-bit
REGEN.TEXT (→ p. 1164)	740		32-bit
REGEN.TYPE (→ P. 1166)	742		8-bit, signed
REGEN.WATTEXT (→ P. 1168)	744		16-bit
SM.I1 (→ p. 1177)	746		32-bit, signed
SM.I2 (→ p. 1178)	748		32-bit, signed
SM.MODE (→ p. 1179)	750		16-bit
SM.MOVE (→ p. 1182)	752		Command
SM.T1 (→ p. 1183)	754		16-bit
SM.T2 (→ p. 1184)	756		16-bit
SM.V1 (→ p. 1185)	758	Yes	low 32-bit word, signed
SM.V2 (→ p. 1187)	760	Yes	low 32-bit word, signed
STO.STATE (→ p. 1190)	762		8-bit
SWLS.EN (→ p. 1205)	764		16-bit
SWLS.LIMIT0 (→ p. 1207)	766	Yes	64-bit, signed
SWLS.LIMIT1 (→ p. 1209)	770	Yes	64-bit, signed
SWLS.STATE (→ p. 1211)	774		8-bit
UNIT.ACCLINEAR (→ P. 1218)	776		8-bit
UNIT.ACCROTARY (→ P. 1220)	778		8-bit
UNIT.PIN (→ P. 1223)	780		32-bit
UNIT.PLINEAR (→ P. 1225)	782		8-bit

Parameter	Modbus Register Address	Is 64-bit?	Attributes
UNIT.POUT (→ P. 1227)	784		32-bit
UNIT.PROTARY (→ P. 1229)	786		8-bit
UNIT.VLINEAR (→ P. 1231)	788		8-bit
UNIT.VROTARY (→ P. 1233)	790		8-bit
VBUS.CALGAIN	792		32-bit
VBUS.OVFTHRESH (→ p. 1242)	794		16-bit
VBUS.OVWTHRESH (→ p. 1243)	796		16-bit
VBUS.RMSLIMIT (→ p. 1244)	798		8-bit
VBUS.UVFTHRESH (→ p. 1245)	800		16-bit
VBUS.UVMODE (→ p. 1246)	802		8-bit
VBUS.UVWTHRESH (→ p. 1248)	804		16-bit
VBUS.VALUE (→ p. 1249)	806		32-bit
VL.ARPF1 (VL.ARPF1 TO VL.ARPF4 (→ p. 1251))	808		32-bit
VL.ARPF2	810		32-bit
VL.ARPF3	812		32-bit
VL.ARPF4	814		32-bit
VL.ARPQ1 (VL.ARPQ1 TO VL.ARPQ4 (→ p. 1253))	816		32-bit
VL.ARPQ2	818		32-bit
VL.ARPQ3	820		32-bit
VL.ARPQ4	822		32-bit
VL.ARTYPE1 (VL.ARTYPE1 TO VL.ARTYPE4 (→ p. 1255))	824		8-bit
VL.ARTYPE2	826		8-bit
VL.ARTYPE3	828		8-bit
VL.ARTYPE4	830		8-bit
VL.ARZF1 (VL.ARZF1 TO VL.ARZF4 (→ p. 1257))	832		32-bit
VL.ARZF2	834		32-bit
VL.ARZF3	836		32-bit
VL.ARZF4	838		32-bit
VL.ARZQ1 (VL.ARZQ1 TO VL.ARZQ4 (→ p. 1259))	840		32-bit
VL.ARZQ2	842		32-bit
VL.ARZQ3	844		32-bit
VL.ARZQ4	846		32-bit
VL.BUSFF (→ p. 1261)	848	Yes	low 32-bit word, signed
VL.CMD (→ P. 1263)	850	Yes	low 32-bit word, signed

Parameter	Modbus Register Address	Is 64-bit?	Attributes
VL.CMDU (→ P. 1265)	852	Yes	low 32-bit word, signed
VL.ERR (→ P. 1267)	854	Yes	low 32-bit word, signed
VL.FB (→ P. 1269)	856	Yes	low 32-bit word, signed
VL.FBFILTER (→ p. 1271)	858	Yes	low 32-bit word, signed
VL.FBSOURCE (→ p. 1273)	860		8-bit
VL.FF (→ p. 1275)	862	Yes	low 32-bit word, signed
VL.GENMODE (→ P. 1277)	864		16-bit
VL.KBUSFF (→ p. 1279)	866		32-bit
VL.KI (→ p. 1281)	868		32-bit
VL.KO (→ p. 1283)	870		32-bit
VL.KP (→ p. 1284)	872		32-bit
VL.KVFF (→ p. 1286)	874		32-bit
VL.LIMITN (→ P. 1288)	876	Yes	low 32-bit word, signed
VL.LIMITP (→ P. 1290)	878	Yes	low 32-bit word
VL.LMJR (→ p. 1291)	880		32-bit
VL.MODEL (→ p. 1293)	882	Yes	low 32-bit word, signed
VL.OBSBW (→ p. 1294)	884		32-bit
VL.OBSMODE (→ p. 1295)	886		32-bit
VL.THRESH (→ P. 1296)	888	Yes	low 32-bit word, signed
WS.ARM (→ p. 1300)	890		Command
WS.DISTMAX (→ p. 1308)	892	Yes	64-bit, signed
WS.DISTMIN (→ p. 1310)	896	Yes	64-bit, signed
WS.IMAX (→ p. 1314)	900		32-bit, signed
WS.MODE (→ p. 1316)	902		8-bit
WS.NUMLOOPS (→ p. 1318)	904		8-bit
WS.STATE (→ p. 1319)	906		8-bit
WS.T (→ p. 1321)	908		16-bit
WS.TDELAY1 (→ p. 1322)	910		16-bit
WS.TDELAY2 (→ p. 1324)	912		16-bit
WS.TDELAY3 (→ p. 1326)	914		16-bit

Parameter	Modbus Register Address	Is 64-bit?	Attributes
WS.VTHRESH (→ p. 1330)	916	Yes	low 32-bit word, signed
DIN1.FILTER (DIN1.FILTER TO DIN7.FILTER (→ p. 544))	918		16-bit
DIN2.FILTER	920		16-bit
DIN3.FILTER	922		16-bit
DIN4.FILTER	924		16-bit
DIN5.FILTER	926		16-bit
DIN6.FILTER	928		16-bit
DIN7.FILTER	930		16-bit
FB1.HALLSTATEU (→ p. 728)	932		8-bit
FB1.HALLSTATEV (→ p. 729)	934		8-bit
FB1.HALLSTATEW (→ p. 730)	936		8-bit
DRV.NVSAVE (→ p. 679)	938		Command
MODBUS.DIO	940		32-bit
MODBUS.DRV	942		32-bit
MODBUS.DRVSTAT	944		32-bit
MODBUS.HOME	946		32-bit
MODBUS.MOTOR	948		32-bit
MODBUS.MT	950		16-bit
MODBUS.SM	952		32-bit
DRV.FAULT1 (DRV.FAULT1 to DRV.FAULT10 (→ p. 648))	954		16-bit
DRV.FAULT2	956		16-bit
DRV.FAULT3	958		16-bit
DRV.FAULT4	960		16-bit
DRV.FAULT5	962		16-bit
DRV.FAULT6	964		16-bit
DRV.FAULT7	966		16-bit
DRV.FAULT8	968		16-bit
DRV.FAULT9	970		16-bit
DRV.FAULT10	972		16-bit
MODBUS.PIN (→ p. 954)	974		32-bit
MODBUS.POUT (→ p. 956)	976		32-bit
MODBUS.PSCALE (→ p. 958)	978		16-bit
MOTOR.HFPHASEREAD	982		16-bit
FB2.ENCRESP (→ p. 773)	984		32-bit
FB2.MODE (→ p. 775)	986		16-bit

Parameter	Modbus Register Address	Is 64-bit?	Attributes
"FB2.SOURCE " (→ p. 784)	988		16-bit
MOTOR.TBRAKETO (→ p. 1014)	990		32-bit, signed
MODBUS.MSGLOG	992		8-bit
USER.INT1 (USER.INT1 to USER.INT24 (→ p. 1236))	994		32-bit, signed
USER.INT2	996		32-bit, signed
USER.INT3	998		32-bit, signed
USER.INT4	1000		32-bit, signed
USER.INT5	1002		32-bit, signed
USER.INT6	1004		32-bit, signed
USER.INT7	1006		32-bit, signed
USER.INT8	1008		32-bit, signed
USER.INT9	1010		32-bit, signed
USER.INT10	1012		32-bit, signed
USER.INT11	1014		32-bit, signed
USER.INT12	1016		32-bit, signed
USER.INT13	1018		32-bit, signed
USER.INT14	1020		32-bit, signed
USER.INT15	1022		32-bit, signed
USER.INT16	1024		32-bit, signed
USER.INT17	1026		32-bit, signed
USER.INT18	1028		32-bit, signed
USER.INT19	1030		32-bit, signed
USER.INT20	1032		32-bit, signed
USER.INT21	1034		32-bit, signed
USER.INT22	1036		32-bit, signed
USER.INT23	1038		32-bit, signed
USER.INT24	1040		32-bit, signed
DRV.NVCHECK (→ p. 675)	1042	Yes	low 32-bit word
MODBUS.SCALING (→ p. 960)	1048		8-bit
DRV.EMUEPULSEWIDTH (→ p. 636)	1050		32-bit
DRV.EMUECHECKSPEED (→ p. 627)	1052		8-bit
DRV.HWENABLE (→ p. 657)	1054		8-bit
DRV.SWENABLE*	1056		8-bit
DRV.TIME (→ p. 693)	1058		32-bit
EGEAR.ACCLIMIT*	1060	Yes	low 32-bit word
EGEAR.DECLIMIT*	1062	Yes	low 32-bit word

Parameter	Modbus Register Address	Is 64-bit?	Attributes
EGEAR.ERROR*	1064	Yes	low 32-bit word
EGEAR.LOCK*	1066		8-bit
EGEAR.ON*	1068		8-bit
EGEAR.PULSESIN*	1070		16-bit
EGEAR.PULSEOUT*	1072		16-bit signed
EGEAR.RATIO*	1074		32-bit
EGEAR.TYPE*	1076		8-bit
EXTENCODER.FREQ*	1078		32-bit
EXTENCODER.POSITION*	1080	Yes	64-bit signed
EXTENCODER.POSMODULO*	1084	Yes	64-bit
MOVE.ACC*	1088	Yes	64-bit
MOVE.DEC*	1092	Yes	64-bit
MOVE.DEC*	1096		32-bit
MOVE.GOABS*	1098		Command
MOVE.GOABSREG*	1100		Command
MOVE.GOHOME*	1102		Command
MOVE.GORELREG*	1104		Command
MOVE.GOREL*	1106		Command
MOVE.GOPUPDATE*	1108		Command
MOVE.GOVEL*	1110		Command
MOVE.INPOSITION*	1112		32-bit
MOVE.INPOSLIMIT*	1114	Yes	64-bit signed
MOVE.MOVING*	1118		32-bit
MOVE.POSCOMMAND*	1120	Yes	64-bit signed
MOVE.REGOFFSET*	1130	Yes	64-bit signed
MOVE.RELATIVEDIST*	1134	Yes	64-bit signed
MOVE.RUNSPEED*	1138	Yes	64-bit
MOVE.SCURVETIME*	1142		32-bit
MOVE.ABORT*	1144		Command
MOVE.TARGETPOS*	1146	Yes	64-bit
MOVE.VCMD*	1150		32-bit
VM.AUTOSTART*	1152		32-Bit
VM.RESTART*	1154		Command
VM.START*	1156		Command
VM.STATE*	1158		8-bit
VM.STOP*	1160		Command

Parameter	Modbus Register Address	Is 64-bit?	Attributes
VM.ERR*	1162		32-bit
WHEN.FB1MECHPOS*	1164		32-bit
WHEN.FB3P*	1166		64-bit
WHEN.DRVHANDWHEEL*	1170		32-bit
WHEN.DRVTIME*	1172		32-bit
WHEN.PLCMD*	1174	Yes	64-bit
WHEN.PLFB*	1178	Yes	64-bit signed
MOVE.DWELLTIME*	1182		32-bit
IL.MI2T (→ p. 926)	1184		16-bit
AIN.DEADBANDMODE (→ p. 397)	1186		16-bit
AIN.MODE (→ p. 400)	1188		8-bit
DIO10.DIR (DIO9.DIR to DIO11.DIR (→ p. 566))	1190		8-bit
DIO10.INV (DIO9.INV to DIO11.INV (→ p. 564))	1192		8-bit
DIO11.DIR	1194		8-bit
DIO11.INV	1196		8-bit
DIO9.DIR	1198		8-bit
DIO9.INV	1200		8-bit
FAULT130.ACTION (FAULTx.ACTION (→ p. 712))	1202		8-bit
FAULT131.ACTION	1204		8-bit
FAULT132.ACTION	1206		8-bit
FAULT134.ACTION	1208		8-bit
FAULT139.ACTION	1210		8-bit
IP.MODE (→ p. 941)	1212		16-bit
LOAD.INERTIA (→ p. 948)	1214		32-bit
MOTOR.KE (→ p. 988)	1216		32-bit
VBUS.HALFVOLT (→ p. 1240)	1218		8-bit
FB2.DIR (→ p. 772)	1220		8-bit
FAULT451.ACTION (FAULTx.ACTION (→ p. 712))	1222		8 bit
DRV.HWENDELAY (→ p. 658)	1224		8-bit
DRV.HANDWHEELSRC (→ p. 654)	1226		8-bit
IL.KPLOOKUPINDEX (→ p. 912)	1228		16-bit
IL.KPLOOKUPVALUE (→ p. 914)	1230		32-bit
MOTOR.BRAKEIMM (→ p. 968)	1232		8-bit
AIN2.CUTOFF (→ p. 412)	1234		32-bit
AIN2.DEADBAND (→ p. 413)	1236		16-bit
AIN2.DEADBANDMODE (→ p. 414)	1238		16-bit

Parameter	Modbus Register Address	Is 64-bit?	Attributes
AIN2.MODE (→ p. 415)	1242		8-bit
AIN2.OFFSET (→ p. 416)	1244		16-bit, signed
AIN2.VALUE (→ p. 417)	1250		16-bit
AIN2.ZERO (→ p. 418)	1258		Command
AOUT.CUTOFF (→ p. 420)	1270		32-bit
AOUT2.CUTOFF (→ p. 436)	1272		32-bit
AOUT2.MODE (→ p. 437)	1276		16-bit
AOUT2.OFFSET (→ p. 438)	1278		16-bit, signed
AOUT2.VALUE (→ p. 439)	1284	Yes	64-bit, signed
BODE.IFLIMIT (→ p. 448)	1296		32-bit, signed
BODE.IFTHRESH (→ p. 450)	1298		32-bit, signed
BODE.VFLIMIT (→ p. 465)	1300		32-bit, signed
BODE.VFTHRESH (→ p. 467)	1302	Yes	64-bit, signed
DIN10.STATE (DIN9.STATE to DIN11.STATE (→ p. 557))	1306		8-bit
DIN11.STATE	1308		8-bit
DIN21.FILTER (DIN21.FILTER to DIN32.FILTER (→ p. 559))	1310		16-bit
DIN21.STATE (DIN21.STATE to DIN32.STATE (→ p. 561))	1320		8-bit
DIN22.FILTER	1322		16-bit
DIN22.STATE	1332		8-bit
DIN23.FILTER	1334		16-bit
DIN23.STATE	1344		8-bit
DIN24.FILTER	1346		16-bit
DIN24.STATE	1356		8-bit
DIN25.FILTER	1358		16-bit
DIN25.STATE	1368		8-bit
DIN26.FILTER	1370		16-bit
DIN26.STATE	1380		8-bit
DIN27.FILTER	1382		16-bit
DIN27.STATE	1392		8-bit
DIN28.FILTER	1394		16-bit
DIN28.STATE	1404		8-bit
DIN29.FILTER	1406		16-bit
DIN29.STATE	1416		8-bit
DIN30.FILTER	1418		16-bit
DIN30.STATE	1428		8-bit

Parameter	Modbus Register Address	Is 64-bit?	Attributes
DIN31.FILTER	1430		16-bit
DIN31.STATE	1440		8-bit
DIN32.FILTER	1442		16-bit
DIN32.STATE	1452		8-bit
DIN9.STATE (DIN9.STATE to DIN11.STATE (→ p. 557))	1454		8-bit
DOU10.STATE (DOU9.STATE to DOU11.STATE (→ p. 582))	1456		8-bit
DOU10.STATEU (DOU9.STATEU to DOU11.STATEU (→ p. 584))	1458		8-bit
DOU11.STATE	1460		8-bit
DOU11.STATEU	1462		8-bit
DOU21.STATE (DOU21.STATE to DOU32.STATE (→ p. 586))	1470		8-bit
DOU21.STATEU (DOU21.STATEU to DOU32.STATEU (→ p. 588))	1472		8-bit
DOU22.STATE	1480		8-bit
DOU22.STATEU	1482		8-bit
DOU23.STATE	1490		8-bit
DOU23.STATEU	1492		8-bit
DOU24.STATE	1500		8-bit
DOU24.STATEU	1502		8-bit
DOU25.STATE	1510		8-bit
DOU25.STATEU	1512		8-bit
DOU26.STATE	1520		8-bit
DOU26.STATEU	1522		8-bit
DOU27.STATE	1530		8-bit
DOU27.STATEU	1532		8-bit
DOU28.STATE	1540		8-bit
DOU28.STATEU	1542		8-bit
DOU29.STATE	1550		8-bit
DOU29.STATEU	1552		8-bit
DOU30.STATE	1560		8-bit
DOU30.STATEU	1562		8-bit
DOU9.STATE (DIN9.STATE to DIN11.STATE (→ p. 557))	1564		8-bit
DOU9.STATEU (DOU9.STATEU to DOU11.STATEU (→ p. 584))	1566		8-bit
DRV.BLINKDISPLAY (→ p. 597)	1568		Command

Parameter	Modbus Register Address	Is 64-bit?	Attributes
DRV.CMDDELAY (→ p. 602)	1572		
DRV.NVLOAD (→ p. 678)	1576		Command
DRV.RUNTIME (→ p. 686)	1578		
DRV.SETUPREQBITS (→ p. 687)	1580		32-bit
DRV.WARNING1 to DRV.WARNING3 (→ p. 698)	1582		16-bit
DRV.WARNING1 to DRV.WARNING3 (→ p. 698)	1584		16-bit
DRV.WARNING1 to DRV.WARNING3 (→ p. 698)	1586		16-bit
EIP.POSUNIT (→ p. 706)	1590		32-bit
EIP.PROFUNIT (→ p. 707)	1592		32-bit
FAULT139.ACTION (FAULTx.ACTION (→ p. 712))	1594		8-bit
FB1.P (→ p. 748)	1610	Yes	64-bit, signed
FB1.PDIR (→ p. 749)	1614		8-bit
FB1.PIN	1616		32-bit
FB1.POFFSET (→ p. 753)	1618	Yes	64-bit, signed
FB1.POUT	1622		32-bit
FB1.PUNIT (→ p. 758)	1624		32-bit
FB2.P (→ p. 779)	1632	Yes	64-bit, signed
FB2.PIN	1636		32-bit
FB2.POFFSET (→ p. 781)	1638	Yes	64-bit, signed
FB2.POUT	1642		32-bit
FB2.PUNIT (→ p. 783)	1644		32-bit
FB3.P (→ p. 792)	1646	Yes	64-bit, signed
FB3.PDIR (→ p. 794)	1650		8-bit
FB3.PIN	1652		32-bit
FB3.POFFSET (→ p. 796)	1654	Yes	64-bit, signed
FB3.POUT	1658		32-bit
FB3.PUNIT (→ p. 798)	1660		32-bit
IL.DIFOLD (→ p. 886)	1666		32-bit
IL.MI2TWTHRESH (→ p. 927)	1668		8-bit
IL.MIMODE (→ p. 930)	1670		8-bit
IP.RESET (→ p. 943)	1672		Command
MOTOR.VOLTMIN (→ p. 1029)	1674		16-bit
MOTOR.VOLTRATED (→ p. 1031)	1676		16-bit
MOTOR.VRATED (→ p. 1033)	1678	Yes	64-bit, signed
SD.LOAD (→ p. 1173)	1684		Command
SD.SAVE (→ p. 1174)	1686		Command

Parameter	Modbus Register Address	Is 64-bit?	Attributes
SD.STATUS (→ p. 1175)	1688		8-bit
VL.FBUNFILTERED (→ p. 1274)	1690	Yes	64-bit, signed
WS.DISARM (→ p. 1307)	1694		Command
WS.FREQ (→ p. 1312)	1696		32-bit
WS.TDELAY4	1698		16-bit
WS.CHECKT (→ p. 1304)	1700		16-bit
WS.CHECKV (→ p. 1305)	1702	Yes	64-bit, signed
WS.TSTANDSTILL (→ p. 1329)	1720		16-bit
WS.TIRAMP (→ p. 1328)	1722		16-bit
MOTOR.IMTR (→ p. 982)	1728		16-bit
IL.FBSOURCE (→ p. 890)	1730		8-bit
MOTOR.IMID (→ p. 980)	1732		32-bit
WS.CHECKMODE (→ p. 1302)	1734		8-bit
REGEN.POWERFILTERED (→ p. 1161)	1736	Yes	64-bit
FBUS.PROTECTION (→ p. 806)	1742		8-bit
FBUS.BLOCKING	1744		8-bit
FBUS.STATE (→ p. 811)	1746		8-bit, signed
TEMP.CONTROL (→ p. 1214)	1748		16-bit, signed
TEMP.POWER1 (TEMP.POWER1 to TEMP.POWER3 (→ p. 1215))	1750		16-bit, signed
TEMP.POWER2	1752		16-bit, signed
TEMP.POWER3	1754		16-bit, signed
MODBUS.ERRORMODE (→ p. 951)	1756		8-bit
MODBUS.CLRERRORS (→ p. 950)	1758		Command
IL.CMDACC (→ p. 881)	1760	Yes	64-bit, signed

\*This parameter is available for AKD BASIC only

This page intentionally left blank.

**Modbus 64-bit Parameters to 32-bit Mapping**

Parameter	Address	64-bit	Attributes
AIN.PSCALE_32	2000	Yes	low 32-bit word, signed
AOUT.PSCALE_32	2002	Yes	low 32-bit word
AOUT.VALUE_32	2004	Yes	low 32-bit word, signed
AOUT.VALUEU_32	2006	Yes	low 32-bit word, signed
CAP0.PLFB_32	2008	Yes	low 32-bit word, signed
CAP1.PLFB_32	2010	Yes	low 32-bit word, signed
CS.DEC_32	2012	Yes	low 32-bit word
DIN1.PARAM_32	2014	Yes	low 32-bit word, signed
DIN2.PARAM_32	2016	Yes	low 32-bit word, signed
DIN3.PARAM_32	2018	Yes	low 32-bit word, signed
DIN4.PARAM_32	2020	Yes	low 32-bit word, signed
DIN5.PARAM_32	2022	Yes	low 32-bit word, signed
DIN6.PARAM_32	2024	Yes	low 32-bit word, signed
DIN7.PARAM_32	2026	Yes	low 32-bit word, signed
DOUT1.PARAM_32	2028	Yes	low 32-bit word, signed
DOUT2.PARAM_32	2030	Yes	low 32-bit word, signed
DRV.ACC_32	2032	Yes	low 32-bit word
DRV.DEC_32	2034	Yes	low 32-bit word
FB1.OFFSET_32	2036	Yes	low 32-bit word, signed
FB1.ORIGIN_32	2038	Yes	low 32-bit word
GEAR.ACCMAX_32	2040	Yes	low 32-bit word
GEAR.DECMAX_32	2042	Yes	low 32-bit word
HOME.ACC_32	2044	Yes	low 32-bit word
HOME.DEC_32	2046	Yes	low 32-bit word
HOME.DIST_32	2048	Yes	low 32-bit word, signed
HOME.IPEAK_32	2050	Yes	low 32-bit word, signed
HOME.P_32	2052	Yes	low 32-bit word, signed
HOME.PERRTHRESH_32	2054	Yes	low 32-bit word, signed
MOTOR.VRATED_32	2126	Yes	low 32-bit word, signed
MT.ACC_32	2056	Yes	low 32-bit word
MT.DEC_32	2058	Yes	low 32-bit word
MT.P_32	2060	Yes	low 32-bit word, signed
MT.TPOSWND_32	2062	Yes	low 32-bit word, signed
PL.CMD_32	2064	Yes	low 32-bit word
PL.ERR_32	2066	Yes	low 32-bit word

Parameter	Address	64-bit	Attributes
PL.ERRFTHRESH_32	2068	Yes	low 32-bit word
PL.ERRWTHRESH_32	2070	Yes	low 32-bit word
PL.FB_32	2072	Yes	low 32-bit word, signed
PL.INTINMAX_32	2074	Yes	low 32-bit word
PL.INTOUTMAX_32	2076	Yes	low 32-bit word
PL.MODP1_32	2078	Yes	low 32-bit word, signed
PL.MODP2_32	2080	Yes	low 32-bit word, signed
PLS.P1_32	2082	Yes	low 32-bit word, signed
PLS.P2_32	2084	Yes	low 32-bit word, signed
PLS.P3_32	2086	Yes	low 32-bit word, signed
PLS.P4_32	2088	Yes	low 32-bit word, signed
PLS.P5_32	2090	Yes	low 32-bit word, signed
PLS.P6_32	2092	Yes	low 32-bit word, signed
PLS.P7_32	2094	Yes	low 32-bit word, signed
PLS.P8_32	2096	Yes	low 32-bit word, signed
PLS.WIDTH1_32	2098	Yes	low 32-bit word, signed
PLS.WIDTH2_32	2100	Yes	low 32-bit word, signed
PLS.WIDTH3_32	2102	Yes	low 32-bit word, signed
PLS.WIDTH4_32	2104	Yes	low 32-bit word, signed
PLS.WIDTH5_32	2106	Yes	low 32-bit word, signed
PLS.WIDTH6_32	2108	Yes	low 32-bit word, signed
PLS.WIDTH7_32	2110	Yes	low 32-bit word, signed
PLS.WIDTH8_32	2112	Yes	low 32-bit word, signed
REGEN.POWER_32	2116	Yes	low 32-bit word
SWLS.LIMIT0_32	2118	Yes	low 32-bit word, signed
SWLS.LIMIT1_32	2120	Yes	low 32-bit word, signed
WS.DISTMAX_32	2122	Yes	low 32-bit word, signed
WS.DISTMIN_32	2124	Yes	low 32-bit word, signed
MOTOR.VRATED_32	2126	Yes	low 32-bit word, signed
EXTENCODER.POSITION_32	2128	Yes	low 32-bit word, signed
EXTENCODER.POSMODULO_32	2130	Yes	low 32-bit word
MOVE.ACC_32	2132	Yes	low 32-bit word
MOVE.DEC_32	2134	Yes	low 32-bit word
MOVE.INPOSLIMIT_32	2136	Yes	low 32-bit word, signed
MOVE.POSCOMMAND_32	2138	Yes	low 32-bit word, signed
MOVE.REGOFFSET_32	2142	Yes	low 32-bit word, signed
MOVE.RELATIVEDIST_32	2144	Yes	low 32-bit word, signed

Parameter	Address	64-bit	Attributes
MOVE.RUNSPEED_32	2146	Yes	low 32-bit word
MOVE.TARGETPOS_32	2148	Yes	low 32-bit word, signed
WHEN.FB3P_32	2150	Yes	low 32-bit word
WHEN.PLCMD_32	2152	Yes	low 32-bit word
WHEN.PLFB_32	2154	Yes	low 32-bit word, signed
AIN2.VSCALE_32	2158	Yes	low 32-bit word
AOUT2.VSCALE_32	2160	Yes	low 32-bit word
WS.CHECKV_32	2162	Yes	low 32-bit word, signed
WS.CHECKT_32	2164	No	16-bit

### Modbus Errors

---

## General Functionality

Up to 125 modbus access errors are stored in the modbus error list (MODBUS.ERRORS (→ p. 952)). If more errors occur, the oldest error is dropped and the new error is stored at the end of this list. All modbus errors are stored regardless of the state of the error mode (MODBUS.ERRORMODE (→ p. 951)).

A block read/write request will always be fully executed. If a register access causes an error, the error will be added to the error list and processing will continue with the next register.

If MODBUS.ERRORMODE is set to 1, the drive will not return an error response. Check MODBUS.ERRORS to verify that the last request was successfully completed. If it returns 0, the request was successful.

The recommended procedure for working in MODBUS.ERRORMODE = 1 is:

1. Clear the error list (MODBUS.CLRERRORS (→ p. 950))
2. Send the request
3. Check MODBUS.ERRORS. If 0, the request was successful. If non-zero, handle the recorded errors.
4. Repeat from step 1 as necessary.

## Parameter Descriptions

### 24.6.10 MODBUS.ERRORMODE

Enables or disables error response messages.

0: Send error response messages (default)

1: Do not send error response messages

See full description at MODBUS.ERRORMODE (→ p. 951).

### 24.6.11 MODBUS.ERRORS

Lists up to 125 Modbus errors. Each entry contains the Modbus address and the error code of the failed Modbus request.

See full description at MODBUS.ERRORS (→ p. 952).

### 24.6.12 MODBUS.CLRERRORS

Clears all errors stored in MODBUS.ERRORS.

See full description at MODBUS.CLRERRORS (→ p. 950).

## Access Through Telnet

Telnet or the WorkBench terminal will display the entire list:

```
-->MODBUS.ERRORS
Error count: 2
[00384] 6 : Argument lower than minimum.
[00390] 109 : Invalid Register address.
```

## Access Through Modbus

In Modbus the error list starts at register address 0x1102 (4354).

Modbus Address	Description
4354	Error count

Modbus Address	Description
4355	Error 1 : Register Address
4356	Error 1: Error Code
4357	Error 2 : Register Address
4358	Error 2 : Error Code
...	...
4603	Error 125 : Register Address
4604	Error 125 : Error Code

### Modbus Error Descriptions

Error Code	Descriptions
0001	Unknown Fault!
0002	Data Not Found
0003	Data value is invalid.
0004	Argument bigger than maximum.
0005	Too many characters in command.
0006	Argument lower than minimum.
0007	Command is read-only.
0008	Parameter is temporarily write protected.
0009	Argument is out of data-range.
0010	Wrong operation mode for command.
0011	Drive enabled! Disable Drive first.
0012	Drive disabled! Enable Drive first.
0013	Data must be even.
0014	Data must be odd.
0015	Axis is not homed.
0016	Motor is currently in motion.
0017	EEPROM bad or does not exist.
0018	Unknown board.
0019	EEPROM is busy.
0020	Fault exists. Correct fault condition and then clear faults.
0021	Can not clear faults. Issue SW or HW disable first.
0022	Reserved
0023	Invalid motor/feedback poles ratio.
0024	All recorder channels empty.
0025	Process already active.
0026	Function not available for the active command source.
0027	Inappropriate Bode-plot mode for this function
0028	Invalid sine-sweep bode plot mode.

Error Code	Descriptions
0029	Bode-plot start frequency $\geq$ end frequency.
0030	Function not available while active disable is in process.
0031	Iu / Iv offset calculation not finished.
0032	Not enough memory available.
0033	Can not save to EEPROM while in-rush relay is closed.
0034	Buffer overflow.
0035	Invalid motion task parameter.
0036	Invalid motion task number.
0037	Invalid motion task velocity.
0038	Invalid motion task acceleration or deceleration.
0039	Invalid motion task customer profile table number.
0040	Invalid motion task following number.
0041	Motion task is not initialized.
0042	Motion task is not interruptible due to the control-word setting.
0043	Motion task must be triggered while another motion task is active.
0044	Motion task target position is out of modulo range.
0045	Motion task target position is beyond the software limit switches.
0046	Test mode is off.
0047	Can not change digital input mode. Issue SW or HW disable first.
0048	Internal Drive procedure active:Active Disable
0049	Invalid interpolation timebase.
0050	Invalid modulo-position setting.
0051	Usage: DRV.HELP prefix.suffix.
0052	Access denied.
0053	Reserved
0054	Unknown Encoder Type.
0055	Wake and Shake is active!
0056	Reserved
0057	Reserved
0058	Reserved
0059	Reserved
0060	Invalid index (out-of-range)!
0061	Not allowed to reset IP while Drive is Enabled!
0062	Dynamic mapping is disabled!
0063	No interrupt handler defined!
0064	Cannot execute when program is running.
0065	Reserved

Error Code	Descriptions
0066	Command is password protected.
0067	Too many cams defined
0068	Too many cam points defined.
0069	Need to end creating previous cam first.
0070	Need to declare a cam first.
0071	Too many points added to cam table.
0072	First master position must be 0.
0073	Cannot add point without creating cam.
0074	Reserved
0075	Cannot end cam without creating cam.
0076	Master position delta must be greater than 1.
0077	Cannot create an already active cam.
0078	Cam not defined.
0079	Cam not available.
0080	Cannot activate cam with MOVE.RUNSPEED = 0.
0081	Master position outside cam table.
0082	SD Card is not inserted into drive.
0083	SD Card is write protected.
0084	SD Card hardware not installed.
0085	Command was not found.
0086	Wrong argument for parameter.
0087	Parameter not record-able.
0088	No parameters allowed for command.
0089	No negative values allowed.
0090	No float allowed.
0091	Wrong number of arguments for parameter.
0092	Not a trigger parameter.
0093	Command is password protected.
0094	Fieldbus is not active.
0095	File not found on SD Card.
0096	File error trying to access the SD Card.
0097	File system error accessing the SD card.
0098	A parameter file value could not be set in the drive.
0099	There was an error writing to a file on the SD Card.
0100	SD Card read/write in progress.
0101	There was an error accessing the BASIC binary file.
0102	BASIC program missing or invalid.

Error Code	Descriptions
0103	Invalid Feedback Type.
0104	Command not supported on this motor type
0105	Feedback memory access created an error.
0106	Command is blocked while fieldbus is operational.
0107	Cannot execute when FB2.ENCRESES = 0.
0108	Unsupported data type.
0109	Invalid register address.
0110	Invalid block size.
0111	Invalid byte count.
0112	Block access no supported.
0113	Invalid access.
0114	Invalid mapping address.

## 25 AKD - Parameter and Command Reference Guide

---

25.1	About the Parameter and Command Reference Guide .....	366
25.2	AIN Parameters .....	392
25.3	AIN2 Parameters .....	411
25.4	AOUT Parameters .....	419
25.5	AOUT2 Parameters .....	435
25.6	BODE Parameters .....	441
25.7	CAP Parameters .....	469
25.8	CMP Parameters .....	497
25.9	CPS Parameters .....	525
25.10	CS Parameters .....	527
25.11	DIN Parameters .....	536
25.12	DIO Parameters .....	563
25.13	DOUT Parameters .....	568
25.14	DRV Parameters .....	590
25.15	EIP Parameters .....	702
25.16	FAULT Parameters .....	711
25.17	FB1 Parameters .....	717
25.18	FB2 Parameters .....	771
25.19	FB3 Parameters .....	786
25.20	FBUS Parameters .....	799
25.21	GEAR Parameters .....	818
25.22	GUI Parameters .....	833
25.23	HOME Parameters .....	846
25.24	HWLS Parameters .....	874
25.25	IL Parameters .....	877
25.26	IP Parameters .....	936
25.27	LOAD Parameters .....	947
25.28	MODBUS Parameters .....	949
25.29	MOTOR Parameters .....	962
25.30	MT Parameters and Commands .....	1035
25.31	NSD Parameters .....	1079
25.32	PL Parameters .....	1083

---

<b>25.33</b>	<b>PLS Parameters</b> .....	<b>1115</b>
<b>25.34</b>	<b>REC Parameters</b> .....	<b>1133</b>
<b>25.35</b>	<b>REGEN Parameters</b> .....	<b>1158</b>
<b>25.36</b>	<b>S3 Parameters</b> .....	<b>1170</b>
<b>25.37</b>	<b>SD Commands</b> .....	<b>1172</b>
<b>25.38</b>	<b>SM Parameters</b> .....	<b>1176</b>
<b>25.39</b>	<b>STO Parameters</b> .....	<b>1189</b>
<b>25.40</b>	<b>STRING Parameters</b> .....	<b>1192</b>
<b>25.41</b>	<b>STRINGS Parameters</b> .....	<b>1195</b>
<b>25.42</b>	<b>SWLS Parameters</b> .....	<b>1204</b>
<b>25.43</b>	<b>TEMP Parameters</b> .....	<b>1213</b>
<b>25.44</b>	<b>UNIT Parameters</b> .....	<b>1217</b>
<b>25.45</b>	<b>USER Parameters</b> .....	<b>1235</b>
<b>25.46</b>	<b>VBUS Parameters</b> .....	<b>1239</b>
<b>25.47</b>	<b>VL Parameters</b> .....	<b>1250</b>
<b>25.48</b>	<b>WS Parameters</b> .....	<b>1299</b>

## **25.1 About the Parameter and Command Reference Guide**

This reference guide provides descriptive information about each parameter and command used in the drive firmware. Parameters and commands are used to configure the drive or to return status information from the drive using the WorkBench terminal screen. The use of these parameters and commands to perform various drive functions is detailed in related sections of the AKD User Guide.

Drive parameter and command categories include the following:

AIN Parameters (→ p. 392)	FB3 Parameters (→ p. 786)	REC Parameters (→ p. 1133)
AOUT Parameters (→ p. 419)	FBUS Parameters (→ p. 799)	REGEN Parameters (→ p. 1158)
BODE Parameters (→ p. 441)	GEAR Parameters (→ p. 818)	S3 Parameters (→ p. 1170)
CAP Parameters (→ p. 469)	GUI Parameters (→ p. 833)	SM Parameters (→ p. 1176)
CPS Parameters (→ p. 525)	HOME Parameters (→ p. 846)	STO Parameters (→ p. 1189)
CS Parameters (→ p. 527)	HWLS Parameters (→ p. 874)	STRING Parameters (→ p. 1192)
DIN Parameters (→ p. 536)	IL Parameters (→ p. 877)	SWLS Parameters (→ p. 1204)
DIO Parameters (→ p. 563)	IP Parameters (→ p. 936)	UNIT Parameters (→ p. 1217)
DOUT Parameters (→ p. 568)	LOAD Parameters (→ p. 947)	USER Parameters (→ p. 1235)
DRV Parameters (→ p. 590)	MODBUS Parameters (→ p. 949)	TEMP Parameters (→ p. 1213)
EIP Parameters (→ p. 702)	MOTOR Parameters (→ p. 962)	VBUS Parameters (→ p. 1239)
FAULT Parameters (→ p. 711)	MT Parameters and Commands (→ p. 1035)	VL Parameters (→ p. 1250)
FB1 Parameters (→ p. 717)	NSD Parameters (→ p. 1079)	WS Parameters (→ p. 1299)
FB2 Parameters (→ p. 771)	PL Parameters (→ p. 1083)	
	PLS Parameters (→ p. 1115)	

A summary table of information for all parameters and commands is also available:

[Summary of Parameters and Commands](#)

For each parameter or command, this reference guide presents the following tables of information, followed by a description of the command, examples, and links to related information in the User Guide, as appropriate.

General Information	
Type	One of four types: <ul style="list-style-type: none"> <li>• Command: Action or W/O command.</li> <li>• NV Parameter: R/W and stored in nonvolatile (NV) memory</li> <li>• R/W Parameter: Can be either read from or written to the drive.</li> <li>• R/O Parameter: Can only be read from the drive</li> </ul>
Description	Brief description of the parameter or command and notes if the parameter or command is not active in all opmodes.
Units	Appropriate units
Range	Permissible range; multiple ranges are sometimes present.
Default Value	Determined at setup process time or motor ID; otherwise set to 0.010.
Data Type	Integer, Boolean, Float, or String
See Also	Links to related information such as other parameters, block diagrams, schematics, or other sections of the product manual.
Start Version	The minimum firmware version number required to use the parameter or command

Fieldbus	Index/Subindex	Object Start Version
Fieldbus type, such as EtherCAT COE and CANopen or Modbus.	Index/subindex values for the parameter or command. The index value may be linked to the Object Dictionary for each fieldbus, if the object dictionary contains more detailed information about the object.	The minimum firmware version number required to use the fieldbus.

Additional data types may include the following:

Type	Description
Error	Illegal type=0
b	Boolean
U8	8 x unsigned numbers
S8	8 x signed numbers
U16	16 x unsigned numbers
S16	16 x signed numbers
U32	32 x unsigned numbers
S32	32 x signed numbers
U64	64 x unsigned numbers
S64	64 x signed numbers

### 25.1.1 Parameter and Command Naming Conventions

Abbreviation	Term
ACC	Acceleration
APP	Apply
CLR	Clear
CS	Controlled Stop
I	Current
D	Current d-component
DEC	Deceleration
DIR	Direction
DIS	Disable
DIST	Distance
EMUE	Emulated encoder
EN	Enable
ERR	Error
F	Fault
FB	Feedback
FF	Feedforward
K	Gain
INT	Integrator

Abbreviation	Term
LIM	Limit
L	Loop
MAX	Maximum
MIN	Minimum
N	Negative
NV	Nonvolatile
P	Position, Proportional, Positive
RLS	Release
R	Resistance
STATE	Status, State, Stat
THRESH	Threshold
T	Time
TMAX	Timeout
U	User
V	Velocity, Volt
W	Warning

### 25.1.2 Summary of Parameters and Commands

This table contains an alphabetical list of parameters and commands, with a brief description for each. The parameter name and description are linked to the parameter tables. Generally speaking, all parameters and commands are active in all opmodes, with the following exceptions:

Parameter or Command	Active in Opmodes
GEAR (all parameters and commands)	2 (position) only
HOME (all parameters and commands)	2 (position) only
MT (all parameters and commands)	2 (position) only
SM.I1, SM.I2	0 (torque) only
SM.V1, SM.V2	1 (velocity) only
SM.VPM1, SM.VPM2	2 (position) only
VL (all parameters and commands)	1 (velocity) and 2 (position) only

Parameter or Command	Type	Description
<b>Analog Input (AIN)</b>		
AIN.CUTOFF (→ p. 393)	NV	Sets the analog input low-pass filter cutoff frequency.
AIN.DEADBAND (→ p. 395)	NV	Sets the analog input signal deadband.
AIN.DEADBANDMODE (→ p. 397)	NV	Sets the analog input deadband mode.
AIN.ISCALE (→ p. 399)	NV	Sets the analog current scale factor.

Parameter or Command	Type	Description
AIN.MODE (→ p. 400)	NV	Analog input mode
AIN.OFFSET (→ p. 402)	NV	Sets the analog input offset.
AIN.PSCALE (→ p. 403)	NV	Sets the analog position scale factor.
AIN.VALUE (→ p. 405)	R/O	Reads the value of the analog input signal.
AIN.VSCALE (→ p. 407)	NV	Sets analog velocity scale factor.
AIN.ZERO (→ p. 409)	Command	Zeroes the analog input signal.
<b>Analog Input 2 (AIN2)</b>		
AIN2.CUTOFF (→ p. 412)	NV	Sets the analog input 2 low-pass filter cutoff frequency.
AIN2.DEADBAND (→ p. 413)	NV	Sets the analog input 2 signal deadband.
AIN2.DEADBANDMODE (→ p. 414)	NV	Sets the analog input 2 deadband mode.
AIN2.MODE (→ p. 415)	NV	Analog input 2 mode
AIN2.OFFSET (→ p. 416)	NV	Sets the analog input 2 offset.
AIN2.VALUE (→ p. 417)	R/O	Reads the value of the analog input 2 signal.
AIN2.ZERO (→ p. 418)	Command	Zeroes the analog input 2 signal.
<b>Analog Output (AOUT)</b>		
AOUT.CUTOFF (→ p. 420)	NV	Sets the analog output low-pass filter cutoff frequency.
AOUT.ISCALE (→ p. 425)	NV	Sets the analog current scale factor.
AOUT.MODE (→ p. 426)	NV	Sets the analog output mode.
AOUT.OFFSET (→ p. 428)	NV	Sets the analog output offset.
AOUT.PSCALE (→ p. 429)	NV	Sets the analog position scale factor.
AOUT.VALUE (→ p. 431)	NV	Reads the analog output value.
AOUT.VALUEU (→ p. 432)	R/W	Sets the analog output value.
AOUT.VSCALE (→ p. 433)	NV	Sets the velocity scale factor for analog output.
<b>Analog Output 2 (AOUT2)</b>		
AOUT2.CUTOFF (→ p. 436)	NV	Sets the analog output 2 low-pass filter cutoff frequency.
AOUT2.MODE (→ p. 437)	NV	Sets the analog output 2 mode.
AOUT2.OFFSET (→ p. 438)	NV	Sets the analog output 2 offset.
AOUT2.VALUE (→ p. 439)	NV	Reads the analog output 2 value.
AOUT2.VALUEU (→ p. 440)	R/W	Sets the analog output 2 value.
<b>Bode plot (BODE)</b>		
BODE.EXCITEGAP (→ p. 442)	R/W	Controls how often the excitation is updated.
BODE.FREQ (→ p. 444)	R/W	Sets the frequency of the sine excitation source.
BODE.IAMP (→ p. 446)	R/W	Sets current command value used during the Bode procedure.

Parameter or Command	Type	Description
BODE.IFLIMIT (→ p. 448)	R/W	Sets the current fault duration limit in seconds for the BODE.MODE 5 stability test.
BODE.IFTHRESH (→ p. 450)	R/W	Sets the current fault threshold for the BODE.MODE 5 stability test.
BODE.INJECTPOINT (→ p. 452)	R/W	Sets whether the excitation uses current or velocity excitation type.
BODE.MODE (→ p. 454)	R/W	Sets the mode of the excitation.
BODE.MODETIMER (→ p. 458)	R/W	Sets the watchdog timer of the excitation.
BODE.PRBDDEPTH (→ p. 461)	R/W	Sets the length of the PRB signal before it repeats.
BODE.VAMP (→ p. 463)	R/W	Sets the amplitude of the excitation when in velocity mode.
BODE.VFLIMIT (→ p. 465)	R/W	Sets the velocity fault duration limit (seconds) for the BODE.MODE 5 stability test
BODE.VFTHRESH (→ p. 467)	R/W	Sets the current fault threshold for the BODE.MODE 5 stability test.
<b>Capture (CAP)</b>		
CAP0.EDGE, CAP1.EDGE (→ p. 470)	NV	Selects the capture edge.
CAP0.EN, CAP1.EN (→ p. 472)	NV	Enables or disables the related capture engine.
CAP0.EVENT, CAP1.EVENT (→ p. 474)	NV	Controls the precondition logic.
CAP0.FBSOURCE, CAP1.FBSOURCE (→ p. 477)	NV	Selects the source of the captured value.
CAP0.FBSOURCE, CAP1.FBSOURCE (→ p. 477)	R/W	Controls the precondition logic.
CAP0.MODE, CAP1.MODE (→ p. 481)	NV	Selects the captured value.
CAP0.PLFB, CAP1.PLFB (→ p. 483)	R/O	Reads captured position value.
CAP0.PREEDGE, CAP1.PREEDGE (→ p. 485)	NV	Selects the capture precondition edge.
CAP0.PREFILTER, CAP1.PREFILTER (→ p. 487)	NV	Sets the filter for the precondition input source.
CAP0.PRESELECT, CAP1.PRESELECT (→ p. 489)	NV	Sets the precondition trigger.
CAP0.STATE, CAP1.STATE (→ p. 491)	R/O	Indicates whether or not trigger source was captured.
CAP0.T, CAP1.T (→ p. 493)	R/O	Reads time capture (if time capture was configured).
CAP0.TRIGGER, CAP1.TRIGGER (→ p. 495)	NV	Specifies the trigger source for the position capture.
<b>Central Power Supply (CPS)</b>		
CPS.ACTIVE (→ p. 526)	R/O	Returns the enable status of the AKD-C.

Parameter or Command	Type	Description
<b>Controlled Stop (CS)</b>		
CS.DEC (→ p. 528)	NV	Sets the deceleration value for the controlled stop process.
CS.STATE (→ p. 530)	NV	Returns the internal status of the controlled stop process.
CS.TO (→ p. 532)	NV	Sets the time value for the drive velocity to be within CS.VTHRESH (→ p. 534).
CS.VTHRESH (→ p. 534)	NV	Sets the velocity threshold for the controlled stop.
<b>Digital Input (DIN)</b>		
DIN.HCMD1 TO DIN.HCMD4 (→ p. 537)	NV	A buffer of commands to be used in digital input "command buffer" mode.
DIN.LCMD1 to DIN.LCMD4 (→ p. 539)	NV	A buffer of commands to be used in digital input "command buffer" mode.
DIN.ROTARY (→ P. 541)	R/O	Reads the rotary knob value.
DIN.STATES (→ P. 543)	R/O	Reads the digital input states.
DIN1.FILTER TO DIN7.FILTER (→ p. 544)	R/W	Filter mode for digital inputs 1 to 7.
DIO9.INV to DIO11.INV (→ p. 564)	R/W	Inverting the output voltage of the IO, when in the output direction.
DIN1.MODE TO DIN7.MODE (→ p. 548)	NV	Sets the digital input modes.
DIN1.PARAM TO DIN7.PARAM (→ p. 552)	R/W	Sets a value used as an extra parameter for digital inputs nodes.
DIN1.STATE TO DIN7.STATE (→ p. 555)	R/O	Reads a specific digital input state.
DIN21.FILTER to DIN32.FILTER (→ p. 559)	R/W	Filter mode for digital inputs 21 to 32.
DIN21.STATE to DIN32.STATE (→ p. 561)	R/O	Reads a specific digital input state.
<b>DIO</b>		
DIO9.INV to DIO11.INV (→ p. 564)	NV	Inverting the output voltage of the IO, when in the output direction.
DIO9.DIR to DIO11.DIR (→ p. 566)	NV	Changing direction of the IOs from the X9 connector.
<b>Digital Output (DOUT)</b>		
DOUT.CTRL (→ P. 569)	NV	Sets the source of digital output(s) (firmware or fieldbus).
DOUT.RELAYMODE (→ p. 570)	R/W	Indicates faults relay mode.
DOUT.STATES (→ P. 572)	R/O	Reads the state of the digital output(s).
DOUTx.MODE	NV	Sets the digital output mode.

Parameter or Command	Type	Description
DOUT1.PARAM AND DOUT2.PARAM (→ p. 575)	NV	Sets extra parameters for the digital output(s).
DOUT1.STATE AND DOUT2.STATE (→ p. 577)	R/O	Reads the digital output state.
DOUT1.STATEU AND DOUT2.STATEU (→ p. 578)	R/W	Sets the state of the digital output node.
DOUT21.STATE to DOUT32.STATE (→ p. 586)	R/O	Reads the digital output state.
DOUT21.STATEU to DOUT32.STATEU (→ p. 588)	R/W	Sets the state of the digital output node.
<b>Drive (DRV)</b>		
DRV.ACC (→ P. 593)	NV	Describes the acceleration ramp for the velocity loop.
DRV.ACTIVE (→ P. 595)	R/O	Reads the enable status of an axis.
DRV.BLINKDISPLAY (→ P. 597)	Command	Causes the display to blink for 10 seconds.
DRV.BOOTTIME (→ p. 598)	R/O	Returns the time when the current session booted up.
DRV.CLRFAULTHIST (→ P. 599)	Command	Clears the fault history log in the NV.
DRV.CLRFAULTS (→ P. 600)	Command	Tries to clear all active faults in the drive.
DRV.CMDDELAY (→ p. 602)	R/W	Issues a delay before next command is executed.
DRV.CMDSOURCE (→ P. 604)	NV	Sets the command source (service, fieldbus, analog input, gearing, digital, or Bode).
DRV.CRASHDUMP (→ p. 606)	Command	Retrieves diagnostic information after the drive crashes.
DRV.DBILIMIT (→ p. 609)	NV	Sets the maximum amplitude of the current for dynamic braking.
DRV.DEC (→ P. 611)	NV	Sets the deceleration value for the velocity loop.
DRV.DIFVAR (→ p. 613)	R/O	Lists all parameters which differ from their default value.
DRV.DIR (→ p. 614)	R/W	Changes drive direction.
DRV.DIS (→ P. 616)	Command	Disables the axis (software).
DRV.DISMODE (→ p. 618)	NV	Selects among disable immediately or stop and then disable options.
DRV.DISSOURCES (→ P. 620)	R/O	Returns the possible reason for a drive disable.
DRV.DISSOURCESMASK (→ p. 622)	R/O	Returns a bitmap of all bits in DRV.DISSOURCES that can be set to one on a given drive.
DRV.DISTO (→ p. 624)	R/W	Sets the emergency timeout
DRV.DOWNLOADALLOWED (→ p. 626)	R/O	Returns whether the drive is in a safe state to begin a firmware download.

Parameter or Command	Type	Description
DRV.EMUEDIR (→ p. 629)	R/W	Sets the direction of the emulated encoder output (EEO) signal.
DRV.EMUEMODE (→ p. 631)	R/W	Sets the mode of the emulated encoder output (EEO) connector.
DRV.EMUEMTURN (→ p. 634)	R/W	Defines the location of the index pulse on the EEO (emulated encoder output) when DRV.EMUEMODE=2.
DRV.EMUEPULSEWIDTH (→ p. 636)		Sets the encoder output pulse width for modes 6 to 7.
DRV.EMUERES (→ p. 638)	R/W	Sets the resolution of the EEO (emulated encoder output).
DRV.EMUEZOFFSET (→ p. 640)	R/W	Sets the location of the EEO (emulated encoder output) index pulse (when DRV.EMUEMODE=1).
DRV.EN (→ P. 642)	Command	Enables the axis (software).
DRV.ENDEFAULT (→ p. 644)	R/W	Sets the default state of the software enable.
DRV.ERRORLIST (→ p. 645)	R/O	Prints a list of all possible error codes and error text.
DRV.FAULTDISPLAYMODE (→ p. 646)	NV	Sets the fault display mode.
DRV.FAULTHIST (→ P. 647)	R/O	Reads the last 50 faults from NV memory.
DRV.FAULTS (→ P. 651)	R/O	Reads the active faults.
DRV.FAULT1 to DRV.FAULT10 (→ p. 648)	R/O	Location of fault codes for any active fault conditions.
DRV.HANDWHEEL (→ p. 652)	R/O	Reads the EEO input value.
DRV.HANDWHEELSRC (→ p. 654)	NV	Selects the feedback for handwheel operation.
DRV.HELP (→ P. 655)	R/O	Reads the minimum, maximum, and default values for a specific parameter or command.
DRV.HELPALL (→ p. 656)	R/O	Retrieves the minimum, maximum, default, and actual values for all available parameters and commands.
DRV.HWENABLE (→ p. 657)	R/O	Status of the hardware enable.
DRV.HWENDELAY (→ p. 658)	NV	Delay time between inactive Hardware Enable input and drive disable.
DRV.HWENMODE (→ p. 660)	R/W	Selects the action that the hardware enable digital input will perform.
DRV.ICONT (→ P. 662)	R/O	Reads the continuous rated current value.
DRV.INFO (→ P. 663)	R/O	Reads general information about the drive.
DRV.IPEAK (→ P. 665)	R/O	Reads the peak rated current value.
DRV.IZERO (→ p. 666)	R/W	Sets the current that will be used during the DRV.ZERO procedure.
DRV.LIST (→ P. 667)	R/O	Reads the list of available parameters and commands.

Parameter or Command	Type	Description
DRV.LOGICVOLTS (→ p. 668)	R/O	Reads the logic voltages.
DRV.MOTIONDISSOURCES (→ p. 671)	R/O	Returns some causes of a motion disable.
DRV.NAME (→ P. 674)	NV	Sets and reads the name of the drive.
DRV.NVCHECK (→ p. 675)	R/O	NV Parameter Checksum
DRV.NVLIST (→ P. 677)	R/O	Lists the NV parameters and values from the RAM.
DRV.NVLOAD (→ p. 678)	W/O	Loads all data from the NV memory of the drive into the RAM parameters.
DRV.NVSAVE (→ P. 679)	Command	Saves the drive parameters from the RAM to the NV memory.
DRV.ONTIME (→ p. 681)	R/O	Returns how long the drive has been running since last power up.
DRV.OPMODE (→ P. 682)	NV	Sets the drive operation mode (current, velocity, or position).
DRV.READFORMAT (→ P. 684)	R/W	Sets the value returned to either decimal or hexadecimal.
DRV.RSTVAR (→ P. 685)	Command	Sets default values in the drive without re-booting the drive and without resetting the NV memory.
DRV.RUNTIME (→ P. 686)	R/O	Returns how long the drive has been running since first activated.
DRV.SETUPREQBITS (→ p. 687)	R/O	Reads the bitwise set status of parameters that must be set before the drive can be enabled.
DRV.SETUPREQLIST (→ p. 689)	R/O	Reads the list of parameters that must be set before the drive can be enabled.
DRV.STOP (→ P. 691)	Command	This command stops all drive motion.
DRV.TEMPERATURES (→ p. 692)	R/O	Reads the temperature of drive components.
DRV.TIME (→ p. 693)	R/W	A continuous time counter in the drive.
DRV.TYPE (→ p. 694)	R/O	Selects the operational fieldbus on CC drive models.
DRV.VER (→ P. 696)	R/O	Reads the drive version.
DRV.VERIMAGE (→ P. 697)	R/O	Returns the version data from each image.
DRV.WARNINGS (→ p. 700)	R/O	Reads the active warnings.
DRV.WARNING1 to DRV.WARNING3 (→ p. 698)	R/O	Location of fault codes for any active warning conditions.
DRV.ZERO (→ p. 701)	R/W	Sets the zero mode. The procedure is activated when the drive is enabled.
<b>EtherNet/IP (EIP)</b>		
EIP.CMDMAP (→ p. 703)	R/W	Sets parameters in the dynamic portion of command assembly. (→ p. 703)

Parameter or Command	Type	Description
EIP.CONNECTED (→ p. 705)	R/O	Returns state of EtherNet/IP connection.
EIP.POSUNIT (→ p. 706)	R/W	Unit scaling for Position values over EtherNet/IP.
EIP.PROFUNIT (→ p. 707)	R/W	Unit scaling for Velocity and Acceleration values over EtherNet/IP.
EIP.RSPMAP (→ p. 709)	R/W	Sets parameters in the dynamic portion of response assembly. (→ p. 709)
<b>Fault (FAULT)</b>		
FAULTx.ACTION (→ p. 712)	R/W	Gets/Sets the Fault Action for Fault 130, 131, 132, 134, 139, 451, and 702.
FAULT176.ACTION, FAULT178.ACTION (→ p. 714)	R/W	Gets/Sets the fault action for either fault 176 or 178.
FAULT564.ACTION, FAULT565.ACTION (→ p. 715)	R/W	Gets/Sets the fault action for either fault 564 or 565 in the AKD-C.
FAULT570.ACTION (→ p. 716)	R/W	Gets/Sets the fault action for fault 570.
<b>Feedback 1 (FB1)</b>		
FB1.BISSBITS (→ p. 719)	NV	Specifies the number of Biss Sensor (Position) Bits for the BiSS Mode C encoder in use.
FB1.CALTHRESH (→ p. 720)	NV	Sets the velocity threshold at which the auto-calibration function will continuously update error correction for sin/cos encoders.
FB1.DIAG (→ p. 721)	R/O	Returns feedback diagnostic information.
FB1.ENCRES (→ P. 722)	NV	Sets the resolution of the motor encoder.
FB1.FAULTS (→ p. 724)	R/O	Returns a string describing the root cause of Fault 467.
FB1.HALLSTATE (→ P. 726)	R/O	Reads the Hall switch values (encoder feedback only).
FB1.HALLSTATEU (→ p. 728)	R/O	Reads the state of Hall switch U.
FB1.HALLSTATEV (→ p. 729)	R/O	Reads the state of Hall switch V.
FB1.HALLSTATEW (→ p. 730)	R/O	Reads the state of Hall switch W.
FB1.IDENTIFIED (→ P. 731)	R/O	Reads the type of feedback device used by the drive/motor.
FB1.INITPSAVED (→ p. 733)	R/O	Reads position saved at last power down.
FB1.INITPSTATUS (→ p. 734)	R/O	Reads result of initial position comparison.
FB1.INITPWINDOW (→ p. 736)	R/W	Reads and writes size of the initial position comparison window.
FB1.INITSIGNED (→ p. 737)	NV	Sets initial feedback value as signed or unsigned.
FB1.LASTIDENTIFIED (→ p. 739)	NV	Stores the feedback type auto-detected during the last feedback initialization. Auto-detection will look for this type first.
FB1.MECHPOS (→ P. 740)	R/O	Reads the mechanical position.

Parameter or Command	Type	Description
FB1.MEMVER (→ P. 741)	R/O	Returns the memory feedback version.
FB1.MOTORPHASE (→ p. 742)	NV	Sets the motor phase of the motor associated with FB1.
FB1.MOTORPOLES (→ p. 743)	NV	Sets the number of motor poles associated with FB1.
FB1.OFFSET (→ p. 744)	NV	Sets position feedback offset.
FB1.ORIGIN (→ p. 746)	NV	Adds to the initial feedback position.
FB1.P (→ p. 748)	R/O	Reads position from the primary feedback.
FB1.PDIR (→ p. 749)	NV	Sets the counting direction for feedback channel 1.
FB1.PFIND (→ p. 750)	R/W	A procedure that allows the user to find the commutation angle for encoder feedback, which has no halls.
FB1.PFINDCMDU (→ p. 751)	R/W	Current value used during the phase finding procedure (PFB.PFIND=1)
FB1.PIN (→ p. 752)	NV	Sets gear IN for FB1.P (→ p. 748).
FB1.POFFSET (→ p. 753)	NV	Sets the offset for primary feedback.
FB1.POLES (→ P. 754)	R/O	Reads the number of feedback poles.
FB1.POUT (→ p. 755)	NV	Sets gear IN for FB1.P (→ p. 748).
FB1.PSCALE (→ p. 756)	R/W	Sets position scaling value for fieldbus transferred position objects.
FB1.PUNIT (→ p. 758)	NV	Sets the unit for FB1.P.
FB1.RESKTR (→ p. 759)	NV	Sets the resolver nominal transformation ratio.
FB1.RESREFPHASE (→ p. 760)	NV	Sets the electrical degrees of phase lag in the resolver.
FB1.SELECT (→ P. 761)	NV	Sets user entered type or identified type (-1).
FB1.TRACKINGCAL (→ p. 764)	NV	Controls tracking calibration algorithm.
FB1.USERBYTE0 to FB1.USERBYTE7 (→ p. 765)	R/W	Reads and writes data stored in two 32 bit words in the Endat feedback device.
FB1.USERDWORD0 to FB1.USERDWORD1 (→ p. 767)	R/W	Reads and writes data stored in two 32 bit words in the Endat feedback device.
FB1.USERWORD0 to FB1.USERWORD3 (→ p. 769)	R/W	Reads and writes data stored in two 32 bit words in the Endat feedback device.
<b>Feedback 2 (FB2)</b>		
FB2.DIR (→ p. 772)	R/W	Sets the counting direction for feedback channel 2.
FB2.ENCRESES (→ p. 773)	NV	Sets the secondary feedback (FB2) resolution (also defines resolution of virtual encoder in AKD BASIC).
FB2.MODE (→ p. 775)	R/W	Sets the mode for the second feedback inputs, EEO connector (X9) and high speed opto inputs (pins 9 and 10 on X7).

Parameter or Command	Type	Description
FB2.MOTORPHASE (→ p. 777)	NV	Sets the motor phase of the motor associated with FB2.
FB2.MOTORPOLES (→ p. 778)	NV	Sets the number of motor poles associated with FB2.
FB2.P (→ p. 779)	R/O	Reads position from the secondary feedback.
FB2.PIN (→ p. 780)	NV	Sets gear IN for FB2.P (→ p. 779).
FB2.POFFSET (→ p. 781)	NV	Sets the offset for secondary feedback.
FB2.POUT (→ p. 782)	NV	Sets gear IN for FB2.P (→ p. 779).
FB2.PUNIT (→ p. 783)	NV	Sets the unit for FB2.P.
FB2.SOURCE (→ p. 784)	R/W	Sets the source for the second feedback input. Choices are the EEO connectors (X9) which are RS485 inputs, or the X7 connector's high speed opto inputs (pins 9 and 10).
<b>Feedback 3 (FB3)</b>		
FB3.DIR (→ p. 787)	NV	Sets the counting direction for the position feedback when PL.FBSOURCE = 2. (→ p. 787)
FB3.ENCRESP (→ p. 788)	NV	Sets the resolution of the motor encoder for feedback 3.
FB3.MODE (→ p. 789)	NV	Selects the type of feedback connected to X9.
FB3.MOTORPHASE (→ p. 790)	NV	Sets the motor phase of the motor associated with FB3.
FB3.MOTORPOLES (→ p. 791)	NV	Sets the number of motor poles associated with FB3.
FB3.P (→ p. 792)	RO	Reads position from the tertiary feedback.
FB3.PDIR (→ p. 794)	NV	Sets the counting direction for feedback channel 3.
FB3.PIN (→ p. 795)	NV	Sets gear IN for FB3.P (→ p. 792).
FB3.POFFSET (→ p. 796)	NV	Sets the offset for tertiary feedback.
FB3.POUT (→ p. 797)	NV	Sets gear IN for FB3.P (→ p. 792).
FB3.PUNIT (→ p. 798)	NV	Sets the unit for FB3.P.
<b>Fieldbus (FBUS)</b>		
FBUS.PARAM1 TO FBUS.PARAM10 (→ p. 800)	NV	Set fieldbus specific meanings.
FBUS.PLLSTATE (→ p. 804)	R/O	Returns the status of the PLL
FBUS.PLLTHRESH (→ p. 805)	NV	Sets number of successful synchronized cycles needed to lock the PLL.
FBUS.PROTECTION (→ p. 806)	R/W	Controls which parameters are blocked from being accessed through telnet while a fieldbus is operational.
FBUS.SAMPLEPERIOD (→ p. 810)	NV	Sets fieldbus sample period.
FBUS.STATE (→ p. 811)	R/O	Reads the state of the fieldbus.

Parameter or Command	Type	Description
FBUS.SYNCACT (→ p. 813)	R/O	Reads actual distance from the desired sync distance.
FBUS.SYNCDIST (→ p. 814)	NV	Sets time target for synchronization.
FBUS.SYNCWND (→ p. 815)	NV	Sets symmetrically arranged window around the desired sync distance.
FBUS.TYPE (→ p. 816)	R/O	Shows the active fieldbus type.
<b>Gearing (GEAR)</b>		
GEAR.ACCMAX (→ p. 819)	R/W	Sets the maximum allowed acceleration value; active in opmode 2 (position) only.
GEAR.DECMAX (→ p. 821)	R/W	Sets the maximum allowed deceleration value; active in opmode 2 (position) only.
GEAR.IN (→ p. 823)	R/W	Sets the denominator of the electronic gearing ratio; active in opmode 2 (position) only.
GEAR.MODE (→ p. 825)	R/W	Selects electronic gearing mode; active in opmode 2 (position) only.
GEAR.MOVE (→ p. 828)	Command	Starts the electronic gearing; active in opmode 2 (position) only.
GEAR.OUT (→ p. 829)	R/W	Sets the numerator of the electronic gearing ratio; active in opmode 2 (position) only.
GEAR.VMAX (→ p. 831)	R/W	Reads the maximum allowed velocity value; active in opmode 2 (position) only.
<b>WorkBench (GUI) Parameters</b>		
GUI.DISPLAY (→ P. 834)	R/O	Reads drive display data.
GUI.DISPLAYS (→ p. 835)	R/O	Reads drive display data.
GUI.PARAM01 (→ P. 836)	NV	Used by the GUI to store data.
GUI.PARAM02 (→ P. 837)	NV	Used by the GUI to store data.
GUI.PARAM03 (→ P. 838)	NV	Used by the GUI to store data.
GUI.PARAM04 (→ P. 839)	NV	Used by the GUI to store data.
GUI.PARAM05 (→ P. 840)	NV	Used by the GUI to store data.
GUI.PARAM06 (→ P. 841)	NV	Used by the GUI to store data.
GUI.PARAM07 (→ P. 842)	NV	Used by the GUI to store data.
GUI.PARAM08 (→ P. 843)	NV	Used by the GUI to store data.
GUI.PARAM09 (→ P. 844)	NV	Used by the GUI to store data.
GUI.PARAM10 (→ P. 845)	NV	Used by the GUI to store data.
<b>Homing (HOME)</b>		
HOME.ACC (→ p. 847)	R/W	Sets homing acceleration; active in opmode 2 (position) only.
HOME.AUTOMOVE (→ p. 849)	R/W	Sets homing auto move flag.
HOME.DEC (→ p. 851)	R/W	Sets homing deceleration; active in opmode 2 (position) only.

Parameter or Command	Type	Description
HOME.DIR (→ p. 853)	NV	Sets homing direction; active in opmode 2 (position) only.
HOME.DIST (→ p. 855)	R/W	Sets homing distance; active in opmode 2 (position) only.
HOME.FEEDRATE (→ p. 857)	R/W	Sets homing velocity factor; active in opmode 2 (position) only.
HOME.IPEAK (→ p. 859)	R/W	Sets the current limit during homing procedure to a mechanical stop; active in opmode 2 (position) only.
HOME.MAXDIST (→ p. 861)	R/W	Sets the maximum distance the motor is allowed to move during the homing routine.
HOME.MODE (→ p. 863)	R/W	Selects the homing mode; active in opmode 2 (position) only.
HOME.MOVE (→ p. 865)	Command	Starts a homing procedure; active in opmode 2 (position) only.
HOME.P (→ p. 866)	R/W	Sets home position; active in opmode 2 (position) only.
HOME.PERRTHRESH (→ p. 868)	R/W	Sets the position lag threshold; active in opmode 2 (position) only.
HOME.SET (→ p. 870)	Command	Immediately sets the home position; active in opmode 2 (position) only.
HOME.V (→ p. 872)	R/W	Sets homing velocity; active in opmode 2 (position) only.
<b>Hardware Limit Switch (HWLS)</b>		
HWLS.NEGSTATE (→ p. 875)	R/O	Reads the status of the negative hardware limit switch.
HWLS.POSSTATE (→ p. 876)	R/O	Reads the status of the positive hardware limit switch.
<b>Current Loop (IL)</b>		
IL.BUSFF (→ p. 879)	R/O	Displays the current feedforward value injected by the fieldbus.
IL.CMD (→ P. 880)	R/O	Reads the value of the q-component current command.
IL.CMDACC (→ p. 881)	R/O	Returns the commanded acceleration from the trajectory generator.
IL.CMDU (→ P. 882)	R/W	Sets the user current command.
IL.DCMD (→ p. 884)	R/O	Reads the value of the d-component current controller inside the FPGA.
IL.DFB (→ P. 885)	R/O	Reads the actual value of the d-component current.
IL.DIFOLD (→ P. 886)	R/O	Reads the drive foldback current limit.
IL.FB (→ P. 888)	R/O	Reads the actual value of the q-component current.

Parameter or Command	Type	Description
IL.FBSOURCE (→ p. 890)	R/W	Sets the feedback source for the current loop. Only applies when MOTOR.TYPE = 4.
IL.FF (→ p. 892)	R/O	Reads the current loop overall feedforward value.
IL.FOLDFTHRESH (→ P. 894)	NV	Reads the foldback fault level.
IL.FOLDFTHRESHU (→ p. 896)	NV	Sets the user value for the foldback fault level.
IL.FOLDWTHRESH (→ P. 898)	NV	Sets the foldback warning level.
IL.IFOLD (→ p. 902)	R/O	Reads the overall foldback current limit.
IL.IUFB (→ P. 904)	R/O	Reads the sigma-delta measured current in the u-winding of the motor.
IL.KACFF (→ p. 906)	R/W	Sets current loop acceleration feedforward gain value
IL.KBUSFF (→ p. 908)	R/W	Current loops fieldbus injected feed-forward gain
IL.KP (→ P. 909)	NV	Sets the proportional gain of the q-component of the PI regulator.
IL.KPDRATIO (→ P. 910)	NV	Sets the proportional gain of the d-component current PI-regulator as a percentage of IL.KP
IL.KPLOOKUPINDEX (→ p. 912)	R/W	Sets the index into the Current Loop Gain Scheduling Table.
IL.KPLOOKUPVALUE (→ p. 914)	R/W	Sets the value of the current loop gain scheduling index.
IL.KPLOOKUPVALUES (→ p. 916)	R/W	Gets the Current Loop Gain Scheduling Table.
IL.KVFF (→ p. 918)	R/W	Current loop velocity feed-forward gain.
IL.LIMITN (→ P. 919)	NV	Sets the negative user (application-specific) current limit.
IL.LIMITP (→ P. 921)	NV	Sets the positive user (application-specific) current limit.
IL.MFOLDD (→ P. 923)	NV	Sets the motor foldback maximum time at motor peak current.
IL.MFOLDR (→ P. 924)	R/O	Sets the motor foldback recovery time.
IL.MFOLDT (→ P. 925)	NV	Sets the motor foldback time constant of the exponential current drop (foldback).
IL.MI2T (→ p. 926)	R/O	Motor I2t load.
IL.MI2TWTRESH (→ p. 927)	NV	Motor I2t load warning threshold.
IL.MIFOLD (→ P. 928)	R/O	Sets the motor foldback current limit.
IL.MIMODE (→ p. 930)	NV	Motor protection mode.
IL.OFFSET (→ p. 931)	RW	A constant current command added to compensate for gravity.
IL.VCMD (→ P. 932)	R/O	Reads the output of the q-component PI regulator.

Parameter or Command	Type	Description
IL.VUFB (→ P. 933)	R/O	Reads the measured voltage on the u-winding of the motor.
IL.VVFB (→ P. 934)	R/O	Reads the measured voltage on the v-winding of the motor.
<b>IP (Internet Protocol)Parameters</b>		
IP.ADDRESS (→ p. 937)	NV	Gets/Sets the IP address of the drive.
IP.GATEWAY (→ p. 939)	NV	Gets/Sets the gateway IP of the drive.
IP.MODE (→ p. 941)	NV	Sets method of acquiring IP Address.
IP.RESET (→ p. 943)	Command	Implements new IP settings..
IP.SUBNET (→ p. 945)	NV	Gets/Sets the IP subnet mask of the drive.
<b>LOAD Parameters</b>		
LOAD.INERTIA (→ p. 948)	NV	Sets the load inertia.
<b>MODBUS Parameters</b>		
MODBUS.PIN (→ p. 954)	R/W	Gets / Sets the Modbus User Units Input parameter.
MODBUS.CLRERRORS (→ p. 950)	Command	Clears all errors stored in MODBUS.ERRORS.
MODBUS.ERRORMODE (→ p. 951)	R/W	Enable/disable Modbus error response messages.
MODBUS.ERRORS (→ p. 952)	R/O	Returns a list of up to 125 Modbus errors.
MODBUS.POUT (→ p. 956)	R/W	Gets / Sets the Modbus User Units Output parameter.
MODBUS.PSCALE (→ p. 958)	R/W	Gets/Sets the Feedback Resolution (per rev) over Modbus.
MODBUS.SCALING (→ p. 960)	NV	Selects the scaling mode for Modbus values.
<b>Motor Parameters</b>		
MOTOR.AUTOSSET (→ p. 964)	NV	Determines which drive parameters are calculated automatically.
MOTOR.BRAKE (→ P. 966)	NV	Sets the presence or absence of a motor brake.
MOTOR.BRAKEIMM (→ p. 968)	NV	Brake Immediately: in the case of a drive disable, apply the brake in all situations.
MOTOR.BRAKERLS (→ p. 970)	Command	Allows a user to release or apply the motor brake.
MOTOR.BRAKESTATE (→ p. 972)	R/O	Reads the actual status of the motor brake.
MOTOR.CTF0 (→ p. 973)	NV	Sets the thermal constant of the motor coil.
MOTOR.ICONT (→ P. 975)	NV	Sets the motor continuous current.
MOTOR.IDDATAVALID (→ p. 977)	R/O	Reports the status of the motor memory.
MOTOR.IDMAX (→ p. 979)	NV	Maximum direct axis current.
MOTOR.IMID (→ p. 980)	R/W	The direct-axis current set point used for induction machine closed-loop control.

Parameter or Command	Type	Description
MOTOR.IMTR (→ p. 982)	R/W	Rotor time constant.
MOTOR.INERTIA (→ P. 984)	NV	Sets the motor inertia.
MOTOR.IPEAK (→ P. 986)	NV	Sets the motor peak current.
MOTOR.KE (→ p. 988)	NV	Sets the motor back EMF constant.
MOTOR.KT (→ P. 990)	NV	Sets the torque constant of the motor.
MOTOR.LDLL (→ p. 992)	NV	Motor line to line direct axis inductance.
MOTOR.LISAT (→ p. 993)	NV	Motor quadrature axis inductance saturation characteristic.
MOTOR.LQLL (→ P. 994)	NV	Sets the line-to-line motor Lq.
MOTOR.NAME (→ P. 996)	NV	Sets the motor name.
MOTOR.PHASE (→ P. 997)	NV	Sets the motor phase.
MOTOR.PHSADVK1 (→ p. 999)	NV	First order phase advance polynomial coefficient.
MOTOR.PHSADVK2 (→ p. 1000)	NV	Second order phase advance polynomial coefficient.
MOTOR.PITCH (→ P. 1001)	NV	Sets the motor pitch.
MOTOR.POLES (→ P. 1002)	NV	Sets the number of motor poles.
MOTOR.R (→ P. 1004)	NV	Sets the stator winding resistance phase-phase in ohms.
MOTOR.RTYPE (→ p. 1006)	NV	Defines the type of thermal resistor inside the motor.
MOTOR.SUPPORTEDPARAMS (→ p. 1008)	R/O	Lists MOTOR parameters supported by configured motor type.
MOTOR.TBRAKEAPP (→ P. 1010)	NV	The delay time used for applying the motor brake.
MOTOR.TBRAKERLS (→ P. 1012)	NV	The delay time used for releasing the motor brake.
MOTOR.TBRAKETO (→ p. 1014)	NV	Brake apply timeout for vertical axis.
MOTOR.TEMP (→ p. 1016)	R/O	Reads the motor temperature represented as the resistance of the motor PTC or NTC.
MOTOR.TEMPC (→ p. 1018)	R/O	Reads the motor temperature in degrees Celsius.
MOTOR.TEMPFALT (→ p. 1019)	NV	Sets the motor temperature fault level.
MOTOR.TEMPWARN (→ p. 1021)	NV	Sets the motor temperature warning level.
MOTOR.TYPE (→ P. 1023)	NV	Sets the motor type.
MOTOR.VMAX (→ P. 1025)	NV	Sets the maximum motor speed.
MOTOR.VOLTMAX (→ P. 1027)	NV	Sets the motor maximum voltage.
MOTOR.VOLTMIN (→ p. 1029)	NV	Sets the minimum voltage for V/f control.
MOTOR.VOLTRATED (→ p. 1031)	NV	Sets the motor rated voltage.

Parameter or Command	Type	Description
MOTOR.VRATED (→ p. 1033)	NV	Sets the motor rated velocity (not maximum velocity).
<b>Motion Task (MT)</b>		
MT.ACC (→ P. 1036)	R/W	Specifies motion task acceleration; active in opmode 2 (position) only.
MT.CLEAR (→ P. 1038)	Command	Clears motion tasks from the drive; active in opmode 2 (position) only.
MT.CNTL (→ P. 1040)	R/W	Sets motion task control word; active in opmode 2 (position) only.
MT.CONTINUE (→ P. 1044)	Command	Continues a stopped motion task; active in opmode 2 (position) only.
MT.DEC (→ P. 1045)	R/W	Sets motion task deceleration; active in opmode 2 (position) only.
MT.EMERGMT (→ P. 1047)	R/W	Selects a motion task to be triggered after an emergency stop procedure; active in opmode 2 (position) only.
MT.FEEDRATE (→ p. 1049)	R/W	Sets the motion tasking velocity scale. This can be set while a motion task is running (on the fly).
MT.FIXEDSTOPCURRENT (→ p. 1050)	R/W	Sets the current (torque) applied to the axis once a fixed stop is reached.
MT.FIXEDSTOPFOLLOWINGERROR (→ p. 1051)	R/W	Sets the following error the axis must reach to determine that it has reached a fixed stop. (→ p. 1051)
MT.FIXEDSTOPMONITORWINDOW (→ p. 1052)	R/W	Sets the position window around the fixed stop which monitors whether the fixed stop has broken off or slipped. (→ p. 1052)
MT.LIST (→ p. 1053)	Command	Lists all initialized motion tasks in the drive; active in opmode 2 (position) only.
MT.LOAD (→ P. 1054)	Command	Reads/loads a motion task number from the drive; active in opmode 2 (position) only.
MT.MOVE (→ P. 1056)	Command	Starts a motion task; active in opmode 2 (position) only.
MT.MTNEXT (→ P. 1058)	R/W	Specifies following motion task number; active in opmode 2 (position) only.
MT.NUM (→ p. 1060)	R/W	Sets the motion task number; active in opmode 2 (position) only.
MT.P (→ P. 1061)	R/W	Sets the motion task position; active in opmode 2 (position) only.
MT.PARAMS (→ P. 1063)	Command	Shows a motion task; active in opmode 2 (position) only.
MT.SET (→ P. 1064)	Command	Sets the motion task in the drive; active in opmode 2 (position) only.

Parameter or Command	Type	Description
MT.TNEXT (→ P. 1066)	R/W	Specifies following motion task time; active in opmode 2 (position) only.
MT.TNUM (→ P. 1068)	R/W	Sets the motion task customer table number; active in opmode 2 (position) only.
MT.TNVSAVE (→ p. 1070)	Command	Saves the motion profile tables to the non-volatile memory.
MT.TPOSWND (→ p. 1071)	R/W	Sets the motion task target position window; active in opmode 2 (position) only.
MT.TVELWND (→ p. 1073)	R/W	Sets the motion task target velocity window; active in opmode 2 (position) only.
MT.V (→ P. 1074)	R/W	Sets the motion task velocity; active in opmode 2 (position) only.
MT.VCMD (→ p. 1077)	R/O	Reads the derivative of PL.CMD; active in opmode 2 (position) only.
<b>Position Loop (PL)</b>		
PL.CMD (→ P. 1084)	NV	Reads the position command directly from the entry to the position loop.
PL.ERR (→ P. 1086)	NV	Reads the position error present when the drive is controlling the position loop.
PL.ERRFTHRESH (→ p. 1088)	NV	Sets the maximum position error.
PL.ERRMODE (→ p. 1090)	R/W	Sets the type of following error warning and fault usage.
PL.ERRWTHRESH (→ p. 1092)	NV	Sets the position error warning level.
PL.FB (→ P. 1094)	R/O	Reads the position feedback value.
PL.FBSOURCE (→ p. 1096)	NV	Sets the feedback source for the position loop.
PL.FILTERTIME (→ p. 1098)	R/W	Sets the position command filter period.
PL.INTINMAX (→ P. 1099)	NV	Limits the input of the position loop integrator by setting the input saturation.
PL.INTOUTMAX (→ P. 1101)	NV	Limits the output of the position loop integrator by setting the output saturation.
PL.KI (→ P. 1103)	NV	Sets the integral gain of the position loop.
PL.KP (→ P. 1105)	NV	Sets the proportional gain of the position regulator PID loop.
PL.MODP1 (→ p. 1107)	R/W	Sets modulo range parameter.
PL.MODP2 (→ p. 1109)	R/W	Sets the beginning or end modulo range parameter.
PL.MODPDIR (→ p. 1111)	R/W	Sets the direction for absolute motion tasks.
PL.MODPEN (→ p. 1113)	R/W	Enables the modulo position.
<b>Programmable Limit Switch (PLS)</b>		
PLS.EN (→ p. 1116)	R/W	Enables programmable limit switch (PLS).
PLS.MODE (→ p. 1118)	NV	Selects programmable limit switch mode.

Parameter or Command	Type	Description
PLS.P1 TO PLS.P8 (→ p. 1120)	NV	Sets the trigger point for programmable limit switches.
PLS.RESET (→ p. 1122)	W/O	Resets programmable limit switch.
PLS.STATE (→ p. 1124)	R/O	Reads the programmable limit switch state.
PLS.T1 TO PLS.T8 (→ p. 1126)	R/W	Sets programmable limit switch time.
PLS.UNITS (→ p. 1128)	R/W	Sets programmable limit switch (PLS) units.
PLS.WIDTH1 TO PLS.WIDTH8 (→ p. 1131)	R/W	Programmable Limit Switch Width
<b>Recorder (REC)</b>		
REC.ACTIVE (→ P. 1134)	R/O	Indicates if data recording is in progress (active).
REC.CH1 to REC.CH6 (→ p. 1135)	R/W	Sets recording channels 1 to 6.
REC.DONE (→ P. 1136)	R/O	Checks whether or not the recorder has finished recording.
REC.GAP (→ P. 1137)	R/W	Specifies the gap between consecutive samples.
REC.NUMPOINTS (→ P. 1138)	R/W	Sets the number of points to record.
REC.OFF (→ P. 1139)	R/W	Turns the recorder OFF.
REC.RECPRMLIST (→ p. 1140)	R/O	Reads the list of recordable parameters.
REC.RETRIEVE (→ P. 1141)	R/O	Transfers all the recorded data to the communication channel.
REC.RETRIEVEDATA (→ p. 1142)	R/W	Retrieves the recorded data without the header.
REC.RETRIEVEFRMT (→ p. 1144)	R/W	Sets the format for recorded data output.
REC.RETRIEVEHDR (→ p. 1146)	R/O	Retrieves the recorded header without the data.
REC.RETRIEVESIZE (→ p. 1147)	R/W	Sets the number of samples that REC.RETRIEVEDATA returns.
REC.STOPTYPE (→ p. 1148)	R/W	Sets the recorder stop type.
REC.TRIG (→ P. 1149)	Command	Triggers the recorder.
REC.TRIGPARAM (→ p. 1150)	R/W	Sets the parameter that triggers the recorder.
REC.TRIGPOS (→ p. 1151)	R/W	Sets the trigger position in the recording buffer.
REC.TRIGPRMLIST (→ p. 1153)	R/O	Reads the list of possible trigger parameters.
REC.TRIGSLOPE (→ P. 1154)	R/W	Sets the trigger slope.
REC.TRIGTYPE (→ P. 1155)	R/W	Sets the trigger type.
REC.TRIGVAL (→ P. 1157)	R/W	Sets the trigger value.
<b>Regen Resistor (REGEN)</b>		
REGEN.POWER (→ P. 1159)	R/O	Reads regen resistor's calculated power.
REGEN.POWERFILTERED (→ p. 1161)	R/O	Returns a filtered version of REGEN.POWER.

Parameter or Command	Type	Description
REGEN.REXT (→ P. 1163)	N/V	Sets the external, user-defined regen resistor resistance.
REGEN.TEXT (→ p. 1164)	R/W	Sets the external regen resistor thermal protection time constant.
REGEN.TYPE (→ P. 1166)	NV	Sets the regen resistor type.
REGEN.WATTEXT (→ P. 1168)	R/W	Sets the regen resistor's power fault level for an external regen resistor.
<b>sercos® III (S3)</b>		
S3.ADDRESS (→ p. 1171)	NV	Sets and reads the sercos® slave address.
<b>SD card (SD)</b>		
SD.LOAD (→ p. 1173)	Command	Loads the drive state (BASIC program and NV parameters) from the SD card to the AKD (AKDs equipped with IO option card only).
SD.SAVE (→ p. 1174)	Command	Saves the drive state (BASIC program and NV parameters) to the SD card (AKDs equipped with IO option card only).
SD.STATUS (→ p. 1175)	R/O	Reads the status of the SD card.
<b>Service Motion (SM)</b>		
SM.I1 (→ p. 1177)	R/W	Sets service motion current 1; active in opmode 0 (torque) only.
SM.I2 (→ p. 1178)	R/W	Sets service motion current 2; active in opmode 0 (torque) only.
SM.MODE (→ p. 1179)	R/W	Sets the service motion mode.
SM.MOVE (→ p. 1182)	Command	Starts the service motion.
SM.T1 (→ p. 1183)	R/W	Sets the service motion time 1.
SM.T2 (→ p. 1184)	R/W	Sets the service motion time 2.
SM.V1 (→ p. 1185)	R/W	Sets service motion velocity 1; active in opmode 1 (velocity) and 2 (position).
SM.V2 (→ p. 1187)	R/W	Sets service motion velocity 2; active in opmode 1 (velocity) and 2 (position).
<b>Safe Torque Off (STO)</b>		
STO.STATE (→ p. 1190)	R/O	Returns the status of the safe torque off.
<b>Software Limit Switch (SWLS)</b>		
SWLS.EN (→ p. 1205)	NV	Enables and disables software travel limit switches.
SWLS.LIMIT0 (→ p. 1207)	NV	Sets the position of the software travel limit switch 0.
SWLS.LIMIT1 (→ p. 1209)	NV	Sets the position of the software travel limit switch 0.
SWLS.STATE (→ p. 1211)	R/O	Reads the actual status of software limit switches.
<b>Temperature (TEMP)</b>		

Parameter or Command	Type	Description
TEMP.CONTROL (→ p. 1214)	R/O	Reads the temperature of the control board temperature sensor.
TEMP.POWER1 to TEMP.POWER3 (→ p. 1215)	R/O	Reads the temperature of the power board(s) temperature sensor(s).
<b>Units (UNIT)</b>		
UNIT.ACCLINEAR (→ P. 1218)	NV	Sets the linear acceleration/deceleration units.
UNIT.ACCROTARY (→ P. 1220)	NV	Sets the rotary acceleration/deceleration units.
UNIT.LABEL (→ p. 1222)	NV	Sets user-defined name for user-defined position units.
UNIT.PIN (→ P. 1223)	NV	Sets gear IN for the unit conversion.
UNIT.PLINEAR (→ P. 1225)	NV	Sets the linear position units.
UNIT.POUT (→ P. 1227)	NV	Sets gear out for the unit conversion.
UNIT.PROTARY (→ P. 1229)	NV	Sets the position units when the motor type (MOTOR.TYPE (→ p. 1023)) is rotary.
UNIT.VLINEAR (→ P. 1231)	NV	Sets the linear velocity units.
UNIT.VROTARY (→ P. 1233)	NV	Sets the velocity units when the motor type (MOTOR.TYPE (→ p. 1023)) is rotary.
<b>User (USER)</b>		
USER.INT1 to USER.INT24 (→ p. 1236)	R/W	Stores an integer value for future reference.
<b>Bus Volatage (VBUS)</b>		
VBUS.HALFVOLT (→ p. 1240)	NV	Changes voltage thresholds for HV and MV Drives
VBUS.OVFTHRESH (→ p. 1242)	R/O	Reads the over voltage fault level.
VBUS.OVWTHRESH (→ p. 1243)	N/V	Sets voltage level for over voltage warning.
VBUS.RMSLIMIT (→ p. 1244)	R/O	Reads the limit for the bus capacitors load.
VBUS.UVFTHRESH (→ p. 1245)	R/O	Sets the under voltage fault level.
VBUS.UVMODE (→ p. 1246)	NV	Indicates undervoltage (UV) mode.
VBUS.UVWTHRESH (→ p. 1248)	NV	Sets voltage level for undervoltage warning.
VBUS.VALUE (→ p. 1249)	R/O	Reads DC bus voltage.
<b>Velocity Loop (VL)</b>		
VL.ARPF1 TO VL.ARPF4 (→ p. 1251)	R/W	Sets the natural frequency of the pole (denominator) of anti-resonance (AR) filters 1, 2, 3, and 4; active in opmodes 1 (velocity) and 2 (position) only.
VL.ARPQ1 TO VL.ARPQ4 (→ p. 1253)	R/W	Sets the Q of the pole (denominator) of anti-resonance (AR) filter 1; active in opmodes 1 (velocity) and 2 (position) only.


Parameter or Command	Type	Description
VL.ARTYPE1 TO VL.ARTYPE4 (→ p. 1255)	NV	Indicates the method used to calculate BiQuad coefficients; active in opmodes 1 (velocity) and 2 (position) only.
VL.ARZF1 TO VL.ARZF4 (→ p. 1257)	R/W	Sets the natural frequency of the zero (numerator) of anti-resonance (AR) filter 1; active in opmodes 1 (velocity) and 2 (position) only.
VL.ARZQ1 TO VL.ARZQ4 (→ p. 1259)	R/W	Sets the Q of the zero (numerator) of anti-resonance filter #1; active in opmodes 1 (velocity) and 2 (position) only.
VL.BUSFF (→ p. 1261)	R/O	Displays the velocity loop feedforward value injected by the field-bus; active in opmodes 1 (velocity) and 2 (position) only.
VL.CMD (→ P. 1263)	R/O	Reads the actual velocity command; active in opmodes 1 (velocity) and 2 (position) only.
VL.CMDU (→ P. 1265)	R/W	Sets the user velocity command; active in opmodes 1 (velocity) and 2 (position) only.
VL.ERR (→ P. 1267)	R/O	Sets the velocity error; active in opmodes 1 (velocity) and 2 (position) only.
VL.FB (→ P. 1269)	R/O	Reads the velocity feedback; active in opmodes 1 (velocity) and 2 (position) only.
VL.FBFILTER (→ p. 1271)	R/O	Filters VL.FB (→ p. 1269) value; active in opmodes 1 (velocity) and 2 (position) only.
VL.FBSOURCE (→ p. 1273)	NV	Sets feedback source for the velocity loop; active in opmodes 1 (velocity) and 2 (position) only.
VL.FBUNFILTERED (→ p. 1274)	R/O	Reads the velocity feedback.
VL.FF (→ p. 1275)	R/O	Displays the velocity loop overall feedforward value; active in opmodes 1 (velocity) and 2 (position) only.
VL.GENMODE (→ P. 1277)	NV	Selects mode of velocity generation (Observer, d/dt); active in opmodes 1 (velocity) and 2 (position) only.
VL.KBUSFF (→ p. 1279)	R/W	Sets the velocity loop acceleration feedforward gain value; active in opmodes 1 (velocity) and 2 (position) only.
VL.KI (→ p. 1281)	NV	Sets the velocity loop integral gain for the PI controller; active in opmodes 1 (velocity) and 2 (position) only.
VL.KP (→ p. 1284)	NV	Sets velocity loop proportional gain for the PI controller; active in opmodes 1 (velocity) and 2 (position) only.
VL.KVFF (→ p. 1286)	R/W	Sets the velocity loop velocity feedforward gain value; active in opmodes 1 (velocity) and 2 (position) only.
VL.LIMITN (→ P. 1288)	NV	Sets the velocity lower limit; active in opmodes 1 (velocity) and 2 (position) only.

Parameter or Command	Type	Description
VL.LIMITP (→ P. 1290)	NV	Sets the velocity high limit; active in opmodes 1 (velocity) and 2 (position) only.
VL.LMJR (→ p. 1291)	R/W	Sets the ratio of the estimated load moment of inertia relative to the motor moment of inertia; active in opmodes 1 (velocity) and 2 (position) only.
VL.MODEL (→ p. 1293)	R/O	Reads the observer velocity signal; active in opmodes 1 (velocity) and 2 (position) only.
VL.OBSBW (→ p. 1294)	NV	Sets the bandwidth of the observer in Hz.
VL.OBSMODE (→ p. 1295)	NV	Sets the observer operating mode.
VL.THRESH (→ P. 1296)	NV	Sets the user over speed fault level.
VL.VFTHRESH (→ p. 1298)	R/O	VL.VFTHRESH
<b>Wake and Shake (WS)</b>		
WS.ARM (→ p. 1300)	Command	Sets wake and shake to start at the next drive enable.
WS.CHECKMODE (→ p. 1302)	R/W	Select the type of commutation check to execute after Wake and Shake finds a new commutation angle.
WS.CHECKT (→ p. 1304)	R/W	Sets the amount of time a communication error must be present before an error is thrown.
WS.CHECKV (→ p. 1305)	R/W	This parameter sets the velocity threshold which has to be exceeded to activate commutation monitoring.
WS.DISARM (→ p. 1307)	Command	Cancels ARM requests and resets wake and shake to the IDLE state.
WS.DISTMAX (→ p. 1308)	R/W	Sets maximum movement allowed for wake and shake.
WS.DISTMIN (→ p. 1310)	R/W	Sets the minimum movement required for wake and shake.
WS.FREQ (→ p. 1312)	R/W	Sets the sine frequency of excitation for WS.MODE 2.
WS.IMAX (→ p. 1314)	R/W	Sets maximum current used for wake and shake.
WS.MODE (→ p. 1316)	R/W	Sets the method used for wake and shake.
WS.NUMLOOPS (→ p. 1318)	R/W	Sets the number of repetitions for wake and shake.
WS.STATE (→ p. 1319)	R/O	Reads wake and shake status.
WS.T (→ p. 1321)	R/W	Sets wake and shake current-vector appliance time.
WS.TDELAY1 (→ p. 1322)	NV	Delay for wake and shake timing.
WS.TDELAY2 (→ p. 1324)	NV	Sets the delay for wake and shake timing.
WS.TDELAY3 (→ p. 1326)	NV	Sets the delay for wake and shake between loops in mode 0.

Parameter or Command	Type	Description
WS.TIRAMP (→ p. 1328)	R/W	Sets the ramp time for the ramp up current in Wake & Shake mode 1.
WS.TSTANDSTILL (→ p. 1329)	R/W	Sets the calming time of the motor for Wake & Shake mode 1.
WS.VTHRESH (→ p. 1330)	NV	Defines the maximum allowed velocity for Wake & Shake.

## 25.2 AIN Parameters

This section describes the analog input (AIN) parameters. AIN parameters function as shown in the block diagram below:

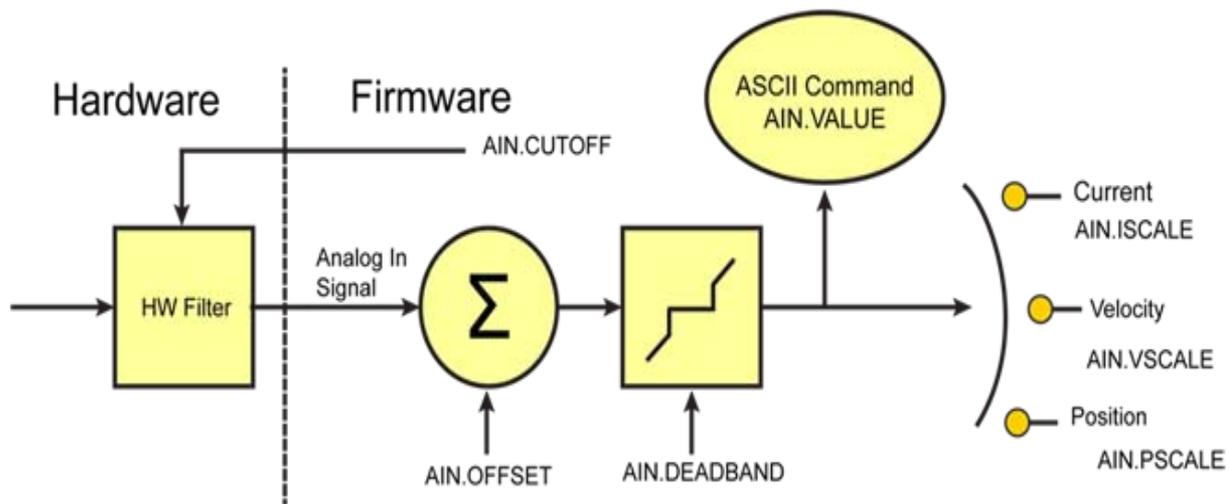

<b>25.2.1 AIN.CUTOFF</b> .....	<b>393</b>
<b>25.2.2 AIN.DEADBAND</b> .....	<b>395</b>
<b>25.2.3 AIN.DEADBANDMODE</b> .....	<b>397</b>
<b>25.2.4 AIN.ISCALE</b> .....	<b>399</b>
<b>25.2.5 AIN.MODE</b> .....	<b>400</b>
<b>25.2.6 AIN.OFFSET</b> .....	<b>402</b>
<b>25.2.7 AIN.PSCALE</b> .....	<b>403</b>
<b>25.2.8 AIN.VALUE</b> .....	<b>405</b>
<b>25.2.9 AIN.VSCALE</b> .....	<b>407</b>
<b>25.2.10 AIN.ZERO</b> .....	<b>409</b>

## 25.2.1 AIN.CUTOFF

General Information	
Type	NV Parameter
Description	Sets the analog input low-pass filter cutoff frequency.
Units	Hz
Range	0 to 10,000 Hz
Default Value	5,000 Hz
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2000	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	0	No	32 bit	No	M_01-03-00-000

### Description

AIN.CUTOFF sets the break frequency in Hz for two cascaded single-pole low-pass filters on the hardware command input. Since the two poles are cascaded at the same frequency, the -3 dB frequency is  $0.64 \cdot \text{AIN.CUTOFF}$  in hertz and the 10% to 90% step response rise time is  $0.53/\text{AIN.CUTOFF}$  in seconds.

Suggested operating values are as follows:

- Analog torque opmode: 5 kHz
- Analog velocity opmode: 2.5 kHz
- General purpose analog input high resolution: 500 Hz

## **Related Topics**

Analog Input (→ p. 119)

## 25.2.2 AIN.DEADBAND

General Information	
Type	NV Parameter
Description	Sets the analog input signal deadband.
Units	V
Range	0 to 12.5 V
Default Value	0 V
Data Type	Float
Start Version	M_01-00-00-000

### Variant Support

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2001	Word	No
sercos <sup>®</sup> III		2 Octets	


Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	2	No	16 bit	No	M_01-03-00-000

### Description


AIN.DEADBAND sets the deadband of the analog input signal. When AIN.DEADBANDMODE is set to 0, and the value of the analog input is less than the value of AIN.DEADBAND, the analog command will be 0. When the analog input is greater or equal to the AIN.DEADBAND, then the analog command will be generated using the scaling specified.

When AIN.DEADBANDMODE is set to 1, the analog command is 0 if the input is less than the deadband value. When the input is greater than the deadband, the output is equal to (Input - Deadband) \* Scaling. Below are illustrations of this behavior.

Ain.Deadbandmode= 0 | Ain.Deadband= 1V

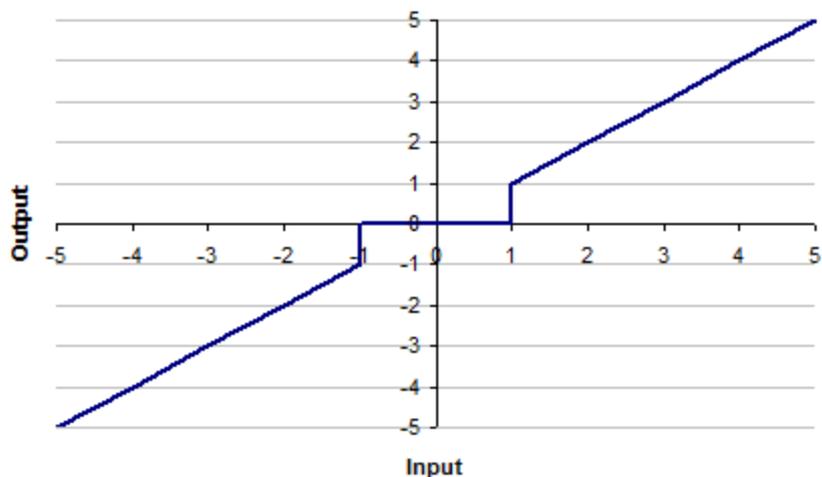

Ain.Deadbandmode= 1 | Ain.Deadband= 1V

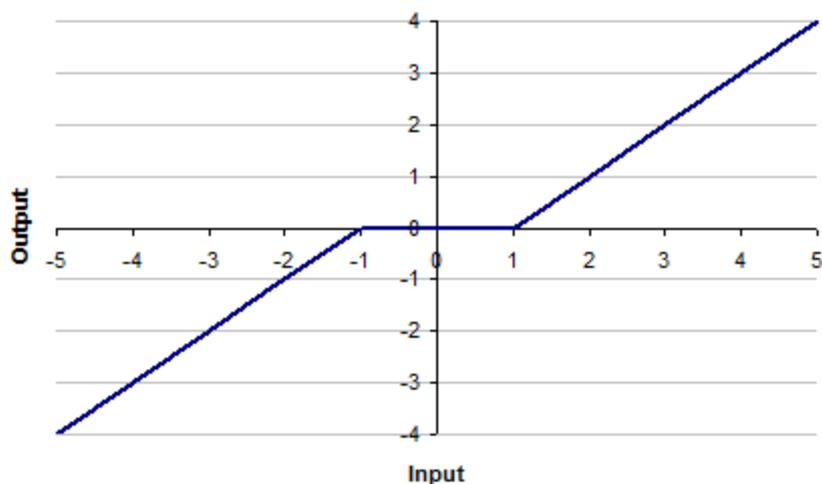

## Related Topics

Analog Input (→ p. 119)

Block Diagram for Position/Velocity Loop

AIN Parameters (→ p. 392)

## 25.2.3 AIN.DEADBANDMODE

General Information	
Type	NV Parameter
Description	Sets the analog input deadband mode.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
See Also	AIN.DEADBAND (→ p. 395)
Start Version	M_01-03-06-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2593	Word	No
sercos <sup>®</sup> III		2 Octets	


Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1186	No	16 bit	No

### Description


When AIN.DEADBANDMODE is set to 0, and the value of the analog input is less than the value of AIN.DEADBAND, the analog command will be 0. When the analog input is greater or equal to the AIN.DEADBAND, then the analog command will be generated using the scaling specified.

When AIN.DEADBANDMODE is set to 1, the analog command is 0 if the input is less than the deadband value. When the input is greater than the deadband, the output is equal to (Input - Deadband) \* Scaling. Below are illustrations of this behavior.

Ain.Deadbandmode= 0 | Ain.Deadband= 1V

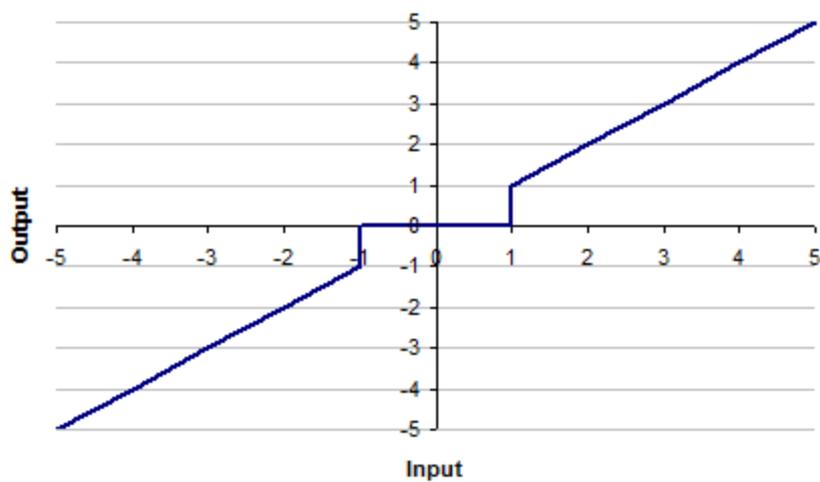

Ain.Deadbandmode= 1 | Ain.Deadband= 1V

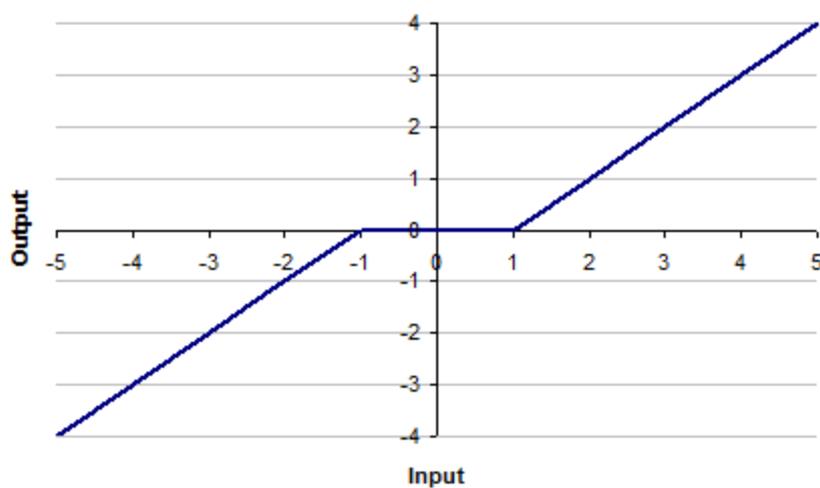

## Related Topics

Analog Input (→ p. 119)

Block Diagram for Position/Velocity Loop

AIN.DEADBAND (→ p. 395)

## 25.2.4 AIN.ISCALE

General Information	
Type	NV Parameter
Description	Sets the analog current scale factor.
Units	A/V
Range	0.001 to 22.4 A/V
Default Value	0.001 A/V
Data Type	Float
Start Version	M_01-01-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2002	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	4	No	32 bit	No	M_01-03-00-000

### Description

AIN.ISCALE sets the analog current scale factor that scales the analog input (AIN.VALUE) for DRV.OPMODE (→ p. 682) = 1 (analog torque mode).

The value entered is the motor current per 10 V of analog input. This value may be either higher or lower than 100%, but the actual analog input will be limited by the application current limit (IL.LIMITN (→ p. 919) and IL.LIMITP (→ p. 921)).

### Related Topics

Analog Input (→ p. 119)

Block Diagram for Position/Velocity Loop (pg 1)

## 25.2.5 AIN.MODE

General Information	
Type	NV Parameter
Description	Analog input mode
Units	N/A
Range	0 to 2
Default Value	1
Data Type	Integer
Start Version	M_01-04-09-000

AKD SynqNet Information	
Range	0

AKD BASIC Information	
Range	0 to 1

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2594	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1188	No	8 bit	No

### Description

The parameter AIN.MODE is used to assign a functionality to the voltage measured on the analog input pin.

0 – The analog input value is not used by any function.

1 – This mode only works when DRV.CMDSOURCE is set to 3 (analog). The measured voltage will be scaled with:

- AIN.ISCALE if DRV.OPMODE has been set to 0 (torque mode)
- AIN.VSCALE if DRV.OPMODE has been set to 1 (velocity mode)
- AIN.PSCALE if DRV.OPMODE has been set to 2 (position mode)

Afterwards, the value will be forwarded as a command value to the control-loops.

2 – This mode is used for generating a target velocity of a motion task. This mode works when DRV.OPMODE is set to 2 (position) and DRV.CMDSOURCE is set to 0 (service). The measured voltage will be scaled with AIN.VSCALE.

## Related Topics

MT.CNTL (→ p. 1040)

DRV.OPMODE (→ p. 682)

## 25.2.6 AIN.OFFSET

General Information	
Type	NV Parameter
Description	Sets the analog input offset.
Units	V
Range	-10 to +10 V
Default Value	0 V
Data Type	Float
See Also	AIN Parameters (→ p. 392), AIN.ZERO (→ p. 409)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2003	Word	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	6	No	16 bit	Yes	M_01-03-00-000

### Description

AIN.OFFSET sets the analog offset, which is added to the analog input command to the drive. This value compensates for the analog input signal (AIN.VALUE (→ p. 405)) offset or drift.

### Related Topics

Analog Input (→ p. 119)

AIN.ZERO (→ p. 409)

Block Diagram for Position/Velocity Loop (pg 1)

## 25.2.7 AIN.PSCALE

General Information	
Type	NV Parameter
Description	Sets the analog position scale factor.
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225) Rotary: counts/V, rad/V, deg/V, (Custom Units (→ p. 100))/V, 16-bit counts/V Linear: counts/V, mm/V, μm/V, (Custom Units (→ p. 100))/V, 16-bit counts/V
Range	Rotary: 1 to 9,223,372,036,854,775 counts/V 0 to 13,493,026.816 rad/V 0.06 to 179.0 deg/V 0 to 10,737,418.240 (PIN/POUT)/V 0 to 140,737,488,355.327 16-bit counts/V Linear: 1 to 9,223,372,036,854,775 counts/V 0 to 2,147,483.648 mm/V 0 to 2,147,483,648.000 μm/V 0 to 10,737,418.240 (PIN/POUT)/V 0 to 140,737,488,355.327 16-bit counts/V
Default Value	Rotary: 1 counts/V 0 rad/V 0 deg/V 0 (PIN/POUT)/V 0 16-bit counts/V Linear: 1 count/V 0 rad/V 0 deg/V 0 (PIN/POUT)/V 0 16-bit counts/V
Data Type	Float
Start Version	M_01-01-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes

Variant	Supported
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3472h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2004	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	8	Yes	64 bit	Yes	M_01-03-00-000

## Description

AIN.PSCALE is an analog position scale factor that scales the analog input (AIN.VALUE (→ p. 405)) for DRV.OPMODE (→ p. 682) = 2, DRV.CMDSOURCE (→ p. 604) = 3 (analog position mode).

## Related Topics

Analog Input (→ p. 119)

Block Diagram for Position/Velocity Loop (pg 1)

## 25.2.8 AIN.VALUE

General Information	
Type	R/O Parameter
Description	Reads the value of the analog input signal.
Units	V
Range	-12.5 to +12.5 V
Default Value	N/A
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3470h/4 3509h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2006	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	12	No	16 bit	No	M_01-03-00-000

### Description

AIN.VALUE reads the analog input value after the value is filtered (as shown in the Analog Input Block Diagram).

### Related Topics

Analog Input (→ p. 119)

AIN.ZERO (→ p. 409)

AIN.OFFSET (→ p. 402)

Block Diagram for Position/Velocity Loop (pg 1)

## 25.2.9 AIN.VSCALE

General Information	
Type	NV Parameter
Description	Sets analog velocity scale factor.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rpm/V, rps/V, (deg/s)/V, [(Custom Units (→ p. 100))/s]/V, (rad/s)/V Linear: counts/s/V, (mm/s)/V, (μm/s)/V, [(Custom Units (→ p. 100))/s]/V
Range	Rotary: 0.060 to 60,000 rpm/V 0.001 to 1,000 rps/V 0.359 to 360,000 (deg/s)/V 0.005 to 5,000 [(Custom Units (→ p. 100))/s]/V 0.006 to 6,283.186 (rad/s)/V Linear: 0.001 to 1.000 counts/s/V 0.001*MOTOR.PITCH (→ p. 1001) to 1,000.000*MOTOR.PITCH (→ p. 1001) (mm/s)/V 0.998*MOTOR.PITCH (→ p. 1001) to 1,000,000.000*MOTOR.PITCH (→ p. 1001) (μm/s)/V 0.005 to 5,000 [(Custom Units (→ p. 100))/s]/V
Default Value	Rotary: 0.060 rpm/V 0.001 rps/V 0.359 (deg/s)/V 0.005 [(Custom Units (→ p. 100))/s]/V 0.006 (rad/s)/V Linear: 0.001 counts/s/V 0.001*MOTOR.PITCH (→ p. 1001) (mm/s)/V 0.998*MOTOR.PITCH (→ p. 1001) (μm/s)/V 0.005 to 5,000 [(Custom Units (→ p. 100))/s]/V
Data Type	Float
Start Version	M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes

Variant	Supported
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3629h/0	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	AIN.VSCALE_32	2007	DWord	No
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	14	No	32 bit	No	M_01-03-00-000

## Description

AIN.VSCALE is an analog velocity scale factor that scales the analog input AIN.VALUE (→ p. 405) for DRV.OPMODE (→ p. 682) = 1 (analog velocity mode).

The value entered is the motor velocity per 1 V of analog input. This value may be either higher or lower than the application velocity limit (VL.LIMITP (→ p. 1290) or VL.LIMITN (→ p. 1288)), but the actual analog I/O will be limited by VL.LIMITP (→ p. 1290) or VL.LIMITN (→ p. 1288).

## Related Topics

Analog Input (→ p. 119)

Block Diagram for Position/Velocity Loop (pg 1)

## 25.2.10 AIN.ZERO

General Information	
Type	Command
Description	Zeroes the analog input signal.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	AIN.VALUE (→ p. 405), AIN.OFFSET (→ p. 402)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	N/A	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2008	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	16	No	Command	No	M_01-03-00-000

### Description

AIN.ZERO causes the drive to zero the analog input signal (AIN.VALUE (→ p. 405)). You may need to execute this command more than once to achieve zero offset, and AIN.OFFSET is modified in this process.

### Related Topics

Analog Input (→ p. 119)

AIN.VALUE (→ p. 405) | AIN.OFFSET (→ p. 402)

Block Diagram for Position/Velocity Loop (pg 1)

## 25.3 AIN2 Parameters

This section describes the analog input 2 (AIN2) parameters.

---

<b>25.3.1 AIN2.CUTOFF</b> .....	<b>412</b>
<b>25.3.2 AIN2.DEADBAND</b> .....	<b>413</b>
<b>25.3.3 AIN2.DEADBANDMODE</b> .....	<b>414</b>
<b>25.3.4 AIN2.MODE</b> .....	<b>415</b>
<b>25.3.5 AIN2.OFFSET</b> .....	<b>416</b>
<b>25.3.6 AIN2.VALUE</b> .....	<b>417</b>
<b>25.3.7 AIN2.ZERO</b> .....	<b>418</b>

## 25.3.1 AIN2.CUTOFF

General Information	
Type	NV Parameter
Description	Sets the analog input 2 low-pass filter cutoff frequency.
Units	Hz
Range	0 to 10,000 Hz
Default Value	5,000 Hz
Data Type	Float
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1234	No	32 bit	No	M_01-06-03-000

### Description

AIN2.CUTOFF sets the break frequency in Hz for two cascaded single-pole low-pass filters on the hardware command input. Since the two poles are cascaded at the same frequency, the -3 dB frequency is  $0.64 \cdot \text{AIN2.CUTOFF}$  in hertz and the 10% to 90% step response rise time is  $0.53 / \text{AIN2.CUTOFF}$  in seconds.

Suggested operating values are as follows:

- Analog torque opmode: 5 kHz
- Analog velocity opmode: 2.5 kHz
- General purpose analog input high resolution: 500 Hz

### Related Topics

Analog Input (→ p. 119)

Block Diagram for Position/Velocity Loop (pg 1)

## 25.3.2 AIN2.DEADBAND

General Information	
Type	NV Parameter
Description	Sets the analog input 2 signal dead-band.
Units	V
Range	0 to 12.5 V
Default Value	0 V
Data Type	Float
Start Version	M_01-06-03-000

### Variant Support

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1236	No	16 bit	No	M_01-06-03-000

### Description

AIN2.DEADBAND sets the deadband of the analog input 2 signal. When AIN2.DEADBANDMODE (→ p. 414) is set to 0, and the value of the analog input 2 is less than the value of AIN2.DEADBAND, the analog command will be 0. When the analog input 2 is greater or equal to the AIN2.DEADBAND, then the analog command will be generated using the scaling specified.

When AIN2.DEADBANDMODE is set to 1, the analog command is 0 if the input is less than the dead-band value. When the input is greater than the deadband, the output is equal to (Input - Deadband) \* Scaling.

### Related Topics

Analog Input (→ p. 119)

Block Diagram for Position/Velocity Loop (pg 1)

## 25.3.3 AIN2.DEADBANDMODE

General Information	
Type	NV Parameter
Description	Sets the analog input 2 deadband mode.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1238	No	16 bit	No

### Description

When AIN2.DEADBANDMODE is set to 0, and the value of the analog input 2 is less than the value of AIN2.DEADBAND (→ p. 413), the analog command will be 0. When the analog input 2 is greater or equal to the AIN2.DEADBAND, then the analog command will be generated using the scaling specified.

When AIN2.DEADBANDMODE is set to 1, the analog command is 0 if the input is less than the deadband value. When the input is greater than the deadband, the output is equal to (Input - Deadband) \* Scaling.

### Related Topics

Analog Input (→ p. 119)

AIN2.DEADBAND (→ p. 413)

Block Diagram for Position/Velocity Loop (pg 1)

## 25.3.4 AIN2.MODE

General Information	
Type	NV Parameter
Description	Analog input 2 mode
Units	N/A
Range	0
Default Value	0
Data Type	Integer
Start Version	M_01-06-03-000

AKD BASIC Information	
Range	0 to 1

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1242	No	8 bit	No

### Description

The parameter AIN2.MODE is used to assign a functionality to the voltage measured on the analog input 2 pin.

0 – The analog input value is not used by any function.

## 25.3.5 AIN2.OFFSET

General Information	
Type	NV Parameter
Description	Sets the analog input 2 offset.
Units	V
Range	-10 to +10 V
Default Value	0 V
Data Type	Float
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1244	No	16 bit	Yes	M_01-06-03-000

### Description

AIN2.OFFSET sets the analog offset, which is added to the analog input 2 command to the drive. This value compensates for the analog input 2 signal (AIN.VALUE (→ p. 405)) offset or drift.

### Related Topics

Analog Input (→ p. 119)

AIN2.ZERO (→ p. 418)

Block Diagram for Position/Velocity Loop (pg 1)

## 25.3.6 AIN2.VALUE

General Information	
Type	R/O Parameter
Description	Reads the value of the analog input 2 signal.
Units	V
Range	-12.5 to +12.5 V
Default Value	N/A
Data Type	Float
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3470h/4	M_01-00-00-000
	3509h/0	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1250	No	16 bit	No	M_01-06-03-000

### Description

AIN2.VALUE reads the analog input 2 value after the value is filtered (as shown in the Analog Input Block Diagram).

### Related Topics

Analog Input (→ p. 119)

AIN2.OFFSET (→ p. 416)

AIN2.ZERO (→ p. 418)

Block Diagram for Position/Velocity Loop

## 25.3.7 AIN2.ZERO

General Information	
Type	Command
Description	Zeroes the analog input 2 signal.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	N/A	M_01-00-00-000

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1258	No	Command	No	M_01-06-03-000

### Description

AIN2.ZERO causes the drive to zero the analog input 2 signal (AIN2.VALUE (→ p. 417)). You may need to execute this command more than once to achieve zero offset, and AIN2.OFFSET (→ p. 416) is modified in this process.

### Related Topics

Analog Input (→ p. 119)

AIN2.VALUE (→ p. 417)

AIN2.OFFSET (→ p. 416)

Block Diagram for Position/Velocity Loop

## 25.4 AOUT Parameters

This section describes the AOUT parameters.

---

25.4.1 AOUT.CUTOFF .....	420
25.4.2 AOUT.DEBUGADDR .....	421
25.4.3 AOUT.DEBUGDATATYPE .....	422
25.4.4 AOUT.DEBUGSCALE .....	424
25.4.5 AOUT.ISCALE .....	425
25.4.6 AOUT.MODE .....	426
25.4.7 AOUT.OFFSET .....	428
25.4.8 AOUT.PSCALE .....	429
25.4.9 AOUT.VALUE .....	431
25.4.10 AOUT.VALUEU .....	432
25.4.11 AOUT.VSCALE .....	433

## 25.4.1 AOUT.CUTOFF

General Information	
Type	NV Parameter
Description	Sets the analog output low-pass filter cutoff frequency.
Units	Hz
Range	0 to 10,000 Hz
Default Value	0 Hz
Data Type	Float
Start Version	M_01-04-01

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2635	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1270	No	32-bit	No	M_01-06-03-000

### Description

AOUT.CUTOFF sets the cutoff frequency in Hz for a single-pole low-pass filter on the Analog Output.

A value of 0 Hz will turn off the filter and will allow all frequencies to pass through.

The filter can be used with all modes of Analog Output.

### Related Topics

Analog Output (→ p. 120)

## 25.4.2 AOUT.DEBUGADDR

General Information	
Type	NV Parameter
Description	Sets the memory address to debug.
Units	N/A
Range	4 to 4,292,870,142
Default Value	4
Data Type	Integer
Start Version	M_01-01-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

AOUT.DEBUGADDR sets the memory address to debug when AOUT.MODE (→ p. 426) = 9 (debug mode).

### Related Topics

Analog Output (→ p. 120)

AOUT.MODE (→ p. 426)

## 25.4.3 AOUT.DEBUGDATATYPE

General Information	
Type	NV Parameter
Description	Sets the data type of the value to be debugged.
Units	N/A
Range	0 to 10
Default Value	0
Data Type	Integer
Start Version	M_01-01-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

AOUT.DEBUGDATATYPE is used in AOUT.MODE (→ p. 426) = 9 (debug mode).

This parameter sets the data type of the value to be debugged according to the table below:

Value	Data Type
0	Illegal type
1	Signed (1 byte)
2	Unsigned (1 byte)
3	Signed (2 bytes)
4	Unsigned (2 bytes)
5	Signed (4 bytes)
6	Unsigned (4 bytes)
7	Signed (8 bytes)

Value	Data Type
8	Unsigned (8 bytes)
9	Pointer to one byte
10	Fix shift

## Related Topics

Analog Output (→ p. 120)

## 25.4.4 AOUT.DEBUGSCALE

General Information	
Type	NV Parameter
Description	Sets the scale to be used for debug.
Units	N/A
Range	0.001 to 9,223,372,036,854,775.000
Default Value	1
Data Type	Float
Start Version	M_01-01-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

AOUT.DEBUGSCALE sets the scale to be used for debug when AOUT.MODE (→ p. 426) = 9 (debug mode).

### Related Topics

Analog Output (→ p. 120)

AOUT.MODE (→ p. 426)

## 25.4.5 AOUT.ISCALE

General Information	
Type	NV Parameter
Description	Sets the analog current scale factor.
Units	A/V
Range	0.001 to 22.4 A/V
Default Value	0.001 to 22.4 A/V
Data Type	Float
Start Version	M_01-01-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2009	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	18	No	32 bit	No	M_01-03-00-000

### Description

AOUT.ISCALE sets the analog current scale factor that scales the analog output (AOUT.VALUE) for AOUT.MODE = 4 or 5. The value entered is the motor current per 10 V of analog input or output. This value may be either higher or lower than 100%, but the actual analog I/O will be limited by the application current limit (IL.LIMITN (→ p. 919) and IL.LIMITP (→ p. 921)).

### Related Topics

Analog Output (→ p. 120)

AOUT.ISCALE (→ p. 1)

## 25.4.6 AOUT.MODE

General Information	
Type	NV Parameter
Description	Sets the analog output mode.
Units	N/A
Range	0 to 11
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

SynqNet Information	
Range	12

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3470h/1	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2010	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	20	No	16 bit	No	M_01-03-00-000

### Description

AOUT.MODE sets the analog output functionality.

AOUT.MODE	Description
0	User variable. The analog output signal is determined by the user (using AOUT.VALUEU).
1	Actual velocity. The analog signal describes the current velocity value (VL.FB).
2	Velocity error. The analog signal describes the velocity error value.
3	Velocity command. The analog signal describes the velocity command value.
4	Actual current. The analog signal describes the actual current value.
5	Current command. The analog signal describes the current command value.
6	Actual position. The analog signal describes the current position value.
7	Position error. The analog signal describes the position error value.
8	Triangle wave. The analog signal is a triangle wave (sawtooth pattern).
9	Debug mode. In this mode the user can define a drive variable to monitor via the analog output (AOUT.VALUEU).
10	Unfiltered Velocity (VL.FBUNFILTERED)
11	Filtered Velocity - 10Hz Lowpass (VL.FBFILTER)

## Example

You can use AOUT.MODE and AOUT.VALUEU to configure an output signal as follows:

```
-->AOUT.MODE 0
-->AOUT.VALUEU 5
-->AOUT.VALUEU 4.33
```

## Related Topics

Analog Output (→ p. 120)

## 25.4.7 AOUT.OFFSET

General Information	
Type	NV Parameter
Description	Sets the analog output offset.
Units	V
Range	-10 to +10 V
Default Value	0 V
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2011	Word	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	22	No	16 bit	Yes	M_01-03-00-000

### Description

This parameter sets the analog output offset.

### Related Topics

Analog Output (→ p. 120)

## 25.4.8 AOUT.PSCALE

General Information	
Type	NV Parameter
Description	Sets the analog position scale factor.
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225) Rotary: counts/V, rad/V, deg/V, (Custom Units (→ p. 100))/V, 16-bit counts/V Linear: counts/V, mm/V, μm/V, (Custom Units (→ p. 100))/V, 16-bit counts/V
Range	Rotary: 1 to 9,223,372,036,854,775 counts/V 0 to 13,493,026.816 rad/V 0 to 773,094,113.280 deg/V 0 to 10,737,418.240 (Custom Units (→ p. 100))/V 0 to 140,737,488,355.327 16-bit counts/V Linear: 1 to 9,223,372,036,854,775 counts/V 0 to 2,147,483.648 mm/V 0 to 2,147,483,648.000 μm/V 0 to 10,737,418.240 (Custom Units (→ p. 100))Custom Units (→ p. 100))/V 0 to 140,737,488,355.327 16-bit counts/V
Default Value	Rotary: 1 counts/V 0 rad/V 0 deg/V 0 (Custom Units (→ p. 100))/V 0 16-bit counts/V Linear: 1 counts/V 0 rad/V 0 deg/V 0 (Custom Units (→ p. 100))/V 0 counts 16 bit/V
Data Type	Float
Start Version	M_01-01-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes

Variant	Supported
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3471h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2012	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	24	Yes	64 bit	No	M_01-03-00-000

## Description

AOUT.PSCALE is an analog position scale factor that scales the analog output (AOUT.VALUE (→ p. 431)) for AOUT.MODE (→ p. 426) = 6, or 7 (actual position or position error) per 10 V of analog input or output.

## Related Topics

Analog Output (→ p. 120)

AOUT.VALUE (→ p. 431)

## 25.4.9 AOUT.VALUE

General Information	
Type	R/O Parameter
Description	Reads the analog output value.
Units	V
Range	-10 to +10 V
Default Value	0
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3470h/2	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2014	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	28	Yes	64 bit	Yes	M_01-03-00-000

### Description

AOUT.VALUE reads the analog output value.

### Related Topics

Analog Output (→ p. 120)

## 25.4.10 AOUT.VALUEU

General Information	
Type	R/W Parameter
Description	Sets the analog output value.
Units	V
Range	-10 to +10 V
Default Value	0
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3470h/3	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2016	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	32	Yes	64 bit	Yes	M_01-03-00-000

### Description

AOUT.VALUEU reads/writes the analog output value when AOUT.MODE (→ p. 426) = 0 (analog output signal is determined by the user).

### Related Topics

Analog Output (→ p. 120)

## 25.4.11 AOUT.VSCALE

General Information	
Type	NV Parameter
Description	Sets the velocity scale factor for analog output.
Units	Depends on UNIT.VROTARY or UNIT.ACCLINEAR Rotary: rpm/V, rps/V, (deg/s)/V, [(custom units)/s]/V, (rad/s)/V Linear: counts/s/V, (mm/s)/V, (μm/s)/V, [(custom units)/s]/V
Range	Rotary: 0.060 to 60,000 rpm/V 0.001 to 1,000 rps/V 0.359 to 360,000 (deg/s)/V 0.005 to 5,000 [(custom units)/s]/V 0.006 to 6,283.186 (rad/s)/V Linear: 0.001 to 1.000 counts/s/V 0.001*MOTOR.PITCH to 1,000.000*MOTOR.PITCH (mm/s)/V 0.998*MOTOR.PITCH to 1,000,000.000*MOTOR.PITCH(μm/s)/V 0.005 to 5,000 [(custom units)/s]/V
Default Value	Rotary: 0.060 rpm/V 0.001 rps/V 0.359 (deg/s)/V 0.005 [(custom units)/s]/V 0.006 (rad/s)/V Linear: 0.001 counts/s/V 0.001*MOTOR.PITCH (mm/s)/V 0.998*MOTOR.PITCH (μm/s)/V 0.005 [(custom units)/s]/V
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No

Variant	Supported
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3470h/5	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	AOUT.VSCALE_32	2018	DWord	No
sercos <sup>®</sup> III			8 Octets	
Profinet	AOUT.VSCALE	2858	DWord	
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	36	No	32 bit	No	M_01-03-00-000

## Description

AOUT.VSCALE is an analog velocity scale factor that scales the analog output (AOUT.VALUE) for AOUT.MODE = 1, 2, or 3. The value entered is the motor velocity per 10 V of analog output. This value may be either higher or lower than the application velocity limit (VL.LIMITP or VL.LIMITN), but the actual analog I/O will be limited by VL.LIMITP or VL.LIMITN.

## Related Topics

Analog Output (→ p. 120)

AOUT.VALUE (→ p. 431)

## 25.5 AOUT2 Parameters

This section describes the AOUT2 parameters.

---

<b>25.5.1 AOUT2.CUTOFF</b> .....	<b>436</b>
<b>25.5.2 AOUT2.MODE</b> .....	<b>437</b>
<b>25.5.3 AOUT2.OFFSET</b> .....	<b>438</b>
<b>25.5.4 AOUT2.VALUE</b> .....	<b>439</b>
<b>25.5.5 AOUT2.VALUEU</b> .....	<b>440</b>

## 25.5.1 AOUT2.CUTOFF

General Information	
Type	NV Parameter
Description	Sets the analog output 2 low-pass filter cutoff frequency.
Units	Hz
Range	0 to 10,000 Hz
Default Value	0 Hz
Data Type	Float
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1272	Yes	32-bit	No	M_01-06-03-000

### Description

AOUT2.CUTOFF sets the cutoff frequency in Hz for a single-pole low-pass filter on the Analog Output 2.

A value of 0 Hz will turn off the filter and will allow all frequencies to pass through.

The filter can be used with all modes of Analog Output 2.

### Related Topics

Analog Output (→ p. 120)

## 25.5.2 AOUT2.MODE

General Information	
Type	NV Parameter
Description	Sets the analog output 2 mode.
Units	N/A
Range	0
Default Value	0
Data Type	Integer
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1276	No	16 bit	No	M_01-06-03-000

### Description

AOUT2.MODE sets the analog output functionality.

Mode 0: User variable. The analog output 2 signal is determined by the user (using AOUT2.VALUEU (→ p. 440)).

### Example

You can use AOUT.MODE and AOUT.VALUEU to configure an output signal as follows:

```
-->AOUT.MODE 0
-->AOUT.VALUEU 5
-->AOUT.VALUEU 4.33
```

### Related Topics

Analog Output (→ p. 120)

## 25.5.3 AOUT2.OFFSET

General Information	
Type	NV Parameter
Description	Sets the analog output 2 offset.
Units	V
Range	-10 to +10 V
Default Value	0 V
Data Type	Float
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1278	No	16 bit	Yes	M_01-06-03-000

### Description

This parameter sets the analog output 2 offset.

### Related Topics

Analog Output (→ p. 120)

## 25.5.4 AOUT2.VALUE

General Information	
Type	R/O Parameter
Description	Reads the analog output 2 value.
Units	V
Range	-10 to +10 V
Default Value	0
Data Type	Float
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1284	Yes	64 bit	Yes	M_01-06-03-000

### Description

AOUT2.VALUE reads the analog output 2 value.

### Related Topics

Analog Output (→ p. 120)

## 25.5.5 AOUT2.VALUEU

General Information	
Type	R/W Parameter
Description	Sets the analog output 2 value.
Units	V
Range	-10 to +10 V
Default Value	0
Data Type	Float
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1288	Yes	64 bit	Yes	M_01-06-03-000

### Description

AOUT2.VALUEU reads/writes the analog output 2 value when AOUT2.MODE (→ p. 437) = 0 (analog output signal is determined by the user).

### Related Topics

Analog Output (→ p. 120)

## 25.6 BODE Parameters

This section describes the BODE parameters.

---

<b>25.6.1 BODE.EXCITEGAP</b> .....	<b>442</b>
<b>25.6.2 BODE.FREQ</b> .....	<b>444</b>
<b>25.6.3 BODE.IAMP</b> .....	<b>446</b>
<b>25.6.4 BODE.IFLIMIT</b> .....	<b>448</b>
<b>25.6.5 BODE.IFTHRESH</b> .....	<b>450</b>
<b>25.6.6 BODE.INJECTPOINT</b> .....	<b>452</b>
<b>25.6.7 BODE.MODE</b> .....	<b>454</b>
<b>25.6.8 BODE.MODETIMER</b> .....	<b>458</b>
<b>25.6.9 BODE.PRBDEPTH</b> .....	<b>461</b>
<b>25.6.10 BODE.VAMP</b> .....	<b>463</b>
<b>25.6.11 BODE.VFLIMIT</b> .....	<b>465</b>
<b>25.6.12 BODE.VFTHRESH</b> .....	<b>467</b>

## 25.6.1 BODE.EXCITEGAP

General Information	
Type	R/W Parameter
Description	Controls how often the excitation is updated.
Units	Drive samples
Range	1 to 255 drive samples
Default Value	2 drive samples
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2019	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	38	No	8 bit	No	M_01-03-00-000

### Description

BODE.EXCITEGAP controls how often the excitation is updated. The excitation is updated every  $n$  drive samples, where  $n$  is BODE.EXCITEGAP. For example, if BODE.EXCITEGAP = 2, then the excitation is updated every  $2/(16,000 \text{ Hz}) = 1/8,000 \text{ Hz} = 0.000125 \text{ sec}$ . When measuring a system, update the excitation only as often as the data is recorded.

### Example

Set excitation update rate to 8,000 Hz:

```
-->BODE.EXCITEGAP 2
```

Set excitation update rate to 4,000 Hz:

```
-->BODE.EXCITEGAP 4
```

Get excitation update rate (already set to 8000 Hz):

```
-->BODE.EXCITEGAP 2
```

## Related Topics

Using the Performance Servo Tuner (→ p. 193) | Using the Performance Servo Tuner: Advanced (→ p. 196)

Scope (→ p. 236)

Settings (→ p. 58)

F126 (→ p. 260)

Error: Invalid Bode plot mode for this function. (→ p. 283)

## 25.6.2 BODE.FREQ

General Information	
Type	R/W Parameter
Description	Sets the frequency of the sine excitation source.
Units	Hz
Range	0 to 8,000 Hz
Default Value	0 Hz
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2020	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	40	No	32 bit	No	M_01-03-00-000

### Description

BODE.FREQ sets the frequency of the sine excitation source in Hz. The sine excitation source is used to take frequency response measurements of a system.

### Example

Setting up a sine excitation source of 0.2 A at 50 Hz:

```
-->BODE.INJECTPOINT 1
-->BODE.IAMP 0.2
-->BODE.FREQ 50.0
```

-->BODE.MODE 2

## Related Topics

Using the Performance Servo Tuner (→ p. 193)

Using the Performance Servo Tuner: Advanced (→ p. 196)

Scope (→ p. 236)

Settings (→ p. 58)

F126 (→ p. 260)

Error: Invalid Bode plot mode for this function. (→ p. 283)

BODE.MODE (→ p. 454)

BODE.INJECTPOINT (→ p. 452)

BODE.VAMP (→ p. 463)

BODE.IAMP (→ p. 446)

## 25.6.3 BODE.IAMP

General Information	
Type	R/W Parameter
Description	Sets current command value used during the Bode procedure.
Units	A
Range	+/- Combined drive and motor current limit
Default Value	0.2 A
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2021	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	42	No	32 bit	Yes	M_01-03-00-000

### Description

BODE.IAMP sets the amplitude of the excitation when in current mode as set in BODE.INJECTPOINT. When using BODE.MODE (→ p. 454) = 1 and BODE.INJECTPOINT (→ p. 452) = 1, this parameter will determine the level of noise injected to commanded current value.

### Example

Set the excitation current to 0.2 A:

```
-->BODE.IAMP 0.2
```

Get the excitation current (already set to 0.2 A):

-->BODE.IAMP 0.200 [A]

## Related Topics

Using the Performance Servo Tuner (→ p. 193)

Using the Performance Servo Tuner: Advanced (→ p. 196)

Scope (→ p. 236)

Settings (→ p. 58)

F126 (→ p. 260)

Error: Invalid Bode plot mode for this function. (→ p. 283)

BODE.INJECTPOINT (→ p. 452) | BODE.FREQ (→ p. 444)

## 25.6.4 BODE.IFLIMIT

General Information	
Type	R/W Parameter
Description	Sets the current fault duration limit in seconds for the BODE.MODE 5 stability test.
Units	s
Range	0.001 to 60.000
Default Value	0
Data Type	Decimal
Start Version	M_01-02-10-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2648	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1296	No	32 bit	Yes	M_01-06-03-000

### Description

When BODE.MODE is set to 5, the firmware monitors the drive current (IL.CMD (→ p. 880)). When IL.CMD goes above BODE.IFTHRESH (→ p. 450), an internal counter records the length of time IL.CMD was above BODE.IFTHRESH. If the internal counter reaches BODE.IFLIMIT, Fault 133 – Instability during Autotune will be generated.

The smaller BODE.IFLIMIT, the quicker Fault 133 will be generated when IL.CMD exceeds BODE.IFLIMIT.

### Example

Set BODE.IFTHRESH to 6 Amps:

```
-->BODE.IFTHRESH 6
```

Set BODE.IFLIMIT to 0.500 seconds:

```
-->BODE.IFLIMIT 0.5
```

Set BODE.MODE to 5 to enable stability detection:

```
BODE.MODE 5
```

## Related Topics

Using the Performance Servo Tuner (→ p. 193)

Using the Performance Servo Tuner: Advanced (→ p. 196)

F133 (→ p. 261)

BODE.MODE (→ p. 454), BODE.MODETIMER (→ p. 458), BODE.IFTHRESH (→ p. 450),  
BODE.VFLIMIT (→ p. 465), BODE.VFTHRESH (→ p. 467)

## 25.6.5 BODE.IFTHRESH

General Information	
Type	R/W Parameter
Description	Sets the current fault threshold for the BODE.MODE 5 stability test.
Units	A
Range	0.001 to DRV.IPEAK or MOTOR.IPEAK (whichever is lowest) A
Default Value	0 A
Data Type	Decimal
Start Version	M_01-02-10-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2649	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1298	No	32 bit	Yes	M_01-06-03-000

### Description

When BODE.MODE (→ p. 454) is set to 5, the firmware monitors the drive current (IL.CMD (→ p. 880)). When IL.CMD goes above BODE.IFTHRESH, an internal counter records the length of time IL.CMD was above BODE.IFTHRESH. If the internal counter reaches BODE.IFLIMIT (→ p. 448), Fault 133 (Instability during Autotune) is generated.

Example

Set BODE.IFTHRESH to 6 Amps:

```
-->BODE.IFTHRESH 6
```

Set BODE.IFLIMIT to 0.500 seconds:

```
-->BODE.IFLIMIT 0.5
```

Set BODE.MODE to 5 to enable stability detection:

```
BODE.MODE 5
```

## Related Topics

Using the Performance Servo Tuner (→ p. 193)

Using the Performance Servo Tuner: Advanced (→ p. 196)

F133 (→ p. 261)

BODE.MODE (→ p. 454), BODE.MODETIMER (→ p. 458), BODE.VFLIMIT (→ p. 465),

BODE.VFTHRESH (→ p. 467), BODE.IFLIMIT (→ p. 448)

## 25.6.6 BODE.INJECTPOINT

General Information	
Type	R/W Parameter
Description	Sets whether the excitation uses current or velocity excitation type.
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2022	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	44	No	8 bit	No	M_01-03-00-000

### Description

BODE.INJECTPOINT sets whether the excitation uses current or velocity excitation type.

BODE.INJECTPOINT	Description
0	None
1	Current
2	Velocity

### Example

Set BODE.INJECTPOINT to current:

```
-->BODE.INJECTPOINT 1
```

Get BODE.INJECTPOINT (already set to current):

```
-->BODE.INJECTPOINT 1
```

## Related Topics

Using the Performance Servo Tuner (→ p. 193)

Using the Performance Servo Tuner: Advanced (→ p. 196)

Scope (→ p. 236)

Settings (→ p. 58)

F126 (→ p. 260)

Error: Invalid Bode plot mode for this function. (→ p. 283)

BODE.IAMP (→ p. 446), BODE.MODE (→ p. 454), BODE.VAMP (→ p. 463)

## 25.6.7 BODE.MODE

General Information	
Type	R/W Parameter
Description	Sets the mode of the excitation.
Units	N/A
Range	0 to 4
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2023	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	46	No	8 bit	No	M_01-03-00-000

### Description

BODE.MODE sets the mode of the excitation. The excitation can be set to the modes shown in the table below. BODE.MODE is always set to **None** when Ethernet communication is disconnected. The peak amplitude of the excitation is set by either BODE.IAMP or BODE.VAMP (depending on BODE.INJECTPOINT).

BODE.MODE is subject to a watchdog timer (BODE.MODETIMER) as follows:

- If BODE.MODETIMER is 0, then BODE.MODE is not affected.

- If BODE.MODETIMER is set to a value greater than 0, then BODE.MODE will be set to 0 (None) after the BODE.MODETIMER time milliseconds.
- If BODE.MODE is a nonzero value, and you reset BODE.MODE to another nonzero value, you will reset the watchdog timer. This mechanism is intended to turn off the excitation signal if you lose communication with the drive.

BODE.MODE	Description	Comments
0	None	Turns all excitation off
1	PRB	Uses Pseudo Random Binary (PRB) excitation. PRB is a signal that is always +/- peak amplitude, varying only in phase. PRB excitation results in a flat excitation frequency spectrum. PRB results in a high peak excitation amplitude, which can help minimize friction in a frequency response test. PRB excitation repeats every $(2^{BODE.PRBDEPTH}) / BODE.EXCITEGAP$ drive samples. This repetition can be used to reveal the effects of friction.
2	Sine	Uses Sine excitation
3	Noise	Uses random noise excitation. Noise is a random number generator that varies between +/- peak amplitude.
4	Offset	Sets a torque offset equal to BODE.IAMP

## Example


Set BODE.MODE to PRB:

```
-->BODE.MODE 1
```


Get BODE.MODE (already set to PRB):

```
-->BODE.MODE 1
```

**PRB excitation:**

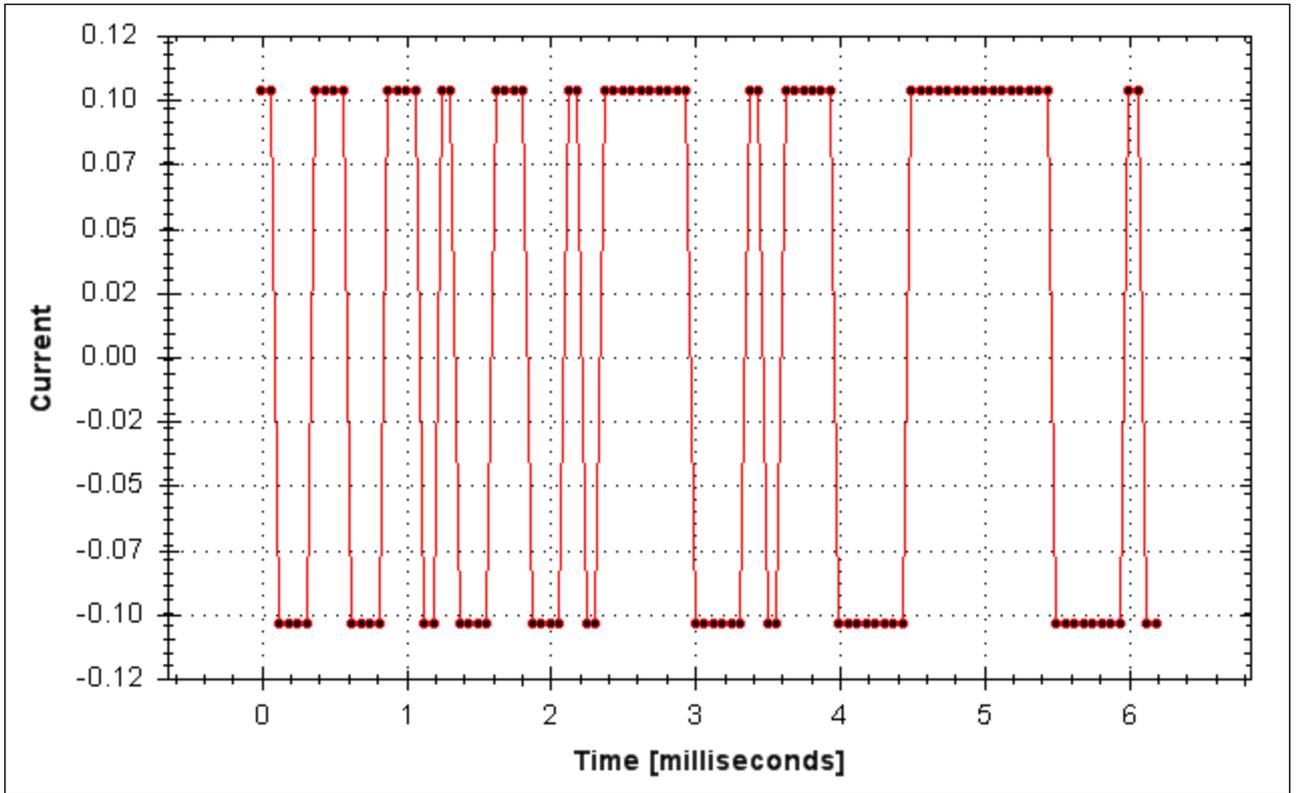

Sine excitation:

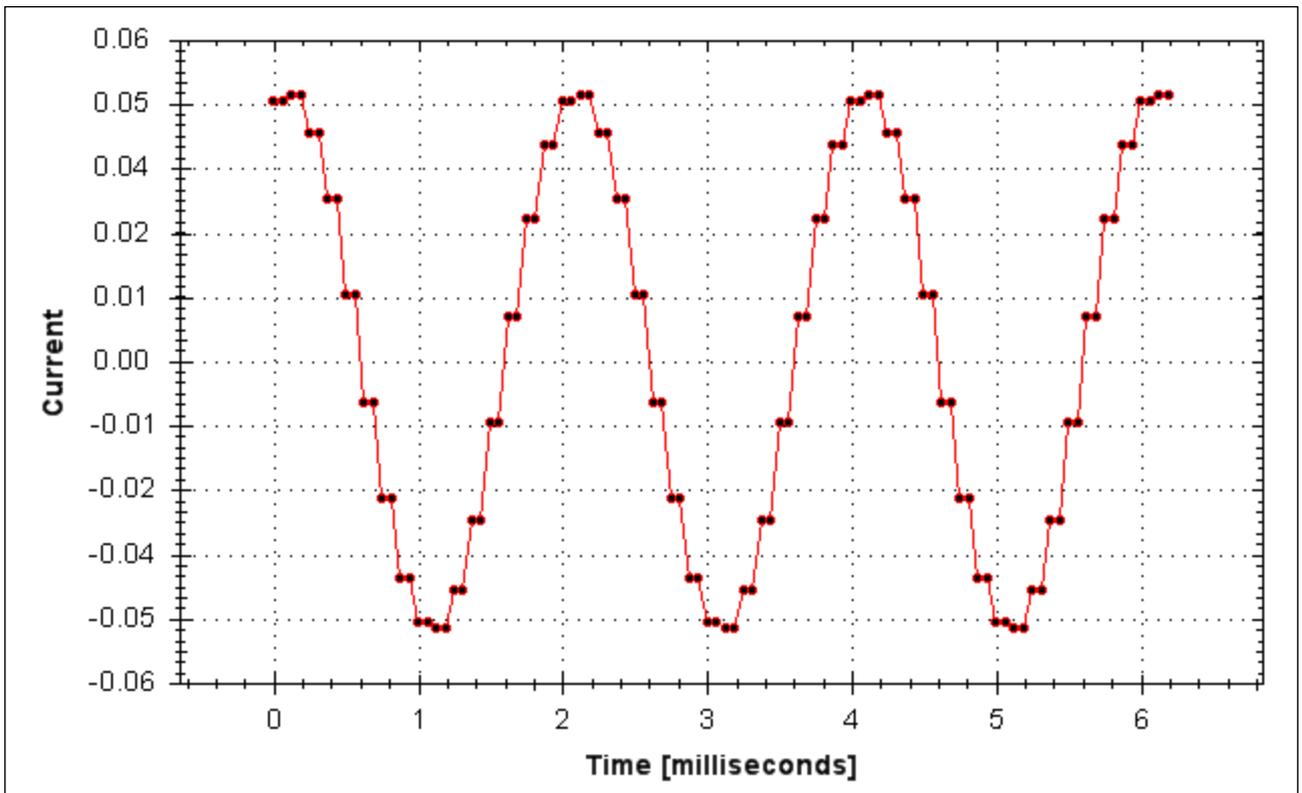

Noise excitation:



## 25.6.8 BODE.MODETIMER

General Information	
Type	R/W Parameter
Description	Sets the watchdog timer of the excitation.
Units	ms
Range	0 to 268,435,456
Default Value	0
Data Type	Integer
Start Version	M_1-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2024	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	48	No	32 bit	No	M_01-03-00-000

### Description

BODE.MODETIMER sets the watchdog timer for the excitation. This watchdog is used to automatically turn off the excitation of the system if communication is lost. It is highly recommended that you use the watchdog for any excitation measurements. The WorkBench Performance Servo Tuner and Bode tool automatically use these values, requiring no action from you.

If the BODE.MODETIMER is a nonzero value, the Bode watchdog is enabled. BODE.MODE will be set to 0 (None) after the BODE.MODETIMER value elapses. To reset the watchdog timer, reset BODE.MODE to a nonzero value.

BODE.MODETIMER	Comments
0	BODE.MODE is left at the value you set it to.
> 0	<p>Uses pseudo random binary (PRB) excitation. PRB is a signal that is always +/- peak amplitude, varying only in phase.</p> <p>PRB excitation results in a flat excitation frequency spectrum. PRB also results in a high peak excitation amplitude, which can help minimize friction in a frequency response test.</p> <p>PRB excitation repeats every <math>(2^{\text{BODE.PRBDEPTH}})/\text{BODE.EXCITEGAP}</math> drive samples. This repetition can be used to reveal the effects of friction.</p>

## Example

### Disable BODE.MODETIMER:

```
-->BODE.MODETIMER //
```

Set to 0 to disable the watchdog

```
0
```

```
-->BODE.MODE // Observe starting state of the Bode mode
```

```
0
```

```
-->BODE.MODE 1 // Set Bode mode to PRB
```

```
-->BODE.MODE // Observe Bode mode state is the same after 0.5 seconds
```

```
1
```

```
-->BODE.MODE // Observe Bode mode state is the same after 10 seconds
```

```
1
```

### Enable BODE.MODETIMER:

```
-->BODE.MODETIMER 1000 // Set watchdog to 1 second
```

```
-->BODE.MODE 1 // Set Bode mode to PRB
```

```
-->BODE.MODE // Observe Bode mode state is the same after 0.5 seconds
```

```
1
```

```
-->BODE.MODE // Observe Bode mode state has been set to zero after 1.0 seconds
```

```
0
```

### Enable and reenable BODE.MODETIMER:

```
-->BODE.MODETIMER 2500 // Set watchdog to 2.5 seconds
```

```
-->BODE.MODE 1 // Set Bode mode to PRB
```

```
-->BODE.MODE // Observe Bode mode state is the same after 1.5 seconds
```

```
1
```

```
-->BODE.MODE 1 // Set Bode mode to PRB, resetting the watchdog timer to the original 2.5 second value
```

set above.

```
-->BODE.MODE // Observe Bode mode state is the same after 3.0 seconds after the original enabling of BODE.MODE 1
```

```
-->BODE.MODE // Observe Bode mode state has been set to zero after 4.0 seconds after the original enabling
```

```
of BODE.MODE
```

```
0
```

## Related Topics

Using the Performance Servo Tuner (→ p. 193)

Using the Performance Servo Tuner: Advanced (→ p. 196)

Scope (→ p. 236)

Settings (→ p. 58)

F126 (→ p. 260)

Error: Invalid Bode plot mode for this function. (→ p. 283)

BODE.MODE (→ p. 454)

## 25.6.9 BODE.PRBDDEPTH

General Information	
Type	R/W Parameter
Description	Sets the length of the PRB signal before it repeats.
Units	NA
Range	4 to 19
Default Value	19
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2025	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	50	No	8 bit	No	M_01-03-00-000

### Description

BODE.PRBDDEPTH sets the length of the PRB signal before it repeats. This applies only when BODE.MODE = PRB. The PRB excitation will repeat after  $(2^{\text{BODE.PRBDDEPTH}}) / \text{BODE.EXCITEGAP}$  drive samples.

### Example

Set BODE.PRBDDEPTH to 19:

```
-->BODE.PRBDDEPTH 19
```

Get BODE.PRBDDEPTH (already set to 19):

-->BODE.PRBDEPTH 19

## Related Topics

Using the Performance Servo Tuner (→ p. 193)

Using the Performance Servo Tuner: Advanced (→ p. 196)

Scope (→ p. 236)

Settings (→ p. 58)

F126 (→ p. 260)

Error: Invalid Bode plot mode for this function. (→ p. 283)

BODE.MODE (→ p. 454), BODE.INJECTPOINT (→ p. 452), BODE.IAMP (→ p. 446), BODE.VAMP (→ p. 463)

## 25.6.10 BODE.VAMP

General Information	
Type	R/W Parameter
Description	Sets the amplitude of the excitation when in velocity mode.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) UNIT.ACCLINEAR (→ p. 1218) Rotary: rpm, rps, deg/s, (Custom Units (→ p. 100))/V, rad/s Linear: counts/s, mm/s, µm/s, (Custom Units (→ p. 100))/V
Range	Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 degree/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s 0.000 to 1,570.796 rad/s Linear: 0.000 to 1,073,741,824,000.000 counts/s 0.000 to 8,000.000 mm/s 0.000 to 8,000,000.000 µm/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s
Default Value	0
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	BODE.VAMPE_32	2026	DWord	Yes
sercos® III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	52	Yes	Low 32 bit word	Yes	M_01-03-00-000

## Description

BODE.VAMP sets the amplitude of the excitation when in velocity mode as set in BODE.INJECTPOINT.

## Example

Set the excitation velocity to 100 RPM

```
-->BODE.VAMP 100
```

Get the excitation velocity(already set to 100 RPM)

```
-->BODE.VAMP
```

100.000 [rpm]

## Related Topics

Using the Performance Servo Tuner (→ p. 193)

Using the Performance Servo Tuner: Advanced (→ p. 196)

Scope (→ p. 236)

Settings (→ p. 58)

F126 (→ p. 260)

Error: Invalid Bode plot mode for this function. (→ p. 283)

BODE.MODE (→ p. 454), BODE.INJECTPOINT (→ p. 452)

## 25.6.11 BODE.VFLIMIT

General Information	
Type	R/W Parameter
Description	Sets the velocity fault duration limit (seconds) for the BODE.MODE 5 stability test
Units	s
Range	0.001 to 60.000
Default Value	0
Data Type	Decimal
Start Version	M_01-02-10-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2650	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1300	No	32 bit	Yes	M_01-06-03-000

### Description

When BODE.MODE is set to 5, the firmware monitors the drive feedback velocity VL.FB. When VL.FB goes above BODE.VFTHRESH, an internal counter records the length of time VL.FB was above BODE.VFTHRESH. If the internal counter reaches BODE.VFLIMIT, Fault 133 – Instability during Autotune will be generated.

The smaller BODE.VFLIMIT, the quicker Fault 133 will be generated when VL.FB exceeds BODE.VFLIMIT.

### Example

Set BODE.VFTHRESH to 10 RPM:

```
-->BODE.VFTHRESH 10
```

Set BODE.VFLIMIT to 0.500 seconds

```
-->BODE.VFLIMIT 0.5
```

Set BODE.MODE to 5 to enable stability detection

```
-->BODE.MODE 5
```

## Related Topics

Using the Performance Servo Tuner (→ p. 193)

Using the Performance Servo Tuner: Advanced (→ p. 196)

F133 (→ p. 261)

BODE.MODE, BODE.MODETIMER, BODE.IFLIMIT, BODE.IFTHRESH, BODE.VFTHRESH

## 25.6.12 BODE.VFTHRESH

General Information	
Type	R/W Parameter
Description	Sets the current fault threshold for the BODE.MODE 5 stability test.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) UNIT.ACCLINEAR (→ p. 1218) Rotary: rpm, rps, deg/s, (Custom Units (→ p. 100))/V, rad/s Linear: counts/s, mm/s, µm/s, (Custom Units (→ p. 100))/V
Range	Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 deg/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s 0.000 to 1,570.796 rad/s Linear: 0.000 to 1,073,741,824,000.000 counts/s 0.000 to 8,000.000 mm/s 0.000 to 8,000,000.000 µm/s
Default Value	0
Data Type	Decimal
Start Version	M_01-02-10-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2651	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1302	Yes	64 bit	Yes	M_01-06-03-000

## Description

When BODE.MODE is set to 5, the firmware monitors the drive feedback velocity VL.FB. When VL.FB goes above BODE.VFTHRESH, an internal counter records the length of time VL.FB was above BODE.VFTHRESH. If the internal counter reaches BODE.VFLIMIT, Fault 133 – Instability during Autotune will be generated.

The smaller BODE.VFLIMIT, the quicker Fault 133 will be generated when VL.FB exceeds BODE.VFLIMIT.

## Example

Set BODE.VFTHRESH to 10 RPM:

```
-->BODE.VFTHRESH 10
```

Set BODE.VFLIMIT to 0.500 seconds:

```
-->BODE.VFLIMIT 0.5
```

Set BODE.MODE to 5 to enable stability detection:

```
-->BODE.MODE 5
```

## Related Topics

Using the Performance Servo Tuner (→ p. 193)

Using the Performance Servo Tuner: Advanced (→ p. 196)

F133 (→ p. 261)

BODE.MODE, BODE.MODETIMER, BODE.IFLIMIT, BODE.IFTHRESH, BODE.VFLIMIT

## 25.7 CAP Parameters

This section describes the CAP parameters.

---

<b>25.7.1 CAP0.EDGE, CAP1.EDGE</b> .....	<b>470</b>
<b>25.7.2 CAP0.EN, CAP1.EN</b> .....	<b>472</b>
<b>25.7.3 CAP0.EVENT, CAP1.EVENT</b> .....	<b>474</b>
<b>25.7.4 CAP0.FBSOURCE, CAP1.FBSOURCE</b> .....	<b>477</b>
<b>25.7.5 CAP0.FILTER, CAP1.FILTER</b> .....	<b>479</b>
<b>25.7.6 CAP0.MODE, CAP1.MODE</b> .....	<b>481</b>
<b>25.7.7 CAP0.PLFB, CAP1.PLFB</b> .....	<b>483</b>
<b>25.7.8 CAP0.PREEDGE, CAP1.PREEDGE</b> .....	<b>485</b>
<b>25.7.9 CAP0.PREFILTER, CAP1.PREFILTER</b> .....	<b>487</b>
<b>25.7.10 CAP0.PRESELECT, CAP1.PRESELECT</b> .....	<b>489</b>
<b>25.7.11 CAP0.STATE, CAP1.STATE</b> .....	<b>491</b>
<b>25.7.12 CAP0.T, CAP1.T</b> .....	<b>493</b>
<b>25.7.13 CAP0.TRIGGER, CAP1.TRIGGER</b> .....	<b>495</b>

## 25.7.1 CAP0.EDGE, CAP1.EDGE

General Information	
Type	NV Parameter
Description	Selects the capture edge.
Units	N/A
Range	1 to 3
Default Value	1
Data Type	U8
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Paramter	Fieldbus	Address	Attributes	Signed?
CAP0.EDGE	Profinet	2027	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.EDGE	Profinet	2040	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	54	CAP0.EDGE	No	8 bit	No	M_01-03-00-000
	80	CAP1.EDGE				

### Description

The filtered trigger source is monitored for rising edge, falling edge, or both edges. The event mode logic may ignore the precondition edge detection; however, the trigger always uses edge detection.

The precondition logic has an identical feature controlled by CAP0.PREEDGE, CAP1.PREEDGE (→ p. 485).

Value	Description
0	Reserved
1	Rising edge
2	Falling edge
3	Both edges

## Related Topics

Using Position Capture (→ p. 92)

CAP0.PREEDGE, CAP1.PREEDGE

## 25.7.2 CAP0.EN, CAP1.EN

General Information	
Type	NV Parameter
Description	Enables or disables the related capture engine.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Boolean
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
CAP0.EN	Profinet	2028	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.EN	Profinet	2041	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	56	CAP0.EN	No	8 bit	No
	82	CAP1.EN			

### Description

This parameter enables or disables the related capture engine. After each successful capture event, this parameter is reset to 0 and must be activated again for the next capture. Also note that CAP0.PLFB, CAP1.PLFB (→ p. 483) is set to 0 when this parameter is set to 1.

0 = Disable

1 = Enable

## **Related Topics**

Using Position Capture (→ p. 92)

## 25.7.3 CAP0.EVENT, CAP1.EVENT

General Information	
Type	NV Parameter
Description	Controls the precondition logic.
Units	N/A
Range	0 to 3
Default Value	0
Data Type	U8
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	3460h/5	CAP0.EVENT	M_01-00-00-000
	3460h/6	CAP1.EVENT	

Parameter	Fieldbus	Address	Attributes	Signed?
CAP0.EVENT	Profinet	2029	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.EVENT	Profinet	2042	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	58	CAP0.EVENT	No	8 bit	No	M_01-03-00-000
	84	CAP1.EVENT				

### Description

The event mode controls use of the precondition logic. If this field is not 0, then the precondition input is selected by CAPx.TRIGGER. If this field is 1, then the precondition edge is selected by the CAPx.PREEDGE. The four event modes are listed below.

Event	Description
0	Precondition settings ignored.
1	Trigger on first trigger event after selected edge on precondition input.
2	Trigger on first trigger event to occur while precondition input is 1
3	Trigger on first trigger event to occur while precondition input is 0.

## Example

### Event 0

The following diagram shows an example of Event = 0 (trigger on edge, trigger edge = rising). In this mode, the precondition logic is ignored.

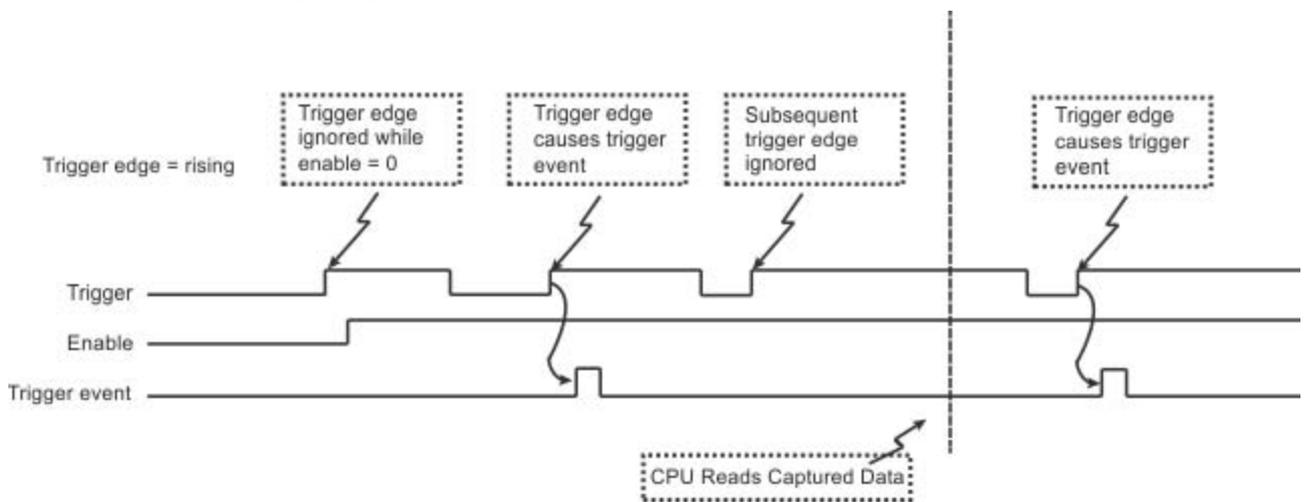


Figure 1: Trigger Edge Mode

### Events 2 and 3 (Trigger edge while precondition = 0 or 1)

In these events, the precondition logic samples the current (post-filter) state of the selected precondition source input. The capture engine looks for a trigger edge while the precondition input is at a “1” or “0” state.

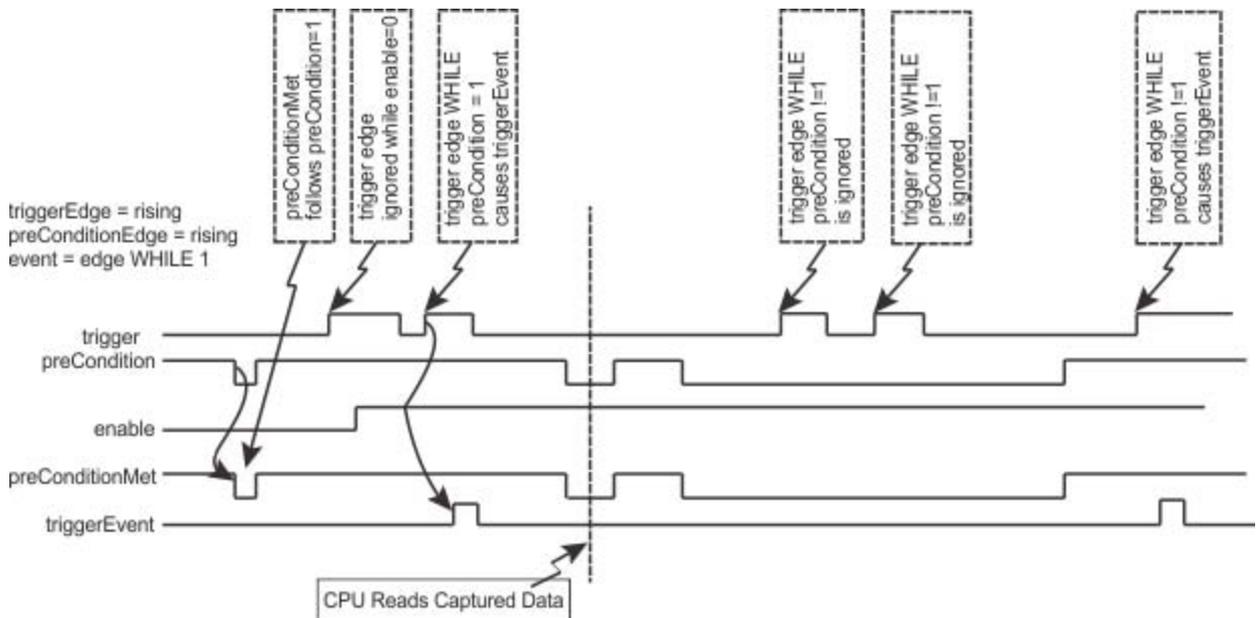


Figure 2: Trigger edge WHILE precondition edge

### Event 1 (Trigger edge after precondition)

In this event, each trigger event requires Enable=1, a new precondition edge, followed by a new trigger edge. The sequence requirements are shown in the figure below.

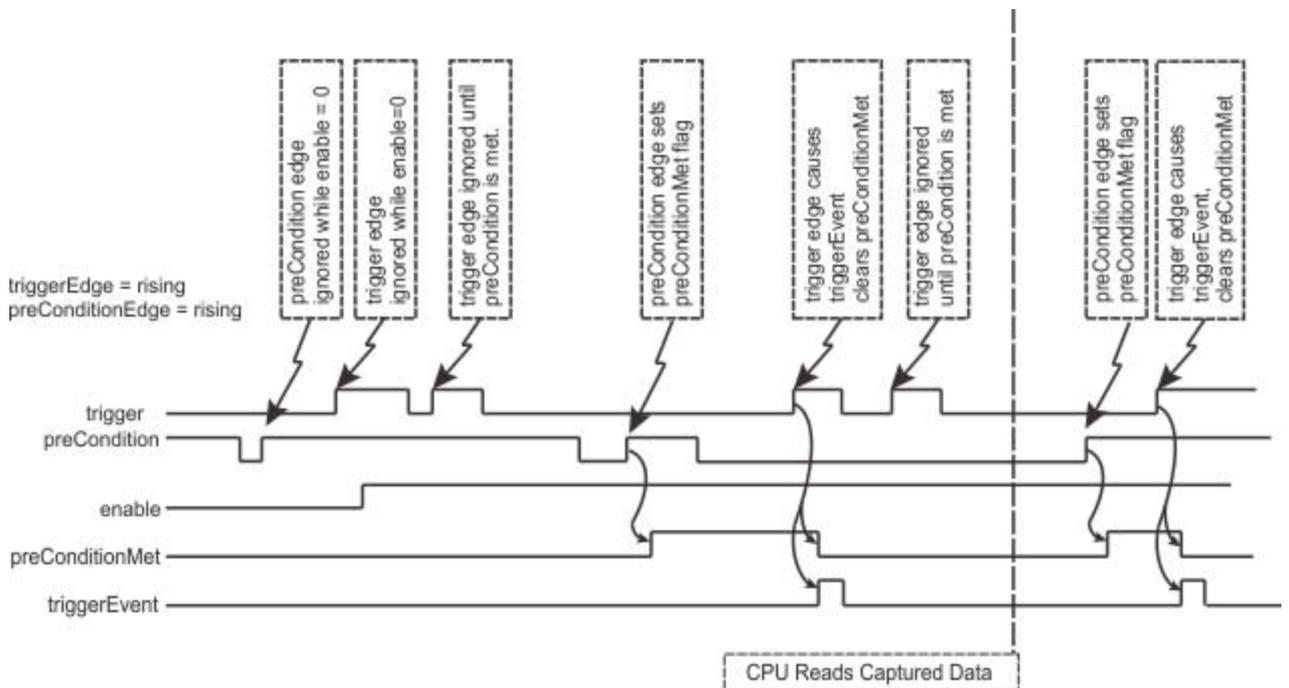


Figure 3: Trigger edge after precondition edge

Note: If the precondition and trigger edges occur at the same time, it is not a valid trigger event. A subsequent trigger edge must occur after the precondition edge. The same time resolves to a single 40 ns clock tick in the trigger event logic (after the optional filter function as well as any sensor, cable, or noise delays).

### Related Topics

Using Position Capture (→ p. 92)

## 25.7.4 CAP0.FBSOURCE, CAP1.FBSOURCE

General Information	
Type	NV Parameter
Description	Selects the source of the captured value.
Units	N/A
Range	0 to 4
Default Value	0
Data Type	U8
Start Version	M_01-10-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
CAP0.FBSOURCE	Profinet	2883	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.FBSOURCE	Profinet	2884	Byte	
	sercos <sup>®</sup> III		2 Octets	

### Description

CAP0.FBSOURCE and CAP1.FBSOURCE select the source of the captured value. Data for all source values is retrieved with CAP0.PLFB, CAP1.PLFB (→ p. 483).

Value	Description
0	Captures from feedback 1 (FB1), independent of the value of PL.FBSOURCE. The units are the same as those used for PL.FB.
1	Captures from feedback 2 (FB2).
2	Captures from feedback 3 (FB3).

Value	Description
3	Standard position capture, which stores PL.FB (→ p. 1094). The feedback number is determined by PL.FBSOURCE (→ p. 1096).
4	Captures from EXTENCODER.POSITION (AKD BASIC drives only).

## Related Topics

Using Position Capture (→ p. 92)

## 25.7.5 CAP0.FILTER, CAP1.FILTER

General Information	
Type	R/W Parameter
Description	Sets the filter for the capture source input.
Units	N/A
Range	0 to 2
Default Value	0
Data Type	U8
Start Version	M_01-00-00-000
End Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Paramter	Fieldbus	Address	Attributes	Signed?
CAP0.FILTER	Profinet	2030	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.FILTER	Profinet	2043	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	60	CAP0.FILTER	No	8 bit	No	M_01-03-00-000
	86	CAP1.FILTER				

### Description

These parameters are not functional in M\_01-03-00-000. In future releases, you can use DINx.FILTER to select a filter on the input channel.

### **Related Topics**

DIN1.FILTER TO DIN7.FILTER (→ p. 544)

## 25.7.6 CAP0.MODE, CAP1.MODE

General Information	
Type	NV Parameter
Description	Selects the captured value.
Units	N/A
Range	0 to 4
Default Value	0
Data Type	U8
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	3460h/3	CAP0.MODE	M_01-00-00-000
	3460h/4	CAP1.MODE	

Parameter	Fieldbus	Address	Attributes	Signed?
CAP0.MODE	Profinet	2031	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.MODE	Profinet	2044	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	62	CAP0.MODE	No	8 bit	No	M_01-03-00-000
	88	CAP1.MODE				

### Description

**Mode 0: Standard Position**

Mode 0 is the standard position capture. The source of the captured position is determined by CAP0.FBSOURCE, CAP1.FBSOURCE (→ p. 477). Data can be retrieved with CAP0.PLFB, CAP1.PLFB (→ p. 483).

**Mode 1: Drive Internal Time**

Mode 1 is the drive internal time capture. Data can be retrieved with CAP0.T, CAP1.T (→ p. 493).

**Mode 2: Distributed Clock Time**

Mode 2 is the KAS EtherCAT distributed clock time (DCT) capture. Instead of using a position value, the DCT is calculated. There is no user parameter to retrieve the captured DCT. Attempting to set Mode = 2 with anything other than an EtherCAT system will result in an invalid parameter error.

**Mode 3: Primary Encoder Signal**

Mode 3 is the capture of the primary encoder signal. This mode is used to home onto a feedback index. This mode sets the other parameters needed for this mode. These parameters can be changed later, but this is not recommended unless the input source of the index signal varies. Parameters set in this mode are:

- CAPx.TRIGGER 10: index mark of primary encoder
- CAPx.EDGE 1: rising edge
- CAPx.EVENT 0: ignore precondition

Also the capture engine is immediately enabled and is continuously triggered again.

**Mode 4: Auto-Armed Position**

Mode 4 is similar to Mode 0 (standard position capture), except that the re-enabling of the capture is done automatically. This mode can be used for the registration move.

**Related Topics**

Using Position Capture (→ p. 92)

## 25.7.7 CAP0.PLFB, CAP1.PLFB

General Information		
Type	R/O Parameter	
Description	Reads captured position value.	
Units	Units depend on units of captured source (CAP0.FBSOURCE, CAP1.FBSOURCE (→ p. 477)):	
	CAPx.FBSOURCE value	Units
	0 (FB1.P (→ p. 748))	Units depend on value of FB1.PUNIT (→ p. 758).
	1 (FB2.P (→ p. 779))	Units depend on value of FB2.PUNIT (→ p. 783).
	2 (FB3.P (→ p. 792))	Units depend on value of FB3.PUNIT (→ p. 798).
	3 (PL.FB (→ p. 1094))	Units depend on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225).
4 (EXTENCODER.POSITION)	Units same as units for EXTENCODER.POSITION.	
Range	Full range of a signed 64 bit variable	
Default Value	0	
Data Type	S64	
Start Version	M_01-00-00-000	

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	20A0h/0	CAP0.PLFB	M_01-00-00-000
	20A1h/0	CAP0.PLFB	
	20A2h/0	CAP1.PLFB	
	20A3h/0	CAP1.PLFB	

Paramter	Fieldbus	Address	Attributes	Signed?
CAP0.PLFB	Profinet	2032	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
CAP1.PLFB	Profinet	2045	DWord	
	sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	64	CAP0.PLFB	Yes	64 bit	Yes	M_01-03-00-000
	90	CAP1.PLFB				

## Description

This parameter reads the captured position value scaled to actual set units.

## Related Topics

Using Position Capture (→ p. 92)

## 25.7.8 CAP0.PREEDGE, CAP1.PREEDGE

General Information	
Type	NV Parameter
Description	Selects the capture precondition edge.
Units	N/A
Range	1 to 3
Default Value	1
Data Type	U8
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	3460h/7	CAP0.PREEDGE	M_01-00-00-000
	3460h/8	CAP1.PREEDGE	

Parameter	Fieldbus	Address	Attributes	Signed?
CAP0.PREEDGE	Profinet	2034	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.PREEDGE	Profinet	2047	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	68	CAP0.PREEDGE	No	8 bit	No	M_01-03-00-000
	94	CAP1.PREEDGE				

## Description

The precondition edge is monitored for rising edge, falling edge, or both. The event mode logic may ignore the precondition edge detection (trigger always uses edge detection).

The filtered trigger source has an identical feature controlled by CAP0.EDGE, CAP1.EDGE (→ p. 470).

Value	Description
0	Reserved
1	Rising edge
2	Falling edge
3	Both edges

## Related Topics

Using Position Capture (→ p. 92)

CAP0.EDGE, CAP1.EDGE (→ p. 470)

## 25.7.9 CAP0.PREFILTER, CAP1.PREFILTER

General Information	
Type	NV Parameter
Description	Sets the filter for the precondition input source.
Units	N/A
Range	0 to 2
Default Value	0
Data Type	U8
Start Version	M_01-00-00-000
End Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
CAP0.PREFILTER	Profinet	2035	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.PREFILTER	Profinet	2048	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	70	No	8 bit	No	M_01-03-00-000
	96				

### Description

These parameters are not functional in M\_01-03-00-000. In future releases, you can use DINx.FILTER to select a filter on the input channel.

## **Related Topics**

DIN1.FILTER TO DIN7.FILTER (→ p. 544)

## 25.7.10 CAP0.PRESELECT, CAP1.PRESELECT

General Information	
Type	NVParameter
Description	Sets the precondition trigger.
Units	N/A
Range	0 to 10
Default Value	0
Data Type	U8
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	3460h/9	CAP0.PRESELECT	M_01-00-00-000
	3460h/10	CAP1.PRESELECT	

Parameter	Fieldbus	Address	Attributes	Signed?
CAP0.PRESELECT	Profinet	2036	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.PRESELECT	Profinet	2049	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	72	CAP0.PRESELECT	No	8 bit	No	M_01-03-00-000
	98	CAP1.PRESELECT				

### Description

This parameter specifies the input signal for the precondition trigger.

Trigger Source	Input Name
0	General Input 1 (X7)
1	General Input 2 (X7)
2	General Input 3 (X7)
3	General Input 4 (X7)
4	General Input 5 (X8)
5	General Input 6 (X7)
6	General Input 7 (X7)
7	RS485 Input 1 (X9)
8	RS485 Input 2 (X9)
9	RS485 Input 3 (X9)
10	Primary Index

## Related Topics

Using Position Capture (→ p. 92)

CAP0.TRIGGER, CAP1.TRIGGER (→ p. 495)

## 25.7.11 CAP0.STATE, CAP1.STATE

General Information	
Type	R/O Parameter
Description	Indicates whether or not trigger source was captured.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
CAP0.STATE	Profinet	2037	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.STATE	Profinet	2050	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	74	CAP0.STATE	No	8 bit	No	M_01-03-00-000
	100	CAP1.STATE				

### Description

When enabling the capture (CAP0.EN, CAP1.EN (→ p. 472)), this parameter is set to 0 until the next event is captured.

0 = Not captured or Capture Disabled

1 = Captured

## **Related Topics**

Using Position Capture (→ p. 92)

## 25.7.12 CAP0.T, CAP1.T

General Information	
Type	R/O Parameter
Description	Reads time capture (if time capture was configured).
Units	ns
Range	N/A
Default Value	N/A
Data Type	U32
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
CAP0.T	Profinet	2038	DWord	No
	sercos <sup>®</sup> III		4 Octets	
CAP1.T	Profinet	2051	DWord	
	sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	20A0h/0	CAP0.T	M_01-00-00-000
	20A0h/0	CAP0.T	
	20A2h/0	CAP1.T	
	20A3h/0	CAP1.T	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	76	CAP0.T	No	32 bit	No	M_01-03-00-000
	102	CAP1.T				

## Description

If time capture was configured, the captured time is stored in this parameter. The reference time is the occurrence of the last MTS signal (recurring every 62.5  $\mu$ s), so this is a purely drive internal time.

## Related Topics

Using Position Capture (→ p. 92)

CAP0.MODE, CAP1.MODE (→ p. 481)

## 25.7.13 CAP0.TRIGGER, CAP1.TRIGGER

General Information	
Type	NV Parameter
Description	Specifies the trigger source for the position capture.
Units	N/A
Range	0 to 11
Default Value	0
Data Type	U8
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	3460h/1	CAP0.TRIGGER	M_01-00-00-000
	3460h/2	CAP1.TRIGGER	

Parameter	Fieldbus	Address	Attributes	Signed?
CAP0.TRIGGER	Profinet	2039	Byte	No
	sercos <sup>®</sup> III		2 Octets	
CAP1.TRIGGER	Profinet	2052	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	78	CAP0.TRIGGER	No	8 bit	No	M_01-03-00-000
	104	CAP1.TRIGGER				

### Description

This parameter specifies the trigger source (capture input signal).

Trigger Source	Input Name
0	General Input 1
1	General Input 2
2	General Input 3
3	General Input 4
4	General Input 5
5	General Input 6
6	General Input 7
7	X9 Connector, RS485 Input 1 Pin
8	X9 Connector, RS485 Input 2 Pin
9	X9 Connector, RS485 Input 3 Pin
10	Primary Index
11	Tertiary Index

## Related Topics

Using Position Capture (→ p. 92)

CAP0.PRESELECT, CAP1.PRESELECT (→ p. 489)

## 25.8 CMP Parameters

This section describes the CMP parameters.

---

<b>25.8.1 CMPx.ADVANCE</b> .....	<b>498</b>
<b>25.8.2 CMPx.ARM</b> .....	<b>500</b>
<b>25.8.3 CMPx.MODBOUND1</b> .....	<b>502</b>
<b>25.8.4 CMPx.MODBOUND2</b> .....	<b>504</b>
<b>25.8.5 CMPx.MODE</b> .....	<b>506</b>
<b>25.8.6 CMPx.MODEN</b> .....	<b>508</b>
<b>25.8.7 CMPx.MODVALUE</b> .....	<b>510</b>
<b>25.8.8 CMPx.OUTMASK</b> .....	<b>512</b>
<b>25.8.9 CMPx.SETPOINT</b> .....	<b>514</b>
<b>25.8.10 CMPx.SOURCE</b> .....	<b>516</b>
<b>25.8.11 CMPx.SOURCEVALUE</b> .....	<b>518</b>
<b>25.8.12 CMPx.STATE</b> .....	<b>520</b>
<b>25.8.13 CMPx.WIDTH</b> .....	<b>521</b>
<b>25.8.14 CMPx.WIDTHTYPE</b> .....	<b>523</b>

## 25.8.1 CMPx.ADVANCE

General Information	
Type	NV Parameter
Description	Sets the phase advance value for compare.
Units	ms
Range	0 to 30
Default Value	0
Data Type	U32
Start Version	M_01-12-00-000

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

Use this keyword to compensate for slow output devices such as relays or mechanical devices. The value of this parameter determines how long in advance the compare engine will trigger to compensate for a slow output.

For example, if CMP0.ADVANCE = 10, and CMPx.SETPOINT (→ p. 514) = 1,000,000 counts while the source is moving at 100,000 counts/sec (positive direction), then the compare will trigger when the source value crosses 999,000 counts. This will be 1000 counts early, or 0.01 seconds of 100,000 counts/sec.

CMPx.ADVANCE has a 0.001 ms resolution.

## **Related Topics**

Compare Engines (→ p. 124)

## 25.8.2 CMPx.ARM

General Information	
Type	NV Parameter
Description	Arms/disarms the specified Compare setpoint.
Units	N/A
Range	Argument 1: 0 to 7 Argument 2: 0 (Disarm) or 1 (Arm)
Default Value	0 (Disarm)
Data Type	Argument 1: Integer Argument 2: Integer
Start Version	M_01-12-00-000

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

Use this keyword to arm or disarm a Compare setpoint. The setpoint value will only be compared against the Compare source (CMPx.SOURCE (→ p. 516)) if that setpoint is armed. If they match, an output pulse will be generated.

An error will be generated if CMPx.SOURCE, CMPx.MOVB0UND1, CMPx.MOVB0UND2, CMPx.WIDTH, and CMPx.M0DEN are not set prior to enabling CMPx.ARM. If CMPx.SETPOINT is

not set prior to enabling CMPx.ARM, the compare will trigger at the last set value, or the default value of 0 if the drive has been power cycled.

## Example

The following example arms setpoint 3 for CMP1.

```
-->CMP1.ARM 3 1
```

## Related Topics

Compare Engines (→ p. 124)

CMPx.SETPOINT (→ p. 514) | CMPx.SOURCE (→ p. 516)

## 25.8.3 CMPx.MODBOUND1

General Information	
Type	NV Parameter
Description	Sets the first modulo bound.
Units	Units depend on value of CMPx.SOURCE. See table below.
Range	-9,223,372,036,854,775,808 to 9,223,372,036,854,775,808
Default Value	9,223,372,036,854,775,808
Data Type	Integer
Start Version	M_01-12-00-000

### Units

CMPx.SOURCE	Units
0 (FB1)	Depends on FB1.PUNIT (→ p. 758) or custom units.
1 (FB2)	Depends on FB2.PUNIT (→ p. 783) or custom units.
2 (FB3)	Depends on FB2.PUNIT (→ p. 783) or custom units.
3 (PL.FB)	Depends on UNIT.PLINEAR or UNIT.PROTARY Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, µm, (custom units), 16-bit counts

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes

Variant	Supported
AKD-N	No
AKD-C	No

## Description

Use this keyword to set the first modulo bound. CMPx.MODBOUND1 and CMPx.MODBOUND2 (→ p. 504) must both be set before the modulo functionality can be activated. There is no requirement that the second modulus bound be larger than the first modulus bound.

CMPx.MODBOUND1 must be set before CMPx.SETPOINT (→ p. 514).

## Example

The following example sets the first modulo bound to one billion counts for CMP1.

```
-->CMP1.MODBOUND1 1000000000
```

## Related Topics

Compare Engines (→ p. 124)

CMPx.MODBOUND2 (→ p. 504) | CMPx.MODEN (→ p. 508) | CMPx.ARM (→ p. 500)

## 25.8.4 CMPx.MODBOUND2

General Information	
Type	NV Parameter
Description	Sets the second modulo bound.
Units	Units depend on value of CMPx.SOURCE. See table below.
Range	-9,223,372,036,854,775,808 to 9,223,372,036,854,775,808
Default Value	9,223,372,036,854,775,808
Data Type	Integer
Start Version	M_01-12-00-000

### Units

CMPx.SOURCE	Units
0 (FB1)	Depends on FB1.PUNIT (→ p. 758) or custom units.
1 (FB2)	Depends on FB2.PUNIT (→ p. 783) or custom units.
2 (FB3)	Depends on FB2.PUNIT (→ p. 783) or custom units.
3 (PL.FB)	Depends on UNIT.PLINEAR or UNIT.PROTARY Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, µm, (custom units), 16-bit counts

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes

Variant	Supported
AKD-N	No
AKD-C	No

## Description

Use this keyword to set the second modulo bound. CMPx.MODBOUND1 (→ p. 502) and CMPx.MODBOUND2 must both be set before the modulo functionality can be activated. There is no requirement that the second modulus bound be larger than the first modulus bound.

CMPx.MODBOUND2 must be set before CMPx.SETPOINT (→ p. 514).

## Example

The following example sets the second modulo bound to 0 counts for CMP1

```
-->CMP1.MODBOUND2 0
```

## Related Topics

Compare Engines (→ p. 124)

CMPx.MODBOUND1 (→ p. 502) | CMPx.MODEN (→ p. 508) | CMPx.ARM (→ p. 500)

## 25.8.5 CMPx.MODE

General Information	
Type	NV Parameter
Description	Sets the mode for a Compare setpoint.
Units	None
Range	Argument 1: 0 to 7 Argument 2: 0 (Single-shot) or 1 (Continuous)
Default Value	1 (Continuous)
Data Type	Argument 1: Integer Argument 2: Integer
Start Version	M_01-12-00-000

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

This keyword sets the mode for a Compare setpoint to either single-shot or continuous. Single-shot automatically disarms the setpoint after a pulse is generated. Continuous mode will keep the setpoint armed after a pulse has been generated.

### Example

The following example sets the mode for setpoint 3 to single-shot.

-->CMP1.MODE 7 0

## Related Topics

[Compare Engines \(→ p. 124\)](#)

[CMPx.SETPOINT \(→ p. 514\)](#)

## 25.8.6 CMPx.MODEN

General Information	
Type	NV Parameter
Description	Enables/disables modulo functionality.
Units	None
Range	0 to 1
Default Value	0 (Disable)
Data Type	Integer
Start Version	M_01-12-00-000

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

This keyword enables or disables modulo functionality on CMPx.

An error will be generated if CMPx.SOURCE, CMPx.MODBOUND1, CMPx.MODBOUND2, and CMPx.WIDTH are not set prior to enabling CMPx.MODEN. If CMPx.SETPOINT is not set prior to enabling CMPx.MODEN, the compare will trigger at the last set value, or the default value of 0 if the drive has been power cycled.

CMPx.MODEN must be set before CMPx.SETPOINT (→ p. 514).

### Example

The following example enables modulo for CMP1.

-->CMP1.MODEN 1

## **Related Topics**

Compare Engines (→ p. 124)

## 25.8.7 CMPx.MODVALUE

General Information	
Type	R/O Parameter
Description	Reads the modulo value.
Units	Units depend on value of CMPx.SOURCE. See table below.
Range	-9,223,372,036,854,775,808 to 9,223,372,036,854,775,808
Default Value	9,223,372,036,854,775,808
Data Type	Integer
Start Version	M_01-12-00-000

### Units

CMPx.SOURCE	Units
0 (FB1)	Depends on FB1.PUNIT (→ p. 758) or custom units.
1 (FB2)	Depends on FB2.PUNIT (→ p. 783) or custom units.
2 (FB3)	Depends on FB2.PUNIT (→ p. 783) or custom units.
3 (PL.FB)	Depends on UNIT.PLINEAR or UNIT.PROTARY Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, µm, (custom units), 16-bit counts

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos® III	Yes

Variant	Supported
AKD-N	No
AKD-C	No

## Description

Use this keyword to read the modulo value.

## Related Topics

Compare Engines (→ p. 124)

CMPx.MODBOUND2 (→ p. 504) | CMPx.MODBOUND2 (→ p. 504) | CMPx.MODEN (→ p. 508) |

CMPx.ARM (→ p. 500)

## 25.8.8 CMPx.OUTMASK

General Information	
Type	NV Parameter
Description	Sets the output mask.
Units	None
Range	0 to 255
Default Value	0 (Inactive)
Data Type	Integer
Start Version	M_01-12-00-000

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

This keyword sets the binary output mask for CMPx. The mask corresponds to a setpoint index that will be disabled when a pulse is generated.

### Example

The following example sets an outmask 0111 that will disable setpoints 0, 1, and 2 if a pulse is generated.

```
-->CMP0.OUTMASK 7
```

### Related Topics

Compare Engines (→ p. 124)

CMPx.SETPOINT (→ p. 514)

## 25.8.9 CMPx.SETPOINT

General Information	
Type	NV Parameter
Description	Sets the value of a Compare setpoint.
Units	Units depend on value of CMPx.SOURCE. See table below.
Range	Argument 1: 0 to 7 Argument 2: -9,223,372,036,854,775,808 to 9,223,372,036,854,775,808
Default Value	9,223,372,036,854,775,808
Data Type	Argument 1: Integer Argument 2: Integer
Start Version	M_01-12-00-000

### Units

CMPx.SOURCE	Units
0 (FB1)	Depends on FB1.PUNIT (→ p. 758) or custom units.
1 (FB2)	Depends on FB2.PUNIT (→ p. 783) or custom units.
2 (FB3)	Depends on FB2.PUNIT (→ p. 783) or custom units.
3 (PL.FB)	Depends on UNIT.PLINEAR or UNIT.PROTARY Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, µm, (custom units), 16-bit counts

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes

Variant	Supported
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

## Description

Use this keyword to set the position value for a Compare setpoint. This position value will be compared against a Compare source (CMPx.SOURCE (→ p. 516)). If they match, an output pulse is generated. A setpoint also requires a width (CMPx.WIDTH (→ p. 521)) and width type (CMPx.WIDTHTYPE (→ p. 523)).

A setpoint must be armed (CMPx.ARM (→ p. 500)) before it is active. If a setpoints value, width, or width type are changed after it has been armed, that setpoint will be automatically disarmed.

## Example

The following example sets the value of setpoint 1 to one billion for CMP1.

```
-->CMP1.SETPOINT 1 1000000000
```

## Related Topics

Compare Engines (→ p. 124)

## 25.8.10 CMPx.SOURCE

General Information	
Type	NV Parameter
Description	Sets the Compare source.
Units	None
Range	0 to 3
Default Value	3
Data Type	Integer
Start Version	M_01-12-00-000

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

Setpoints (CMPx.SETPOINT (→ p. 514)) are compared against Compare source values. The setpoint must be armed (CMPx.ARM (→ p. 500)) for it to be compared against a source. If they match, an output pulse is generated.

Value	Compare Source
0	Feedback 1 (FB1)
1	Feedback 2 (FB2)
2	Feedback 3 (FB3)

Value	Compare Source
3	Position Loop Feedback (PL.FB (→ p. 1094))

The source must be set before CMPx.SETPOINT (→ p. 514).

## Example

The following example sets the source to PL.FB for CMP0.

```
-->CMP0.SOURCE 3
```

## Related Topics

Compare Engines (→ p. 124)

## 25.8.11 CMPx.SOURCEVALUE

General Information	
Type	R/O Parameter
Description	Reads the current value of the selected source for CMPx.SOURCE.
Units	Units depend on value of CMPx.SOURCE. See table below.
Range	N/A
Default Value	N/A
Data Type	Float
Start Version	M_01-12-00-000

### Units

CMPx.SOURCE	Units
0 (FB1)	Depends on FB1.PUNIT (→ p. 758) or custom units.
1 (FB2)	Depends on FB2.PUNIT (→ p. 783) or custom units.
2 (FB3)	Depends on FB2.PUNIT (→ p. 783) or custom units.
3 (PL.FB)	Depends on UNIT.PLINEAR or UNIT.PROTARY Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, µm, (custom units), 16-bit counts

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes

Variant	Supported
AKD-N	No
AKD-C	No

## Description

Reads the current value of the selected source for CMPx.SOURCE.

## Example

If CMP0.SOURCE = 3 (PL.FB), CMP0.SOURCEVALUE will return the current value of PL.FB.

## Related Topics

Compare Engines (→ p. 124) | CMPx.SOURCEVALUE

## 25.8.12 CMPx.STATE

General Information	
Type	R/O Parameter
Description	Reads the state of a Compare setpoint.
Units	None
Range	0 to 7
Default Value	0 (Inactive)
Data Type	Integer
Start Version	M_01-12-00-000

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

Use this keyword to read the state of a Compare setpoint. The state indicates whether a compare pulse is being generated. If the state is 1, then a pulse is being generated. If the state is 0, no pulse is being generated.

### Related Topics

Compare Engines (→ p. 124)

CMPx.SETPOINT (→ p. 514)

## 25.8.13 CMPx.WIDTH

General Information	
Type	NV Parameter
Description	Sets the width for a Compare setpoint.
Units	Position counts or microseconds depending on CMPx.WIDTHTYPE (→ p. 523). If CMPx.WIDTHTYPE = 0 (position counts), then units depend on CMPx.SOURCE (see table below).
Range	Argument 1: 0 to 7 Argument 2: 0 to 18,446,744,073,709,551,615 (position counts) or 0 to 65,535,000 (microseconds)
Default Value	0
Data Type	Argument 1: Integer Argument 2: Integer
Start Version	M_01-12-00-000

### Units

If CMPx.WIDTHTYPE = 0 (position counts), determine units with the following table.

CMPx.SOURCE	Units
0 (FB1)	Depends on FB1.PUNIT (→ p. 758) or custom units.
1 (FB2)	Depends on FB2.PUNIT (→ p. 783) or custom units.
2 (FB3)	Depends on FB2.PUNIT (→ p. 783) or custom units.
3 (PL.FB)	Depends on UNIT.PLINEAR or UNIT.PROTARY Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, µm, (custom units), 16-bit counts

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes

Variant	Supported
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

## Description

Use this keyword to set the width for a Compare setpoint. The width defines for how much time or for how many position counts a pulse will be generated once a setpoint is active.

If a pulse width's type is in microseconds, the resolution is as follows:

Width	Resolution
0 to 65,535 $\mu$ s	$\mu$ s
65,536 $\mu$ s to 65.535 s	ms

CMPx.WIDTH must be set before CMPx.SETPOINT (→ p. 514).

## Example

The following example sets the width type of setpoint 7 to microseconds, and the width of setpoint 7 to 1000 microseconds.

```
-->CMP0.WIDTHTYPE 7 1
```

```
-->CMP0.WIDTH 7 1000
```

## Related Topics

Compare Engines (→ p. 124)

CMPx.WIDTHTYPE (→ p. 523)

## 25.8.14 CMPx.WIDTHTYPE

General Information	
Type	NV Parameter
Description	Sets the width-type for a Compare setpoint.
Units	None
Range	Argument 1: 0 to 7 Argument 2: 0 (position) to 1 (time)
Default Value	0
Data Type	Argument 1: Integer Argument 2: Integer
Start Version	M_01-12-00-000

### Hardware Supported

Compare functionality is supported on hardware revisions D, DB, DA, and higher depending on the drive type. Check the label on the side of the drive to ensure the AKD meets one of the following requirements.

AKD Type	Hardware Revision Supported
AKD	Revision D or higher
AKD PDMM	Revision DB or higher
AKD-T-IC	Revision DA or higher

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

Use this keyword to set the width-type for a Compare setpoint. The width-type determines whether the width of the Compare pulse is in position counts or units of time (microseconds).

### Example

The following example sets the width type of setpoint 7 to microseconds, and the width of setpoint 7 to 1000 microseconds.

```
-->CMP0.WIDTHTYPE 7 1
```

```
-->CMP0.WIDTH 7 1000
```

## Related Topics

[Compare Engines](#) (→ p. 124)

[CMPx.WIDTH](#) (→ p. 521)

## 25.9 CPS Parameters

This section describes the CPS parameters.

---

<b>25.9.1 CPS.ACTIVE .....</b>	<b>526</b>
--------------------------------	------------

## 25.9.1 CPS.ACTIVE

General Information	
Type	R/O Parameter
Description	Returns the enable status of the AKD-C.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
Start Version	M_01-09-04-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

CPS.ACTIVE reads the enable status of the AKD-C:

Value	Description
0	No system power (inrush opened).
1	Strings not fully powered (inrush closed). AKD-Ns cannot be enabled. The AKD-C has a fault which disables the AKD-Ns and unpowers the strings.
3	Strings powered and drives disabled. AKD-Ns cannot be enabled. The AKD-C has a fault which only disables the AKD-N's control board temperature.
7	Strings powered and drive operational. All AKD-Ns can be enabled. The AKD-C has no faults and strings are fully powered.

## 25.10 CS Parameters

Controlled stop (CS) parameters set the values for the controlled stop process.

---

<b>25.10.1 CS.DEC</b> .....	<b>528</b>
<b>25.10.2 CS.STATE</b> .....	<b>530</b>
<b>25.10.3 CS.TO</b> .....	<b>532</b>
<b>25.10.4 CS.VTHRESH</b> .....	<b>534</b>

## 25.10.1 CS.DEC

General Information	
Type	NV Parameter
Description	Sets the deceleration value for the controlled stop process.
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rps/s, rpm/s, deg/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup> , rad/s <sup>2</sup> Linear: counts/s <sup>2</sup> , mm/s <sup>2</sup> , μm/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup>
Range	Rotary: 0.002 to 833,333.333 rps/s 0.112 to 50,000,000.000 rpm/s 0.009 to 300,000,000.000 deg/s <sup>2</sup> 0.155 to 4,166,666.752 (Custom Units (→ p. 100))/s <sup>2</sup> 0.012 to 5,235,987.968 rad/s <sup>2</sup> Linear: 16,000.000 to 3,579,139,408,000.000 counts/s <sup>2</sup> 0.031*MOTOR.PITCH (→ p. 1001) to 833333.333*MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 30.994*MOTOR.PITCH (→ p. 1001) to 833333333.333*MOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 0.155 to 4,166,666.667 (Custom Units (→ p. 100))/s <sup>2</sup>
Default Value	Rotary: 166.669 rps/s 10,000.000 rpm/s 60,000.000 deg/s <sup>2</sup> 833.333 (Custom Units (→ p. 100))/s <sup>2</sup> 1,047.2 rad/s <sup>2</sup> Linear: 715,840,000.000 counts/s <sup>2</sup> 166.714*MOTOR.PITCH (→ p. 1001)MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 166,714.191*MOTOR.PITCH (→ p. 1001)MOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 833.571 (Custom Units (→ p. 100))/s <sup>2</sup>
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes

Variant	Supported
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3440h/1	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2053	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	106	Yes	64 bit	No	M_01-03-00-000

## Description

This parameter sets the deceleration value for the controlled stop process.

## Related Topics

Controlled Stop (→ p. 132)

Digital Inputs and Outputs (→ p. 104)

Fault and Warning Messages (→ p. 259)

CS.VTHRESH (→ p. 534), CS.TO (→ p. 532), DRV.DIS, DIN1.MODE TO DIN7.MODE (→ p. 548), DRV.DISM0DE (→ p. 618), DRV.DISSOURCES (→ p. 620)

## 25.10.2 CS.STATE

General Information	
Type	R/O Parameter
Description	Returns the internal status of the controlled stop process.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3441h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2055	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	110	No	8 bit	No	M_01-03-00-000

### Description

CS.STATE returns the internal state machine value of the controlled stop.

0 = controlled stop is not occurring.

1 = controlled stop is occurring

### Related Topics

Controlled Stop (→ p. 132)

Digital Inputs and Outputs (→ p. 104)

Fault and Warning Messages (→ p. 259)

CS.DEC (→ p. 528), CS.VTHRESH (→ p. 534), CS.TO (→ p. 532) DRV.DISMODE (→ p. 618),  
DRV.DISSOURCES (→ p. 620)

## 25.10.3 CS.TO

General Information	
Type	NV Parameter
Description	Sets the time value for the drive velocity to be within CS.VTHRESH (→ p. 534).
Units	ms
Range	1 to 30,000 ms
Default Value	6 ms
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3440h/3	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2056	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	112	No	32 bit	No	M_01-03-00-000

### Description

CS.TO is the time value for the drive velocity to be within CS.VTHRESH (→ p. 534) before the drive disables.

### Example

Set time value to 100 ms:

```
-->CS.TO 100
```

## Related Topics

Controlled Stop (→ p. 132)

Digital Inputs and Outputs (→ p. 104)

Fault and Warning Messages (→ p. 259)

CS.DEC (→ p. 528), CS.VTHRESH (→ p. 534), CS.STATE, DRV.DIS, DIN1.MODE TO  
DIN7.MODE (→ p. 548), DRV.DISMODE (→ p. 618), DRV.DISSOURCES (→ p. 620)

## 25.10.4 CS.VTHRESH

General Information	
Type	NV Parameter
Description	Sets the velocity threshold for the controlled stop.
Units	rpm, rps, deg/s, Custom Units (→ p. 100)/s
Range	Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 deg/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s 0.000 to 1,570.796 rad/s Linear: 0.000 to 1,073,741,824.000 counts/s 0.000 to 8,000.000 mm/s 0.000 to 8,000,000.000 µm/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s
Default Value	5 rpm
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3440h/2	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	CS.VTHRESH_32	2057	DWord	No
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	114	Yes	low 32 bit word	No	M_01-03-00-000

## Description

CS.VTHRESH is the velocity threshold for the controlled stop algorithm.

## Example

Set velocity threshold for controlled stop at 100 rpm:

```
-->CS.VTHRESH 100
```

## Related Topics

Controlled Stop (→ p. 132)

Digital Inputs and Outputs (→ p. 104)

Fault and Warning Messages (→ p. 259)

CS.DEC (→ p. 528), CS.TO (→ p. 532), CS.STATE (→ p. 530), DRV.DIS (→ p. 616), DIN1.MODE TO DIN7.MODE (→ p. 548), DRV.DISM MODE (→ p. 618), DRV.DISSOURCES (→ p. 620)

## 25.11 DIN Parameters

This section describes the DIN parameters.

---

<b>25.11.1 DIN.HCMD1 TO DIN.HCMD4</b> .....	<b>537</b>
<b>25.11.2 DIN.LCMD1 to DIN.LCMD4</b> .....	<b>539</b>
<b>25.11.3 DIN.ROTARY</b> .....	<b>541</b>
<b>25.11.4 DIN.STATES</b> .....	<b>543</b>
<b>25.11.5 DIN1.FILTER TO DIN7.FILTER</b> .....	<b>544</b>
<b>25.11.6 DIN1.INV to DIN7.INV</b> .....	<b>546</b>
<b>25.11.7 DIN1.MODE TO DIN7.MODE</b> .....	<b>548</b>
<b>25.11.8 DIN1.PARAM TO DIN7.PARAM</b> .....	<b>552</b>
<b>25.11.9 DIN1.STATE TO DIN7.STATE</b> .....	<b>555</b>
<b>25.11.10 DIN9.STATE to DIN11.STATE</b> .....	<b>557</b>
<b>25.11.11 DIN21.FILTER to DIN32.FILTER</b> .....	<b>559</b>
<b>25.11.12 DIN21.STATE to DIN32.STATE</b> .....	<b>561</b>

## 25.11.1 DIN.HCMD1 TO DIN.HCMD4

General Information	
Type	NV parameter
Description	A buffer of commands to be used in digital input "command buffer" mode.
Units	None
Range	A string of up to 128 characters
Default Value	<Empty>
Data Type	String
Start Version	M_01-02-08-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

DIN.HCMDx sets the string of commands to be used in the digital input mode command buffer. Digital input mode **9-Command buffer** can execute four different sets of command buffers.

Each set of command buffers contains two buffers:

- High buffer: Executes upon a rising edge of a digital input.
- Low buffer: Executes upon a falling edge of a digital input.

DIN.HCMDx sets the string for the four high buffers (depending on x).

### Example

Set the command buffer mode to digital input 1:

```
DIN1.MODE 9
```

Set the first sets of buffers to digital input 1:

```
DIN1.PARAM 1
```

Set the command DRV.OPMODE 0 to the high buffer:

```
DIN.HCMD1 DRV.OPMODE 1
```

Now, upon a rising edge in digital input 1, the drive mode is 1.

## **Related Topics**

Command Buffer (→ p. 116)

Digital Inputs and Outputs (→ p. 104)

DIN1.MODE TO DIN7.MODE (→ p. 548), DIN1.PARAM TO DIN7.PARAM (→ p. 552), DIN.LCMD1 to DIN.LCMD4 (→ p. 539)

## 25.11.2 DIN.LCMD1 to DIN.LCMD4

General Information	
Type	NV parameter
Description	A buffer of commands to be used in digital input "command buffer" mode.
Units	N/A
Range	A string of up to 128 characters
Default Value	Empty
Data Type	String
Start Version	M_01-02-08-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

DIN.LCMDx sets the string of commands to be used in the digital input mode command buffer. Digital input mode **9-Command buffer** can execute four different sets of command buffers.

Each set of command buffers contains two buffers:

- High buffer: Executes upon a rising edge of a digital input.
- Low buffer: Executes upon a falling edge of a digital input.

DIN.LCMDx sets the string for the four "low" buffers, depending on x.

### Example

Set the command buffer mode to digital input 1:

```
DIN1.MODE 9
```

Set the first sets of buffers to digital input 1:

```
DIN1.PARAM 1
```

Set the command DRV.OPMODE 0 to the "low buffer":

```
DIN.LCMD1 DRV.OPMODE 0
```

Now, upon a falling edge in digital input 1, the drive mode is 0.

## **Related Topics**

Command Buffer (→ p. 116)

Digital Inputs and Outputs (→ p. 104)

DIN1.MODE TO DIN7.MODE (→ p. 548), DIN1.PARAM TO DIN7.PARAM (→ p. 552),

DIN.HCMD1 TO DIN.HCMD4 (→ p. 537)

## 25.11.3 DIN.ROTARY

General Information	
Type	R/O Parameter
Description	Reads the rotary knob value.
Units	N/A
Range	0 to 99
Default Value	N/A
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2058	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	116	No	8 bit	No	M_01-03-00-000

### Description

DIN.ROTARY reads the rotary knob value.



### Related Topics

Digital Inputs and Outputs (→ p. 104)

## 25.11.4 DIN.STATES

General Information	
Type	R/O Parameter
Description	Reads the digital input states.
Units	N/A
Range	0000000 to 1111111
Default Value	N/A
Data Type	String
Start Version	M_01-00-00-000

AKD-N Information	
Range	000 to 111

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

DIN.STATES reads the states of the digital inputs. The leftmost bit represents digital input 1 (DIN1) and the rightmost bit represents digital input 7 (DIN7).

**NOTE** AKD-N only supports DIN1 to DIN3.

### Related Topics

Digital Inputs and Outputs (→ p. 104)

## 25.11.5 DIN1.FILTER TO DIN7.FILTER

General Information	
Type	R/W Parameter
Description	Filter mode for digital inputs 1 to 7.
Units	N/A
Range	0 to 3
Default Value	1 for DIN1 and DIN2 2 for DIN3 to DIN7
Data Type	Integer
Start Version	M_01-03-07-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DIN1.FILTER	Profinet	2459	Word	No
	sercos <sup>®</sup> III		2 Octets	
DIN2.FILTER	Profinet	2460	Word	No
	sercos <sup>®</sup> III		2 Octets	
DIN3.FILTER	Profinet	2461	Word	No
	sercos <sup>®</sup> III		2 Octets	
DIN4.FILTER	Profinet	2462	Word	No
	sercos <sup>®</sup> III		2 Octets	
DIN5.FILTER	Profinet	2463	Word	No
	sercos <sup>®</sup> III		2 Octets	
DIN6.FILTER	Profinet	2464	Word	No
	sercos <sup>®</sup> III		2 Octets	
DIN7.FILTER	Profinet	2465	Word	No
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?
Modbus	918	DIN1.FILTER	No	16 bit	No
	920	DIN2.FILTER			
	922	DIN3.FILTER			
	924	DIN4.FILTER			
	926	DIN5.FILTER			
	928	DIN6.FILTER			
	930	DIN7.FILTER			

## Description

This parameter sets the digital input filter configuration for channel x when followed with the values defined below. DINx.FILTER retrieves this information when not followed by data.

Value	Description
DINX.FILTER 0	The drive digital input channel detects all input signals with an input pulse width of $\geq 40$ ns (no filtering applied).
DINX.FILTER 1	The drive digital input channel detects all input signals with an input pulse width of $\geq 10.24$ $\mu$ s, $\pm 0.64$ $\mu$ s (fast filter applied).
DINX.FILTER 2	The drive digital input channel detects all input signals with an input pulse width of $\geq 163$ $\mu$ s, $\pm 10.24$ $\mu$ s (standard filter applied).
DINX.FILTER 3	The drive digital input channel detects all input signals with an input pulse width of $\geq 2.62$ ms, $\pm 0.16384$ ms (slow filter applied).

**NOTE** AKD-N only supports DIN1 to DIN3.

## Related Topics

Digital Inputs and Outputs (→ p. 104)

## 25.11.6 DIN1.INV to DIN7.INV

General Information	
Type	RW Parameter
Description	Sets the indicated polarity of a digital input mode.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Boolean
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DIN1.INV	Profinet	2060	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DIN2.INV	Profinet	2065	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN3.INV	Profinet	2070	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN4.INV	Profinet	2075	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN5.INV	Profinet	2080	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN6.INV	Profinet	2085	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN7.INV	Profinet	2090	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	120	DIN1.INV	No	8 bit	No	M_01-03-00-000
	130	DIN2.INV				
	140	DIN3.INV				
	150	DIN4.INV				
	160	DIN5.INV				
	170	DIN6.INV				
	180	DIN7.INV				

## Description

Sets the indicated polarity of a digital input mode.

**NOTE** AKD-N only supports DIN1 to DIN3.

## Example

DIN1.INV = 0 : Input is active high.

DIN1.INV = 1 : Input is active low.

## Related Topics

Digital Inputs and Outputs (→ p. 104)

## 25.11.7 DIN1.MODE TO DIN7.MODE

General Information	
Type	R/W Parameter
Description	Sets the digital input modes.
Units	N/A
Range	0 to 26
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

AKD SynqNet Information	
Range	0

AKD BASIC Information	
Range	0, 1, 13, 18, 19

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	3562h/0	DIN1.MODE	M_01-00-00-000
	3565h/0	DIN2.MODE	
	3568h/0	DIN3.MODE	
	356Bh/0	DIN4.MODE	
	36F6h/0	DIN5.MODE	
	36F9h/0	DIN6.MODE	
	36FCh/0	DIN7.MODE	
	60FDh/0	DIN1.MODE TO DIN7.MODE	

Paramter	Fieldbus	Address	Attributes	Signed?
DIN1.MODE	Profinet	2061	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DIN2.MODE	Profinet	2066	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN3.MODE	Profinet	2071	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN4.MODE	Profinet	2076	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN5.MODE	Profinet	2081	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN6.MODE	Profinet	2086	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN7.MODE	Profinet	2091	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	122	DIN1.MODE	No	16 bit	No	M_01-03-00-000
	132	DIN2.MODE				
	142	DIN3.MODE				
	152	DIN4.MODE				
	162	DIN5.MODE				
	172	DIN6.MODE				
	182	DIN7.MODE				

## Description

This parameter sets the functionality of the digital inputs. Digital inputs and corresponding X7 and X8 pin connectors are described in the *AKD Installation Manual*, section 8.16.4, Digital Inputs. The table below summarizes the digital input modes; for detailed descriptions of each mode, see Digital Inputs and Outputs (→ p. 104).

**NOTE** AKD-N only supports DIN1 to DIN3.

DINx.MODE	Description	Task
<a href="#">0</a>	No function; off	None
<a href="#">1</a>	Fault reset	Background
<a href="#">2</a>	Start motion task (use <a href="#">DINx.PARAM</a> for this task)	1 KHz
<a href="#">3</a>	Motion task select bit (see Motion Tasks (→ p. 162))	Background
<a href="#">4</a>	Motion task start selected (see Motion Tasks (→ p. 162))	1 kHz
<a href="#">5</a>	Start home (see Homing (→ p. 151))	Background
<a href="#">6</a>	Start jog	Background
7	Reserved	None
<a href="#">8</a>	Zero latch	Background
<a href="#">9</a>	Command buffer	Background
<a href="#">10</a>	Control fault relay	Background
<a href="#">11</a>	Home reference	1 kHz
12	Reserved	None
<a href="#">13</a>	Controlled Stop (→ p. 132)	1 kHz
14	Reserved	None
<a href="#">15</a>	Quick stop	Background
<a href="#">16</a>	Activate electronic gearing (see Electronic Gearing (→ p. 121))	Background
<a href="#">17</a>	Activate electronic gear position shift	Background
<a href="#">18</a>	Positive limit switch	4 kHz
<a href="#">19</a>	Negative limit switch	4kHz
<a href="#">20</a>	Brake release	Background
<a href="#">21</a>	Current limit	4 kHz
<a href="#">22</a>	Opmode and Command Source switch	Background
<a href="#">23</a>	Change algebraic sign of the measured analog input voltage.	1 kHz
24	Reserved	1 kHz
<a href="#">25</a>	Controlled stop without re-enable.	1 kHz
<a href="#">26</a>	Suspend Motion	1 kHz

## Related Topics

Command Buffer (→ p. 116)

Digital Inputs (→ p. 104)

Controlled Stop (→ p. 132)

Homing (→ p. 151)

Motion Tasks (→ p. 162)

Electronic Gearing (→ p. 121)

Clearing Faults (→ p. 279)

F245 (→ p. 266)

CS Parameters (→ p. 527)

## 25.11.8 DIN1.PARAM TO DIN7.PARAM

General Information	
Type	R/W Parameter
Description	Sets a value used as an extra parameter for digital inputs nodes.
Units	N/A
Range	-9,223,372,036,854,775,000 to +9,223,372,036,854,775,000 <b>Note:</b> Varies based on DINx.MODE. See below.
Default Value	0
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DIN1.PARAM	Profinet	2062	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
DIN2.PARAM	Profinet	2067	DWord	
	sercos <sup>®</sup> III		8 Octets	
DIN3.PARAM	Profinet	2072	DWord	
	sercos <sup>®</sup> III		8 Octets	
DIN4.PARAM	Profinet	2077	DWord	
	sercos <sup>®</sup> III		8 Octets	
DIN5.PARAM	Profinet	2082	DWord	
	sercos <sup>®</sup> III		8 Octets	
DIN6.PARAM	Profinet	2087	DWord	
	sercos <sup>®</sup> III		8 Octets	
DIN7.PARAM	Profinet	2092	DWord	
	sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	124	DIN1.PARAM	Yes	64 bit	Yes	M_01-03-00-000
	134	DIN2.PARAM				
	144	DIN3.PARAM				
	154	DIN4.PARAM				
	164	DIN5.PARAM				
	174	DIN6.PARAM				
	184	DIN7.PARAM				

## Description

This parameter sets a value that is used as an extra parameter for digital inputs nodes.

**NOTE** AKD-N only supports DIN1 to DIN3.

## Example

The digital input mode "Start motion task" is used to start a motion task. This mode uses an extra parameter as the ID of the motion task to be started.

## Range

DINx.PARAM is used for various Digital Input modes. This causes the parameter's range to change based on the current Digital Input mode selected with the corresponding DINx.MODE

Listed below are the possible ranges for each Digital input mode.

If an input mode is not listed, then the default range above is used.

Input Mode	Min	Max	Notes
2	0	128	

Input Mode	Min	Max	Notes
6	Velocity Min	Velocity Max	This value changes based on user selected velocity units.
9	0	4	
17	Position Min	Position Max	This value changes based on user selected position units.
21	0	DRV.IPEAK	This value changes based on the specific AKDs drive limits.
22	0	32	See Digital Input Mode 22 for details.
23	0	2056	See Digital Input Mode 23 for details.

## Dependency on DINx.MODE

Typically, the user can set DINx.PARAM before the corresponding DINx.MODE is set. However, if DINx.PARAM is set before DINx.MODE is set, and the value of DINx.PARAM is outside the new DINx.MODE's range, then DINx.PARAM will be set to zero.

### Example:

DIN1.MODE is set to 0 by default

DIN1.PARAM is set to 200

DIN1.MODE is changed to 2 (execute motion tasks)

200 is larger than the maximum for DIN1.MODE 2, so DIN1.PARAM will be set to 0 to prevent errors.

## Related Topics

Digital Inputs and Outputs (→ p. 104)

## 25.11.9 DIN1.STATE TO DIN7.STATE

General Information	
Type	R/O Parameter
Description	Reads a specific digital input state.
Units	N/A
Range	0 to 1
Default Value	N/A
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Paramter	Fieldbus	Address	Attributes	Signed?
DIN1.STATE	Profinet	2064	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DIN2.STATE	Profinet	2069	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN3.STATE	Profinet	2074	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN4.STATE	Profinet	2079	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN5.STATE	Profinet	2084	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN6.STATE	Profinet	2089	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN7.STATE	Profinet	2094	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	128	DIN1.STATE	No	8 bit	No	M_01-03-00-000
	138	DIN2.STATE				
	148	DIN3.STATE				
	158	DIN4.STATE				
	168	DIN5.STATE				
	178	DIN6.STATE				
	188	DIN7.STATE				

## Description

Reads the state of one digital input according to the number identified in the command.

**NOTE** AKD-N only supports DIN1 to DIN3.

## Related Topics

Digital Inputs and Outputs (→ p. 104)

## 25.11.10 DIN9.STATE to DIN11.STATE

General Information	
Type	NV Parameter
Description	Shows on selected pin if signal is high or low.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	U8
Start Version	M_01-05-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DIN9.STATE	Profinet	2727	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DIN10.STATE	Profinet	2653	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN11.STATE	Profinet	2654	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1454	DIN9.STATE	No	8 bit	No	M_01-06-03-000
	1306	DIN10.STATE				
	1308	DIN11.STATE				

### Description

This parameter allows the user to see the actual level of the input signal, when the IO is set to input mode. Parameter value is 0 if signal is low and 1 if signal is high. DIOx.INV can affect the value in this register.

This parameter can be read at any time. The value is only guaranteed to correspond to the output on the X9 connector when DRV.EMUEMODE is set to 10 and the DIOX.DIR is 0.

## Related Topics

DIO9.DIR to DIO11.DIR (→ p. 566)

DIO9.INV to DIO11.INV (→ p. 564)

DRV.EMUEMODE (→ p. 631)

## 25.11.11 DIN21.FILTER to DIN32.FILTER

General Information	
Type	R/W Parameter
Description	Filter mode for digital inputs 21 to 32.
Units	N/A
Range	0 to 3
Default Value	2
Data Type	Integer
Start Version	M_01-03-07-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DIN21.FILTER	Profinet	2655	Word	No
	sercos <sup>®</sup> III		2 Octets	
DIN22.FILTER	Profinet	2661	Word	
	sercos <sup>®</sup> III		2 Octets	
DIN23.FILTER	Profinet	2667	Word	
	sercos <sup>®</sup> III		2 Octets	
DIN24.FILTER	Profinet	2673	Word	
	sercos <sup>®</sup> III		2 Octets	
DIN25.FILTER	Profinet	2679	Word	
	sercos <sup>®</sup> III		2 Octets	
DIN26.FILTER	Profinet	2685	Word	
	sercos <sup>®</sup> III		2 Octets	
DIN27.FILTER	Profinet	2691	Word	
	sercos <sup>®</sup> III		2 Octets	
DIN28.FILTER	Profinet	2697	Word	
	sercos <sup>®</sup> III		2 Octets	
DIN29.FILTER	Profinet	2703	Word	
	sercos <sup>®</sup> III		2 Octets	
DIN30.FILTER	Profinet	2709	Word	
	sercos <sup>®</sup> III		2 Octets	
DIN31.FILTER	Profinet	2715	Word	
	sercos <sup>®</sup> III		2 Octets	
DIN32.FILTER	Profinet	2721	Word	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?
Modbus	1310	DIN21.FILTER	No	16 bit	No
	1322	DIN22.FILTER			
	1334	DIN23.FILTER			
	1346	DIN24.FILTER			
	1358	DIN25.FILTER			
	1370	DIN26.FILTER			
	1382	DIN27.FILTER			
	1394	DIN28.FILTER			
	1406	DIN29.FILTER			
	1418	DIN30.FILTER			
	1430	DIN31.FILTER			
	1442	DIN32.FILTER			

## Description

This parameter sets the digital input filter configuration for channel x when followed with the values defined below. DINx.FILTER retrieves this information when not followed by data.

Value	Description
DINX.FILTER 0	The drive digital input channel detects all input signals with an input pulse width of $\geq 40$ ns (no filtering applied).
DINX.FILTER 1	The drive digital input channel detects all input signals with an input pulse width of $\geq 10.24 \mu\text{s}$ , $\pm 0.64 \mu\text{s}$ (fast filter applied).
DINX.FILTER 2	The drive digital input channel detects all input signals with an input pulse width of $\geq 163 \mu\text{s}$ , $\pm 10.24 \mu\text{s}$ (standard filter applied).
DINX.FILTER 3	The drive digital input channel detects all input signals with an input pulse width of $\geq 2.62$ ms, $\pm 0.16384$ ms (slow filter applied).

## Related Topics

Digital Inputs and Outputs (→ p. 104)

## 25.11.12 DIN21.STATE to DIN32.STATE

General Information	
Type	R/O Parameter
Description	Reads a specific digital input state.
Units	N/A
Range	0 to 1
Default Value	N/A
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DIN21.STATE	Profinet	2660	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DIN22.STATE	Profinet	2666	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN23.STATE	Profinet	2672	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN24.STATE	Profinet	2678	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN25.STATE	Profinet	2684	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN26.STATE	Profinet	2690	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN27.STATE	Profinet	2696	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN28.STATE	Profinet	2702	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN29.STATE	Profinet	2708	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN30.STATE	Profinet	2714	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN31.STATE	Profinet	2720	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIN32.STATE	Profinet	2726	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?
Modbus	1320	DIN21.STATE	No	8 bit	No
	1332	DIN22.STATE			
	1344	DIN23.STATE			
	1356	DIN24.STATE			
	1368	DIN25.STATE			
	1380	DIN26.STATE			
	1392	DIN27.STATE			
	1404	DIN28.STATE			
	1416	DIN29.STATE			
	1428	DIN30.STATE			
	1440	DIN31.STATE			
	1452	DIN32.STATE			

## Description

DIN21.STATE to DIN32.STATE reads the state of one digital input according to the number identified in the command.

## Related Topics

Digital Inputs and Outputs (→ p. 104)

## 25.12 DIO Parameters

This section describes the DIO parameters.

---

<b>25.12.1 DIO9.INV to DIO11.INV .....</b>	<b>564</b>
<b>25.12.2 DIO9.DIR to DIO11.DIR .....</b>	<b>566</b>

## 25.12.1 DIO9.INV to DIO11.INV

General Information	
Type	NV Parameter
Description	Inverting the output voltage of the IO, when in the output direction.
Units	NA
Range	0 to 1
Default Value	0
Data Type	U8
Start Version	M_01-05-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DIO9.INV	Profinet	2600	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DIO10.INV	Profinet	2596	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIO11.INV	Profinet	2598	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?
Modbus	1192	DIO10.INV	No	8 bit	No
	1196	DIO11.INV			
	1200	DIO9.INV			

### Description

This parameter changes the logic sense of the differential input/output signals. When false, a logic 1 occurs when the + signal is higher than the – signal. When true, a logic 1 occurs when the – signal is higher than the + signal.

The drive output parameters DOUTx.STATE and DOUTx.STATEU are not affected by changes in this parameter. The drive input parameters DINx.STATE will be affected.

This parameter can be set at any time. It will be ignored unless DRV.EMUEMODE is set to 10.

## Related Topics

DIN1.STATE TO DIN7.STATE (→ p. 555)

DOUT1.STATE AND DOUT2.STATE (→ p. 577)

DOUT1.STATEU AND DOUT2.STATEU (→ p. 578)

DRV.EMUEMODE (→ p. 631)

## 25.12.2 DIO9.DIR to DIO11.DIR

General Information	
Type	NV Parameter
Description	Changing direction of the IOs from the X9 connector.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	U8
Start Version	M_01-05-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DIO9.DIR	Profinet	2599	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DIO10.DIR	Profinet	2595	Byte	
	sercos <sup>®</sup> III		2 Octets	
DIO11.DIR	Profinet	2597	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?
Modbus	1190	DIO10.DIR	No	8 bit	No
	1194	DIO11.DIR			
	1198	DIO9.DIR			

### Description

This parameter changes the direction of the general purpose IO from the X9 connector. If DIOx.DIR is set 0 then the IO configured as an input, while if DIOx.DIR is 1 the IO is configured as an output.

DIO9.DIR controls pins 1 and 2

DIO10.DIR controls pins pin 4 and 5

DIO11.DIR controls pins pin 7 and 8.

This parameter can be set at any time. It will be ignored unless DRV.EMUEMODE is set to 10.

## Related Topics

DIN1.STATE TO DIN7.STATE (→ p. 555)

DOUT1.STATE AND DOUT2.STATE (→ p. 577)

DOUT1.STATEU AND DOUT2.STATEU (→ p. 578)

DIO9.INV to DIO11.INV (→ p. 564)

DRV.EMUEMODE (→ p. 631)

## 25.13 DOUT Parameters

This section describes the DOUT parameters.

---

<b>25.13.1 DOUT.CTRL</b> .....	<b>569</b>
<b>25.13.2 DOUT.RELAYMODE</b> .....	<b>570</b>
<b>25.13.3 DOUT.STATES</b> .....	<b>572</b>
<b>25.13.4 DOUT1.MODE and DOUT2.MODE</b> .....	<b>573</b>
<b>25.13.5 DOUT1.PARAM AND DOUT2.PARAM</b> .....	<b>575</b>
<b>25.13.6 DOUT1.STATE AND DOUT2.STATE</b> .....	<b>577</b>
<b>25.13.7 DOUT1.STATEU AND DOUT2.STATEU</b> .....	<b>578</b>
<b>25.13.8 DOUT9.MODE to DOUT11.MODE</b> .....	<b>580</b>
<b>25.13.9 DOUT9.PARAM to DOUT11.MODE</b> .....	<b>581</b>
<b>25.13.10 DOUT9.STATE to DOUT11.STATE</b> .....	<b>582</b>
<b>25.13.11 DOUT9.STATEU to DOUT11.STATEU</b> .....	<b>584</b>
<b>25.13.12 DOUT21.STATE to DOUT32.STATE</b> .....	<b>586</b>
<b>25.13.13 DOUT21.STATEU to DOUT32.STATEU</b> .....	<b>588</b>

## 25.13.1 DOUT.CTRL

General Information	
Type	NV Parameter
Description	Sets the source of digital output(s) (firmware or fieldbus).
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Boolean
Start Version	M_01-00-00-000

SynqNet Information	
Range	1

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2095	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	190	No	8 bit	No	M_01-03-00-000

### Description

DOUT.CTRL sets the source of the digital output(s):

0 = Firmware controlled

1 = Fieldbus controlled

### Related Topics

Digital Outputs (→ p. 109)

## 25.13.2 DOUT.RELAYMODE

General Information	
Type	R/W Parameter
Description	Indicates faults relay mode.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2096	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	192	No	8 bit	No	M_01-03-00-000

### Description

DOUT.RELAYMODE indicates the faults relay mode as follows:

If DOUT.RELAYMODE= 0 and faults exist, then the relay is open.

If DOUT.RELAYMODE= 0 and faults do not exist, then the relay is closed.

If DOUT.RELAYMODE = 1 and the drive is disabled, then the relay is open.

If DOUT.RELAYMODE = 1 and the drive is enabled, then the relay is closed.

### Related Topics

Digital Outputs (→ p. 109)

## 25.13.3 DOUT.STATES

General Information	
Type	R/O Parameter
Description	Reads the state of the digital output(s).
Units	N/A
Range	0 to 11
Default Value	N/A
Data Type	String
Start Version	M_01-00-00-000

AKD BASIC Information	
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	194	No	8 bit	No	M_01-03-00-000

### Description

DOUT.STATES reads the states of the digital output(s). The leftmost bit represents DOUT1 and the rightmost bit represents DOUT2.

**NOTE** AKD-C only reads the state of DOUT1.

### Related Topics

Digital Outputs (→ p. 109)

## 25.13.4 DOUT1.MODE and DOUT2.MODE

General Information	
Type	NV Parameter
Description	Sets the digital output mode.
Units	N/A
Range	0 to 23
Default Value	0
Data Type	Integer
Start Version	M_01-04-02-000

AKD BASIC Information	
Range	0, 8, 10, 11, 15, 22, 23

AKD-C Information	
Range	0, 1, 7, 11, 16, 22

AKD-N Information	
Range	0 to 21

AKD EtherNet/IP Information	
Range	0 to 2

### Variants Supported

**NOTE** AKD SynqNet disables digital output modes when SynqNet goes cyclic.

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DOUT1.MODE	Profinet	2098	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DOUT2.MODE	Profinet	2103	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	196	DOUT1.MODE	No	8 bit	No	M_01-03-00-000
	206	DOUT2.MODE				

## Description

DOUTx.MODE sets the functionality of the digital output(s). The table below summarizes the digital output modes; for detailed descriptions of each mode, see Digital Inputs and Outputs (→ p. 104).

DOUTx.MODE	Description
<u>0</u>	User (default = 0)
<u>1</u>	Mains ready
<u>2</u>	Software limit switch reached
<u>3</u>	Move complete
<u>4</u>	In position
<u>5</u>	Position greater than x
<u>6</u>	Position less than x
<u>7</u>	Drive produced warning
<u>8</u>	Drive enabled
<u>9</u>	Reserved
<u>10</u>	Motor brake
<u>11</u>	Drive produced fault
<u>12</u>	Absolute velocity greater than x
<u>13</u>	Absolute velocity less than x
<u>14</u>	Homing complete
<u>15</u>	PLS.STATE bits or connected
<u>16</u>	Description Command buffer Active
<u>17</u>	Mt in Position
<u>20</u>	Controlled Stop Active
<u>21</u>	Immediate Fault Disable
<u>22</u>	In Rush Relay State
<u>23</u>	Compare Output

## Related Topics

Digital Outputs (→ p. 109)

DOUT1.PARAM AND DOUT2.PARAM (→ p. 575)

## 25.13.5 DOUT1.PARAM AND DOUT2.PARAM

General Information	
Type	NV Parameter
Description	Sets extra parameters for the digital output(s).
Units	N/A
Range	0 <b>Note:</b> Range changes based on Digital Output Mode. See below.
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DOUT1.PARAM	Profinet	2099	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
DOUT2.PARAM	Profinet	2104	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	198	Yes	64 bit	Yes	M_01-03-00-000
	208				

### Description

Set the extra parameter needed for the digital output's calculations.

**NOTE** AKD-C and AKD-N only support DOUT1.

## Range

DOUTx.PARAM is used for various Digital Output modes. This causes the parameter's range to change based on the current Digital Output mode selected with the corresponding DOUTx.MODE.

Below is a list of the possible range for each Digital Output Mode.

If an output mode is not listed, then the default range of 0 is used.

Input Mode	Min	Max	Notes
3	Position Min	Position Max	This value changes based on user selected position units.
4	Position Min	Position Max	This value changes based on user selected position units.
5	Position Min	Position Max	This value changes based on user selected position units.
6	Position Min	Position Max	This value changes based on user selected position units.
12	0	Velocity Max	This value changes based on user selected velocity units.
13	0	Velocity Max	This value changes based on user selected velocity units.
15	0	255	None.
17	Position Min	Position Max	This value changes based on user selected position units.
23	0	1	Selects the compare engine 0 (CMP0) or 1 (CMP1).

## Dependency on DOUTx.MODE


Since the default range of DOUTx.PARAM does not allow a user to enter a value, DOUTx.MODE must be set to a mode which uses DOUTx.PARAM before a value can be set.

Each time DOUTx.MODE is changed, DOUTx.PARAM is automatically set to zero to prevent unintended interactions.

### Digital Output Mode 15: PLS.STATE bits OR connected

The output mode produces a high signal if at least one of the PLS.STATE bits is high (the PLS is active) and if the corresponding bit in the DOUTx.PARAM parameter also has been set to high. The DOUTx.PARAM command connects the PLS.STATE bits to the digital output itself and thus acts as an enable mask.

In mode 15 DOUTx.PARAM is set from the Digital Outputs section of the Programmable Limit Switches screen.

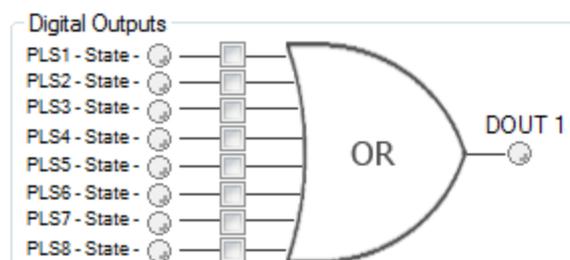

This mode is valid for all opmodes and command source combinations.

### Example

```
|<- Bit 7 to 0 ->|
```

```
DOUT1.PARAM = 23 = 0b 0 0 0 1 0 1 1 1 (Binary code)
```

The digital output 1 is active when bit 0 or bit 1 or bit 2 or bit 4 of PLS.STATE is high. All other bits within PLS.STATE are not considered by the digital output mode due to the DOUT1.PARAM setting. Do not use decimal places for the DOUTx.PARAM parameter for this particular digital output mode.

## Related Topics

Digital Outputs (→ p. 109)

## 25.13.6 DOUT1.STATE AND DOUT2.STATE

General Information	
Type	R/O Parameter
Description	Reads the digital output state.
Units	N/A
Range	0 to 1
Default Value	N/A
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DOUT1.STATE	Profinet	2101	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DOUT2.STATE	Profinet	2106	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version	
Modbus	202	DOUT1.STATE	No	8 bit	No	M_01-03-00-000
	212	DOUT2.STATE				

### Description

Reads the state of one digital output according to the value stated in the command.

**NOTE** AKD-C and AKD-N only support DOUT1.

### Related Topics

Digital Outputs (→ p. 109)

## 25.13.7 DOUT1.STATEU AND DOUT2.STATEU

General Information	
Type	R/W Parameter
Description	Sets the state of the digital output node.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-01-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DOUT1.STATEU	Profinet	2102	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DOUT2.STATEU	Profinet	2107	Byte	No
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	204	No	8 bit	No	M_01-03-00-000
	214				

### Description

Set the state of the digital output node as follows:

0 = deactivated

1 = activated

DOUT1.STATEU and DOUT2.STATEU are used when DOUTx.MODE = 0 (user mode).

**NOTE**

AKD-C and AKD-N only support DOUT1.

**Related Topics**

Digital Outputs (→ p. 109)

## 25.13.8 DOUT9.MODE to DOUT11.MODE

General Information	
Type	NV Parameter
Description	Sets the digital output mode.
Units	N/A
Range	0, 23
Default Value	0
Data Type	Integer
Start Version	

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

DOUTx.MODE sets the functionality of the digital output(s). The table below summarizes the digital output modes; for detailed descriptions of each mode, see Digital Inputs and Outputs (→ p. 104).

DOUTx.MODE	Description
<u>0</u>	User (default = 0)
<u>23</u>	Compare Output

### Related Topics

Digital Outputs (→ p. 109)

DOUT1.PARAM AND DOUT2.PARAM (→ p. 575)

Compare Engines (→ p. 124)

## 25.13.9 DOUT9.PARAM to DOUT11.MODE

General Information	
Type	NV Parameter
Description	Selects Compare Engine 0 or 1 for DOUTx.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	N/A

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

DOUT9.PARAM, DOUT10.PARAM, and DOUT11.PARAM select the compare engine (CMP0 or CMP1) for the output.

DOUTx.PARAM value	Description
0	Compare Engine 0
1	Compare Engine 1

### Related Topics

Digital Outputs (→ p. 109)

## 25.13.10 DOUT9.STATE to DOUT11.STATE

General Information	
Type	NV parameter
Description	Shows on selected pin if signal is high or low.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	U8
Start Version	M_01-05-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DOUT9.STATE	Profinet	2782	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DOUT10.STATE	Profinet	2728	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT11.STATE	Profinet	2730	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1564	DOUT9.STATE	No	8 bit	No	M_01-06-03-000
	1456	DOUT10.STATE				
	1460	DOUT11.STATE				

### Description

This parameter allows the user to see the actual level of the output signal, when the IO is set to output mode. Parameter value is 0 if signal is low and 1 if signal is high. DIOx.INV can affect the signals driven onto the X9 connector.

This parameter can be read at any time. The value is only guaranteed to correspond to the output on the X9 connector when DRV.EMUEMODE is set to 10 and the DIOX.DIR is 0.

## Related Topics

DIO9.DIR to DIO11.DIR (→ p. 566)

DIO9.INV to DIO11.INV (→ p. 564)

DOUT9.STATEU to DOUT11.STATEU (→ p. 584)

DRV.EMUEMODE (→ p. 631)

## 25.13.11 DOUT9.STATEU to DOUT11.STATEU

General Information	
Type	NV Parameter
Description	Allows user to set level of selected pin to high or low.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	U8
Start Version	M_01-05-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DOUT9.STATEU	Profinet	2783	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DOUT10.STATEU	Profinet	2729	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT11.STATEU	Profinet	2731	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version	
Modbus	1566	DOUT9.STATEU	No	8 bit	No	M_01-06-03-000
	1458	DOUT10.STATEU				
	1462	DOUT11.STATEU				

### Description

This parameter allows the user to set the level of the output signal, when the IO is set to output mode. Parameter value is 0 if signal is low and 1 if signal is high. DIOx.INV can affect the signals driven onto the X9 connector.

This parameter can be written at any time. The value is only guaranteed to correspond to the output on the X9 connector when DRV.EMUEMODE is set to 10 and the DIOx.DIR is 0.

## Example

The following settings set the direction for the differential signals on pin 4 and 5, so that the output will have a high level signal.

First set the following settings:

```
DRV.EMUEMODE 10
DIO10.DIR 1
DOUT10.STATEU 1
```

Then change the level of the signal:

```
DOUT.STATEU 0
```

or

```
DIO10.INV
```

**Note:** Inverting the signal will also alter the signal in input mode.

## Related Topics

DIO9.DIR to DIO11.DIR (→ p. 566)

DIO9.INV to DIO11.INV (→ p. 564)

DRV.EMUEMODE (→ p. 631)

## 25.13.12 DOUT21.STATE to DOUT32.STATE

General Information	
Type	R/O Parameter
Description	Reads the digital output state.
Units	N/A
Range	0 to 1
Default Value	N/A
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DOUT21.STATE	Profinet	2735	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DOUT22.STATE	Profinet	2740	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT23.STATE	Profinet	2745	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT24.STATE	Profinet	2750	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT25.STATE	Profinet	2755	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT26.STATE	Profinet	2760	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT27.STATE	Profinet	2765	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT28.STATE	Profinet	2770	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT29.STATE	Profinet	2775	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT30.STATE	Profinet	2780	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	
Modbus	1470	DOUT21.STATE	No	8 bit	No
	1480	DOUT22.STATE			
	1490	DOUT23.STATE			
	1500	DOUT24.STATE			
	1510	DOUT25.STATE			
	1520	DOUT26.STATE			
	1530	DOUT27.STATE			
	1540	DOUT28.STATE			
	1550	DOUT29.STATE			
	1560	DOUT30.STATE			

## Description

DOUTx.STATE reads the state of one digital output according to the value stated in the command.

## Related Topics

Digital Outputs (→ p. 109)

## 25.13.13 DOUT21.STATEU to DOUT32.STATEU

General Information	
Type	R/W Parameter
Description	Sets the state of the digital output node.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-01-01-000

### Variants Supported

Supported by any AKD with extended IO.

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DOUT21.STATEU	Profinet	2736	Byte	No
	sercos <sup>®</sup> III		2 Octets	
DOUT22.STATEU	Profinet	2741	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT23.STATEU	Profinet	2746	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT24.STATEU	Profinet	2751	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT25.STATEU	Profinet	2756	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT26.STATEU	Profinet	2761	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT27.STATEU	Profinet	2766	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT28.STATEU	Profinet	2771	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT29.STATEU	Profinet	2776	Byte	
	sercos <sup>®</sup> III		2 Octets	
DOUT30.STATEU	Profinet	2781	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?
Modbus	1472	DOUT21.STATEU	No	8 bit	No
	1482	DOUT22.STATEU			
	1492	DOUT23.STATEU			
	1502	DOUT24.STATEU			
	1512	DOUT25.STATEU			
	1522	DOUT26.STATEU			
	1532	DOUT27.STATEU			
	1542	DOUT28.STATEU			
	1552	DOUT29.STATEU			
	1562	DOUT30.STATEU			

## Description

DOUTx.STATEU sets the state of the digital output node as follows:

0 = deactivated

1 = activated

DOUTx.STATEU is used when DOUTx.MODE = 0 (user mode).

## Related Topics

Digital Outputs (→ p. 109)

## 25.14 DRV Parameters

This section describes the DRV parameters.

---

25.14.1 DRV.ACC .....	593
25.14.2 DRV.ACTIVE .....	595
25.14.3 DRV.BLINKDISPLAY .....	597
25.14.4 DRV.BOOTTIME .....	598
25.14.5 DRV.CLRFAULTHIST .....	599
25.14.6 DRV.CLRFAULTS .....	600
25.14.7 DRV.CMDDELAY .....	602
25.14.8 DRV.CMDSOURCE .....	604
25.14.9 DRV.CRASHDUMP .....	606
25.14.10 DRV.CUSTOMIDENTIFIER .....	607
25.14.11 DRV.DBILIMIT .....	609
25.14.12 DRV.DEC .....	611
25.14.13 DRV.DIFVAR .....	613
25.14.14 DRV.DIR .....	614
25.14.15 DRV.DIS .....	616
25.14.16 DRV.DISMODE .....	618
25.14.17 DRV.DISSOURCES .....	620
25.14.18 DRV.DISSOURCESMASK .....	622
25.14.19 DRV.DISTO .....	624
25.14.20 DRV.DOWNLOADALLOWED .....	626
25.14.21 DRV.EMUHECKSPEED .....	627
25.14.22 DRV.EMUEDIR .....	629
25.14.23 DRV.EMUEMODE .....	631
25.14.24 DRV.EMUEMTURN .....	634
25.14.25 DRV.EMUEPULSEWIDTH .....	636
25.14.26 DRV.EMUERES .....	638
25.14.27 DRV.EMUEZOFFSET .....	640
25.14.28 DRV.EN .....	642
25.14.29 DRV.ENDEFAULT .....	644
25.14.30 DRV.ERRORLIST .....	645
25.14.31 DRV.FAULTDISPLAYMODE .....	646

---

25.14.32 DRV.FAULTHIST .....	647
25.14.33 DRV.FAULT1 to DRV.FAULT10 .....	648
25.14.34 DRV.FAULTS .....	651
25.14.35 DRV.HANDWHEEL .....	652
25.14.36 DRV.HANDWHEELSRC .....	654
25.14.37 DRV.HELP .....	655
25.14.38 DRV.HELPALL .....	656
25.14.39 DRV.HWENABLE .....	657
25.14.40 DRV.HWENDELAY .....	658
25.14.41 DRV.HWENMODE .....	660
25.14.42 DRV.ICONT .....	662
25.14.43 DRV.INFO .....	663
25.14.44 DRV.IPEAK .....	665
25.14.45 DRV.IZERO .....	666
25.14.46 DRV.LIST .....	667
25.14.47 DRV.LOGICVOLTS .....	668
25.14.48 DRV.MEMADDR .....	669
25.14.49 DRV.MEMDATA .....	670
25.14.50 DRV.MOTIONDISSOURCES .....	671
25.14.51 DRV.MOTIONSTAT .....	672
25.14.52 DRV.NAME .....	674
25.14.53 DRV.NVCHECK .....	675
25.14.54 DRV.NVLIST .....	677
25.14.55 DRV.NVLOAD .....	678
25.14.56 DRV.NVSAVE .....	679
25.14.57 DRV.ONTIME .....	681
25.14.58 DRV.OPMODE .....	682
25.14.59 DRV.READFORMAT .....	684
25.14.60 DRV.RSTVAR .....	685
25.14.61 DRV.RUNTIME .....	686
25.14.62 DRV.SETUPREQBITS .....	687
25.14.63 DRV.SETUPREQLIST .....	689
25.14.64 DRV.STOP .....	691

---

<b>25.14.65 DRV.TEMPERATURES</b> .....	<b>692</b>
<b>25.14.66 DRV.TIME</b> .....	<b>693</b>
<b>25.14.67 DRV.TYPE</b> .....	<b>694</b>
<b>25.14.68 DRV.VER</b> .....	<b>696</b>
<b>25.14.69 DRV.VERIMAGE</b> .....	<b>697</b>
<b>25.14.70 DRV.WARNING1 to DRV.WARNING3</b> .....	<b>698</b>
<b>25.14.71 DRV.WARNINGS</b> .....	<b>700</b>
<b>25.14.72 DRV.ZERO</b> .....	<b>701</b>

## 25.14.1 DRV.ACC

General Information	
Type	NV Parameter
Description	Describes the acceleration ramp for the velocity loop.
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rps/s, rpm/s, deg/s <sup>2</sup> , (custom units)/s <sup>2</sup> , rad/s <sup>2</sup> Linear: counts/s <sup>2</sup> , mm/s <sup>2</sup> , μm/s <sup>2</sup> , (custom units)/s <sup>2</sup>
Range	Note: The range and default values of (custom units)/s <sup>2</sup> units depend on the values of PIN and POUT. The range and default values listed in this table are derived from the default values of PIN and POUT. Rotary: 0.002 to 833,333.333 rps/s 0.112 to 50,000,000.000 rpm/s 0.009 to 300,000,000.000 deg/s <sup>2</sup> 0.155 to 4,166,666.752 (custom units)/s <sup>2</sup> 0.012 to 5,235,987.968 rad/s <sup>2</sup> Linear: 16,000.000 to 3,579,139,408,000.000 counts/s <sup>2</sup> 0.031*MOTOR.PITCH (→ p. 1001) to 833,333.333*MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 30.995*MOTOR.PITCH (→ p. 1001) to 2,147,483.647*MOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 0.155 to 2,147,483.647 (custom units)/s <sup>2</sup>
Default Value	Note: The range and default values of (custom units)/s <sup>2</sup> units depend on the values of PIN and POUT. The range and default values listed in this table are derived from the default values of PIN and POUT. Rotary: 166.669 rps/s 10,000.000 rpm/s 60,000.000 deg/s <sup>2</sup> 833.333 (custom units)/s <sup>2</sup> 1,047.2 rad/s <sup>2</sup> Linear: 715,840,000.000 counts/s <sup>2</sup> 166.714*MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 166,714.191*MOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 833.571 (custom units)/s <sup>2</sup>
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes

Variant	Supported
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3501h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2108	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	216	Yes	64 bit	No	M_01-03-00-000

## Description

Describes the acceleration ramp for the velocity central loop.

## Related Topics

13.6 Limits

DRV.DEC (→ p. 611)

## 25.14.2 DRV.ACTIVE

General Information	
Type	R/O Parameter
Description	Reads the enable status of an axis.
Units	N/A
Range	0, 1, 3
Default Value	N/A
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2110	Byte	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	220	No	8 bit	No	M_01-03-00-000

### Description

DRV.ACTIVE reads the enable status of an axis as follows:

- DRV.ACTIVE = 0 drive disabled
- DRV.ACTIVE = 1 drive enabled
- DRV.ACTIVE = 3 drive enabled and in dynamic brake mode

There is no state 2.

When the drive is in state 3, the drive display shows a blinking decimal point. Additionally, if the drive is in state 3 the Parameter Load/Save view does not allow you to download a parameter file.

If an axis is not enabled (DRV.ACTIVE is 0), but DRV.EN (→ p. 642) is 1 and the hardware enable is high, read the value of DRV.DISSOURCES (→ p. 620) to query the reason that the drive is not enabled.

## **Related Topics**

13.9 Enable/Disable

DRV.EN (→ p. 642), DRV.DISSOURCES (→ p. 620)

## 25.14.3 DRV.BLINKDISPLAY

General Information	
Type	Command
Description	Causes the display to blink for 10 seconds.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2784	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1568	No	Command	No	M_01-06-03-000

### Description

DRV.BLINKDISPLAY causes the drive display located on the front of the drive to blink for 10 seconds.

This command allows the user to identify the drive that is currently communicating with WorkBench.

## 25.14.4 DRV.BOOTTIME

General Information	
Type	R/O
Description	Returns the time when the current session booted up.
Units	Days:Hours:Minutes:Seconds
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-06-05-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.BOOTTIME returns the time that the current session started running. This time includes total amount of time from all previous sessions.

This keyword can be used with DRV.RUNTIME to determine the length of time the drive has been running since it was last power cycled.

Session Time = DRV.RUNTIME – DRV.BOOTTIME

### Related Topics

DRV.RUNTIME (→ p. 686)

## 25.14.5 DRV.CLRFAULTHIST

General Information	
Type	Command
Description	Clears the fault history log in the NV.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2111	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	222	No	Command	No	M_01-03-00-000

### Description

DRV.CLRFAULTHIST clears the fault history from the nonvolatile memory of the drive. This command erases all faults returned by DRV.FAULTHIST (→ p. 647).

## 25.14.6 DRV.CLRFAULTS

General Information	
Type	Command
Description	Tries to clear all active faults in the drive.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2112	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	224	No	Command	No	M_01-03-00-000

### Description

When DRV.CLRFAULTS is sent, the drive will try to clear all active faults. When a fault occurs, the fault is registered in the drive fault handler. DRV.CLRFAULTS clears the fault from the drive fault handler. However, if the fault still exists in the system, DRV.CLRFAULTS fails and the fault is re-registered in the fault handler.

If the DRV.CLRFAULTS succeeds, then the reply to DRV.FAULTS states that no faults exist. If the condition that triggered the fault is still present, the fault condition will remain.

See Fault and Warning Messages (→ p. 259) for details regarding the behavior of individual faults.

Note that executing a drive disable (DRV.DIS (→ p. 616)) followed by a drive enable (DRV.EN (→ p. 642)) has the same effect as executing DRV.CLRFAULTS.

## Related Topics

Clearing Faults (→ p. 279)

DRV.FAULTS (→ p. 651), DRV.EN (→ p. 642), DRV.DIS (→ p. 616)

## 25.14.7 DRV.CMDDELAY

General Information	
Type	Command
Description	Issues a delay before next command is executed.
Units	ms
Range	0 to 5,000 ms
Default Value	0 ms
Data Type	Float
Start Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1572	No		No	M_01-06-03-000

### Description

This parameter is used when drive commands are used in a script and a delay is needed between the execution of two consecutive commands. DRV.CMDDELAY creates a delay in the execution of drive commands. In the period of time specified, no commands are executed. This feature is especially useful for command buffers.

### Example

If the script is:

```
DRV.EN
IL.CMDU 0.1
```

then DRV.CMDDELAY is used between the two entries to delay execution 5 ms until the drive is enabled:

```
DRV.EN
```

DRV.CMDDELAY 5

IL.CMDU 0.1

## 25.14.8 DRV.CMDSOURCE

General Information	
Type	NV Parameter
Description	Sets the command source (service, fieldbus, analog input, gearing, digital, or Bode).
Units	N/A
Range	0 to 5
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

AKD SynqNet Information	
Range	0

AKD BASIC Information	
Range	0, 3, 5

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2113	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	226	No	8 bit	No	M_01-03-00-000

### Description

DRV.CMDSOURCE specifies the source of the command to the drive. DRV.OPMODE (→ p. 682) sets the operation mode to the relevant control loop.

DRV.CMDSOURCE values can be set as follows:

Value	Description
0	Service, TCP/IP command
1	Fieldbus command
2	Gearing command
3	Analog command
5	Program command

If DRV.CMDSOURCE is set to 5 then DRV.OPMODE must be set to 3.

DRV.CMDSOURCE can be changed while the drive is enabled or disabled. If you use the terminal to change the operation mode, then it is recommended that you disable the drive before changing the command source.

**⚠ WARNING** If you change DRV.CMDSOURCE from the terminal while the drive is enabled, the system may experience a step change in command.

## Example

To set the command source to the TCP/IP channel and the operation mode to velocity:

```
-->DRV.CMDSOURCE 0
```

```
-->DRV.OPMODE 1
```

## Related Topics

DRV.OPMODE (→ p. 682)

## 25.14.9 DRV.CRASHDUMP

General Information	
Type	Command
Description	Retrieves diagnostic information after the drive crashes.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

Drives rarely crash, but if a crash occurs, information that can help diagnose the cause of a crash is saved to the nonvolatile (NV) memory within the drive. After the drive is restarted, you can use the DRV.CRASHDUMP command to retrieve this diagnostic information, which can be emailed to Kollmorgen for further support.

If the drive crashes (display flashes an F and three bars), it saves the diagnostic information to a specific block of the drive NV memory. The DRV.CRASHDUMP command then prints the diagnostic information from this NV memory block. Subsequent crash conditions will overwrite the NV memory block. Since the NV memory block is overwritten, but never erased, the DRV.CRASHDUMP command always shows the diagnostic information for the most recent crash.

## 25.14.10 DRV.CUSTOMIDENTIFIER

General Information	
Type	NV Parameter
Description	Sets the customer defined identifier string for a device.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-12-05-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	2032h/0	M_01-12-05-000

### Description

Use DRV.CUSTOMIDENTIFIER to assign a unique string to a device. The string must use the following formatting rules:

- ASCII characters only
- 32 character max length
- No spaces in string

The string is displayed on the device overview screen and in the start page's device discovery table.

WorkBench has found the following devices.

[? Is your device is not shown?](#)

Name	Status	IP Address	MAC Address	Model Number	Firmware Version	Custom Identifier
	Free	10.154.95.119	00240B007448	AKD-P00306-NBEC-0000	01-12-04-000-58763-alpha	-
AKD_63	Busy	10.154.95.63	00240B010C4D	AKD-P00306-NBEC-0000	01-12-04-000-00000_2014-...	MyCustomIdentifier
MAI AM-7	Free	10.155.94.419	00221B00EAE5	AKD-P00306-NBEC-0000	M_01-12-04-000	

### Related Topics

DRV.NAME (→ p. 674)

## 25.14.11 DRV.DBILIMIT

General Information	
Type	NV Parameter
Description	Sets the maximum amplitude of the current for dynamic braking.
Units	Arms
Range	0 to minimum of drive peak current (DRV.IPEAK) and motor peak current (MOTOR.IPEAK).
Default Value	Minimum of drive continuous current (DRV.ICONT) and motor continuous current (MOTOR.ICONT).
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3444h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2114	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	228	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets the maximum amplitude of the current for dynamic braking.

### Example

Setting DRV.DBILIMIT to 2 limits the dynamic brake current to 2 Arms.

## **Related Topics**

13.10 Controlled Stop

25.10 CS Parameters

13.11 Dynamic Braking

DRV.DISMODE (→ p. 618)

## 25.14.12 DRV.DEC

General Information	
Type	NV Parameter
Description	Sets the deceleration value for the velocity loop.
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rps/s, rpm/s, deg/s <sup>2</sup> , (custom units)/s <sup>2</sup> , rad/s <sup>2</sup> Linear: counts/s <sup>2</sup> , mm/s <sup>2</sup> , μm/s <sup>2</sup> , (custom units)/s <sup>2</sup>
Range	Rotary: 0.002 to 833,333.333 rps/s 0.112 to 50,000,000.000 rpm/s 0.009 to 300,000,000.000 deg/s <sup>2</sup> 0.155 to 4,166,666.752 (custom units)/s <sup>2</sup> 0.012 to 5,235,987.968 rad/s <sup>2</sup> Linear: 16,000.000 to 3,579,139,408,000.000 counts/s <sup>2</sup> 0.031*MOTOR.PITCH to 833,333.333*MOTOR.PITCH mm/s <sup>2</sup> 30.994*MOTOR.PITCH to 833,333,333.333*MOTOR.PITCH μm/s <sup>2</sup> 0.155 to 4,166,666.667 (custom units)/s <sup>2</sup>
Default Value	Rotary: 166.669 rps/s 10,000.000 rpm/s 60,000.000 deg/s <sup>2</sup> 833.333 (custom units)/s <sup>2</sup> 1,047.2 rad/s <sup>2</sup> Linear: 715,840,000.000 counts/s <sup>2</sup> 166.71*MOTOR.PITCH4MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 166,714.191*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 833.571 (custom units)/s <sup>2</sup>
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes

Variant	Supported
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3522h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2115	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	230	Yes	64 bit	No	M_01-03-00-000

## Description

DRV.DEC sets the deceleration value for the velocity loop command (VL.CMDU (→ p. 1265)) and for the analog

velocity command (). The operation mode (DRV.OPMODE (→ p. 682)) must be set to velocity mode for this command to function.

## Related Topics

13.10 Controlled Stop

13.6 Limits

DRV.ACC (→ p. 593), DRV.OPMODE (→ p. 682)

## 25.14.13 DRV.DIFVAR

General Information	
Type	R/O
Description	Lists all parameters which differ from their default value.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-05-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This parameter displays all parameters which have different values than their default setting. The actual value of each parameter is directly shown after the command name and the corresponding default value is then shown in brackets.

This command also shows differences in parameters which hold a string, such as DRV.NAME.

### Example

```
-->DRV.DIFVAR
DRV.EMUEMODE 10 (0)
DRV.NAME MyDrive(no-name)
FB1.ENCRES 0(1024)
IL.KP 50.009(24.811)
PL.KP 99.998(49.999)
VL.KP 0.108(0.000)
```

## 25.14.14 DRV.DIR

General Information	
Type	R/W Parameter
Description	Changes drive direction.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	352Ah/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2117	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	234	No	8 bit	No	M_01-03-00-000


### Description

DRV.DIR changes the direction of the motor by changing the algebraic sign of the current command and position feedback value according to the figure below.

Note the following when using DRV.DIR:

- You can only change the DRV.DIR command when the drive is disabled.

- The drive status changes to "Axis not homed" as soon as the DRV.DIR parameter changes value (see DRV.MOTIONSTAT (→ p. 672)).
- You must verify the settings of the hardware limit switches. If necessary, switch the positive and negative hardware limit switches by swapping the wires at the digital inputs.

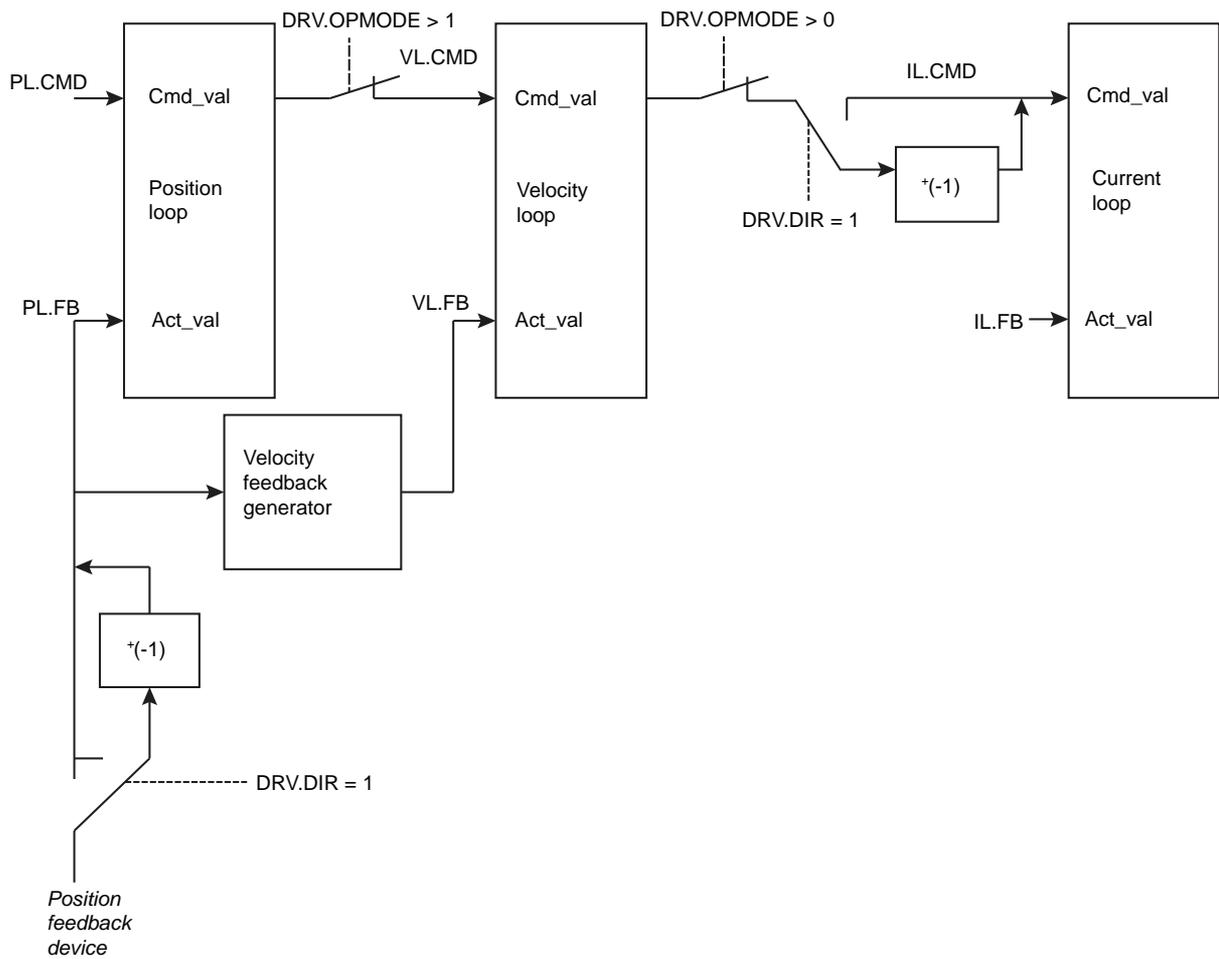

## 25.14.15 DRV.DIS

General Information	
Type	Command
Description	Disables the axis (software).
Units	N/A
Range	N/A
Default Value	Analog drive software enabled. All other types of drive software disabled.
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3443h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2118	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	236	No	Command	No	M_01-03-00-000

### Description

DRV.DIS issues a software disable to the drive. The method by which the drive will be disabled (either immediately or with a ramp down first) is controlled by DRV.DISMODE (→ p. 618).

By querying the value of DRV.ACTIVE (→ p. 595), you can check whether the drive is currently enabled or disabled.

By querying the value of DRV.DISSOURCES (→ p. 620), you can check whether the software enable bit is high (software enabled was issued by executing DRV.EN) or the software enable bit is low (software disable was issued by executing DRV.DIS).

If DRV.DIS is commanded the emergency timeout is started. If the drive does not disable or activate dynamic brake within DRV.DISTO (→ p. 624), fault "F703" (→ p. 277) is reported.

## Related Topics

20.4 Clearing Faults

13.10 Controlled Stop

DRV.EN (→ p. 642), DRV.DISSOURCES (→ p. 620), DRV.ACTIVE (→ p. 595), DRV.DISMODE (→ p. 618), DRV.DISTO (→ p. 624)

## 25.14.16 DRV.DISMODE

General Information	
Type	NV Parameter
Description	Selects among disable immediately or stop and then disable options.
Units	N/A
Range	0 to 3
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

SynqNet Information	
Range	0 to 2

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35FFh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2119	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	238	No	8 bit	No	M_01-03-00-000

### Description

DRV.DISMODE sets the drive reaction to a DRV.DIS (→ p. 616) command.

#### NOTE

You must disable the drive in order to set DRV.DISMODE.

Value	Behavior
0	Disable axis immediately.
1	Use dynamic brake to ramp down. The drive remains in the dynamic brake state after the motor has stopped. The drive is disabled in the sense that it does not close the control loop and cannot perform a motion, but PWM stays active.
2	Use a controlled stop to ramp down and then disable the drive.
3	Use a controlled stop to ramp down, and then use dynamic brake. The drive remains in the dynamic brake state after the motor has stopped. The drive is disabled in the sense that it does not close the control loop and cannot perform a motion, but PWM stays active.

In all cases described above, if a brake is configured (MOTOR.BRAKE (→ p. 966)), the brake closes if VL.FB (→ p. 1269) drops below CS.VTHRESH (→ p. 534).

**⚠ WARNING** Be careful with vertical loads when modifying this parameter. Coordinate this parameter's correct setting properly with the drive brake settings. If these settings are not coordinated, then vertical loads may have no stopping or holding force when the drive is disabled and the load could fall.

## Related Topics

13.10 Controlled Stop

25.10 CS Parameters

13.11 Dynamic Braking

DRV.DBILIMIT (→ p. 609), DRV.DISTO (→ p. 624), CS.VTHRESH (→ p. 534)

## 25.14.17 DRV.DISSOURCES

General Information	
Type	R/O Parameter
Description	Returns the possible reason for a drive disable.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2120	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	240	No	16 bit	No	M_01-03-00-000

### Description

DRV.DISSOURCES is a bitwise parameter that returns the status of possible causes of a drive disable. If this parameter is 0, then the drive is enabled.

The return value specific bits are as follows:

Bit	Status and Response	Drive Action
0	Software disable (execute DRV.EN to issue software enable)	Performs action configured by DRV.DISMODE.

Bit	Status and Response	Drive Action
1	Fault exists (read DRV.FAULTS to get the active faults)	Device disables using the defined reaction for the detected fault.
2	Hardware disable (remote enable input is low)	Power stage disabled.
3	In-rush disable (the in-rush relay is opened)	Performs action configured by DRV.DISMODE.
4	Initialization disable (the drive did not finish the initialization process)	Power stage disabled.
5	Controlled stop disable from a digital input.	Controlled stop.
6	Field Bus requested disable (SynqNet and EtherNet/IP only)	Performs action configured by DRV.DISMODE.
7	AKD-C requested disable (AKD-N only)	Performs action configured by DRV.DISMODE.
10	AKD-C in download mode.	Disables all AKD-Ns on the AKD-C's strings.

## Related Topics

Controlled Stop (→ p. 132)

DRV.ACTIVE, DRV.FAULTS, DRV.EN, DRV.DIS

## 25.14.18 DRV.DISSOURCESMASK

General Information	
Type	R/O parameter
Description	Returns a bitmap of all bits in DRV.DISSOURCES that can be set to one on a given drive.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
Start Version	M_01-07-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.DISSOURCESMASK is a bitwise parameter that returns all possible causes of a drive disable. If a bit is set, the drive can be disabled for this reason.

The return value specific bits are as follows:

Bit	Status and Response
0	Software triggered disable
1	Fault exists
2	Hardware Enable input inactive
3	In-rush relay state prevents enable
4	Initialization not complete
5	Controlled stop requested from digital input
6	Field bus requested disable
7	AKD-C requested disable (AKD-N only)

Bit	Status and Response
8	Pre-charge successful (AKD-C only)
10	AKD-C download mode disabled all AKD-Ns

For most AKD models, this parameter will return the value 63. For EtherNet/IP and SynqNet version of the drive, the parameter will return the value 127.

For AKD-N, this parameter will return the value 179. For AKD-C, this parameter will return the value 286.

## Related Topics

DRV.DISSOURCES (→ p. 620)

## 25.14.19 DRV.DISTO

General Information	
Type	R/W Parameter
Description	Sets the emergency timeout
Units	ms
Range	0 to 120,000 ms
Default Value	1,000 ms
Data Type	U32
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3445h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2121	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	242	No	32 bit	No	M_01-03-00-000

### Description

This timer starts when DRV.DIS (→ p. 616) is issued (regardless of the DRV.DIS (→ p. 616) origin). After this timeout elapses, the actual state of the drive is compared to the DRV.DISMODE (→ p. 618) setting. If the actual state does not match the DRV.DISMODE (→ p. 618) setting, a fault is reported and the hardware immediately executes the DRV.DISMODE setting (for instance, disable or activate dynamic brake). Setting DRV.DISTO to 0 will disable the timeout.

## Related Topics

13.10 Controlled Stop

DRV.DIS (→ p. 616), DRV.DISMODE (→ p. 618)

## 25.14.20 DRV.DOWNLOADALLOWED

General Information	
Type	R/O Parameter
Description	Returns whether the drive is in a safe state to begin a firmware download.
Units	N/A
Range	0 to 1
Default Value	N/A
Data Type	Integer
Start Version	M_01-09-02-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2882	DWord	No
sercos <sup>®</sup> III		4 Octets	

### Description

This parameter returns whether the drive is in a safe state to begin a firmware download. A download can only be performed if the value is one. If the value is zero, WorkBench will block the download.

For an AKD or NSD, the value depends on the drive enable status. For a CPS, the value depends on the enable states of the NSDs on its string. If one more more NSDs are enabled on a string, download to the CPS will be blocked.

### Related Topics

13.6 Limits

## 25.14.21 DRV.EMUECHECKSPEED

General Information	
Type	R/W
Description	Enable/disable comparison of motor velocity and maximum emulated encoder velocity. See Fault F486 for details.
Units	None
Range	0 to 1
Default Value	0 (disabled)
Data Type	Boolean
Start Version	M_01-06-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2526	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1052	No	8 bit	No

### Description

Enables comparison of the current motor velocity (or EEO pulse rate for DRV.EMUEMODE (→ p. 631) 15 to 17) against the maximum speed the emulated encoder output can generate. If the commanded speed exceeds DRV.EMUECHECKSPEED, fault F486 is raised.

For DRV.EMUEMODE 1 to 14, the commanded speed is based on lines/rev (DRV.EMUERES (→ p. 638)) and the pulse width (DRV.EMUEPULSEWIDTH (→ p. 636)).

For DRV.EMUEMODE 15 to 17 the commanded speed depends on the rate defined by changes in DRV.EMUESTEPCMD.

## **Related Topics**

DRV.EMUEMODE

## 25.14.22 DRV.EMUEDIR

General Information	
Type	R/W Parameter
Description	Sets the direction of the emulated encoder output (EEO) signal.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3493h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2122	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	244	No	8 bit	No	M_01-03-00-000

### Description

This parameter sets the direction of the emulated encoder output (EEO). DRV.DIR (→ p. 614) also effects the output direction (through an XOR, "exclusive or", operation). The drive uses DRV.DIR (→ p. 614) and DRV.EMUEDIR to decide the direction of the EEO. If DRV.DIR (→ p. 614) and DRV.EMUEDIR have the same value, then DRV.EMUEDIR is set to 0 (meaning an increase in the motor feedback will result an increase of the EEO and vice-versa). If these parameters have different

values, then DRV.EMUEDIR is set to 1 (meaning an increase in the motor feedback will result in a decrease of the EEO and vice-versa).

## 25.14.23 DRV.EMUEMODE

General Information	
Type	R/W Parameter
Description	Sets the mode of the emulated encoder output (EEO) connector.
Units	N/A
Range	0 to 17
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3534h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2123	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	246	No	16 bit	No	M_01-03-00-000

### Description

When the emulated encoder output (EEO) is configured to generate an index pulse (Z pulse) once per rev (DRV.EMUEMODE is 1, 6, or 8) this parameter and DRV.EMUEZOFFSET define the location of the Z pulse. DRV.EMUEZOFFSET defines the position of the Z pulse within one revolution. The pulse is generated each time this position is reached. For example, if this value is set to 32,768 (180 degrees), the Z pulse will be generated at 180 degrees, 540 degrees, 900 degrees, and so on.

When the EEO is configured to generate an absolute index pulse (DRV.EMUEMODE is 2, 7, or 9) this parameter, DRV.EMUEZOFFSET and DRV.EMUETURN define the location of the Z pulse. DRV.EMUETURN is used to define which turn of the position range the Z pulse is located. DRV.EMUEZOFFSET is used to define the position of the Z pulse within one revolution. For example, if DRV.EMUETURN is set to 1, and DRV.EMUEZOFFSET is set to 32,768 (180 degrees), then the index pulse will be generated at position 540 degrees.

When the EEO is configured in pass through mode (DRV.EMUEMODE is 12, 13, or 14) the EEO Z pulse will be generated each time the encoder's physical Z pulse is generated (the physical Z pulse is "passed through").

DRV.EMUEMODE sets the EEO connector to act as either an input or output as follows.

Setting	Function
0 (recommended)	Input (see to select the type of inputs the secondary feedback will accept)
1	EEO Output, A/B with once per rev index
2	EEO Output, A/B with absolute index pulse.
3	Input, A/B signals (Deprecated)
4	Input, step and direction signals (Deprecated)
5	Input, CW/CCW (Cw/Ccw) Signals (Deprecated)
6	Step/Dir with one Z-pulse/rev
7	Step/Dir with one absolute Z-pulse (depends on DRV.EMUEOFFSET and DRV.EMUETURN)
8	CW/CCW output with one Z-pulse/rev
9	CW/CCW output with one absolute Z-pulse (depends on DRV.EMUEOFFSET and DRV.EMUETURN)
10	Allows the X9 connector to be used as a General Purpose I/O or SynqNet fieldbus controlled I/O (See )
11	FB3 Input (Tertiary feedback is reported with FB3.P (→ p. 792)). Use FB3.MODE (→ p. 789) to select the feedback type.
12	Output - A/B with index pass through.
13	Output - Step/Dir with index pass through.
14	Output - CW/CCW with index pass through.
15	Output - A/B stepper control.
16	Output - Step/Dir stepper control.
17	Output - CW/CCW stepper control.

Modes 3 to 5 are backwards compatible but deprecated. Refer to FB2.MODE (→ p. 775) and FB2.SOURCE (→ p. 784) instead.

#### NOTE

If you are using multi-turn or single turn absolute feedback devices, and the once per rev or absolute Z pulse modes (DRV.EMUEMODES 1, 2, 6, 7, 8, or 9) the Z pulse generated by the EEO will always be aligned with the same mechanical position of the primary feedback position. If you are using an incremental feedback device and these modes, then the origin of the primary feedback is not at the same mechanical position each time the drive powers up. If you are using the pass through mode (DRV.EMUEMODES 12, 13, or 14) the Z pulse generated by the EEO will always be aligned with the same mechanical position of the primary feedback position.

## Related Topics

DRV.EMUERES (→ p. 638), DRV.EMUEZOFFSET (→ p. 640), DRV.EMUEMTURN (→ p. 634)

## 25.14.24 DRV.EMUEMTURN

General Information	
Type	R/W Parameter
Description	Defines the location of the index pulse on the EEO (emulated encoder output) when DRV.EMUEMODE=2.
Units	revolutions
Range	0 to 4,294,967,295
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3491h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2124	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	248	No	32 bit	No	M_01-03-00-000

### Description

When the emulated encoder output (EEO) is configured to generate an absolute index pulse (DRV.EMUEMODE is 2, 7 or 9) this parameter and DRV.EMUEZOFFSET define the location of the Z pulse. DRV.EMUEMTURN is used to define which turn of the position range the Z pulse is located. DRV.EMUEZOFFSET is used to define the position of the Z pulse within one revolution.

**Note:** If you are using multi-turn or single turn absolute feedback devices the Z pulse from generated by the EEO will always be aligned with the same mechanical position of the of the primary feedback position. If you are using an incremental feedback device then the origin of the primary feedback is not at the same mechanical position each time the drive powers up.

## Related Topics

DRV.EMUEMODE (→ p. 631), DRV.EMUERES (→ p. 638)

## 25.14.25 DRV.EMUEPULSEWIDTH

General Information	
Type	TBD
Description	Sets the encoder output pulse width for modes 6 to 7.
Units	us(microseconds)
Range	4.08 us to 2621.48 us
Default Value	4.08 us
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2525	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1050	No	32 bit	No

### Description

EMU Encoder Out Pulse Width Register

Sets pulse width for CW/CCW and Step and Direction modes. This parameter does not effect the A quad B mode. To calculate emuOutPulseWidth:

(Desired pulse width -40 nsec)/520 nsec

Requirement	DSFPGA-03-306	
Bits	Bits	Description

11:0	emuOutPulseWidth	Read/Write 12 bit unsigned number minimum resolution is 520 nsec. Reset state – 0
15:12		reserved

- Register is in counts (12 bit)
- Register \* 520ns + 40ns is the actual pulse with.
- Register = 1 = pulse width is 560ns = 0.56us (minimum value)
- For each register increment the pulse width is raised by 0.52us

## Example

50 usecs pulse width

$$\text{emuOutPulseWidth} = (50 \text{ usecs} - 40 \text{ nsec}) / 520 \text{ nsec} = 96$$

$$\text{actual pulse} = 96 * 520 \text{ nsec} + 40 \text{ nsec} = 49.88 \text{ usecs.}$$

## Related Topics

DRV.EMUEMODE (→ p. 631)

## 25.14.26 DRV.EMUERES

General Information	
Type	R/W Parameter
Description	Sets the resolution of the EEO (emulated encoder output).
Units	lines/rev (when DRV.EMUEMODE (→ p. 631) = 1, 2, or 3) counts/rev (when DRV.EMUEMODE (→ p. 631) = 4 or 5)
Range	0 to 16,777,215 lines per revolution
Default Value	0 lines per revolution
Data Type	Integer
Start Version	M_01-00-00-000 (resolution increased from 65,535 to 16,777,215 in M_01-04-00-000)

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3535h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2125	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	250	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets the emulated encoder (EEO) resolution. DRV.EMUERES also defines how many lines are output for one revolution of the primary feedback (when this port is configured as an output), or how many lines will be considered a full revolution of the handwheel (when this port is configured as an input).

## **Related Topics**

DRV.EMUEMODE (→ p. 631)

## 25.14.27 DRV.EMUEZOFFSET

General Information	
Type	R/W Parameter
Description	Sets the location of the EEO (emulated encoder output) index pulse (when DRV.EMUEMODE=1).
Units	1/65536 rev
Range	0 to 65535 rev
Default Value	0 rev
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3537h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2126	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	252	No	16 bit	No	M_01-03-00-000

### Description

When emulated encoder output (EEO) multiturn is selected (DRV.EMUEMODE (→ p. 631)=1), this parameter is used by itself to define the position of the Z pulse within one revolution. When the primary feedback position (within a revolution) equals this value, an index pulse will output. Also, if DRV.EMUEMODE=1 then this parameter is used in conjunction with DRV.EMUEMTURN.

When the EEO is configured to generate an absolute index pulse (DRV.EMUEMODE is 2, 7 or 9) this parameter and DRV.EMUEZOFFSET define the location of the Z pulse. DRV.EMUEMTURN is used to define which turn of the position range the Z pulse is located and DRV.EMUEZOFFSET is used to define the position of the Z pulse within one revolution.

**Note:** If you are using multi-turn or single turn absolute feedback devices the Z pulse from generated by the EEO will always be aligned with the same mechanical position of the of the primary feedback position. If you are using an incremental feedback device then the origin of the primary feedback is not at the same mechanical position each time the drive powers up.

## Related Topics

DRV.EMUEMODE (→ p. 631), DRV.EMUEMTURN (→ p. 634)

## 25.14.28 DRV.EN

General Information	
Type	Command
Description	Enables the axis (software).
Units	N/A
Range	N/A
Default Value	Analog drive software is enabled. All other types of drive software are disabled.
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2127	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	254	No	Command	No	M_01-03-00-000

### Description

DRV.EN issues a software enable to the drive. You can query the value of DRV.ACTIVE (→ p. 595) to check whether the drive is currently enabled or disabled.

You can also query the value of DRV.DISSOURCES (→ p. 620) to check whether the software enable bit is high (software enabled was issued by executing DRV.EN) or the software enable bit is low (software disable was issued by executing DRV.DIS). If the drive software enable bit is low and DRV.EN is executed, then drive faults are automatically cleared during the software enable process.

### Related Topics

20.4 Clearing Faults

13.9 Enable/Disable

DRV.DIS (→ p. 616), DRV.DISSOURCES (→ p. 620), DRV.ACTIVE (→ p. 595)

## 25.14.29 DRV.ENDEFAULT

General Information	
Type	R/W Parameter
Description	Sets the default state of the software enable.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Boolean
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2128	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	256	No	8 bit	No	M_01-03-00-000

### Description

DRV. ENDEFAULT sets the default state of the software enable on power up for drives without field-buses (DRV.CMDSOURCE other than 1).

#### NOTE

It is recommended to not use this parameter with a BASIC program (keep DRV.ENDEFAULT = 0 / default value). Instead set DRV.SWENABLE = 1 at the beginning of the BASIC program.

### Related Topics

Enable/Disable (→ p. 129)

## 25.14.30 DRV.ERRORLIST

General Information	
Type	R/O
Description	Prints a list of all possible error codes and error text.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-09-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

AKD commands and parameters reports an error code when a command cannot be executed. Use DRV.ERRORLIST to print a list of all possible error codes and their descriptions.

## 25.14.31 DRV.FAULTDISPLAYMODE

General Information	
Type	NV Parameter
Description	Sets the fault display mode.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-13-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	53C7h	M_01-13-00-000

### Description

DRV.FAULTDISPLAYMODE sets the LED display behavior when faults are present.

Value	Description
0	Only the highest priority fault is displayed.
1	All faults displayed.

#### NOTE

For an AKD-N, WorkBench's simulated LED will reflect this setting.

### Related Topics

DRV.CLRFAULTS (→ p. 600), DRV.FAULTHIST (→ p. 647), DRV.CLRFAULTHIST (→ p. 599)

## 25.14.32 DRV.FAULTHIST

General Information	
Type	R/O Parameter
Description	Reads the last 50 faults from NV memory.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.FAULTHIST returns the last 50 faults that occurred in the drive. The faults are shown with their fault number (which matches the one displayed on the drive display) and a time stamp that indicates when they last occurred.

Issue a DRV.CLRFAULTHIST (→ p. 599) to clear this fault log.

### Related Topics

DRV.FAULTS (→ p. 651), DRV.CLRFAULTHIST (→ p. 599)

## 25.14.33 DRV.FAULT1 to DRV.FAULT10

General Information	
Type	R/O
Description	Location of fault codes for any active fault conditions.
Units	N/A
Range	Any supported fault code or 0.
Default Value	N/A
Data Type	Integer
Start Version	M_01-06-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Paramter	Fieldbus	Address	Attributes	Signed?
DRV.FAULT1	Profinet	2477	Word	No
	sercos <sup>®</sup> III		2 Octets	
DRV.FAULT2	Profinet	2478	Word	
	sercos <sup>®</sup> III		2 Octets	
DRV.FAULT3	Profinet	2479	Word	
	sercos <sup>®</sup> III		2 Octets	
DRV.FAULT4	Profinet	2480	Word	
	sercos <sup>®</sup> III		2 Octets	
DRV.FAULT5	Profinet	2481	Word	
	sercos <sup>®</sup> III		2 Octets	
DRV.FAULT6	Profinet	2482	Word	
	sercos <sup>®</sup> III		2 Octets	
DRV.FAULT7	Profinet	2483	Word	
	sercos <sup>®</sup> III		2 Octets	
DRV.FAULT8	Profinet	2484	Word	
	sercos <sup>®</sup> III		2 Octets	
DRV.FAULT9	Profinet	2485	Word	
	sercos <sup>®</sup> III		2 Octets	
DRV.FAULT10	Profinet	2486	Word	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	
Modbus	954	DRV.FAULT1	No	16 bit	No
	956	DRV.FAULT2			
	958	DRV.FAULT3			
	960	DRV.FAULT4			
	962	DRV.FAULT5			
	964	DRV.FAULT6			
	966	DRV.FAULT7			
	968	DRV.FAULT8			
	970	DRV.FAULT9			
	972	DRV.FAULT10			

## Description

These parameters are holding registers where any active faults will be kept. A value of zero represents that no fault is present. Non-zero values correspond to specific fault codes in the drive (see fault and warning messages). The registers are populated in the order of when the fault occurs (DRV.FAULT1, DRV.FAULT2, DRV.FAULT3, and so on).

### Notes:

- If DRV.FAULT1 value is 0, then the drive does not have any faults.
- Only active faults are shown. This is not a fault history.
- These registers are an alternative to the string type parameter DRV.FAULTS (→ p. 651), so that fieldbusses and AKD BASIC users have easier access to the details of the faults in the drive.
- Warnings are not shown in the registers, only faults.

## Related Topics

Modbus (→ p. 327) | DRV.ACTIVE (→ p. 595) | DRV.WARNING1 to DRV.WARNING3 (→ p. 698)

## 25.14.34 DRV.FAULTS

General Information	
Type	R/O Parameter
Description	Reads the active faults.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.FAULTS returns a list of all currently active faults in the system, preceded by their fault number which matches the number displayed on the drive display.

To clear the faults, either issue a DRV.CLRFAULTS or issue a DRV.DIS followed by DRV.EN.

If no active faults are in the system, then after executing DRV.CLRFAULTS the value read by DRV.FAULTS is "No faults active".

### Example

```
-->DRV.FAULTS
502: Bus under voltage.
-->
```

### Related Topics

DRV.CLRFAULTS (→ p. 600), DRV.FAULTHIST (→ p. 647), DRV.CLRFAULTHIST (→ p. 599)

## 25.14.35 DRV.HANDWHEEL

General Information	
Type	R/O Parameter
Description	Reads the EEO input value.
Units	1/4,294,967,296 rev
Range	0 to 4,294,967,295 rev
Default Value	0 rev
Data Type	Integer
Start Version	M_01-00-00-000
End Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	2050h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2129	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	258	No	32 bit	No	M_01-03-00-000

### Description

When the EEO is selected as an input (DRV.EMUEMODE (→ p. 631)=3,4,5), this parameter reads the EEO value (where 4,294,967,296 is a full revolution, then the value rolls over). DRV.EMUERES (→ p. 638) defines the how many counts constitute a revolution on the EEO. This parameter represents the feedback 2 positions when feedback 2 is configured to be active.

When secondary feedback is selected (DRV.EMUEMODE is 0 and FB2.SOURCE = 1 (X9), or FB2.SOURCE = 2 (X7)), this parameter represents the secondary feedback position (where 4,294,967,296 is a full revolution, then the value rolls over). FB2.ENCRESES defines how many counts define a revolution for the secondary feedback.

## **Related Topics**

DRV.EMUERES (→ p. 638), DRV.EMUEMODE (→ p. 631)

## 25.14.36 DRV.HANDWHEELSRC

General Information	
Type	NV Parameter
Description	Selects the feedback for handwheel operation.
Units	None
Range	2-3
Default Value	2
Data Type	U8
Start Version	M_01-05-08-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2611	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1224	No	8 bit	No

### Description

This command sets the feedback which will be used as the handwheel source. If the selected Feedback is incompatible with the selected emulated encoder mode, a warning will be displayed.

Feedback 3 is only supported on drives with model numbers similar to AKD-x-xxxxx-NBxx-xxxx and will only work with Endat 2.2 multiturn encoder.

## 25.14.37 DRV.HELP

General Information	
Type	R/O Parameter
Description	Reads the minimum, maximum, and default values for a specific parameter or command.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This parameter returns more information about a specific parameter or command.

In most cases, except special parameters, this command tells you the minimum, maximum, default, and actual value of a parameter. Exceptions are commands that do not have these values (such as DRV.EN (→ p. 642)) or information commands (such as DRV.VER (→ p. 696)).

### Related Topics

Terminal (→ p. 248)

## 25.14.38 DRV.HELPALL

General Information	
Type	R/O Parameter
Description	Retrieves the minimum, maximum, default, and actual values for all available parameters and commands.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This parameter retrieves all information about all parameters and commands in the firmware. In most cases, DRV.HELPALL returns the minimum, maximum, default, and actual value for each parameter and command. Exceptions include parameters and commands that do not have these values (such as DRV.EN (→ p. 642)) or pure INFO commands (such as DRV.VER (→ p. 696)).

### Related Topics

Terminal (→ p. 248)

## 25.14.39 DRV.HWENABLE

General Information	
Type	R/O
Description	Status of the hardware enable.
Units	N/A
Range	0 to 1
Default Value	N/A
Data Type	Integer
Start Version	tbd

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	Yes
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2527	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1054	No	8 bit	No

### Description

Status of the Hardware Enable.

- 0 - not enabled
- 1 - enabled

**Notes:** This parameter reflects the status of the hardware enable only, not if the status of the power stage. The status of the power stage enable is determined by DRV.ACITVE.

### Related Topics

DRV.DISSOURCES (→ p. 620) | DRV.ACTIVE

## 25.14.40 DRV.HWENDELAY

General Information	
Type	NV Parameter
Description	Delay time between inactive Hardware Enable input and drive disable.
Units	Milliseconds
Range	0 to 167 ms
Default Value	0 ms
Data Type	Integer
Start Version	01-05-08-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2612	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1222	No	8 bit	No

### Description

By default, when the Hardware Disable input deactivates, the drive is immediately disabled. However, on a vertical axis this may allow the load to drop slightly before the brake is applied.

To ensure that the brake is applied before the power stage is disabled, set DRV.HWENDELAY to a value which allows the brake to apply fully.

While the brake is applying, the drive will also attempt to decelerate the motor using the standard drive disable settings such as DRV.DISM0DE, CS.DEC, CS.VTHRESH and CS.TO.

**NOTE**

Prior to version 01-05-08-000, the brake would only apply when velocity dropped below CS.VTHRESH or MOTOR.TBRAKETO expired. Starting with 01-05-08-000, the brake will now apply immediately when the Hardware Enable Input line is deactivated.

**Related Topics**

DRV.DISMODE (→ p. 618) | CS.DEC (→ p. 528) | CS.VTHRESH (→ p. 534) | CS.TO (→ p. 532) | MOTOR.TBRAKEAPP (→ p. 1010)

## 25.14.41 DRV.HWENMODE

General Information	
Type	R/W Parameter
Description	Selects the action that the hardware enable digital input will perform.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3506h/0	M_01-03-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2130	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	260	No	8 bit	No	M_01-03-00-000

### Description

This parameter selects the action that the hardware enable digital input will perform.

0 = The rising edge of the hardware enable will clear the drive faults.

1 = The rising edge of the hardware enable will not clear the drive faults.

The high/low state of the hardware enable is always used to control the active enable state of the drive.

## **Related Topics**

13.9 Enable/Disable

## 25.14.42 DRV.ICONT

General Information	
Type	R/O Parameter
Description	Reads the continuous rated current value.
Units	Arms
Range	N/A
Default Value	N/A
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2131	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	262	No	32 bit	Yes	M_01-03-00-000

### Description

DRV.ICONT returns the drive continuous rated current in Arms.

### Related Topics

DRV.IPEAK (→ p. 665)

## 25.14.43 DRV.INFO

General Information	
Type	R/O Parameter
Description	Reads general information about the drive.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.INFO returns general information about the drive.

### Example

```
Advanced Kollmorgen Drive
```

```
-----  
---
```

```
Drive model : AKD-P00306-NACC-0000
```

```
Drive type : Position Indexer
```

```
Continuous current : 3.000 Arms
```

```
Peak current: 9.000 Arms
```

```
Voltage : 120/240 VAC
```

```
Option Board : Not applicable
```

```
Connectivity : EtherCAT
```

Product serial number: R-0939-00048

Hardware version : --

Mac address: 00-23-1B-00-50-F1

Processor ID: 0xE5040003

Firmware version: M\_01-04-16-000\_Z\_2011-09-12\_14-03-45\_AP

Operational image : M\_01-04-16-000\_Z\_2011-09-12\_14-03-45\_AP

Resident image : R\_00-00-28-000

Revision : 19074

Source Location: local

FPGA Version: FP0003\_0103\_00\_00

Operational image : FP0003\_0103\_00\_00

Resident image : FPB003\_0100\_00\_00

Size: 1600

Control board serial number : 4-0921-00196

Part number : 0

Revision : 7

Board ID : Standard

Power board serial number : 4-0922-00156

Part number : 0

TCP/IP IP address : 169.254.250.241

Subnet mask : 255.255.0.0

Default gateway : 0.0.0.0

DHCP server : 0.0.0.0

Temporary fieldbus type : EtherCAT

FPGA size : 1600

## 25.14.44 DRV.IPEAK

General Information	
Type	R/O Parameter
Description	Reads the peak rated current value.
Units	Arms
Range	N/A
Default Value	N/A
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2132	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	264	No	32 bit	Yes	M_01-03-00-000

### Description

DRV.IPEAK returns the drive peak rated current in Arms.

### Related Topics

9.6 Foldback

DRV.ICONT (→ p. 662)

## 25.14.45 DRV.ZERO

General Information	
Type	NV Parameter
Description	Sets the current that will be used during the DRV.ZERO procedure.
Units	Arms
Range	Drive peak current to 0 Arms
Default Value	0 Arms
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2133	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	266	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets the current that is used during the DRV.ZERO (→ p. 701) procedure.

### Related Topics

DRV.ZERO (→ p. 701)

## 25.14.46 DRV.LIST

General Information	
Type	R/O Parameter
Description	Reads the list of available parameters and commands.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.LIST reads the list of available commands and parameters from the drive.

To filter this list, enter DRV.LIST followed by the prefix of the commands and parameters that you wish to display.

### Example

Return a list of all available commands in the system:

```
-->DRV.LIST
```

Return all commands with the prefix DRV:

```
-->DRV.LIST DRV
```

## 25.14.47 DRV.LOGICVOLTS

General Information	
Type	R/O Parameter
Description	Reads the logic voltages.
Units	mv , $\Omega$
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

DRV.LOGICVOLTS reads the logic voltages data of 1.2 V, 2.5 V, 3.3 V, 5 V, 12 V, -12 V, and 3.3 AV.

### Example

Below is an example of the output for this command:

```

ch0 = 1.2V      : 1211 mv
ch1 = 2.5V      :2488 mv
ch2 = 3.3V      :3274 mv
ch3 = 5V        :4950 mv
ch4 = 12V       :11892 mv
ch5 = -12V      : -11912 mv
ch6 = 3.3AV     :3300 mv
ch7 = R ohm     :100000 ohm

```

## 25.14.48 DRV.MEMADDR

General Information	
Type	R/W Parameter
Description	Sets the read and write address.
Units	N/A
Range	N/A
Default Value	U8
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.MEMADDR sets the address that is used by DRV.MEMDATA. The input can be either an internal parameter of the drive or any direct address from the DSP address space (SDRAM, internal RAM, or asynchronous memory). The input value can be either decimal or hexadecimal with 0x prefix.

Type extension can be one of the following:

U8,S8,U16,S16,U32,S32,U64,S64.

### Examples

Setting to an internal parameter:

```
-->DRV.MEMADDR CCommandHandler.Debug1
```

Setting to an internal address:

```
-->DRV.MEMADDR 0xffabcde.u16
```

### Related Topics

DRV.MEMDATA (→ p. 670)

## 25.14.49 DRV.MEMDATA

General Information	
Type	R/W Parameter
Description	Sets or reads a value from an internal address.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.MEMDATA reads a value from the address that was set by DRV.MEMADDR (→ p. 669) or writes a value to this address. The input value can be either decimal or hexadecimal with 0x prefix.

### Examples

Read a value from internal address:

```
-->DRV.MEMDATA 01
```

Write a hexadecimal value to an internal address:

```
-->DRV.MEMADDR 0x01
```

### Related Topics

DRV.MEMADDR (→ p. 669)

## 25.14.50 DRV.MOTIONDISSOURCES

General Information	
Type	R/O Parameter
Description	Returns some causes of a motion disable.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
Start Version	M_01-10-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter reports some of the reasons that motion may not be allowed on the axis. There are additional reasons why the drive cannot accept a motion command that are not reported by this command (for example, fieldbus control bits or fault status).

Value	Description
0	Motion not blocked by reason indicated for value 1, 2, or 3.
1	Suspend Motion Active
2	Brake not released
4	Brake not released
8	Rotor flux not ready

### Related Topics

Digital Inputs and Outputs (→ p. 104)

## 25.14.51 DRV.MOTIONSTAT

General Information	
Type	R/O Parameter
Description	Reads the motion status of the drive.
Units	N/A
Range	0 to 4,294,967,295
Default Value	N/A
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3492h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2134	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	268	No	32 bit	No	M_01-03-00-000

### Description

This command indicates the current status of the drive internal motion (see table below).

Bit	Significance	Description
0	0x00000001	Motion task is active (high active)
1	0x00000002	Home position found /reference point set (high active)

Bit	Significance	Description
2	0x00000004	Home routine finished (high active). Bits 1 and 2 both must be set to confirm that the homing process is complete.
3	0x00000008	Homing active (high active)
4	0x00000010	Homing error condition has occurred (high active)*
5	0x00000020	Slave in electronic gearing mode synchronized (high active)
6	0x00000040	Electronic gearing is active (high active)
7	0x00000080	Emergency stop procedure in progress (high active)
8	0x00000100	Emergency stop procedure has an error (high active)
9	0x00000200	Service motion active (high active)
10	0x00000400	A motion task could not be activated /invalid MT (high active)**
11	0x00000800	Motion task target position has been reached. See also (high active).
12	0x00001000	Motion task target velocity has been reached. See also (high active).
13	0x00002000	Motion task encountered an exception. A motion task exception can happen during a static motion task activation, or during activation of motion task on the fly (when velocity is not zero). The status bit will be reset automatically on successful activation of any motion, or by a command DRV.CLRFAULT.
14	0x00004000	The target position of a motion task has been crossed. This situation occurs for motion tasks with a change on the fly when triggering the DRV.STOP (→ p. 691) command just before the reaching the target velocity of the current active motion task. The ramp-down procedure with the motion task deceleration ramp causes the target position to be crossed (high active).
15	0x00008000	Drive actual position is within the motion task target position window MT.TPOSWND.
16	0x00010000	AKD BASIC trajectory generator is executing a move.
17	0x00020000	AKD BASIC trajectory generator has completed a move.
18	0x00040000	The fixed stop has been reached.
19	0x00080000	The fixed stop has been passed. The motion task ended without triggering a fixed stop because the following error was lower than MT.FIXEDSTOPFOLLOWING error. This triggers Fault 178.
20	0x00100000	The axis broke off of the fixed stop position. This triggers Fault 176.

\* A possible error condition for homing to a reference switch could be that no reference switch was found between two hardware limit switches.

\*\* A possible error condition for an invalid motion task could be that a motion task tried to trigger automatically following motion task that has never been initialized (called an "empty motion" task).

## 25.14.52 DRV.NAME

General Information	
Type	NV Parameter
Description	Sets and reads the name of the drive.
Units	N/A
Range	N/A
Default Value	No-Name
Data Type	String
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

You can assign a unique name to any drive under the following conditions:

- Only use ASCII characters
- Max length of 10 characters
- No spaces in name

This name is one way to identify the drive in a multiple drive network (for instance, in a TCP/IP network on which multiple drives reside).

From the terminal screen, DRV.NAME returns the name of the drive as ASCII characters.

## 25.14.53 DRV.NVCHECK

General Information	
Type	R/O Parameter
Description	NV Parameter Checksum
Units	None
Range	N/A
Default Value	N/A
Data Type	Integer
Start Version	M_01-04-12-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	2019h/0	M_01-04-12-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	DRV.NVCHECK_32	2521	DWord	No
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1042	Yes	low 32 bit word	No	M_01-04-12-000

### Description

DRV.NVCHECK returns a checksum of all the drives NV parameters. This parameter can be used to detect changes in parameters.

In some applications a master device needs to confirm the AKD drive contains an expected set of drive parameters. Reading and checking all the drive parameters individually is viable but this would be a long process involving many reads over the network. DRV.NVCHECK is a checksum on all the

NV parameters and this parameter can be read in a single transaction. DRV.NVCHECK will return the same number if all the drive parameters match. If any of the drive parameters are changed then DRV.NVCHECK will return a different value.

## **Related Topics**

DRV.NVLIST (→ p. 677)

## 25.14.54 DRV.NVLIST

General Information	
Type	R/O Parameter
Description	Lists the NV parameters and values from the RAM.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.NVLIST lists all the drive parameters that reside in NV memory.

The list includes each parameter name, followed by its current value from the RAM.

## 25.14.55 DRV.NVLOAD

General Information	
Type	R/O Parameter
Description	Loads all data from the NV memory of the drive into the RAM parameters.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2788	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1576	No	Command	No	M_01-06-03-000

### Description

DRV.NVLOAD loads all data from the NV memory of the drive into the RAM parameters.

### Related Topics

DRV.NVLOAD , DRV.NVLIST (→ p. 677)

## 25.14.56 DRV.NVSAVE

General Information	
Type	Command
Description	Saves the drive parameters from the RAM to the NV memory.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	1010h/1 35EBh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2469	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	938	No	Command	No

### Description

DRV.NVSAVE saves the current drive parameter values from the RAM to the NV memory.

The drive parameters that were saved to the NV are read from the NV on the next drive boot, causing the values to be automatically set to the saved values on every drive boot.

Executing DRV.RSTVAR does not modify the values of the NV, but instead sets the drive values in RAM to their defaults.

## **Related Topics**

DRV.RSTVAR (→ p. 685)

## 25.14.57 DRV.ONTIME

General Information	
Type	R/O Parameter
Description	Returns how long the drive has been running since last power up.
Units	Days:Hours:Minutes:Seconds
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This parameter returns the length of time that the drive has been running for the current session (since the last power up).

### Related Topics

Returns how long the drive has been running since first activated. (→ p. 686)

## 25.14.58 DRV.OPMODE

General Information	
Type	NV Parameter
Description	Sets the drive operation mode (current, velocity, or position).
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35B4h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2135	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	270	No	8 bit	No	M_01-03-00-000

### Description

DRV.OPMODE specifies the operation mode of the drive. You must also use DRV.CMDSOURCE to set the source of the command to the drive.

The operation mode values can be set as follows:

Mode	Description
0	Current (torque) operation mode
1	Velocity operation mode
2	Position operation mode

DRV.OPMODE can be changed while the drive is enabled or disabled. If you are using the terminal to change the operation mode, then it is recommended that you disable the drive before changing the operation mode. If you change the operation mode from the terminal while the drive is enabled, the system may experience a step change in demand.

## Example

Set the source of the command to a TCP/IP channel and the desired operation mode to velocity:

```
-->DRV.CMDSOURCE 0
```

```
-->DRV.OPMODE 1
```

## Related Topics

13.10 Controlled Stop

14.3 Current Loop

14.4 Velocity Loop

14.5 Position Loop

DRV.CMDSOURCE (→ p. 604)

## 25.14.59 DRV.READFORMAT

General Information	
Type	R/W Parameter
Description	Sets the value returned to either decimal or hexadecimal.
Units	N/A
Range	10 or 16
Default Value	10
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

#### Description

DRV.READFORMAT sets the return values type to either decimal or hexadecimal.

Format	Description
10	Sets the read values to decimal format
16	Sets the read values to hexadecimal format

## 25.14.60 DRV.RSTVAR

General Information	
Type	Command
Description	Sets default values in the drive without re-booting the drive and without resetting the NV memory.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2136	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	272	No	Command	No	M_01-03-00-000

### Description

DRV.RSTVAR causes the drive to return to the default values without the need to re-boot the drive first and without resetting the NV memory. Use DRV.RSTVAR to return to the default settings and recover a working drive.

## 25.14.61 DRV.RUNTIME

General Information	
Type	R/O Parameter
Description	Returns how long the drive has been running since first activated.
Units	Days:Hours:Minutes:Seconds
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1578	No		No	M_01-06-03-000

### Description

DRV.RUNTIME returns the length of time that the drive has been running since it was first activated. This time includes the current session and the total amount of time from all previous sessions.

## 25.14.62 DRV.SETUPREQBITS

General Information	
Type	R/O Parameter
Description	Reads the bitwise set status of parameters that must be set before the drive can be enabled.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2805	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1580	No	32-bits	No	M_01-06-03-000

### Description

This parameter returns the bitwise set status of parameters that needs to be set up before the drive can be enabled. The drive can only be enabled when this parameter returns 0.

#### NOTE

If MOTOR.AUTOSSET (→ p. 964) is set to 1 (parameters automatically calculated from motor ID data), then all values in the list will be initialized from the feedback device. Otherwise, the parameters must be set manually.

The following table lists the parameters which require setup for each motor type.

Parameter	Bit	Default Value	Linear Permanent Magnet	Induction Motor V/f Open Loop	Induction Motor Closed Loop	Interior Permanent Magnet	Brush Motor
IL.KP	0	50 [V/A]	√	-	√	√	√
MOTOR.IPEAK	1	2 Arms	√	√	√	√	√
MOTOR.ICONT	2	1 Arms	√	√	√	√	√
MOTOR.POLES	4	6	√	√	√	√	-
MOTOR.LQLL	7	17mH	-	-	-	√	-
MOTOR.LDLL	8	17mH	-	-	-	√	-
MOTOR.KE	9	0	-	-	-	√	-
MOTOR.IMTR	10	100ms	-	-	√	-	-
MOTOR.IMID	11	0	-	-	√	-	-
MOTOR.VOLTRATED	12	230 Vrms	-	√	-	-	-
MOTOR.VRATED	13	0	-	-	-	√	-
MOTOR.LISAT	14	25 x DRIVE.IPEAK	-	-	-	√	-
MOTOR.VRIDK1	15	0	-	-	-	√	-
MOTOR.VRIDK2	16	0	-	-	-	√	-
MOTOR.IDMAX	17	0.5 x MOTOR.IPEAK	-	-	-	√	-
IL.KDPRATIO	18	1	-	-	-	√	-
MOTOR.PITCH	19	32	√	-	-	-	-
MOTOR.VOLTMAX	20	480 Vrms	-	-	-	√	√

## Related Topics

DRV.SETUPREQLIST (→ p. 689), MOTOR.AUTOSSET (→ p. 964)

## 25.14.63 DRV.SETUPREQLIST

General Information	
Type	R/O Parameters
Description	Reads the list of parameters that must be set before the drive can be enabled.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter returns the list of parameters that must be set before the drive can be enabled and also whether or not each one of those parameters is set. This list of parameters will vary depending on the value MOTOR.TYPE. The drive can only be enabled when all commands have a value of 0.

#### NOTE

If MOTOR.AUTOSET (→ p. 964) is set to 1 (parameters automatically calculated from motor ID data), then all values in the list will be initialized from the feedback device. Otherwise, the parameters must be set manually.

### Example

```
-->DRV.SETUPREQLIST

IL.KP 0

MOTOR.ICONT 0

MOTOR.IPEAK 0

MOTOR.POLES 0

-->
```

## **Related Topics**

DRV.SETUPREQBITS (→ p. 687), MOTOR.AUTOSSET (→ p. 964)

## 25.14.64 DRV.STOP

General Information	
Type	Command
Description	This command stops all drive motion.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35FEh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2137	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	274	No	Command	No	M_01-03-00-000

### Description

This command stops drive motion. In torque and velocity modes, the command value will immediately be set to 0. In position mode, the axis will decelerate to a full stop. If the position command is from a gearing master, the drive will cancel gearing and decelerate to a stop. This command has no effect if the command source is an analog input (Analog Position, Analog Velocity, or Analog Torque).

If the command values are coming from a fieldbus master, the stop may be immediately overwritten by a new fieldbus command. Use a controlled stop input or disable command to ensure a stop.

## 25.14.65 DRV.TEMPERATURES

General Information	
Type	R/O Parameter
Description	Reads the temperature of drive components.
Units	°C
Range	55 to 125 °C
Default Value	N/A
Data Type	String
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3610h/0 3611h/0	M_01-00-00-000

### Description

DRV.TEMPERATURES reads the temperature in different parts of the drive (power and control boards). The temperature is read from temperature sensors located in the drive.

### Example

Below is an example of the output for this command :

```
Control Temperature: 39 °C
Power1 Temperature: 31 °C
Power2 Temperature: Sensor does not exist.
Power3 Temperature: Sensor does not exist.
```

## 25.14.66 DRV.TIME

General Information	
Type	R/W
Description	A continuous time counter in the drive.
Units	Milliseconds
Range	0 to 4294967295 (~ 49 days)
Default Value	N/A
Data Type	Integer
Start Version	

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	Yes
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2529	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1058	No	32 bit	No

### Description

A continuous time counter in the drive. The timer starts at zero and counts up until it rolls over. If a new value is written to the timer, it continues to count up starting at the written value. The DRV.TIME value is set to zero when the AKD BASIC is powered on.

### Related Topics

DRV.RUNTIME (→ p. 686) | WHEN.DRV.TIME

## 25.14.67 DRV.TYPE

General Information	
Type	R/W on the CC drive model. R/O on all other drive models.
Description	Selects the operational fieldbus on CC drive models.
Units	N/A
Range	0 to 8
Default Value	2
Data Type	Integer
Start Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2138	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	276	No	8 bit	No	M_01-03-00-000

### Description

DRV.TYPE allows you to select the operational fieldbus for your drive. This parameter is read-write on the CC drive models and read-only on all other drive models. To change the operational fieldbus of your drive:

1. Set DRV.TYPE to one of the following values. Only values 0 to 3 are selectable. All other values are read only.

0 = Analog (no EtherCAT or CANopen) with no position indexer functionality.

1 = Analog (no EtherCAT or CANopen) with position indexer functionality.

- 2 = EtherCAT
- 3 = CANopen
- 4 = SynqNet
- 5 = EtherNet/IP
- 6 = BASIC Language (not fieldbus)
- 7 = Profinet
- 8 = sercos<sup>®</sup> III

2. Save the parameters to the NV memory on the drive by issuing the DRV.NVSAVE command
3. Power cycle the 24 V supply to the drive. When the drive has finished powering up, it will be working with the new selection.

Changing DRV.TYPE does not immediately change the type of the drive fieldbus selection. You must power cycle the drive to start the drive with the selected functionality.

You cannot use EtherCAT and CANopen at the same time. Use FBUS.TYPE or DRV.INFO to identify the fieldbus currently in use.

DRV.TYPE does not change if you use DRV.RSTVAR.

## Related Topics

AKD Models (→ p. 31)

FBUS.TYPE (→ p. 816), DRV.INFO (→ p. 663)

## 25.14.68 DRV.VER

General Information	
Type	R/O Parameter
Description	Reads the drive version.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.VER reads both FPGA and firmware versions.  
The version data presented is hard coded in the firmware code.

### Example

Below is an example of the output for this command:

```
Danaher Motion - Digital Servo Drive
-----
FPGA version : FP0004_0001_00_07
Firmware Version : M_0-0-15_T_2009-01-19_10-36-28_IR
```

## 25.14.69 DRV.VERIMAGE

General Information	
Type	R/O Parameter
Description	Returns the version data from each image.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.VERIMAGE reads the versions of the different images in the drive. This parameter returns the version data from each image .i00 file.

### Example

Below is an example of the output for this parameter:

```
Danaher Motion - Digital Servo Drive
-----
Resident Firmware: R_0-0-11
Operational Firmware: M_0-0-15
Resident FPGA: FPB004_0001_00_07
Operational FPGA : FP0004_0001_00_07
```

## 25.14.70 DRV.WARNING1 to DRV.WARNING3

General Information	
Type	R/O
Description	Location of fault codes for any active warning conditions.
Units	N/A
Range	Any supported fault code or 0
Default Value	N/A
Data Type	Integer
Start Version	

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
DRV.WARNING1	Profinet	2791	DWord	No
	sercos <sup>®</sup> III		4 Octets	
DRV.WARNING2	Profinet	2792	DWord	
	sercos <sup>®</sup> III		4 Octets	
DRV.WARNING3	Profinet	2793	DWord	
	sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	
Modbus	1582	DRV.WARNING1	No	16 bit	No
	1584	DRV.WARNING2			
	1586	DRV.WARNING3			

### Description

These parameters are holding registers where any active warnings will be displayed. A value of zero represents that no warning is present. Non-zero values correspond to specific warning codes in the drive (see fault and warning messages). The registers are populated in the order of when the warning occurs (DRV.WARNING1, DRV.WARNING2, DRV.WARNING3, and so on).

**Notes:**

- If DRV.WARNING1 value is 0, then the drive does not have any faults.
- Only active warnings are shown. This is not a warning history.
- These registers are an alternative to the string type parameter DRV.WARNINGS so that fieldbuses and AKD BASIC user programs have integer-type parameters to access to the details of the warnings in the drive.
- Faults are not shown in the registers, only warnings.

## Related Topics

DRV.FAULT1 to DRV.FAULT10 (→ p. 648) | Modbus (→ p. 327)

## 25.14.71 DRV.WARNINGS

General Information	
Type	R/O Parameter
Description	Reads the active warnings.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

DRV.WARNINGS returns a list of all currently active warnings in the system.

## 25.14.72 DRV.ZERO

General Information	
Type	R/W Parameter
Description	Sets the zero mode. The procedure is activated when the drive is enabled.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2139	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	278	No	8 bit	No	M_01-03-00-000

### Description

The zero procedure is a sequence in which phase commutation is initialized. During this procedure, the motor is held at a certain known electrical position (by applying a current defined by DRV.IZERO (→ p. 666)). After the motor rests at this position, the commutation angle is calculated and set automatically.

### Related Topics

DRV.IZERO (→ p. 666)

## 25.15 EIP Parameters

This section describes the EIP parameters.

---

<b>25.15.1 EIP.COMDMAP</b> .....	<b>703</b>
<b>25.15.2 EIP.CONNECTED</b> .....	<b>705</b>
<b>25.15.3 EIP.POSUNIT</b> .....	<b>706</b>
<b>25.15.4 EIP.PROFUNIT</b> .....	<b>707</b>
<b>25.15.5 EIP.RSPMAP</b> .....	<b>709</b>

## 25.15.1 EIP.CMDMAP

General Information	
Type	R/W
Description	Sets parameters in the dynamic portion of command assembly.
Units	N/A
Range	See ID table below.
Default Value	0
Data Type	Integer
Start Version	M_01-13-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	No

### Description

EIP.CMDMAP can be used to set the following parameters in the dynamic portion of command assembly using the syntax EIP.CMDMAP <index> <parameter id>.

ID	Parameter	Data Size	Data Type
383	SWLS.EN	2 Byte	Integer
384	SWLS.LIMIT0	4 Byte Signed (scaled using EIP.POSUNIT*)	Position
386	SWLS.LIMIT1	4 Byte Signed (scaled using EIP.POSUNIT*)	Position

\*Position unit values are scaled from 8 bytes to 4 bytes. This results in a loss of precision.

Read EIP.CMDMAP to display the current state of the 16 mappable portions of command assembly. A 0 represents an unassigned value.

```
-->EIP.CMDMAP
[0] 383
[1] 384
[2] 386
[3] 0
[4] 0
[5] 0
[6] 0
```

```
[7] 0  
[8] 0  
[9] 0  
[10] 0  
[11] 0  
[12] 0  
[13] 0  
[14] 0  
[15] 0  
-->
```

## Example

The following example maps the parameter to SWLS.EN to the dynamic portion of command assembly using its index ID.

```
--> EIP.CMDMAP 0 383
```

## Related Topics

EtherNet/IP View (→ p. 48)

## 25.15.2 EIP.CONNECTED

General Information	
Type	R/O Parameter
Description	Returns state of EtherNet/IP connection.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Instance	Data Size	Data Type
EtherNet/IP	795	1 byte	Integer

### Description

Returns state of EtherNet/IP connection.

Value	Description
0	Not connected
1	Connected

### Related Topics

EtherNet/IP View (→ p. 48)

## 25.15.3 EIP.POSUNIT

General Information	
Type	R/W
Description	Unit scaling for Position values over EtherNet/IP.
Units	N/A
Range	0 to 4,294,967,295
Default Value	65536
Data Type	Integer
Start Version	M_01-05-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1590	No	32-bits	No	M_01-06-03-000

### Description

Position values are scaled according to the Ethernet/IP Position Controller Device standard. One “Position Units” scaling value is defined, which gives the number of actual position feedback counts (at 32 bits per revolution) equal to one position unit.

From Workbench, this scaling parameter is visible in the Ethernet/IP screen or as EIP.POSUNIT in the terminal. From Ethernet/IP, this value can be accessed at attribute 0x04 Position Units of the Position Controller object.

The default value is  $2^{16} = 65536$ , which provides  $2^{32} / 2^{16} = 2^{16}$  counts per revolution. A value of 1 would provide  $2^{32} / 1 = 2^{32}$  counts per revolution.

### Related Topics

EIP.PROFUNIT (→ p. 707)

## 25.15.4 EIP.PROFUNIT

General Information	
Type	R/W
Description	Unit scaling for Velocity and Acceleration values over EtherNet/IP.
Units	N/A
Range	0 to 4,294,967,295
Default Value	65536
Data Type	Integer
Start Version	M_01-05-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1592	No	32-bits	No	M_01-06-03-000

### Description

Velocity and Acceleration values are scaled according to the EtherNet/IP Position Controller Device standard. One "Profile Units" scaling value is defined, which affects both velocity and acceleration.

For velocity values, Profile Units gives the number of actual position feedback counts (at 32 bits per revolution) per second equal to one velocity unit. For acceleration values, Profile Units gives the number of actual position feedback counts (at 32 bits per revolution) per second<sup>2</sup> equal to one acceleration unit.

From Workbench, this scaling parameter is visible in the EtherNet/IP screen or as EIP.PROFUNIT in the terminal. From EtherNet/IP, this value can be accessed at attribute 0x05 Profile Units of the Position Controller object.

The default value is  $2^{16} = 65536$ , which provides  $2^{32} / 2^{16} = 2^{16}$  counts per second per revolution. A value of 1 would provide  $2^{32} / 1 = 2^{32}$  counts per second per revolution.

### Related Topics

EIP.POSUNIT (→ p. 706)

## 25.15.5 EIP.RSPMAP

General Information	
Type	R/W
Description	Sets parameters in the dynamic portion of response assembly.
Units	N/A
Range	See ID table below.
Default Value	0
Data Type	Integer
Start Version	M_01-13-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	No

### Description

EIP.RSPMAP can be used to set the following parameters in the dynamic portion of response assembly using the syntax EIP.RSPMAP <index> <parameter id>.

ID	Parameter	Data Size	Data Type
286	PL.CMD	4 Byte	Position
288	PL.ERR	4 Byte	Position
478	DRV.FAULT1	2 Byte	Integer
8192	VBUS.VALUE	2 Byte	Integer
8193	STATUS3	1 Byte	Integer
8195	DIN.STATES	1 Byte	Integer

\*Position unit values are scaled from 8 bytes to 4 bytes. This results in a loss of precision.

Read EIP.RSPMAP to display the current state of the 16 mappable portions of response assembly. A 0 represents an unassigned value.

```
-->EIP.RSPMAP
[0] 286
[1] 288
[2] 478
```

```
[3] 0  
[4] 0  
[5] 0  
[6] 0  
[7] 0  
[8] 0  
[9] 0  
[10] 0  
[11] 0  
[12] 0  
[13] 0  
[14] 0  
[15] 0  
-->
```

## Example

The following example maps the parameter to SWLS.EN to the dynamic portion of command assembly using its index ID.

```
--> EIP.CMDMAP 0 383
```

## Related Topics

EtherNet/IP View (→ p. 48)

## 25.16 FAULT Parameters

This section describes the FAULT parameters.

---

<b>25.16.1 FAULTx.ACTION</b> .....	<b>712</b>
<b>25.16.2 FAULT176.ACTION, FAULT178.ACTION</b> .....	<b>714</b>
<b>25.16.3 FAULT564.ACTION, FAULT565.ACTION</b> .....	<b>715</b>
<b>25.16.4 FAULT570.ACTION</b> .....	<b>716</b>

## 25.16.1 FAULTx.ACTION

General Information	
Type	R/W
Description	Gets/Sets the Fault Action for Fault 130, 131, 132, 134, 139, 451, and 702.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-04-16-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
FAULT130.ACTION	Profinet	2601	Byte	No
	sercos <sup>®</sup> III		2 Octets	
FAULT132.ACTION	Profinet	2602	Byte	
	sercos <sup>®</sup> III		2 Octets	
FAULT130.ACTION	Profinet	2603	Byte	
	sercos <sup>®</sup> III		2 Octets	
FAULT132.ACTION	Profinet	2604	Byte	
	sercos <sup>®</sup> III		2 Octets	
FAULT139.ACTION	Profinet	2797	Byte	
	sercos <sup>®</sup> III		2 Octets	
FAULT451.ACTION	Profinet	2615	Byte	
	sercos <sup>®</sup> III		2 Octets	
FAULT702.ACTION	Profinet	2605	Byte	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?
Modbus	1202	FAULT130.ACTION	No	8 bit	No
	1204	FAULT131.ACTION			
	1206	FAULT132.ACTION			
	1208	FAULT134.ACTION			
	1594	FAULT139.ACTION			
	1210	FAULT702.ACTION			
	1230	FAULT451.ACTION			

## Description

This Parameter determines the action the drive should take when Fault 130, 131, 132, 134, 139, 451, or 702 occurs.

Parameter Value	Drive Action
0	Disable Amplifier
1	Ignore (fault will not be reported)

## 25.16.2 FAULT176.ACTION, FAULT178.ACTION

General Information	
Type	R/W Parameter
Description	Gets/Sets the fault action for either fault 176 or 178.
Units	N/A
Range	0, 1, 4
Default Value	0
Data Type	Integer
Start Version	M_01-013-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

These parameters set the action performed when F176 (→ p. 265) or F178 (→ p. 265) occurs.

Value	Action
0	Generate Fault
1	Ignore
4	Generate warning

### Related Topics

Fault and Warning Messages (→ p. 259)

## 25.16.3 FAULT564.ACTION, FAULT565.ACTION

General Information	
Type	R/W Parameter
Description	Gets/Sets the fault action for either fault 564 or 565 in the AKD-C.
Units	N/A
Range	0, 1, 4
Default Value	4
Data Type	Integer
Start Version	M_01-09-10-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2140	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	280	No	8 bit	No	M_01-03-00-000

### Description

These parameters set the action the AKD-C uses when the node count on string 1 (F564) or string 2 (F565) decreases. The supervision of nodes begins as soon as the nodes are powered (CPS.ACTIVE >= 3).

Value	Action
0	Disable amplifier
1	Ignore
4	Generate warning

## 25.16.4 FAULT570.ACTION

General Information	
Type	R/W Parameter
Description	Gets/Sets the fault action for fault 570.
Units	N/A
Range	0, 1, 4
Default Value	4
Data Type	Integer
Start Version	M_01-013-00-000

### Variants Supported

Supported on all HV48 drive types.

### Description

This parameter sets the action performed when F570 (→ p. 276) occurs.

Value	Action
0	Generate Fault
1	Ignore
4	Generate warning

### Related Topics

Fault and Warning Messages (→ p. 259)

## 25.17 FB1 Parameters

This section describes the FB1 parameters.

---

<b>25.17.1 FB1.BISSBITS</b> .....	<b>719</b>
<b>25.17.2 FB1.CALTHRESH</b> .....	<b>720</b>
<b>25.17.3 FB1.DIAG</b> .....	<b>721</b>
<b>25.17.4 FB1.ENCREC</b> .....	<b>722</b>
<b>25.17.5 FB1.FAULTS</b> .....	<b>724</b>
<b>25.17.6 FB1.HALLSTATE</b> .....	<b>726</b>
<b>25.17.7 FB1.HALLSTATEU</b> .....	<b>728</b>
<b>25.17.8 FB1.HALLSTATEV</b> .....	<b>729</b>
<b>25.17.9 FB1.HALLSTATEW</b> .....	<b>730</b>
<b>25.17.10 FB1.IDENTIFIED</b> .....	<b>731</b>
<b>25.17.11 FB1.INITPSAVED</b> .....	<b>733</b>
<b>25.17.12 FB1.INITPSTATUS</b> .....	<b>734</b>
<b>25.17.13 FB1.INITPWINDOW</b> .....	<b>736</b>
<b>25.17.14 FB1.INITSIGNED</b> .....	<b>737</b>
<b>25.17.15 FB1.LASTIDENTIFIED</b> .....	<b>739</b>
<b>25.17.16 FB1.MECHPOS</b> .....	<b>740</b>
<b>25.17.17 FB1.MEMVER</b> .....	<b>741</b>
<b>25.17.18 FB1.MOTORPHASE</b> .....	<b>742</b>
<b>25.17.19 FB1.MOTORPOLES</b> .....	<b>743</b>
<b>25.17.20 FB1.OFFSET</b> .....	<b>744</b>
<b>25.17.21 FB1.ORIGIN</b> .....	<b>746</b>
<b>25.17.22 FB1.P</b> .....	<b>748</b>
<b>25.17.23 FB1.PDIR</b> .....	<b>749</b>
<b>25.17.24 FB1.PFIND</b> .....	<b>750</b>
<b>25.17.25 FB1.PFINDCMDU</b> .....	<b>751</b>
<b>25.17.26 FB1.PIN</b> .....	<b>752</b>
<b>25.17.27 FB1.POFFSET</b> .....	<b>753</b>
<b>25.17.28 FB1.POLES</b> .....	<b>754</b>
<b>25.17.29 FB1.POUT</b> .....	<b>755</b>
<b>25.17.30 FB1.PSCALE</b> .....	<b>756</b>
<b>25.17.31 FB1.PUNIT</b> .....	<b>758</b>

---

<b>25.17.32 FB1.RESKTR</b> .....	<b>759</b>
<b>25.17.33 FB1.RESREFPHASE</b> .....	<b>760</b>
<b>25.17.34 FB1.SELECT</b> .....	<b>761</b>
<b>25.17.35 FB1.TRACKINGCAL</b> .....	<b>764</b>
<b>25.17.36 FB1.USERBYTE0 to FB1.USERBYTE7</b> .....	<b>765</b>
<b>25.17.37 FB1.USERDWORD0 to FB1.USERDWORD1</b> .....	<b>767</b>
<b>25.17.38 FB1.USERWORD0 to FB1.USERWORD3</b> .....	<b>769</b>

## 25.17.1 FB1.BISSBITS

General Information	
Type	NV Parameter
Description	Specifies the number of Biss Sensor (Position) Bits for the BiSS Mode C encoder in use.
Units	bits
Range	0 to 64 bits
Default Value	32 bits
Data Type	Integer
See Also	FB1.SELECT (→ p. 761), FB1.IDENTIFIED (→ p. 731)
Start Version	M_01-01-00-100 and M_01-01-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2140	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	280	No	8 bit	No	M_01-03-00-000

### Description

FB1.BISSBITS specifies the number of BiSS sensor (position) bits for the BiSS Mode C encoder in use. Typically the value is either 26 or 32 for a BiSS Mode C Renishaw encoder. The required value for this parameter is provided by the feedback device manufacturer for the particular device being used.

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.2 FB1.CALTHRESH

General Information	
Type	NV Parameter
Description	Sets the velocity threshold at which the auto-calibration function will continuously update error correction for sin/cos encoders.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, (custom units)/s, rad/s Linear: counts/s, mm/s, µm/s, (custom units)/s
Range	0 to maximum velocity
Default Value	117.000 rpm
Data Type	Float
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	No
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	No
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	No

### Description

FB1.CALTHRESH sets the velocity threshold at which the auto-calibration function will continuously update error correction for sin/cos encoders.

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.3 FB1.DIAG

General Information	
Type	R/O
Description	Returns feedback diagnostic information.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-08-00-006

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

Some fault documentation may reference this keyword to collect additional information. The results of this keyword vary for each situation.

If you have been directed to use this keyword, please collect the results and contact Kollmorgen support for the next steps in resolving your problem.

### Related Topics

FB1.FAULTS (→ p. 724)

## 25.17.4 FB1.ENCRES

General Information	
Type	Depends on FB1.IDENTIFIED. See table in description below.
Description	Sets the resolution of the motor encoder.
Units	Encoder counts
Range	0 to $2^{32}-1$
Default Value	1,024
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3533h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2141	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	282	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets or gets the resolution of the motor encoder (encoder feedback systems only) in number of counts per revolution for a rotary motor and the number of encoder pitches per motor pole pitch for a linear motor. The number of encoder counts per revolution is obtained by multiplying the motor catalog resolution in units of PPR by four. For example, for a 1024 PPR resolution motor, the

number of encoder counts per revolution is  $1024 \cdot 4 = 4096$ . For this motor FB1.ENCRES must be set to 4096.

For linear motors, the value of FB1.ENCRES is set to the number of encoder pitches per motor pole pitch. For a motor with 32 mm pole pitch, and a 40  $\mu\text{m}$  encoder pitch, the value for FB1.ENCRES should be set to  $32 \text{ mm} / 40 \mu\text{m} = 800$ .

Depending on the value of FB1.IDENTIFIED, FB1.ENCRES changes between read-only and read-write. The following table lists the FB1.IDENTIFIED values and FB1.ENCRES's corresponding type.

FB1.IDENTIFIED value	FB1.ENCRES type
10 (Incremental encoder)	R/W
11 (Incremental encoder, no halls)	R/W
20 (Sine encoder)	R/W
21 (Sine encoder, no halls)	R/W
30 (Endat 2.1)	R/O
31 (Endat 2.2)	R/O
32 (biSS)	R/O
33 (hiperface)	R/O
34 (biSS Mode C)	R/W
40 (Resolver)	R/W
41 (sfd)	R/O
42 (Tamagawa)	R/O

## Related Topics

9.3 Feedback 1

## 25.17.5 FB1.FAULTS

General Information	
Type	R/O
Description	Returns a string describing the root cause of Fault 467.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-08-00-006

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

Use this parameter to determine the root cause of feedback fault 467. This parameter can currently be used to diagnose faults on Hiperface DSL or SFD3 feedback types. FB1.FAULTS will return one of the following strings as a root cause for fault 467.

Hiperface DSL Strings
1000: A log reset was carried out
1001: Acceleration overrun, position invalid
1002: Test in process
1004: Internal error with angle tracking, position invalid
1005: Internal error with vector length, position invalid
1006: Internal error with position counter, position invalid
1007: Internal error with position synchronization, position invalid
1010: Error in absolute position with one rotation
1011: Error 1 in absolute position with multiple rotations
1012: Error 2 in absolute position with multiple rotations

Hiperface DSL Strings
1013: Error 3 in absolute position with multiple rotations
1020: Power on self-test done (only safety-version)
1021: Warning safety-parameter: error has been rectified (only safety-version)
1022: Error safety-parameter: error could not be rectified (only safety-version)
1023: Error calibration-data
1024: Internal communication error 1
1025: Internal communication error 2
1026: Internal general error
1030: Critical temperature
1031: Critical LED current
1032: Critical supply voltage
1033: Critical speed
1035: Critical overrun
1036: Internal checking error
1040: Invalid argument input during resources access
1041: Resources access refused due to incorrect access level
1042: Internal error on resources access
1043: Error on access to user file
1100: No link
1101: No sync
1102: Fault in short command
1103: No FPGA support
1105: Long command read timeout
1106: Long command poll timeout
1107: Spinlock timeout
1110: Long command failure (Refer to FB1.DIAG (→ p. 721) if Fault 1110 is returned)
1111: Resource ID timeout

SFD3 Strings
2100: Receive CRC Fault
2102: Communications Fault

## Related Topics

FB1.DIAG (→ p. 721)

## 25.17.6 FB1.HALLSTATE

General Information	
Type	R/O Parameter
Description	Reads the Hall switch values (encoder feedback only).
Units	Terminal: Binary Scope: N/A
Range	Terminal: 0 0 0 to 1 1 1 Scope: 0 to 7
Default Value	N/A
Data Type	Terminal: String Scope: Integer
Start Version	M_01-00-00-000

AKD BASIC Information	
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

FB1.HALLSTATE reads the Hall switch values (encoder feedback only).

#### Terminal:

When called from the terminal, FB1.HALLSTATE will return three numbers from 0 0 0 to 1 1 1, where:

- Hall U = Digit 1
- Hall V = Digit 2
- Hall W = Digit 3

0 is a low voltage state, and 1 is a high voltage state on the hall effect.

#### Scope:

When viewing FB1.HALLSTATE from the scope screen, the result is a single integer. This integer is the sum of the three hall bit states, where  $\text{FB1.HALLSTATE} = \text{Hall U} + \text{Hall V} + \text{Hall W}$ . If the hall is not active, it will return 0. When a hall is active, each hall will contribute the following value to the sum:

- Hall U = 1
- Hall V = 2
- Hall W = 4

Value	Hall U	Hall V	Hall W
0	-	-	-
1	√	-	-
2	-	√	-
3	√	√	-
4	-	-	√
5	√	-	√
6	-	√	√
7	√	√	√

The following sequences indicate the direction of rotation.

Sequence	Direction
1,5,4,6,2,3,1	Positive
1,3,2,6,4,5,1	Negative

## Related Topics

Feedback 1 (→ p. 74)

## 25.17.7 FB1.HALLSTATEU

General Information	
Type	R/O Parameter
Description	Reads the state of Hall switch U.
Units	N/A
Range	0 and 1
Default Value	1
Data Type	Integer
See Also	FB1.HALLSTATE (→ p. 726)
Start Version	M_01-03-07-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2466	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	932	No	8 bit	No

### Description

FB1.HALLSTATEU reads the state of Hall switch U.

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.8 FB1.HALLSTATEV

General Information	
Type	R/O Parameter
Description	Reads the state of Hall switch V.
Units	N/A
Range	0 and 1
Default Value	1
Data Type	Integer
See Also	FB1.HALLSTATE (→ p. 726)
Start Version	M_01-03-07-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2467	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	934	No	8 bit	No

### Description

FB1.HALLSTATEV reads the state of Hall switch V.

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.9 FB1.HALLSTATEW

General Information	
Type	R/O Parameter
Description	Reads the state of Hall switch W.
Units	N/A
Range	0 and 1
Default Value	1
Data Type	Integer
See Also	FB1.HALLSTATE (→ p. 726)
Start Version	M_01-03-07-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2468	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	936	No	8 bit	No

### Description

FB1.HALLSTATEW reads the state of Hall switch W.

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.10 FB1.IDENTIFIED

General Information	
Type	R/O Parameter
Description	Reads the type of feedback device used by the drive/motor.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
See Also	FB1.SELECT
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2142	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	284	No	8 bit	No	M_01-03-00-000

### Description

This parameter is set according to FB1.SELECT on drive power up if FB1.SELECT is not -1; otherwise the parameter value is read from the drive memory.

Type	Description
0	Unknown
1	No encoder
10	Incremental encoder with A/B Quad, marker pulse and Hall

Type	Description
11	Incremental encoder with A/B Quad, marker pulse and no Hall
20	Sine Encoder , with marker pulse and Hall
21	Sine encoder , with marker pulse & No Halls
30	EnDat 2.1 with Sine Cosine
31	EnDat 2.2
32	BiSS with Sine Cosine
33	HIPERFACE
34	BiSS Mode C Renishaw
40	Resolver
41	SFD (Smart Feedback Device)
42	Tamagawa. This feedback type is not available on models with extension type NA (AKD Models (→ p. 31)).
43	Network Cyclic Feedback
44	FB2 Cyclic Feedback
45	SFD3
46	Hiperface DSL
50	Reserved
63	Simulated Motor

## Related Topics

Feedback 1 (→ p. 74)

## 25.17.11 FB1.INITPSAVED

General Information	
Type	R/O Parameter
Description	Reads position saved at last power down.
Units	Depends on UNIT.PLINEAR (→ p. 1225) or UNIT.PROTARY (→ p. 1229) Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, μm, (custom units), 16-bit counts
Range	N/A
Default Value	N/A
Data Type	Integer
Start Version	M_01-10-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2885	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

### Description

This parameter reports the position FB1.P (→ p. 748) that was saved at the last power-down. The position can be represented in internal counts or in custom units depending on the value of FB1.PUNIT. In internal units, the format is 32:32. The upper 32 bits represent turns, and the lower 32 bits represent position within a turn.

### Related Topics

Initial Position Check (→ p. 76) | FB1.INITPSTATUS (→ p. 734) | FB1.INITPWINDOW (→ p. 736)

## 25.17.12 FB1.INITPSTATUS

General Information	
Type	R/O Parameter
Description	Reads result of initial position comparison.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
Start Version	M_01-10-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2889	Byte	No
sercos <sup>®</sup> III		2 Octets	

### Description

This parameter reports the status of the initial position comparison:

Value	Description
0	Initial position check is in progress.
1	Initial position check is disabled.
2	Position difference between power-up and power-down is less than value of FB1.INITPWINDOW at start up.
3	Position difference between power-up and power-down is greater than or equal to value of FB1.INITPWINDOW at start up.
4	Initial position check encountered an error condition.

## Related Topics

Initial Position Check (→ p. 76) | FB1.INITPSAVED (→ p. 733) | FB1.INITPWINDOW (→ p. 736)

## 25.17.13 FB1.INITPWINDOW

General Information	
Type	R/W Parameter
Description	Reads and writes size of the initial position comparison window.
Units	Depends on FB1.PUNIT (→ p. 758).
Range	N/A
Default Value	N/A
Data Type	Integer
Start Version	M_01-10-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2887	DWord	No
sercos <sup>®</sup> III		8 Octets	

### Description

This parameter defines the amount by which the position measured at power-up may differ from the position saved at power-down. If the difference is less than the window size, the position change at power off is considered small, and homing may be avoided. If the difference is greater than or equal to the window size, the position change during power off is large enough to require homing. Changes in the window size take effect after a non-volatile memory save and a power cycle. A window value of 0 disables the initial position check.

### Related Topics

Initial Position Check (→ p. 76) | FB1.INITPSAVED (→ p. 733) | FB1.INITPSTATUS (→ p. 734)

## 25.17.14 FB1.INITSIGNED

General Information	
Type	NV Parameter
Description	Sets initial feedback value as signed or unsigned.
Units	N/A
Range	0 to 1
Default Value	1
Data Type	Integer
See Also	FB1.ORIGIN
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2143	Byte	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	286	No	8 bit	Yes	M_01-03-00-000

### Description

This parameter sets whether the initial value of the feedback read from the feedback device will be set as a signed or as an unsigned value.

0 = Unsigned

1 = Signed

The drive internal process for the feedback initialization is as follows:

1. Reads the position feedback.
2. Adds the origin to the feedback.
3. Determines modulo from Step 2 by the actual feedback bits.
4. Sets the position feedback sign according to FB1.INITSIGNED.

## **Related Topics**

Feedback 1 (→ p. 74)

## 25.17.15 FB1.LASTIDENTIFIED

General Information	
Type	NV Parameter
Description	Stores the feedback type auto-detected during the last feedback initialization. Auto-detection will look for this type first.
Units	N/A
Range	30 (EnDat 2.1), 32 (BiSS with Sine Cosine), 33 (HIPERFACE), 41 (SFD), 45 (SFD3)
Default Value	41 (SFD)
Data Type	Integer
Start Version	M_01-10-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

If FB1.SELECT (→ p. 761) is set to -1, AKD automatically detects the feedback device. When auto-detection is successful, the identified feedback type is stored in FB1.LASTIDENTIFIED. On the next feedback initialization, the auto-detection algorithm will first look for the last identified type, speeding up feedback initialization and shortening drive boot time.

The time to automatically identify the device is shortened when FB1.LASTIDENTIFIED is already set to the correct feedback type.

Note that this parameter must be saved to non-volatile memory with DRV.NVSAVE (→ p. 679) in order to take effect each time the drive powers up.

### Related Topics

Feedback 1 (→ p. 74) | FB1.SELECT (→ p. 761) | FB1.IDENTIFIED (→ p. 731)

## 25.17.16 FB1.MECHPOS

General Information	
Type	R/O Parameter
Description	Reads the mechanical position.
Units	counts
Range	0 to 4,294,967,295 counts
Default Value	N/A
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2144	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	288	No	32 bit	No	M_01-03-00-000

### Description

FB1.MECHPOS reads the mechanical angle which is equal to the lower 32 bits in the 64-bit position feedback word.

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.17 FB1.MEMVER

General Information	
Type	R/O Parameter
Description	Returns the memory feedback version.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

FB1.MEMVER returns the memory feedback version (only applicable for feedbacks with memory).

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.18 FB1.MOTORPHASE

General Information	
Type	NV Parameter
Description	Sets the motor phase of the motor associated with FB1.
Units	Electrical degrees
Range	0 to 359
Default Value	0
Data Type	Integer
Start Version	M_01-11-04-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter sets the phase offset for commutation of the motor associated with FB1. When multiple motors are driven by a single AKD, this allows different motor configurations to be saved for each value of IL.FBSOURCE (→ p. 890).

When IL.FBSOURCE is set to 0, the value of FB1.MOTORPHASE will overwrite the value of MOTOR.PHASE (→ p. 997). Additionally, while IL.FBSOURCE = 0, a write to MOTOR.PHASE will also overwrite FB1.MOTORPHASE.

### Related Topics

Motor (→ p. 70)

## 25.17.19 FB1.MOTORPOLES

General Information	
Type	NV Parameter
Description	Sets the number of motor poles associated with FB1.
Units	N/A
Range	0 to 510
Default Value	0
Data Type	Integer
Start Version	M_01-11-04-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter sets the number of motor poles associated with FB1. When multiple motors are driven by a single AKD, this allows different motor configurations to be saved for each value of IL.FBSOURCE (→ p. 890).

When IL.FBSOURCE is set to 0, the value of FB1.MOTORPOLES will overwrite the current value of MOTOR.POLES (→ p. 1002). Additionally, while IL.FBSOURCE = 0, a write to MOTOR.POLES will also overwrite FB1.MOTORPOLES.

### Related Topics

Motor (→ p. 70)

## 25.17.20 FB1.OFFSET

General Information	
Type	NV-Parameter
Description	Sets position feedback offset.
Units	Depends on UNIT.ACCROTARY or UNIT.PLINEAR Rotary: counts, rad, deg, Custom Units (→ p. 100), 16-bit counts Linear: counts, mm, µm, Custom Units (→ p. 100), 16-bit counts
Range	Rotary: -5,123,372,000,000,005.000 to 5,123,372,000,000,005.000 counts -7495.067 to 7495.067 rad -429,436.096 to 429,436.096 deg -5,964.390 to 5,964.390 [Custom Units (→ p. 100)] -78,176,452.637 to 78,176,452.636 16-bit counts Linear: -5,123,372,000,000,005.000 to 5,123,372,000,000,005.000 counts -1192.878*MOTOR.PITCH (→ p. 1001) to 1192.878*MOTOR.PITCH mm -1192877.952*MOTOR.PITCH to 1192877.952*MOTOR.PITCH µm -5964.390 to 5964.390 Custom Units (→ p. 100) -78176452.637 to 78176452.636 16-bit counts
Default Value	0
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3533h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2145	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	290	Yes	64-bits	Yes	M_01-06-03-000

## Description

FB1.OFFSET is a value added to the position feedback (PL.FB (→ p. 1094)).

## Example

If PL.FB is 10 deg and FB1.OFFSET is set to -10 deg, then the next read of PL.FB will return ~0 deg.

## Related Topics

Feedback 1 (→ p. 74) | PL.FB (→ p. 1094)

## 25.17.21 FB1.ORIGIN

General Information	
Type	NV Parameter
Description	Adds to the initial feedback position.
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225) Rotary: counts, rad, deg, custom units, 16-bit counts Linear: counts, mm, µm, custom units, 16-bit counts
Range	Rotary: 0.000 to 5,123,372,000,000.000 counts 0.000 to 7,495.067 rad 0.000 to 429,436.096 deg 0.000 to 5,964.390 custom units 0.000 to 78,176,452.636 16-bit counts Linear: 0.000 to 5,123,372,000,000.000 counts 0.000 to 1,192.878 mm 0.000 to 1,192,877.952 µm 0.000 to 5,964.390 custom units 0.000 to 78,176,452.636 counts 16 Bit
Default Value	0 counts
Data Type	Float
See Also	FB1.INITSIGNED
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3656h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2147	DWord	No
sercos® III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	294	Yes	64 bit	No	M_01-03-00-000

## Description

FB1.ORIGIN is a value that is added to the feedback device position.

If the modulo is disabled (PL.MODPEN (→ p. 1113) is set to disabled), then the origin is added to the position feedback.

Initial position value = ( <feedback from device> + FB1.ORIGIN )

However, if modulo is enabled (PL.MODPEN is set to enabled) then the modulo is applied to both the feedback device position and the origin value.

The modulo value is defined by PL.MODP1 (→ p. 1107) and PL.MODP2 (→ p. 1109)

Initial position value = ( <feedback from device> + FB1.ORIGIN ) modulo

The drive internal process for the feedback initialization is as follows:

1. Reads the position feedback.
2. Adds the origin to the feedback.
3. Determines modulo from Step 2 by the actual feedback bits.
4. Sets the position feedback sign according to FB1.INITSIGNED (→ p. 737).

## Example

This example assumes that the drive is connected to a single turn feedback device with memory.

FB1.ORIGIN is set to 22 degrees and saved into NV memory.

Drive boots and reads from feedback device position 340 degrees. According to the description section above, calculation will be:

**With PL.MODPEN disabled:**

Initial feed back will be set to 366 degrees.

$(340 + 22) = 366$  degrees.

**With PL.MODPEN enabled:**

Initial feedback will be set to 2 degrees.

PL.MODP1 = 0

PL.MODP2 = 360

$(340 + 22) \text{ modulo } 360 = 2$  degrees.

## Related Topics

9.3 Feedback 1

## 25.17.22 FB1.P

General Information	
Type	R/O Parameter
Description	Reads position from the primary feedback.
Units	Depends on FB1.PUNIT (→ p. 758) counts or custom units.
Range	N/A
Default Value	N/A
Data Type	S64
Start Version	M_01-05-08-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1610	Yes	64-bits	Yes	M_01-06-03-000

### Description

This parameter reads the position of the primary feedback device connected to X10. The position can be read as counts or in custom units. This is the raw position read back from the device. The output format is 32:32, the upper 32 bits represent the multi-turns and the lower 32 bits represent the position of the feedback.

### Related Topics

Feedback 1 (→ p. 74) | FB1.PUNIT (→ p. 758) | FB1.PIN | FB1.POUT

## 25.17.23 FB1.PDIR

General Information	
Type	NV-Parameter
Description	Sets the counting direction for feedback channel 1.
Units	None
Range	0 to 1
Default Value	0
Data Type	U8
See Also	N/A
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2807	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1614	No	8-bits	No	M_01-06-03-000

### Description

FB1.PDIR will change the sign and with it the direction of feedback channel 1.

### Example

If position feedback = 35,185.932 counts and you set:

→ FB1.PDIR 1

then position feedback = -35,185.932 counts

## 25.17.24 FB1.PFIND

General Information	
Type	R/W Parameter
Description	A procedure that allows the user to find the commutation angle for encoder feedback, which has no halls.
Units	NA
Range	0, 1
Default Value	0
Data Type	Integer
See Also	FB1.PFINDCMDU (→ p. 751)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2149	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	298	No	8 bit	No	M_01-03-00-000

### Description

A procedure that allows the user to find the commutation angle for encoder feedback (which has no Halls).

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.25 FB1.PFINDCMDU

General Information	
Type	R/W Parameter
Description	Current value used during the phase finding procedure (PFB.PFIND=1)
Units	A
Range	0 to DRV.IPEAK
Default Value	0
Data Type	Float
See Also	PFB.PFIND
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2150	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	300	No	32 bit	No	M_01-03-00-000

### Description

FB1.PFINDCMDU sets the current value used during the phase finding procedure.

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.26 FB1.PIN

General Information	
Type	NV Parameter
Description	Sets gear IN for FB1.P (→ p. 748).
Units	N/A
Range	0 to 4,294,967,295
Default Value	100
Data Type	Integer
Start Version	M_01-05-011-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2808	DWord	No
sercos <sup>®</sup> III		4 Octets	

### Description

Use FB1.PIN with FB1.POUT (→ p. 755) to set the user units for FB1.P (→ p. 748).

### Related Topics

Feedback 1 (→ p. 74) | FB1.PUNIT (→ p. 758) | FB1.P (→ p. 748) | FB1.POUT (→ p. 755)

## 25.17.27 FB1.POFFSET

General Information	
Type	NV-Parameter
Description	Sets the offset for primary feedback.
Units	counts, custom units
Range	-5,123,372,000,000,005.000 to 5,123,372,000,000,005.000 counts or -10,485,760.000 to 10,485,760.000 custom units
Default Value	0
Data Type	S64
See Also	N/A
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2809	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1618	Yes	64-bits	Yes	M_01-06-03-000

### Description

FB1.POFFSET is the value added to the primary feedback position (FB1.P (→ p. 748)).

### Example

If FB1.P is 10000 counts and FB1.POFFSET is set to -10000 counts, then the next read of FB1.P will return ~0 counts.

## 25.17.28 FB1.POLES

General Information	
Type	R/W Parameter
Description	Reads the number of feedback poles.
Units	N/A
Range	2 to 128
Default Value	2
Data Type	Integer
See Also	MOTOR.POLES
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2151	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	302	No	16 bit	No	M_01-03-00-000

### Description

FB1.POLES sets the number of individual poles in the feedback device. This variable is used for the commutation function, as well as for velocity feedback scaling, and represents the number of individual poles (not pole pairs). The division value of motor poles (MOTOR.POLES) and feedback poles (FB1.POLES) must be an integer when moving drive to enable, otherwise a fault is issued.

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.29 FB1.POUT

General Information	
Type	NV Parameter
Description	Sets gear IN for FB1.P (→ p. 748).
Units	N/A
Range	0 to 4,294,967,295
Default Value	20
Data Type	Integer
Start Version	M_01-05-011-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2811	DWord	No
sercos <sup>®</sup> III		4 Octets	

### Description

Use FB1.POUT with FB1.PIN (→ p. 752) to set the user units for FB1.P (→ p. 748).

### Related Topics

Feedback 1 (→ p. 74) | FB1.PUNIT (→ p. 758) | FB1.P (→ p. 748) | FB1.PIN (→ p. 752)

## 25.17.30 FB1.PSCALE

General Information	
Type	R/W Parameter
Description	Sets position scaling value for fieldbus transferred position objects.
Units	N/A
Range	0 to 32
Default Value	20
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2152	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	304	No	8 bit	No	M_01-03-00-000

### Description

Position values transferred over fieldbus are converted from native 64-bit values to a maximum 32-bit position value. This parameter sets the resolution/revolution of position values back to the controller.

FB1.PSCALE determines the counts per revolution of position values delivered by fieldbus. The default value is 20, which yields  $2^{20}$  counts/revolution. This scaling is used for CAN PDOs 6064 (Position Actual Value) and 60F4 (Following Error Actual Value).

### Example

The drive always works internally with 64-bit position values. The drive internal 64-bit actual position should contain the following value:

0x0000.0023.1234.ABCD

The lower 32 bits represent the mechanical angle of the feedback. The upper 32 bits represent the number of turns.

FB1.PSCALE = 20

The 32-bit position is: 0x0231234A

FB1.PSCALE = 16

The 32-bit position is: 0x00231234

## **Related Topics**

Feedback 1 (→ p. 74)

## 25.17.31 FB1.PUNIT

General Information	
Type	NV Parameter
Description	Sets the unit for FB1.P.
Units	N/A
Range	0, 3
Default Value	0
Data Type	U8
See Also	N/A
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2812	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1624	No	32-bits	No	M_01-06-03-000

### Description

FB1.PUNIT sets the position unit for FB1.P.

Value	Description
0	Counts (32.32 format)
3	(FB1.PIN/FB1.POUT) per revolution.

### Related Topics

FB1.P (→ p. 748)

## 25.17.32 FB1.RESKTR

General Information	
Type	NV Parameter
Description	Sets the resolver nominal transformation ratio.
Units	N/A
Range	0.001 to 50.000
Default Value	0.5
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2153	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	306	No	16 bit	No	M_01-03-00-000

### Description

This parameter sets the resolver nominal transformation ratio. It affects the resolver excitation output amplitude.

The value can be obtained from the resolver data sheet.

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.33 FB1.RESREFPHASE

General Information	
Type	NV Parameter
Description	Sets the electrical degrees of phase lag in the resolver.
Units	electrical degrees
Range	-180 to 180°
Default Value	-2°
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2154	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	308	No	32 bit	Yes	M_01-03-00-000

### Description

This parameter sets the electrical degrees of phase lag in the resolver.

See the motor resolver datasheet for the value for this parameter .

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.34 FB1.SELECT

General Information	
Type	NV Parameter
Description	Sets user entered type or identified type (-1).
Units	N/A
Range	-1, 1, 10, 11, 20, 21, 30, 31, 32, 33, 34, 40, 41, 42, 43, 45, 46, 50
Default Value	-1
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	353Bh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2155	Byte	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	310	No	8 bit	Yes	M_01-03-00-000

### Description

FB1.SELECT sets the feedback type manually (see FB1.IDENTIFIED) or allows the drive to automatically identify the feedback type on power up.

#### FB1 5V Power Supply Notes:

If FB1.SELECT = -1, the 5V power supply will only turn on during the initialization phase. If the feedback type cannot be automatically detected, the 5V power supply will be turned off, and remain off

until a DRV.CLRFAULTS is issued (which will re-start the FB1 initialization), or FB1.SELECT is manually set to a specific feedback type.

When FB1.SELECT is manually set to a specific feedback type, the FB1 5V power supply will remain on, unless a short is detected. This is useful for encoder types that may require calibration.

### FB1.SELECT Input Values

Changing these input values will manually set the value of FB1.IDENTIFIED (→ p. 731).

#### NOTE

If the feedback setting fails, FB1.IDENTIFIED is automatically set to 0 (no feedback identified).

Input Value	Description
-1	The drive automatically identifies the type of feedback as part of the power up process. Setting this value does not modify FB1.IDENTIFIED, unless it is saved in the NV memory for the next power up. If a feedback with memory is connected to the drive, the value of FB1.IDENTIFIED is set automatically to the feedback identified and all parameters read from the feedback are set according to the values read from the feedback. If no feedback is connected or a feedback with no memory is connected, the value of FB1.IDENTIFIED is set to 0 (no feedback identified) and all values normally read from the feedback are read from NV memory (if stored in NV) otherwise they are set to the default values.
0	Unknown. No feedback identified.
1	Manually sets the type to No Encoder. This setting can be used if no feedback device is connected to the X10 connector. This may be the case if FB2 or FB3 is used for position or velocity control.
10	Manually sets the type to Incremental encoder with A/B Quad, marker pulse and Hall.
11	Manually sets the type to Incremental encoder with A/B Quad, marker pulse and no Hall.
20	Manually sets the type to Sine Encoder, with marker pulse and Hall.
21	Manually sets the type to Sine encoder, with marker pulse & No Halls.
30	Manually sets the type to Endat 2.1 with Sine Cosine.
31	Manually sets the type to Endat 2.2.
32	Manually sets the type to BiSS (Analog) with Sine Cosine.
33	Manually sets the type to Hiperface.  Note that all Hiperface feedback types are supported by the AKD. This includes SEL/SEK 37, SEL/SEK 52, SKM/SKS 36, SRS/SRM 50, SRS/SRM 60, SEK 90, SEK 160, and SEK 260. The AKD drive will support any new Hiperface device, since any new device will be released with a label type of 0xFF. Devices with this label type have all of the pertinent information to configure these devices (number of single turn bits, number of multi-turn bits, and number of sine/cosine periods) stored in their memory. The AKD is able to read this information, and automatically configure the drive for proper operation. Note that the devices SEK 90, SEK 160, and SEK 260 are label type 0xFF.
34	Manually sets the type to BiSS Mode C, Renishaw.
40	Manually sets the type to Resolver.
41	Manually sets the type to SFD (Smart Feedback Device).
42	Manually sets the type to Tamagawa. This feedback type is not available on models with extension type NA (AKD Models (→ p. 31)).
43	Manually sets the type to use Cyclic Feedback from the Motion Network.

Input Value	Description
45	Manually sets the type to SFD3. This value is only supported on model numbers AKD-xxyyzz-NBxx. This value is only supported for firmware version 01-11-00-000 and later. To use 2 wire SFD3 there must be an external feedback connection adapter between the 2 wires and the AKD X10 primary feedback connector. The feedback connection adapter comes standard on Kollmorgen single motor cables.
46	Manually sets the type to Hiperface DSL. This value is only supported on model numbers AKD-xxyyzz-NBxx. This value is only supported for firmware versions 01-09-00-000 and later. To use 2 wire Hiperface DSL there must be an external feedback connection adapter between the 2 wires and the AKD X10 primary feedback connector. The feedback connection adapter comes standard on Kollmorgen single motor cables.
50	This value is reserved and should not be used.
63	Manually sets the type to a simulated motor. This value is only supported on model numbers AKD-xxyyzz-NBxx.

## Related Topics

9.3 Feedback 1 | FB1.IDENTIFIED (→ p. 731)

## 25.17.35 FB1.TRACKINGCAL

General Information	
Type	NV Parameter
Description	Controls tracking calibration algorithm.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2156	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	312	No	8 bit	No	M_01-03-00-000

### Description

This parameter turns the tracking calibration algorithm on or off for sine-cosine or resolver.

0 = Tracking calibration is off.

1 = Tracking calibration is on.

### Related Topics

Feedback 1 (→ p. 74)

## 25.17.36 FB1.USERBYTE0 to FB1.USERBYTE7

General Information	
Type	R/W
Description	Reads and writes data stored in two 32 bit words in the Endat feedback device.
Units	N/A
Range	0 to 255
Default Value	0
Data Type	Integer
Start Version	M_01-05-08-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2813	Byte	No
sercos <sup>®</sup> III		2 Octets	

### Description

FB1.USERBYTE, FB1.USERWORD, and FB1.USERDWORD share two 32bit words in the Endat feedback device. These three parameters offer different ways to store and access the data stored in these two 32bit words. The table below defines each parameters function. The values are automatically stored non-volatile in the feedback device.

Parameter	Bits	Attributes
FB1.USERBYTE0 to FB1.USERBYTE7	8 bit	signed or unsigned char
FB1.USERWORD0 to FB1.USERWORD3	16 bit	signed or unsigned short
FB1.USERDWORD0 to FB1.USERDWORD1	32 bit	singed or unsigned int

The parameters overlap each other in the following way:

BYTE0	BYTE1	BYTE2	BYTE3	BYTE4	BYTE5	BYTE6	BYT7
WORD0		WORD1		WORD2		WORD3	
DWORD0				DWORD1			

For example, if BYTE1 is modified, WORD0 and DWORD0 are modified as well.

## Example

```
-->FB1.USERDWORD1 65536
-->FB1.USERBYTE1
0
-->FB1.USERBYTE2
1
-->FB1.USERBYTE3
0

-->FB1.USERBYTE3 1 (write to the highest byte of FB1.USERDWORD0)
-->FB1.USERDWORD0
16842752
-->FB1.USERWORD0
0
-->FB1.USERWORD1
257
```

## Related Topics

Feedback 1 (→ p. 74) | FB1.USERWORD0 to FB1.USERWORD3 (→ p. 769) | FB1.USERDWORD0 to FB1.USERDWORD1 (→ p. 767)

## 25.17.37 FB1.USERDWORD0 to FB1.USERDWORD1

General Information	
Type	R/W
Description	Reads and writes data stored in two 32 bit words in the Endat feedback device.
Units	N/A
Range	0 to 4,294,967,295
Default Value	0
Data Type	Integer
Start Version	M_01-05-08-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2814	DWord	No
sercos <sup>®</sup> III		4 Octets	

### Description

FB1.USERBYTE, FB1.USERWORD, and FB1.USERDWORD share two 32bit words in the Endat feedback device. These three parameters offer different ways to store and access the data stored in these two 32bit words. The table below defines each parameters function. The values are automatically stored non-volatile in the feedback device.

Parameter	Bits	Attributes
FB1.USERBYTE0 to FB1.USERBYTE7	8 bit	signed or unsigned char
FB1.USERWORD0 to FB1.USERWORD3	16 bit	signed or unsigned short
FB1.USERDWORD0 to FB1.USERDWORD1	32 bit	singed or unsigned int

The parameters overlap each other in the following way:

BYTE0	BYTE1	BYTE2	BYTE3	BYTE4	BYTE5	BYTE6	BYT7
WORD0		WORD1		WORD2		WORD3	
DWORD0				DWORD1			

For example, if BYTE1 is modified, WORD0 and DWORD0 are modified as well.

## Example

```
-->FB1.USERDWORD1 65536
-->FB1.USERBYTE1
0
-->FB1.USERBYTE2
1
-->FB1.USERBYTE3
0

-->FB1.USERBYTE3 1 (write to the highest byte of FB1.USERDWORD0)
-->FB1.USERDWORD0
16842752
-->FB1.USERWORD0
0
-->FB1.USERWORD1
257
```

## Related Topics

Feedback 1 (→ p. 74) | FB1.USERBYTE0 to FB1.USERBYTE7 (→ p. 765) | FB1.USERWORD0 to FB1.USERWORD3 (→ p. 769)

## 25.17.38 FB1.USERWORD0 to FB1.USERWORD3

General Information	
Type	R/W
Description	Reads and writes data stored in two 32 bit words in the Endat feedback device.
Units	N/A
Range	0 to 65,535
Default Value	0
Data Type	Integer
Start Version	M_01-05-08-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2815	Word	No
sercos <sup>®</sup> III		2 Octets	

### Description

FB1.USERBYTE, FB1.USERWORD, and FB1.USERDWORD share two 32bit words in the Endat feedback device. These three parameters offer different ways to store and access the data stored in these two 32bit words. The table below defines each parameters function. The values are automatically stored non-volatile in the feedback device.

Parameter	Bits	Attributes
FB1.USERBYTE0 to FB1.USERBYTE7	8 bit	signed or unsigned char
FB1.USERWORD0 to FB1.USERWORD3	16 bit	signed or unsigned short
FB1.USERDWORD0 to FB1.USERDWORD1	32 bit	singed or unsigned int

The parameters overlap each other in the following way:

BYTE0	BYTE1	BYTE2	BYTE3	BYTE4	BYTE5	BYTE6	BYT7
WORD0		WORD1		WORD2		WORD3	
DWORD0				DWORD1			

For example, if BYTE1 is modified, WORD0 and DWORD0 are modified as well.

## Example

```
-->FB1.USERDWORD1 65536
-->FB1.USERBYTE1
0
-->FB1.USERBYTE2
1
-->FB1.USERBYTE3
0

-->FB1.USERBYTE3 1 (write to the highest byte of FB1.USERDWORD0)
-->FB1.USERDWORD0
16842752
-->FB1.USERWORD0
0
-->FB1.USERWORD1
257
```

## Related Topics

Feedback 1 (→ p. 74) | FB1.USERBYTE0 to FB1.USERBYTE7 (→ p. 765) | FB1.USERDWORD0 to FB1.USERDWORD1 (→ p. 767)

## 25.18 FB2 Parameters

This section describes the FB2 parameters.

---

<b>25.18.1 FB2.DIR</b> .....	<b>772</b>
<b>25.18.2 FB2.ENCRESES</b> .....	<b>773</b>
<b>25.18.3 FB2.MODE</b> .....	<b>775</b>
<b>25.18.4 FB2.MOTORPHASE</b> .....	<b>777</b>
<b>25.18.5 FB2.MOTORPOLES</b> .....	<b>778</b>
<b>25.18.6 FB2.P</b> .....	<b>779</b>
<b>25.18.7 FB2.PIN</b> .....	<b>780</b>
<b>25.18.8 FB2.POFFSET</b> .....	<b>781</b>
<b>25.18.9 FB2.POUT</b> .....	<b>782</b>
<b>25.18.10 FB2.PUNIT</b> .....	<b>783</b>
<b>25.18.11 FB2.SOURCE</b> .....	<b>784</b>

## 25.18.1 FB2.DIR

General Information	
Type	NV-Parameter
Description	Sets the counting direction for feedback channel 2.
Units	None
Range	0 to 1
Default Value	0
Data Type	U8
See Also	N/A
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2610	Byte	No
sercos <sup>®</sup> III		2 Octets	

### Description

FB2.DIR will change the sign and with it the direction of feedback channel 2.

## 25.18.2 FB2.ENCRES

General Information	
Type	NV Parameter
Description	Sets the secondary feedback (FB2) resolution (also defines resolution of virtual encoder in AKD BASIC).
Units	counts/rev
Range	0 to 262,140 counts/rev
Default Value	0
Data Type	Integer
See Also	FB2.MODE, FB2.SOURCE (→ p. 784)
Start Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2492	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	984	No	32 bit	No

### Description

This parameter sets the feedback 2 (FB2) resolution and defines how many counts input into the secondary feedback will be considered a full revolution.

In AKD BASIC FB2.ENCRES also defines the resolution of the virtual encoder when using the CAMVM commands. A runtime error will occur if you use the CAMVM commands without defining a resolution in FB2.ENCRES. If a real encoder and a virtual encoder are both used, the resolution for the virtual encoder will be that of the real encoder.

## Related Topics

Feedback 2 (→ p. 82)

## 25.18.3 FB2.MODE

General Information	
Type	R/W Parameter
Description	Sets the mode for the second feedback inputs, EEO connector (X9) and high speed opto inputs (pins 9 and 10 on X7).
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Integer
See Also	FB2.ENCRES (→ p. 773), PL.FBSOURCE (→ p. 1096)
Start Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2493	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	986	No	16 bit	No

### Description

This parameter sets the feedback 2 input type as follows:

0 = Input A/B Signals

1 = Input Step and Direction Signals

2 = Input, up-down signals

### Related Topics

Feedback 2 (→ p. 82)

FB2.SOURCE

## 25.18.4 FB2.MOTORPHASE

General Information	
Type	NV Parameter
Description	Sets the motor phase of the motor associated with FB2.
Units	Electrical degrees
Range	0 to 359
Default Value	0
Data Type	Integer
Start Version	M_01-11-04-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

This parameter sets the phase offset for commutation of the motor associated with FB2. When multiple motors are driven by a single AKD, this allows different motor configurations to be saved for each value of IL.FBSOURCE (→ p. 890).

When IL.FBSOURCE is set to 1, the value of FB2.MOTORPHASE will overwrite the value of MOTOR.PHASE (→ p. 997). Additionally, while IL.FBSOURCE = 1, a write to MOTOR.PHASE will also overwrite FB2.MOTORPHASE.

### Related Topics

Motor (→ p. 70)

## 25.18.5 FB2.MOTORPOLES

General Information	
Type	NV Parameter
Description	Sets the number of motor poles associated with FB2.
Units	N/A
Range	0 to 510
Default Value	0
Data Type	Integer
Start Version	M_01-11-04-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

This parameter sets the number of motor poles associated with FB2. When multiple motors are driven by a single AKD, this allows different motor configurations to be saved for each value of IL.FBSOURCE (→ p. 890).

When IL.FBSOURCE is set to 1, the value of FB2.MOTORPOLES will overwrite the current value of MOTOR.POLES (→ p. 1002). Additionally, while IL.FBSOURCE = 1, a write to MOTOR.POLES will also overwrite FB2.MOTORPOLES.

### Related Topics

Motor (→ p. 70)

## 25.18.6 FB2.P

General Information	
Type	R/O Parameter
Description	Reads position from the secondary feedback.
Units	Depends on FB1.PUNIT (→ p. 758) counts or custom units.
Range	N/A
Default Value	N/A
Data Type	U64
See Also	FB1.HALLSTATE (→ p. 726)
Start Version	M_01-05-08-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2816	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1632	Yes	64-bits	Yes	M_01-06-03-000

### Description

This parameter reads the position back from the secondary feedback device that is connected to X7 or X9, depending on the value of DRV.EMUEMODE. The position can be read as 32-bit counts or in customer units.

### Related Topics

Feedback 1 (→ p. 74) | DRV.EMUEMODE (→ p. 631) | FB2.PUNIT (→ p. 783) | FB2.PIN | FB2.POUT | FB2.DIR (→ p. 772)

## 25.18.7 FB2.PIN

General Information	
Type	NV Parameter
Description	Sets gear IN for FB2.P (→ p. 779).
Units	N/A
Range	0 to 4,294,967,295
Default Value	100
Data Type	Integer
Start Version	M_01-05-011-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2818	DWord	No
sercos <sup>®</sup> III		4 Octets	

### Description

Use FB2.PIN with FB2.POUT (→ p. 782) to set the user units for FB2.P (→ p. 779).

### Related Topics

Feedback 1 (→ p. 74) | FB2.PUNIT (→ p. 783) | FB2.P (→ p. 779) | FB2.POUT (→ p. 782)

## 25.18.8 FB2.POFFSET

General Information	
Type	NV-Parameter
Description	Sets the offset for secondary feedback.
Units	counts, custom units
Range	-5,123,372,000,000,005.000 to 5,123,372,000,000,005.000 counts or -10,485,760.000 to 10,485,760.000 custom units
Default Value	0
Data Type	S64
See Also	N/A
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2819	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1638	Yes	64-bits	Yes	M_01-06-03-000

### Description

FB2.POFFSET is the value added to the primary feedback position (FB2.P (→ p. 779)).

### Example

If FB2.P is 10000 counts and FB2.POFFSET is set to -10000 counts, then the next read of FB2.P will return ~0 counts.

## 25.18.9 FB2.POUT

General Information	
Type	NV Parameter
Description	Sets gear IN for FB2.P (→ p. 779).
Units	N/A
Range	0 to 4,294,967,295
Default Value	20
Data Type	Integer
Start Version	M_01-05-011-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2821	DWord	No
sercos <sup>®</sup> III		4 Octets	

### Description

Use FB2.POUT with FB2.PIN (→ p. 780) to set the user units for FB2.P (→ p. 779).

### Related Topics

Feedback 1 (→ p. 74) | FB2.PUNIT (→ p. 783) | FB2.P (→ p. 779) | FB2.PIN (→ p. 780)

## 25.18.10 FB2.PUNIT

General Information	
Type	NV Parameter
Description	Sets the unit for FB2.P.
Units	N/A
Range	0, 3
Default Value	0
Data Type	U8
See Also	N/A
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2822	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1644	No	32-bits	No	M_01-06-03-000

### Description

FB2.PUNIT sets the position unit for FB2.P.

Value	Description
0	Counts (32 bit format)
3	(FB2.PIN/FB2.POUT) per revolution.

### Related Topics

FB2.P (→ p. 779)

## 25.18.11 FB2.SOURCE

General Information	
Type	R/W Parameter
Description	Sets the source for the second feedback input. Choices are the EEO connectors (X9) which are RS485 inputs, or the X7 connector's high speed opto inputs (pins 9 and 10).
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Integer
See Also	FB2.ENCRES, FB2.MODE, PL.FBSOURCE (→ p. 1096)
Start Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2494	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	988	No	16 bit	No

### Description

This parameter sets the secondary feedback source to be either the EEO connector (X9) or the high speed opto inputs on the I/O Connector (X7) as follows:

0 = None

1 = Feedback Source X9 (EEO connector)

2 = Feedback Source X7 (High Speed Opto Inputs on the I/O Connector)

**FB2 5V Power Supply Notes:**

If FB2.SOURCE = 0 or 2 (X7), the 5V power supply will remain off.

If FB2.SOURCE = 1 (X9) the FB2 5V power supply will remain on unless a short is detected. This is useful for encoder types that may require calibration.

## **Related Topics**

Feedback 2 (→ p. 82)

## 25.19 FB3 Parameters

This section describes the FB3 parameters.

---

<b>25.19.1 FB3.DIR</b> .....	<b>787</b>
<b>25.19.2 FB3.ENCRESES</b> .....	<b>788</b>
<b>25.19.3 FB3.MODE</b> .....	<b>789</b>
<b>25.19.4 FB3.MOTORPHASE</b> .....	<b>790</b>
<b>25.19.5 FB3.MOTORPOLES</b> .....	<b>791</b>
<b>25.19.6 FB3.P</b> .....	<b>792</b>
<b>25.19.7 FB3.PDIR</b> .....	<b>794</b>
<b>25.19.8 FB3.PIN</b> .....	<b>795</b>
<b>25.19.9 FB3.POFFSET</b> .....	<b>796</b>
<b>25.19.10 FB3.POUT</b> .....	<b>797</b>
<b>25.19.11 FB3.PUNIT</b> .....	<b>798</b>

## 25.19.1 FB3.DIR

General Information	
Type	NV Parameter
Description	Sets the counting direction for the position feedback when PL.FBSOURCE = 2.
Units	None
Range	0 to 1
Default Value	0
Data Type	U8
See Also	N/A
Start Version	M_01-11-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

FB3.DIR will change the sign and with it the direction of the position feedback (PL.FB (→ p. 1094)) when PL.FBSOURCE = 2 (FB3).

## 25.19.2 FB3.ENCRES

General Information	
Type	NV Parameter
Description	Sets the resolution of the motor encoder for feedback 3.
Units	None
Range	0 to 4,294,967,295
Default Value	0
Data Type	Integer
Start Version	M_01-11-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

Feedback 3 is natively scaled to 4,294,967,296 counts per revolution for rotary motors, and 4,294,967,296 per motor pole pitch (MOTOR.PITCH (→ p. 1001)) for linear motors. When FB3.ENCRES is non-zero, scaling is applied on top of the native scaling.

#### Rotary Example:

A second feedback device is placed at the load which has a 1:4 gear ratio (motor does four revolutions per secondary revolution). In this case, FB3.ENCRES should be  $4,294,967,296 / 4 = 1,073,741,824$

#### Linear Example:

Linear encoder resolution can be calculated as the number of encoder counts per one revolution of the motor. For example, if a linear setup has a 10nm scale (100,000 counts/nm), and the ballscrew has a 10mm lead with no gearbox, it will result in 1,000,000 counts for every revolution of the motor shaft. For this example, FB3.ENCRES should be set to 1,000,000.

## 25.19.3 FB3.MODE

General Information	
Type	NV Parameter
Description	Selects the type of feedback connected to X9.
Units	N/A
Range	0
Default Value	0
Data Type	Integer
See Also	NA
Start Version	M_01-04-15-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2522	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex
Modbus	1044

### Description

This parameter selects the type of feedback connected to X9. The position is reported as the tertiary feedback position, by FB3.P.

Value	Feedback
0	Endat 2.2 Feedback Device

This parameter is only supported on drives with model numbers similar to AKD-x-xxxxx-NBxx-xxxx.

## 25.19.4 FB3.MOTORPHASE

General Information	
Type	NV Parameter
Description	Sets the motor phase of the motor associated with FB3.
Units	Electrical degrees
Range	0 to 359
Default Value	0
Data Type	Integer
Start Version	M_01-11-04-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

This parameter sets the phase offset for commutation of the motor associated with FB3. When multiple motors are driven by a single AKD, this allows different motor configurations to be saved for each value of IL.FBSOURCE (→ p. 890).

When IL.FBSOURCE is set to 2, the value of FB3.MOTORPHASE will overwrite the value of MOTOR.PHASE (→ p. 997). Additionally, while IL.FBSOURCE = 2, a write to MOTOR.PHASE will also overwrite FB3.MOTORPHASE.

### Related Topics

Motor (→ p. 70)

## 25.19.5 FB3.MOTORPOLES

General Information	
Type	NV Parameter
Description	Sets the number of motor poles associated with FB3.
Units	N/A
Range	0 to 510
Default Value	0
Data Type	Integer
Start Version	M_01-11-04-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

This parameter sets the number of motor poles associated with FB3. When multiple motors are driven by a single AKD, this allows different motor configurations to be saved for each value of IL.FBSOURCE (→ p. 890).

When IL.FBSOURCE is set to 2, the value of FB3.MOTORPOLES will overwrite the current value of MOTOR.POLES (→ p. 1002). Additionally, while IL.FBSOURCE = 2, a write to MOTOR.POLES will also overwrite FB3.MOTORPOLES.

### Related Topics

Motor (→ p. 70)

## 25.19.6 FB3.P

General Information	
Type	R/O Parameter
Description	Reads position from the tertiary feedback.
Units	Depends on FB3.PUNIT (→ p. 798) counts or custom units.
Range	N/A
Default Value	N/A
Data Type	S64
See Also	N/A
Start Version	M_01-04-15-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	FB3.P_32	2523	DWord	Yes
sercos <sup>®</sup> III			8 Octets	
Profinet	FB3.P	2823	DWord	
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1646	Yes	64-bits	Yes	M_01-06-03-000

### Description

This parameter reads the position back from the tertiary feedback device that is connected to X9, when DRV.EMUEMODE = 11. The position can be read as 64-bit signed count or in customer units. Values read by this parameter depend on FB3.Dir and FB3.OFFSET.

This parameter is only supported on drives with model numbers similar to AKD-x-xyzz-NBxx-yzz and will only work with Endat 2.2 multiturn encoder. The output format is 32:32 the upper 32 bits represents the multiturns and the lower 32 bits for position of the feedback.

## Related Topics

DRV.EMUEMODE (→ p. 631) | FB3.PUNIT (→ p. 798) | FB3.PIN | FB3.POUT | FB3.PDIR (→ p. 794) |

## 25.19.7 FB3.PDIR

General Information	
Type	NV-Parameter
Description	Sets the counting direction for feedback channel 3.
Units	None
Range	0 to 1
Default Value	0
Data Type	U8
See Also	N/A
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2825	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1650	No	8-bits	No	M_01-06-03-000

### Description

FB3.PDIR will change the sign and with it the direction of feedback channel 3 (FB3.P (→ p. 792)).

### Example

If FB3.P = 35,185.932 and you set:

→ FB3.PDIR 1

then FB3.P = -35,185.932

## 25.19.8 FB3.PIN

General Information	
Type	NV Parameter
Description	Sets gear IN for FB3.P (→ p. 792).
Units	N/A
Range	0 to 4,294,967,295
Default Value	100
Data Type	Integer
Start Version	M_01-05-011-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2826	DWord	No
sercos <sup>®</sup> III		4 Octets	

### Description

Use FB3.PIN with FB3.POUT (→ p. 797) to set the user units for FB3.P (→ p. 792).

### Related Topics

Feedback 1 (→ p. 74) | FB3.PUNIT (→ p. 798) | FB3.P (→ p. 792) | FB3.POUT (→ p. 797)

## 25.19.9 FB3.POFFSET

General Information	
Type	NV-Parameter
Description	Sets the offset for tertiary feedback.
Units	counts, custom units
Range	-5,123,372,000,000,005.000 to 5,123,372,000,000,005.000 counts or -10,485,760.000 to 10,485,760.000 custom units
Default Value	0
Data Type	S64
See Also	N/A
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2827	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1654	Yes	64-bits	Yes	M_01-06-03-000

### Description

FB3.POFFSET is the value added to the primary feedback position (FB3.P (→ p. 792)).

### Example

If FB3.P is 10000 counts and FB3.POFFSET is set to -10000 counts, then the next read of FB3.P will return ~0 counts.

## 25.19.10 FB3.POUT

General Information	
Type	NV Parameter
Description	Sets gear IN for FB3.P (→ p. 792).
Units	N/A
Range	0 to 4,294,967,295
Default Value	20
Data Type	Integer
Start Version	M_01-05-011-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2829	DWord	No
sercos <sup>®</sup> III		4 Octets	

### Description

Use FB3.POUT with FB3.PIN (→ p. 795) to set the user units for FB3.P (→ p. 792).

### Related Topics

Feedback 1 (→ p. 74) | FB3.PUNIT (→ p. 798) | FB3.P (→ p. 792) | FB3.PIN (→ p. 795)

## 25.19.11 FB3.PUNIT

General Information	
Type	NV Parameter
Description	Sets the unit for FB3.P.
Units	N/A
Range	0, 3
Default Value	0
Data Type	U8
See Also	N/A
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2830	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1660	No	32-bits	No	M_01-06-03-000

### Description

FB3.UNIT sets the position unit for FB3.P.

Value	Description
0	Counts (32.32 format)
3	(FB3.PIN/FB3.POUT) per revolution.

### Related Topics

FB3.P (→ p. 792)

## 25.20 FBUS Parameters

This section describes the FBUS parameters.

---

<b>25.20.1 FBUS.PARAM1 TO FBUS.PARAM10</b> .....	<b>800</b>
<b>25.20.2 FBUS.PLLSTATE</b> .....	<b>804</b>
<b>25.20.3 FBUS.PLLTHRESH</b> .....	<b>805</b>
<b>25.20.4 FBUS.PROTECTION</b> .....	<b>806</b>
<b>25.20.5 FBUS.REMOTE</b> .....	<b>809</b>
<b>25.20.6 FBUS.SAMPLEPERIOD</b> .....	<b>810</b>
<b>25.20.7 FBUS.STATE</b> .....	<b>811</b>
<b>25.20.8 FBUS.SYNCACT</b> .....	<b>813</b>
<b>25.20.9 FBUS.SYNCDIST</b> .....	<b>814</b>
<b>25.20.10 FBUS.SYNCWND</b> .....	<b>815</b>
<b>25.20.11 FBUS.TYPE</b> .....	<b>816</b>

## 25.20.1 FBUS.PARAM1 TO FBUS.PARAM10

General Information	
Type	NV Parameter
Description	Set fieldbus specific meanings.
Units	N/A
Range	See table below.
Default Value	See table below.
Data Type	Unsigned 32
See Also	CANbus Communication Manual, EtherCAT Communication Manual
Start Version	M_01-00-00-000

Parameter	EtherCAT COE Range	CANopen Range
FBUS.PARAM01	N/A	125; 250; 500; 1000
FBUS.PARAM02	0 to 1	0 to 1
FBUS.PARAM03	1,001 to 65,535	N/A
FBUS.PARAM04	0 to 1	0 to 1
FBUS.PARAM05	0 to 511	0 to 511

Parameter	EtherCAT COE Default Value	CANopen Default Value
FBUS.PARAM01	N/A	125
FBUS.PARAM02	1	0
FBUS.PARAM03	0	N/A
FBUS.PARAM04	1	0
FBUS.PARAM05	0	0

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes

Variant	Supported
AKD-N	Yes
AKD-C	Yes

## Fieldbus Information

Fieldbus	Index/Subindex				Object Start Version
EtherCAT COE and CANopen	36E5h/0	FBUS.PARAM01	36EAh/0	FBUS.PARAM06	M_01-00-00-000
	36E6h/0	FBUS.PARAM02	36Eb/0	FBUS.PARAM07	
	36E7h/0	FBUS.PARAM03	36ECh/0	FBUS.PARAM08	
	36E8h/0	FBUS.PARAM04	36EDh/0	FBUS.PARAM09	
	36E9h/0	FBUS.PARAM05	36EEh/0	FBUS.PARAM10	

Parameter	Fieldbus	Address	Attributes	Signed?
FBUS.PARAM1	Profinet	2157	DWord	No
	sercos <sup>®</sup> III		4 Octets	
FBUS.PARAM2	Profinet	2158	DWord	No
	sercos <sup>®</sup> III		4 Octets	
FBUS.PARAM3	Profinet	2159	DWord	No
	sercos <sup>®</sup> III		4 Octets	
FBUS.PARAM4	Profinet	2160	DWord	No
	sercos <sup>®</sup> III		4 Octets	
FBUS.PARAM5	Profinet	2161	DWord	No
	sercos <sup>®</sup> III		4 Octets	
FBUS.PARAM6	Profinet	2162	DWord	No
	sercos <sup>®</sup> III		4 Octets	
FBUS.PARAM7	Profinet	2163	DWord	No
	sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	FBUS.PARAM01	314	No	32 bit	No	M_01-03-00-000
	FBUS.PARAM02	316				
	FBUS.PARAM03	318				
	FBUS.PARAM04	320				
	FBUS.PARAM05	322				
	FBUS.PARAM06	324				
	FBUS.PARAM07	326				
	FBUS.PARAM08	328				
	FBUS.PARAM09	330				
	FBUS.PARAM10	332				

## Description

FBUS.PARAM01 sets the baud rate for the CANbus. Supported baud rates are 125, 250, 500 and 1000 kBaud.

FBUS.PARAM02 switches the phase locked loop (PLL) for synchronized use: 0 = OFF, 1 = ON. FBUS.PARAM02 only works when FBUS.TYPE = 3 (CANopen).

FBUS.PARAM03 sets the configured station alias for EtherCAT.

FBUS.PARAM04 switches the surveillance of SYNC-signals: 0 = OFF, 1 = ON

FBUS.PARAM05 is used to configure some special behaviors of the DS402.

FBUS.PARAM06 - FBUS.PARAM10 are reserved.

### FBUS.PARAM04 Additional Notes

FBUS.PARAM04 enables (1) or disables(0) the synchronization supervision of the CAN or EtherCAT fieldbus.

Default values:

- CAN: disabled (0)
- EtherCAT: enabled (1)

The synchronization supervision is active when:

- FBUS.PARAM04 = 1
- The first CANopen Sync message or first EtherCAT frame was received.

When more than three CANopen sync messages or seven EtherCAT frames have not been received, and the drive is enabled, fault F125 (→ p. 260), "Synchronization lost", occurs.

### FBUS.PARAM05 Additional Notes

Bit 0 configures the behavior of DS402 state machine in case of fault resets.

- **Bit 0 = 1:** Faults can only be reset using DS402 control word bit 7.
- **Bit 0 = 0:** The reset can also be done via telnet or digital input and the DS402 state machine reflects this condition.
- **Bit 1 = 1:** The state of the hardware enable does not change the state machine state Operation Enable.
- **Bit 1 = 0:** If the state Operation Enable or Switched on is active it falls back to the state switched On Disabled, if the Hardware enable goes to 0.
- **Bit 2 = 1:** Workbench/Telnet can software enable the drive when CANopen/EtherCAT are operational.
- **Bit 2 = 0:** Workbench/Telnet can switch the DS402-state machine to the state "Switched On" (enable the power stage), if the former state was "Switched on Disabled." This requires the hardware enable to be set to 1.
- **Bit 3 = 1:** DS402-state machine is not influenced, if the software-enable is taken away via Telnet.
- **Bit 3 = 0:** DS402-state machine is influenced, if the software-enable is taken away via Telnet.
- **Bit 4 = 1:** Position scaling for DS402-parameters is done dependent on DS402-scaling parameters via objects 6091 / 6092. Velocity scaling via 204c.
- **Bit 4 = 0:** Position scaling for DS402-parameters is done dependent on UNIT.PIN.
- **Bit 5 = 1:** EtherCAT: The setting of the rotary switches define the station alias address, if FBUS.PARAM03 is on 0 else FBUS.PARAM03 is used to store the station alias address.

- **Bit 5 = 0:** EtherCAT: The setting of the rotary switches define the station alias address. If the setting is 0, FBUS.PARAM03 can be used.
- **Bit 6 = 1:** Bit 0 of the parameter MT.CNTL (object 35D9 sub 0) can be accessed.
- **Bit 6 = 0:** Bit 0 of the parameter MT.CNTL (object 35D9 sub 0) is exclusively used for DS402 control word.
- **Bit 7:** Reserved
- **Bit 8 = 1:** DS402-state switched on, power stage disabled.
- **Bit 8 = 0:** DS402-state switched on, power stage enabled.
- **Bit 11 = 1** No emergency messages over CANopen are triggered when a drive warning occurs.

## 25.20.2 FBUS.PLLSTATE

General Information	
Type	R/O Parameter
Description	Returns the status of the PLL
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	FBUS.PARAM1 TO FBUS.PARAM10 (→ p. 800), Fieldbus documentation
Start Version	M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

FBUS.PLLSTATE returns the status of the phase locked loop (PLL). The PLL states are as follows:

PLL State	Description
PLL not activated	This state is set using FBUS.PARAM02. Not each fieldbus or operation mode needs synchronization.
PLL activated, but unlocked	The PLL is activated but has not yet been locked successfully. This state is related to the fieldbus master, as well as to the fieldbus mode of operation.
PLL activated and locked	PLL is fully operational and locked

For more information, see the *AKD CANopen Manual*, Phase Locked Loop.

## 25.20.3 FBUS.PLLTHRESH

General Information	
Type	NV Parameter
Description	Sets number of successful synchronized cycles needed to lock the PLL.
Units	N/A
Range	0 to 10,000
Default Value	0
Data Type	Integer, U32
See Also	Appendix B: Fieldbus Manuals
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2177	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	354	No	16 bit	No	M_01-03-00-000

### Description

This parameter sets number of successful synchronized cycles needed to lock the PLL.

## 25.20.4 FBUS.PROTECTION

General Information	
Type	R/W Parameter
Description	Controls which parameters are blocked from being accessed through telnet while a fieldbus is operational.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-08-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information


Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3498h/0	M_01-08-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2871	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1742	No	8 bit	No	M_01-08-00-000

### Description

When an AKD is a slave node on a fieldbus (for example an AKD is connected to an EtherCAT master) and WorkBench is simultaneously connected to an AKD via a service channel, then you have several options on how you would like the AKD to respond to commands from each of the channels.

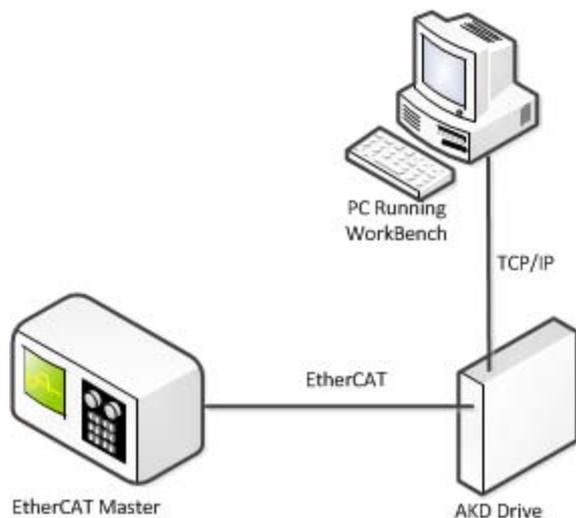

When the fieldbus is operational the AKD uses the FBUS.PROTECTION parameter to allow the user to select how commands from WorkBench, or any other device sending commands to the drive through a service channel, should be handled. WorkBench can use either of two service channels: Telnet or ASCII SDO. Both service channels are affected identically by FBUS.PROTECTION.

The following table shows the available options. If the fieldbus is not connected or not started, then parameters executed through a service channel will not be blocked.

Value	Description
0	<b>Motion and Tuning Commands Allowed</b> - Commands that would interfere with motion are allowed. Gain and IO configuration changes are allowed.
1	<b>Block Motion but Allow Tuning Commands</b> - Commands that would interfere with motion are blocked. Gain and I/O configuration changes are allowed.

DRV.HELP will include the [Blocked] attribute to indicate whether a parameter is being blocked. For example, if FBUS.PROTECTION is 0 and the network is operational, the following help will be shown.

```
-->DRV.HELP DRV.EN
Help for: DRV.EN [ActionCommand] [Blocked]
-->
```

If you attempt to execute a blocked parameter the following error would display.

```
-->DRV.EN
Error: [0008] Command blocked.
```

All write or command functions of a parameter will be blocked by FBUS.PROTECTION. FBUS.PROTECTION will not block the read function of any parameter.

When the fieldbus is operational, FBUS.PROTECTION is always blocked, but can be edited through the fieldbus. This ensures that the protection level can only be modified by the fieldbus when it is in control.

If a parameter is blocked through telnet, it will be accessible through the fieldbus. For example, SDO's in the case of CANopen or EtherCAT.

## Parameters Affected by FBUS.PROTECTION

This table shows how the blocked attribute affects the following parameters in each state of FBUS.PROTECTION. This table is true only if FBUS.STATE = 5 (operational).

<b>FBUS.PROTECTION</b>	<b>0 - Block Nothing</b>	<b>1 - Block Motion Commands</b>
DRV.EN DRV.DIS		[Blocked]
FBUS.PROTECTION		[Blocked]
DRV.OPMODE DRV.CMDSOURCE		[Blocked]
DRV.STOP DRV.CLRFAULTS		[Blocked]

## Related Topics

FBUS.STATE

## 25.20.5 FBUS.REMOTE

General Information	
Type	R/W Parameter
Description	Changes or shows the control of the drive (fieldbus master/telnet)
Units	N/A
Range	0 to 1
Default Value	0
Data Type	U8
See Also	Fieldbus Manuals (→ p. 324)PL.FBSOURCE (→ p. 1096)
Start Version	M_01-05-06-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

DS402 (CAN/EtherCAT):

With this parameter the bit 9 (remote) of the DS402-status word can be set directly via Telnet to show the DS402-master-system that the control is removed. The master has to react on that.

## 25.20.6 FBUS.SAMPLEPERIOD

General Information	
Type	NV Parameter
Description	Sets fieldbus sample period.
Units	Whole multiples of MTS 250 µs
Range	4 to 128 and value must be a power of 4
Default Value	32 = 2 ms
Data Type	U8
See Also	Appendix B: Fieldbus Manuals
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	60C2h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2178	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	356	No	8 bit	No	M_01-03-00-000

### Description

This parameter sets the fieldbus cycle time. It is normally written in the startup phase of the field busses via the object 60C2 subindex 1 (interpolation time units) and 2 (interpolation time index), where the index stands for a power of 10 seconds (for instance, -3 stands for milliseconds) and the units are the counts of these units. Kollmorgen recommends the following standard cycle rates, 250 us (4), 500 us (8), 1 ms (16), 2 ms (32), 4 ms (64).

## 25.20.7 FBUS.STATE

General Information	
Type	R/O
Description	Reads the state of the fieldbus.
Units	N/A
Range	Depends on fieldbus. See table below.
Default Value	Depends on fieldbus. See table below.
Data Type	Integer
Start Version	M_01-08-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2873	Byte	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1746	No	8-bit	Yes

### Description

FBUS.STATE returns the current state of the fieldbus. The value returned is dependent upon the fieldbus being used.

Value	CANopen over CAN	CANopen over EtherCAT
-1	Not connected	Not connected
0	Init.	-
1	N/A	Init.

Value	CANopen over CAN	CANopen over EtherCAT
2	N/A	Pre-operational
3	-	Boot
4	Stopped	Safe-operational
5	Operational	-
8	-	Operational
127	Pre-operational	-

## 25.20.8 FBUS.SYNCACT

General Information	
Type	R/O Parameter
Description	Reads actual distance from the desired sync distance.
Units	ns
Range	0 to 250,000 ns
Default Value	0 ns
Data Type	Integer, U 32
See Also	Appendix B: Fieldbus Manuals
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2179	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	358	No	32 bit	No	M_01-03-00-000

### Description

This parameter reads actual distance from the desired sync distance.

## 25.20.9 FBUS.SYNCDIST

General Information	
Type	NV Parameter
Description	Sets time target for synchronization.
Units	ns
Range	0 to 250,000 ns
Default Value	100,000 ns
Data Type	Integer, U32
See Also	Appendix B: Fieldbus Manuals
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2180	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	360	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets time target for synchronization.

## 25.20.10 FBUS.SYNCWND

General Information	
Type	NV Parameter
Description	Sets symmetrically arranged window around the desired sync distance.
Units	ns
Range	0 to 1,000,000 ns
Default Value	50,000 ns
Data Type	Integer, U2
See Also	Appendix B: Fieldbus Manuals
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2181	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	362	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets symmetrically arranged window around the desired sync distance.

## 25.20.11 FBUS.TYPE

General Information	
Type	R/O Parameter
Description	Shows the active fieldbus type.
Units	N/A
Range	0 to 6
Default Value	0
Data Type	U8
See Also	Fieldbus Manuals
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2182	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	364	No	8 bit	No	M_01-03-00-000

### Description

FBUS.TYPE shows the active fieldbus type.

0 = Analog

1 = SynqNet

2 = EtherCAT

3 = CANopen

4 = EthernetIP

5 = Profinet

6 = sercos<sup>®</sup> III

## 25.21 GEAR Parameters

This section describes the GEAR parameters.

---

<b>25.21.1 GEAR.ACCMAX</b> .....	<b>819</b>
<b>25.21.2 GEAR.DECMAX</b> .....	<b>821</b>
<b>25.21.3 GEAR.IN</b> .....	<b>823</b>
<b>25.21.4 GEAR.MODE</b> .....	<b>825</b>
<b>25.21.5 GEAR.MOVE</b> .....	<b>828</b>
<b>25.21.6 GEAR.OUT</b> .....	<b>829</b>
<b>25.21.7 GEAR.VMAX</b> .....	<b>831</b>

## 25.21.1 GEAR.ACCMAX

General Information	
Type	NV Parameter
Description	Sets the maximum allowed acceleration value; active in opmode 2 (position) only.
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rps/s, rpm/s, deg/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup> , rad/s <sup>2</sup> Linear: counts/s <sup>2</sup> , mm/s <sup>2</sup> , μm/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup>
Range	Rotary: 0.004 to 4,000,000 rps/s 0.224 to 240,000,008.192 rpm/s 1.341 to 1,439,999,983.616 deg/s <sup>2</sup> 0.023 to 25,132,740.608 rad/s <sup>2</sup> Linear: 16,000.000 to 3,579,139,408,000.000 counts/s <sup>2</sup> 0.031*MOTOR.PITCH (→ p. 1001) to 833,333.333*MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 30.994*MOTOR.PITCH (→ p. 1001) to 83,3333,333.333*MOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup>
Default Value	Rotary: 166.669 rps/s 10,000.170 rpm/s 60,001.016 deg/s <sup>2</sup> 1,047.215 rad/s <sup>2</sup> Linear: 715,840,000.000 counts/s <sup>2</sup> 166.714*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 166,714.191*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup>
Data Type	Float
See Also	UNIT.ACCROTARY (→ p. 1220), UNIT.ACCLINEAR (→ p. 1218), GEAR.DECMAX (→ p. 821)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes

Variant	Supported
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

## Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2183	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	366	Yes	64 bit	No	M_01-03-00-000

## Description

This parameter limits the acceleration of the slave to a numerical higher value.

## Related Topics

Electronic Gearing (→ p. 121)

## 25.21.2 GEAR.DECMAX

General Information	
Type	NV Parameter
Description	Sets the maximum allowed deceleration value; active in opmode 2 (position) only.
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rps/s, rpm/s, deg/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup> , rad/s <sup>2</sup> Linear: counts/s <sup>2</sup> , mm/s <sup>2</sup> , μm/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup>
Range	Rotary: 0.002 to 833,333.333 rps/s 0.112 to 50,000,000.000 rpm/s 0.009 to 300,000,000.000 deg/s <sup>2</sup> 0.155 to 4,166,666.752 (Custom Units (→ p. 100))/s <sup>2</sup> 0.012 to 5,235,987.968 rad/s <sup>2</sup> Linear: 16,000.000 to 3,579,139,408,000.000 counts/s <sup>2</sup> 0.031*MOTOR.PITCH (→ p. 1001) to 833,333.333*MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 30.994*MOTOR.PITCH (→ p. 1001) to 833,333.333.333*MOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 0.155 to 4,166,666.667 (Custom Units (→ p. 100))/s <sup>2</sup>
Default Value	Rotary: 166.669 rps/s 10,000.000 rpm/s 60,000.000 deg/s <sup>2</sup> 833.333 (Custom Units (→ p. 100))/s <sup>2</sup> 1,047.2 rad/s <sup>2</sup> Linear: 715,840,000.000 counts/s <sup>2</sup> 166.714*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 166,714.191*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 833.571 (Custom Units (→ p. 100))/s <sup>2</sup>
Data Type	Float
See Also	UNIT.ACCROTARY (→ p. 1220), UNIT.ACCLINEAR (→ p. 1218), GEAR.ACCMAX (→ p. 819)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes

Variant	Supported
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

## Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2185	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	370	Yes	64 bit	No	M_01-03-00-000

## Description

This parameter limits the deceleration of the slave to a numerical higher value.

## Related Topics

Electronic Gearing (→ p. 121)

## 25.21.3 GEAR.IN

General Information	
Type	NV Parameter
Description	Sets the denominator of the electronic gearing ratio; active in opmode 2 (position) only.
Units	N/A
Range	1 to 65,535
Default Value	1
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2187	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	374	No	16 bit	No	M_01-03-00-000

### Description

This parameter sets the denominator of the gear ratio for the electronic gearing mode. The gear ratio is used in order to increase and decrease the slave velocity. The slave velocity can be calculated by the following formula:

Slave velocity = Master velocity \* GEAR.OUT (→ p. 829)/GEAR.IN

Be sure that you set the external master source number of signals per revolution correctly. Also, select the gear ratio so that the maximum electronic gearing velocity (GEAR.VMAX (→ p. 831)) is not exceeded.

Master velocity $\text{max} * \text{GEAR.OUT}$  (→ p. 829)/ $\text{GEAR.IN} < \text{GEAR.VMAX}$  (→ p. 831)

## **Related Topics**

Electronic Gearing (→ p. 121)

## 25.21.4 GEAR.MODE

General Information	
Type	NV Parameter
Description	Selects electronic gearing mode; active in opmode 2 (position) only.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2188	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	376	No	16 bit	No	M_01-03-00-000


### Description

This parameter selects the electronic gearing mode at the beginning of the electronic gearing procedure. The gearing mode determines drive synchronization. In the context of electronic gearing, synchronization means that the slave follows the master pulses without losing counts due to acceleration or velocity limitations.

- Mode 0: The slave is not immediately synchronized after a GEAR.MOVE command. The slave accelerates until the master velocity (velocity after the gearing) has been


reached. The drive is synchronized as soon as the velocity of the master has been reached.

- Mode 1: The slave is immediately synchronized after a GEAR.MOVE command.

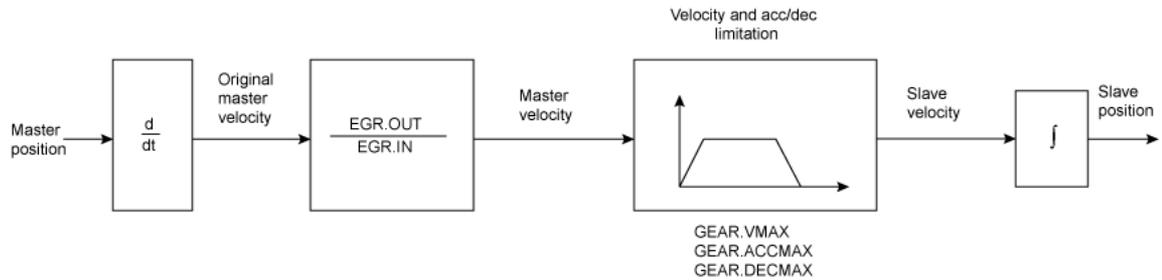

**Block diagram of the electronic gearing feature**

The slave position is forwarded to the position loop. Ensure that DRV.OPMODE has been set to 2 and DRV.CMDSOURCE has been set to 2. The slave is able to reach the master velocity according to the GEAR.VMAX setting. GEAR.VMAX does not limit the slave velocity.

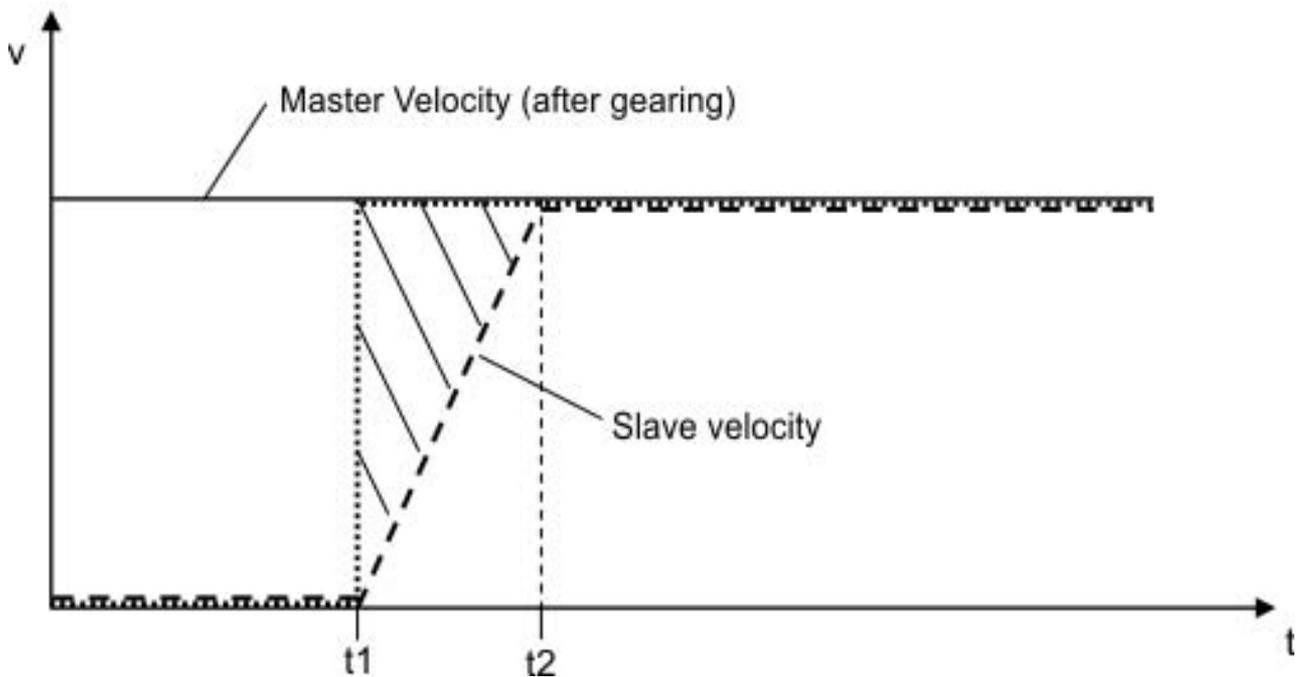

Acceleration process for GEAR.MODE 0

Time	Description
t < t1	The master sends already signals to the slave drive, but the GEAR.MOVE command has not been triggered yet.
t = t1	A GEAR.MOVE command has been triggered.
t1 < t < t2	The slave accelerates according to the GEAR.ACCMAX setting. The position, which is marked with solid lines, will be ignored.

Time	Description
$t=t_2$	The slave has reached the master velocity and is from now on considered as synchronized. Synchronization means that the slave will not lose any more position counts coming from the master.
$t>t_2$	The slave follows the master input signals.

## Related Topics

Electronic Gearing (→ p. 121)

## 25.21.5 GEAR.MOVE

General Information	
Type	Command
Description	Starts the electronic gearing; active in opmode 2 (position) only.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2189	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	378	No	Command	No	M_01-03-00-000

### Description

The command GEAR.MOVE starts the electronic gearing procedure according to the selected electronic gearing mode. The electronic gearing process can be stopped using the DRV.STOP (→ p. 691) command.

### Related Topics

Electronic Gearing (→ p. 121)

## 25.21.6 GEAR.OUT

General Information	
Type	NV Parameter
Description	Sets the numerator of the electronic gearing ratio; active in opmode 2 (position) only.
Units	N/A
Range	-32,768 to +32,767
Default Value	1
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2190	Word	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	380	No	16 bit	Yes	M_01-03-00-000

### Description

This parameter is the numerator of the gear ratio for the electronic gearing mode. The gear ratio is used in order to increase/decrease the slave velocity. The slave velocity can be calculated by the following formula:

Slave velocity = Master velocity \* GEAR.OUT/GEAR.IN (→ p. 823)

Make sure that the external master source has been set properly. Also, be certain to select a gear ratio such that the maximum electronic gearing velocity (GEAR.VMAX (→ p. 831)) will not be exceeded.

Master velocity<sub>max</sub> \* GEAR.OUT/GEAR.IN (→ p. 823) < GEAR.VMAX (→ p. 831)

## **Related Topics**

Electronic Gearing (→ p. 121)

## 25.21.7 GEAR.VMAX

General Information	
Type	NV Parameter
Description	Reads the maximum allowed velocity value; active in opmode 2 (position) only.
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rpm, rps, deg/s, Custom Units (→ p. 100)/s, rad/s Linear: counts/s, mm/s, µm/s, Custom Units (→ p. 100)/s
Range	Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 deg/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s 0.000 to 1,570.796 rad/s Linear: 0.000 to 1,073,741,824,000.000 counts/s 0.000 to 250.000*MOTOR.PITCH (→ p. 1001) mm/s 0.000 to 250,000.000*MOTOR.PITCH (→ p. 1001) µm/sec 0.000 to 1,250.000 Custom Units (→ p. 100)/s
Default Value	Rotary: 3,000 rpm 50 rps 18,000.002 deg/s 250.000 Custom Units (→ p. 100)/s 314.159 rad/s Linear: 0.050 counts/s 50 mm/s 50,000.004MOTOR.PITCH (→ p. 1001) µm/s 250.000 Custom Units (→ p. 100)/s
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes

Variant	Supported
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

## Fieldbus Information

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	GEAR.VMAX_32	2191	DWord	No
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	382	Yes	Low 32 bit word	No	M_01-03-00-000

## Description

This parameter limits the maximum velocity of the slave drive.

## Related Topics

Electronic Gearing (→ p. 121)

## 25.22 GUI Parameters

GUI parameters are used within WorkBench for data reporting and data storage.

---

<b>25.22.1 GUI.DISPLAY</b> .....	<b>834</b>
<b>25.22.2 GUI.DISPLAYS</b> .....	<b>835</b>
<b>25.22.3 GUI.PARAM01</b> .....	<b>836</b>
<b>25.22.4 GUI.PARAM02</b> .....	<b>837</b>
<b>25.22.5 GUI.PARAM03</b> .....	<b>838</b>
<b>25.22.6 GUI.PARAM04</b> .....	<b>839</b>
<b>25.22.7 GUI.PARAM05</b> .....	<b>840</b>
<b>25.22.8 GUI.PARAM06</b> .....	<b>841</b>
<b>25.22.9 GUI.PARAM07</b> .....	<b>842</b>
<b>25.22.10 GUI.PARAM08</b> .....	<b>843</b>
<b>25.22.11 GUI.PARAM09</b> .....	<b>844</b>
<b>25.22.12 GUI.PARAM10</b> .....	<b>845</b>

## 25.22.1 GUI.DISPLAY

General Information	
Type	R/O Parameter
Description	Reads drive display data.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Display
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This parameter reports to the GUI what the drive currently is displaying. For all GUI commands, the data is compressed and formatted for the GUI, not for the user.

## 25.22.2 GUI.DISPLAYS

General Information	
Type	R/O Parameter
Description	Reads drive display data.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Display
Start Version	M_01-09-06-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This parameter reports to the GUI what the drive currently is displaying. For all GUI commands, the data is compressed and formatted for the GUI, not for the user.

## 25.22.3 GUI.PARAM01

General Information	
Type	NV Parameter
Description	Used by the GUI to store data.
Units	N/A
Range	2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

The GUI uses this parameter to store data. Only the GUI can modify this data (not the user).

## 25.22.4 GUI.PARAM02

General Information	
Type	NV Parameter
Description	Used by the GUI to store data.
Units	N/A
Range	2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

The GUI uses this parameter to store data. Only the GUI can modify this data (not the user).

## 25.22.5 GUI.PARAM03

General Information	
Type	NV Parameter
Description	Used by the GUI to store data.
Units	N/A
Range	2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

The GUI uses this parameter to store data. Only the GUI can modify this data (not the user).

## 25.22.6 GUI.PARAM04

General Information	
Type	NV Parameter
Description	Used by the GUI to store data.
Units	N/A
Range	2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

The GUI uses this parameter to store data. Only the GUI can modify this data (not the user).

## 25.22.7 GUI.PARAM05

General Information	
Type	NV Parameter
Description	Used by the GUI to store data.
Units	N/A
Range	2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

The GUI uses this parameter to store data. Only the GUI can modify this data (not the user).

## 25.22.8 GUI.PARAM06

General Information	
Type	NV Parameter
Description	Used by the GUI to store data.
Units	N/A
Range	2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

The GUI uses this parameter to store data. Only the GUI can modify this data (not the user).

## 25.22.9 GUI.PARAM07

General Information	
Type	NV Parameter
Description	Used by the GUI to store data.
Units	N/A
Range	2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

The GUI uses this parameter to store data. Only the GUI can modify this data (not the user).

## 25.22.10 GUI.PARAM08

General Information	
Type	NV Parameter
Description	Used by the GUI to store data.
Units	N/A
Range	2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

The GUI uses this parameter to store data. Only the GUI can modify this data (not the user).

## 25.22.11 GUI.PARAM09

General Information	
Type	NV Parameter
Description	Used by the GUI to store data.
Units	N/A
Range	2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

The GUI uses this parameter to store data. Only the GUI can modify this data (not the user).

## 25.22.12 GUI.PARAM10

General Information	
Type	NV Parameter
Description	Used by the GUI to store data.
Units	N/A
Range	2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

The GUI uses this parameter to store data. Only the GUI can modify this data (not the user).

## 25.23 HOME Parameters

This section describes the HOME parameters.

---

<b>25.23.1 HOME.ACC</b> .....	<b>847</b>
<b>25.23.2 HOME.AUTOMOVE</b> .....	<b>849</b>
<b>25.23.3 HOME.DEC</b> .....	<b>851</b>
<b>25.23.4 HOME.DIR</b> .....	<b>853</b>
<b>25.23.5 HOME.DIST</b> .....	<b>855</b>
<b>25.23.6 HOME.FEEDRATE</b> .....	<b>857</b>
<b>25.23.7 HOME.IPEAK</b> .....	<b>859</b>
<b>25.23.8 HOME.MAXDIST</b> .....	<b>861</b>
<b>25.23.9 HOME.MODE</b> .....	<b>863</b>
<b>25.23.10 HOME.MOVE</b> .....	<b>865</b>
<b>25.23.11 HOME.P</b> .....	<b>866</b>
<b>25.23.12 HOME.PERRTHRESH</b> .....	<b>868</b>
<b>25.23.13 HOME.SET</b> .....	<b>870</b>
<b>25.23.14 HOME.V</b> .....	<b>872</b>

## 25.23.1 HOME.ACC

General Information	
Type	R/W Parameter
Description	Sets homing acceleration; active in opmode 2 (position) only.
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rps/s, rpm/s, deg/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup> , rad/s <sup>2</sup> Linear: counts/s <sup>2</sup> , mm/s <sup>2</sup> , μm/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup>
Range	Rotary: 0.002 to 833,333.333 rps/s 0.112 to 50,000,000.000 rpm/s 0.009 to 300,000,000.000 deg/s <sup>2</sup> 0.155 to 4,166,666.752 (Custom Units (→ p. 100))/s <sup>2</sup> 0.012 to 5,235,987.968 rad/s <sup>2</sup> Linear: 16,000.000 to 3,579,139,408,000.000 counts/s <sup>2</sup> 0.031*MOTOR.PITCH (→ p. 1001) to 833,333.333*MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 30.994*MOTOR.PITCH (→ p. 1001) to 833,333,333.333*MOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 0.155 to 4,166,666.667 (Custom Units (→ p. 100))/s <sup>2</sup>
Default Value	Rotary: 166.669 rps/s 10,000.000 rpm/s 60,000.000 deg/s <sup>2</sup> 833.333 (Custom Units (→ p. 100))/s <sup>2</sup> 1,047.2 rad/s <sup>2</sup> Linear: 715,840,000.000 counts/s <sup>2</sup> 166.714*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 166,714.191*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 833.571 (Custom Units (→ p. 100))/s <sup>2</sup>
Data Type	Float
See Also	UNIT.ACCROTARY (→ p. 1220), UNIT.ACCLINEAR (→ p. 1218)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No

Variant	Supported
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3502h/0 609Ah/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2192	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	384	Yes	64 bit	No	M_01-03-00-000

## Description

This parameter determines the acceleration of the motor during the homing procedure.

## Related Topics

Homing (→ p. 151)

## 25.23.2 HOME.AUTOMOVE

General Information	
Type	R/W Parameter
Description	Sets homing auto move flag.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
See Also	HOME.MODE (→ p. 863)
Start Version	M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2194	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	388	No	8 bit	No	M_01-03-00-000

### Description

HOME.AUTOMOVE allows the drive to start a homing procedure after enabling the drive.

HOME.AUTOMOVE = 0: The drive is not allowed to start automatically a homing procedure after the enable command.

HOME.AUTOMOVE = 1: The drive automatically starts a homing procedure after the enable command.

When HOME.AUTOMOVE is set to 1, the drive continuously checks the following conditions:

1. Is the drive enabled (DRV.ACTIVE (→ p. 595) = 1)?
2. Is the drive in DRV.OPMODE (→ p. 682) = 2?
3. Has the command source been adjusted to 0 (DRV.CMDSOURCE (→ p. 604) = 0)?
4. Is no other motion currently active (see DRV.MOTIONSTAT (→ p. 672))?

As soon as all of the conditions above are true, the drive activates the homing procedure, which has been selected via the HOME.MODE (→ p. 863) setting. The automatic homing procedure is finished as soon as the homing procedure has been successfully triggered by the drive. The drive will not attempt to trigger any additional homing procedure until the drive has been power cycled.

HOME.AUTOMOVE is not functional in release M\_01-03-00-000 for homing procedures which require an external index signal (HOME.MODE 3, 6, 10, and 11).

### **Related Topics:**

Homing (→ p. 151)

## 25.23.3 HOME.DEC

General Information	
Type	R/W Parameter
Description	Sets homing deceleration; active in opmode 2 (position) only.
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) UNIT.ACCLINEAR (→ p. 1218) Rotary: rps/s, rpm/s, deg/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup> , rad/s <sup>2</sup> Linear: counts/s <sup>2</sup> , mm/s <sup>2</sup> , μm/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup>
Range	Rotary: 0.002 to 833,333.333 rps/s 0.112 to 50,000,000.000 rpm/s 0.009 to 300,000,000.000 deg/s <sup>2</sup> 0.155 to 4,166,666.752 (Custom Units (→ p. 100))/s <sup>2</sup> 0.012 to 5,235,987.968 rad/s <sup>2</sup> Linear: 16,000.000 to 3,579,139,408,000.000 counts/s <sup>2</sup> 0.031*MOTOR.PITCH (→ p. 1001) to 833,333.333*MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 30.994*MOTOR.PITCH (→ p. 1001) to 833,333,333.333*MOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 0.155 to 4,166,666.667 (Custom Units (→ p. 100))/s <sup>2</sup>
Default Value	Rotary: 166.669 rps/s 10,000.000 rpm/s 60,000.000 deg/s <sup>2</sup> 833.333 (Custom Units (→ p. 100))/s <sup>2</sup> 1,047.2 rad/s <sup>2</sup> Linear: 715,840,000.000 counts/s <sup>2</sup> 166.714*MOTOR.PITCHMOTOR.PITCH (→ p. 1001)mm/s <sup>2</sup> 166,714.191MOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 833.571 (Custom Units (→ p. 100))/s <sup>2</sup>
Data Type	Float
See Also	UNIT.ACCROTARY (→ p. 1220), UNIT.ACCLINEAR (→ p. 1218)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes

Variant	Supported
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3524h/0 609Ah/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2195	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	390	Yes	64 bit	No	M_01-03-00-000

## Description

This parameter sets the deceleration of the motor during the homing procedure.

## Related Topics:

Homing (→ p. 151)

## 25.23.4 HOME.DIR

General Information	
Type	NV Parameter
Description	Sets homing direction; active in opmode 2 (position) only.
Units	N/A
Range	0 to 1
Default Value	1
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	6098h	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2197	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	394	No	16 bit	No	M_01-03-00-000

### Description

This parameter determines the direction in which the motor should start to move during a homing procedure.

0 = Movement in negative direction.

1 = Movement in positive direction.

#### NOTE

HOME.DIR does not apply to homing mode 14.

## **Related Topics**

Homing (→ p. 151)

## 25.23.5 HOME.DIST

General Information	
Type	R/W Parameter
Description	Sets homing distance; active in opmode 2 (position) only.
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225) UNIT.ACCLINEAR (→ p. 1218) Rotary: counts, rad, deg, Custom Units (→ p. 100), 16-bit counts Linear: counts, mm, µm, Custom Units (→ p. 100), 16-bit counts
Range	N/A
Default Value	0
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2198	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	396	Yes	64 bit	Yes	M_01-03-00-000

### Description

This parameter takes effect only after the homing procedure is complete (see the HOME.MODE (→ p. 863) description). HOME.DIST specifies an additional movement after the homing procedure is complete. The drive uses the homing acceleration, deceleration, and velocity parameters for this move-

ment. This parameter can be used to let the motor move away from the home position by the value of HOME.DIST.

A value not equal to 0 triggers an additional movement of the selected homing distance after the general homing procedure. A value of 0 for HOME.DIST causes no additional movement.

**NOTE**

HOME.DIST does not apply to homing mode 14.

## Related Topics

Homing (→ p. 151)

## 25.23.6 HOME.FEEDRATE

General Information	
Type	R/W Parameter
Description	Sets homing velocity factor; active in opmode 2 (position) only.
Units	%
Range	1% to 100%
Default Value	50%
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	6099h/2	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2200	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	400	No	16 bit	No	M_01-03-00-000

### Description

This parameter is used in order to reduce the velocity during the index search (index = zero-pulse of a feedback device). This parameter determines the percentage of the homing velocity (HOME.V (→ p. 872)) that should be used during the index-search.

### Related Topics

Homing (→ p. 151)

## 25.23.7 HOME.IPEAK

General Information	
Type	R/W Parameter
Description	Sets the current limit during homing procedure to a mechanical stop; active in opmode 2 (position) only.
Units	A
Range	± Drive peak current A
Default Value	[(1/120) * DRV.IPEAK (→ p. 665)] A
Data Type	Float
See Also	HOME.MODE (→ p. 863)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35E2h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2201	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	402	Yes	64 bit	Yes	M_01-03-00-000

### Description

This parameter sets the intermediate current limit during a homing procedure to a mechanical stop (HOME.MODE (→ p. 863) 8 and 9). The current-controller limit (IL.LIMITP (→ p. 921) and IL.LIMITN (→ p. 919)) is set to ±HOME.IPEAK while the homing procedures are active.

HOME.IPEAK is active as soon as the homing procedure starts and remains active until the home position is found. Previous current limit settings are re-activated before the motor covers the homing distance (HOME.DIST (→ p. 855) ≠ 0).

## **Related Topics**

Homing (→ p. 151) Homing mode 8: Move Until Position Error Exceeded (→ p. 158)

## 25.23.8 HOME.MAXDIST

General Information	
Type	R/W Parameter
Description	Sets the maximum distance the motor is allowed to move during the homing routine.
Units	Depends on UNIT.PLINEAR (→ p. 1225) or UNIT.PROTARY (→ p. 1229): Linear: counts, mm, µm, custom units, 16-bit counts Rotary: counts, rad, deg, custom units, 16-bit counts
Range	Linear: 0.000 9,007,199,254,740,992.000 Counts 0.000 to 67,108,864.000 mm 0.000 to 67,108,864,000.000 µm 0.000 to 10,485,760.000 Custom units 0.000 to 137,438,953,472.000 16-bit counts Rotary: 0.000 to 9,007,199,254,740,992.000 counts 0.000 to 13,176,794.633 rad 0.000 to 754,974,720.000 deg 0.000 to 2,097,152.000 custom units 0.000 to 137,438,953,472.000 16-bit counts
Default Value	0
Data Type	Float
Start Version	M_01-06-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2831	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1662	Yes	64 bit	Yes	M_01-06-00-000

## Description

HOME.MAXDIST sets the maximum distance the motor is allowed to move during the homing routine. If the motor moves this distance before reaching the homing trigger, then the drive generates warning 174 and the motor decelerates to a stop at a rate of HOME.DEC (→ p. 851).

## Related Topics

Homing (→ p. 151)

## 25.23.9 HOME.MODE

General Information	
Type	R/W Parameter
Description	Selects the homing mode; active in opmode 2 (position) only.
Units	N/A
Range	0 to 16
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	6098h	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2203	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	406	No	16 bit	No	M_01-03-00-000

### Description

HOME.MODE specifies the homing procedure of the drive. The homing modes available in the drive are summarized in the following table; see Homing (→ p. 151) for a detailed discussion and examples for each mode:

Mode	Description
0	Home using current position
1	Find limit input
2	Find input limit then find zero angle
3	Find input limit then find index
4	Find home input, including hardware limit switches
5	Find home input then find zero angle, including hardware limit switches
6	Find home input then find index, including hardware limit switches.
7	Find zero angle
8	Move until position error exceeded
9	Move until position error exceeded, then find zero angle
10	Move until position error exceeded, then find index
11	Find index signal, without any precondition
12	Homing to a home-switch, including mechanical stop detection
13	Home using the feedback position
14	Homing to a home-switch for rotary applications
15	Find next feedback zero position
16	Find home input with dual edges

## Related Topics

Homing (→ p. 151)

## 25.23.10 HOME.MOVE

General Information	
Type	Command
Description	Starts a homing procedure; active in opmode 2 (position) only.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2204	Command	No
sercos <sup>®</sup> III			

### Description

The HOME.MOVE command starts a homing procedure. The DRV.OPMODE (→ p. 682) must be set to 2 (closed position loop) and DRV.CMDSOURCE must be set to 0 (TCP/IP command).

### Related Topics

Homing (→ p. 151)

## 25.23.11 HOME.P

General Information	
Type	R/W Parameter
Description	Sets home position; active in opmode 2 (position) only.
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225) Rotary: counts, rad, deg, Custom Units (→ p. 100), 16-bit counts Linear: counts, mm, µm, Custom Units (→ p. 100), 16-bit counts
Range	N/A
Default Value	0
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	607Ch/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2205	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	410	Yes	64 bit	Yes	M_01-03-00-000

### Description

This parameter sets the home position. The command and actual position of the drive will be set to this value as soon as a homing event occurs. The homing events differ in each homing mode.

## Related Topics

Homing (→ p. 151)

## 25.23.12 HOME.PERRTHRESH

General Information	
Type	R/W Parameter
Description	Sets the position lag threshold; active in opmode 2 (position) only.
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225) Rotary: counts, rad, deg, Custom Units (→ p. 100), 16-bit counts Linear: counts, mm, µm, Custom Units (→ p. 100), 16-bit counts
Range	N/A
Default Value	N/A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3482h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2207	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	414	Yes	64 bit	Yes	M_01-03-00-000

### Description

This parameter is used for the homing modes against a mechanical stop (HOME.MODE (→ p. 863) = 8 and 9). The absolute value of the following error (PL.ERR (→ p. 1086)) is compared with HOME.PERRTHRESH in order to detect a mechanical stop.

## **Related Topics**

Homing mode 8: Move Until Position Error Exceeded (→ p. 158)

## 25.23.13 HOME.SET

General Information	
Type	Command
Description	Immediately sets the home position; active in opmode 2 (position) only.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35F0h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2209	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	418	No	Command	No	M_01-03-00-000

### Description

The HOME.SET command immediately homes the drive. The drive can be homed in an enabled or disabled state. Motion in the current mode of operation (DRV.OPMODE (→ p. 682)=0) or velocity mode of operation (DRV.OPMODE (→ p. 682)=1) is not affected by the HOME.SET command. Motion in the position mode of operation (DRV.OPMODE (→ p. 682)=2) is immediately aborted when the HOME.SET command is issued.

## **Related Topics**

Homing (→ p. 151)

## 25.23.14 HOME.V

General Information	
Type	R/W Parameter
Description	Sets homing velocity; active in opmode 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, Custom Units (→ p. 100)/s, rad/s Linear: counts/s, mm/s, µm/s, Custom Units (→ p. 100)/s
Range	Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 deg/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s 0.000 to 1,570.796 rad/s Linear: 0.000 to 1,073,741,824,000.000 counts/s 0.000 to 250.000*MOTOR.PITCH (→ p. 1001) mm/s 0.000 to 250,000.000*MOTOR.PITCH (→ p. 1001) µm/sec 0.000 to 1,250.000 Custom Units (→ p. 100)/s
Default Value	Rotary: 60 rpm 1 rps 359.999 deg/s 5 (Custom Units (→ p. 100))/s 6.283 rad/s Linear: 0.001 counts/s 1*MOTOR.PITCH (→ p. 1001) mm/s 999.998*MOTOR.PITCH (→ p. 1001) µm/sec 5.000 Custom Units (→ p. 100)/s
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes

Variant	Supported
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	6099h/1	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	HOM.V_32	2210	DWord	No
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	420	Yes	Low 32 bit word	No	M_01-03-00-000

## Description

This parameter sets the velocity of the motor during the homing procedure.

## Related Topics

Homing (→ p. 151)

## 25.24 HWLS Parameters

This section describes the HWLS parameters.

---

<b>25.24.1 HWLS.NEGSTATE</b> .....	<b>875</b>
<b>25.24.2 HWLS.POSSTATE</b> .....	<b>876</b>

## 25.24.1 HWLS.NEGSTATE

General Information	
Type	R/O Parameter
Description	Reads the status of the negative hardware limit switch.
Units	0 to 1
Range	N/A
Default Value	Integer
Data Type	HWLS.POSSTATE (→ p. 876)
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2211	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	422	No	8 bit	No	M_01-03-00-000

### Description

HWLS.NEGSTATE reads the status of the negative HW limit switch as follows:

0 = Low

1 = High

### Related Topics

## 25.24.2 HWLS.POSSTATE

General Information	
Type	R/O Parameter
Description	Reads the status of the positive hardware limit switch.
Units	N/A
Range	0 to 1
Default Value	N/A
Data Type	Integer
See Also	HWLS.NEGSTATE (→ p. 875)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2212	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	424	No	8 bit	No	M_01-03-00-000

### Description

HWLS.POSSTATE reads the status of the positive hardware limit switch as follows:

0 = Low

1 = High

### Related Topics

## 25.25 IL Parameters

This section describes the IL parameters.

---

25.25.1 IL.BUSFF .....	879
25.25.2 IL.CMD .....	880
25.25.3 IL.CMDACC .....	881
25.25.4 IL.CMDU .....	882
25.25.5 IL.DCMD .....	884
25.25.6 IL.DFB .....	885
25.25.7 IL.DIFOLD .....	886
25.25.8 IL.FB .....	888
25.25.9 IL.FBSOURCE .....	890
25.25.10 IL.FF .....	892
25.25.11 IL.FOLDFTHRESH .....	894
25.25.12 IL.FOLDFTHRESHU .....	896
25.25.13 IL.FOLDWTHRESH .....	898
25.25.14 IL.FRCTION .....	900
25.25.15 IL.IFOLD .....	902
25.25.16 IL.IUFB .....	904
25.25.17 IL.IVFB .....	905
25.25.18 IL.KACFF .....	906
25.25.19 IL.KBUSFF .....	908
25.25.20 IL.KP .....	909
25.25.21 IL.KPDRATIO .....	910
25.25.22 IL.KPLOOKUPINDEX .....	912
25.25.23 IL.KPLOOKUPVALUE .....	914
25.25.24 IL.KPLOOKUPVALUES .....	916
25.25.25 IL.KVFF .....	918
25.25.26 IL.LIMITN .....	919
25.25.27 IL.LIMITP .....	921
25.25.28 IL.MFOLDD .....	923
25.25.29 IL.MFOLDR .....	924
25.25.30 IL.MFOLDT .....	925
25.25.31 IL.MI2T .....	926

---

<b>25.25.32 IL.MI2TWTRESH</b> .....	<b>927</b>
<b>25.25.33 IL.MIFOLD</b> .....	<b>928</b>
<b>25.25.34 IL.MIMODE</b> .....	<b>930</b>
<b>25.25.35 IL.OFFSET</b> .....	<b>931</b>
<b>25.25.36 IL.VCMD</b> .....	<b>932</b>
<b>25.25.37 IL.VUFB</b> .....	<b>933</b>
<b>25.25.38 IL.VVFB</b> .....	<b>934</b>

## 25.25.1 IL.BUSFF

General Information	
Type	R/O Parameter
Description	Displays the current feedforward value injected by the fieldbus.
Units	Arms
Range	N/A
Default Value	N/A
Data Type	Float
See Also	IL.KBUSFF (→ p. 908)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2213	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	426	No	32 bit	Yes	M_01-03-00-000

### Description

This parameter displays the current feedforward value injected by the fieldbus.

### Related Topics

Current Loop (→ p. 140)

## 25.25.2 IL.CMD

General Information	
Type	R/O Parameter
Description	Reads the value of the q-component current command.
Units	Arms
Range	± Drive peak current (DRV.IPEAK)
Default Value	N/A
Data Type	Float
See Also	DRV.IPEAK (→ p. 665)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2214	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	428	No	32 bit	Yes	M_01-03-00-000

### Description

IL.CMD displays the q-component current command value of the current loop after any limitation (such as a parameter setting or  $I^2t$  calculation).

IL.CMD is limited also by motor peak current, IL.LIMITN (→ p. 919) and IL.LIMITP (→ p. 921).

### Related Topics

14.3 Current Loop

## 25.25.3 IL.CMDACC

General Information	
Type	R/O Parameter
Description	Returns the commanded acceleration from the trajectory generator.
Units	Depends on UNIT.ACCLINEAR (→ p. 1218) or UNIT.ACCROTARY (→ p. 1220).
Range	+/- 64bit
Default Value	0
Data Type	Float
Start Version	M_01-08-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2880	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1760	Yes	64-bit	Yes

### Description

Use IL.CMDACC to monitor the commanded acceleration for a given motion. This keyword is useful for tuning acceleration feedforward (IL.KACFF).

### Related Topics

IL.KACFF (→ p. 906) | Tuning Guide (→ p. 220)

## 25.25.4 IL.CMDU

General Information	
Type	R/W Parameter
Description	Sets the user current command.
Units	Arms
Range	Minimum range value = maximum of IL.LIMITN and -MOTOR.IPEAK Maximum range value = minimum of IL.LIMITP and MOTOR.IPEAK
Default Value	0 Arms
Data Type	Float
See Also	DRV.IPEAK (→ p. 665), DRV.OPMODE (→ p. 682), DRV.CMDSOURCE (→ p. 604)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2215	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	430	No	32 bit	Yes	M_01-03-00-000

### Description

This parameter sets the user current command value.

The current command value, which is provided to the current loop (IL.CMD), can be limited further using a parameter setting or  $I^2t$  calculation. IL.CMDU is limited also by motor peak current, IL.LIMITN (→ p. 919) and IL.LIMITP (→ p. 921).

For IPM motors (MOTOR.TYPE = 6), IL.CMDU is decomposed into d-component and q-component current values, as both are used for closed loop current control. The d-component value is used to set IL.DCMD (→ p. 884), and the q-component value is used to set IL.CMD (→ p. 880).

## **Related Topics**

Current Loop (→ p. 140)

## 25.25.5 IL.DCMD

General Information	
Type	R/O Parameter
Description	Reads the value of the d-component current controller inside the FPGA.
Units	Arms
Range	± Drive peak current (DRV.IPEAK)
Default Value	N/A
Data Type	Float
See Also	DRV.IPEAK (→ p. 665)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This command displays the d-component current command value of the current loop. This parameter is commonly used with IPM motors (MOTOR.TYPE = 6), where the d-component current is controlled for closed loop current regulation.

## 25.25.6 IL.DFB

General Information	
Type	R/O Parameter
Description	Reads the actual value of the d-component current.
Units	Arms
Range	± Drive peak current (DRV.IPEAK)
Default Value	N/A
Data Type	Float
See Also	N/A
Start Version	M_01-11-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter displays the measured, de-rotated d-component current value of the motor. This parameter is commonly used with IPM motors (MOTOR.TYPE = 6), where the d-component current is controlled for closed loop current regulation.

## 25.25.7 IL.DIFOLD

General Information	
Type	R/O Parameter
Description	Reads the drive foldback current limit.
Units	Arms
Range	0 to 2,147,483.647 Arms
Default Value	N/A
Data Type	Float
See Also	Foldback
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3559h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2833	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1666	No	32-bits	No	M_01-06-03-000

### Description

IL.DIFOLD is the output of the drive foldback algorithm. It is an artificial current, which can be higher or lower than the drive peak current (DRV.IPEAK). When IL.DIFOLD is lower than the existing current limit (such as IL.LIMITP (→ p. 921)), it becomes the active current limit.

IL.DIFOLD decreases when the actual current is higher than drive continuous current and increases (up to a certain level) when the actual current is lower than drive continuous current.

## **Related Topics**

14.3 Current Loop

## 25.25.8 IL.FB

General Information	
Type	R/O Parameter
Description	Reads the actual value of the q-component current.
Units	Arms
Range	± Drive peak current (DRV.IPEAK)
Default Value	N/A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3558h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2216	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	432	No	32 bit	Yes	M_01-03-00-000

### Description

This parameter reads the measured, de-rotated actual current value of the motor.

Note: Internally the resolution of the current scale is 20130 increments. For an AKD with a peak current of 9 amps, the current resolution applied is  $9/20130 = .447$  mA. For a 48 amp peak current drive,

the resolution is  $48/20130 = 2.38 \text{ mA}$ . The current scaling is hard coded and cannot be changed by decreasing the peak current settings in the drive.

## **Related Topics**

14.3 Current Loop

## 25.25.9 IL.FBSOURCE

General Information	
Type	R/W
Description	Sets the feedback source for the current loop. Only applies when MOTOR.TYPE = 4.
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Integer
Start Version	M_01-08-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2865	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1730	No	8-bit	No

### Description

This parameter selects the feedback source that current loop uses for commutation angle calculation. It applies only when MOTOR.TYPE = 4.

0 = Primary feedback


1 = Secondary feedback

2 = Tertiary feedback

When IL.FBSOURCE is changed, MOTOR.POLES and MOTOR.PHASE are updated.

IL.FBSOURCE	MOTOR.PHASE is set to:	MOTOR.POLES is set to:
0	FB1.MOTORPHASE	FB1.MOTORPOLES
1	FB2.MOTORPHASE	FB2.MOTORPOLES
2	FB3.MOTORPHASE	FB3.MOTORPOLES

For induction motor closed loop control the commutation angle is set as shown in the following figure.

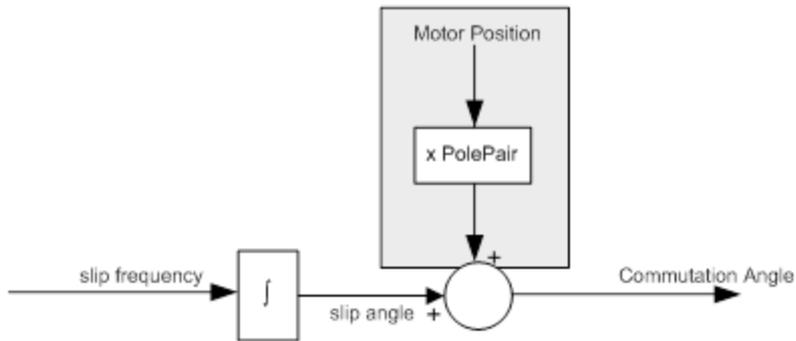

## Related Topics

MOTOR.TYPE (→ p. 1023)

FB1.MOTORPOLES (→ p. 743) | FB2.MOTORPOLES (→ p. 778) | FB3.MOTORPOLES (→ p. 791)

FB1.MOTORPHASE (→ p. 742) | FB2.MOTORPHASE (→ p. 777) | FB3.MOTORPHASE (→ p. 790)

## 25.25.10 IL.FF

General Information	
Type	R/O Parameter
Description	Reads the current loop overall feedforward value
Units	Arms
Range	N/A
Default Value	N/A
Data Type	Float
See Also	IL.KBUSFF (→ p. 908), IL.KVFF (→ p. 918), IL.OFFSET (→ p. 931), IL.FRCTION (→ p. 900), IL.KACCFF (→ p. 906)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2217	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	434	No	32 bit	No	M_01-03-00-000

### Description

IL.FF reads the present current loop overall feed-forward value. It is the sum of the following feed-forward paths:

- Acceleration feed-forward (determined by IL.KACCFF (→ p. 906))
- Velocity feed-forward (determined by VL.KVFF (→ p. 1286))

- Friction feed-forward (determined by IL.FRCTION (→ p. 900))
- Gravity offset feed-forward (determined by IL.OFFSET (→ p. 931))

IL.FF is calculated using the following variables' values at the time it is called:

$IL.FF = IL.KACFF * \text{Acceleration Command} + VL.KVFF * \text{Velocity Command} + IL.FRCTION$  (if motion is currently commanded) + IL.OFFSET (always)

## Related Topics

Current Loop (→ p. 140)

## 25.25.11 IL.FOLDFTHRESH

General Information	
Type	R/O Parameter
Description	Reads the foldback fault level.
Units	Arms
Range	0 to 500 Arms
Default Value	Drive peak current (DRV.IPEAK)
Data Type	Float
See Also	Foldback
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3420h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2218	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	436	No	32 bit	No	M_01-03-00-000

### Description

IL.FOLDFTHRESH is the fault level of the current foldback algorithm. If IL.IFOLD (→ p. 902) drops below the value for IL.FOLDFTHRESH, then a fault is generated and the drive is disabled.

To avoid reaching the current foldback fault level, set IL.FOLDFTHRESHU well below the continuous current value for both the drive and the motor or set the IL.FOLDFTHRESHU value to zero.

## Related Topics

14.3 Current Loop

## 25.25.12 IL.FOLDFTHRESHU

General Information	
Type	NV Parameter
Description	Sets the user value for the foldback fault level.
Units	Arms
Range	0 to 500 Arms
Default Value	Drive peak current (DRV.IPEAK)
Data Type	Float
See Also	IL.FOLDFTHRESH (→ p. 894), Foldback (→ p. 88)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3421h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2219	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	438	No	32 bit	Yes	M_01-03-00-000

### Description

IL.FOLDFTHRESHU is the fault level of the current foldback algorithm. The value of IL.FOLDFTHRESH is the minimum of DRV.IPEAK (→ p. 665), MOTOR.IPEAK (→ p. 986), and IL.FOLDFTHRESHU.

### Related Topics

### 14.3 Current Loop

## 25.25.13 IL.FOLDWTHRESH

General Information	
Type	NV Parameter
Description	Sets the foldback warning level.
Units	Arms
Range	0 to 500 Arms
Default Value	0 A
Data Type	Float
See Also	Foldback
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	355Ah/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2220	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	440	No	32 bit	Yes	M_01-03-00-000

### Description

IL.FOLDWTHRESH is the warning level of the current foldback algorithm. When IL.IFOLD (→ p. 902) drops **below** IL.FOLDWTHRESH a warning is generated.

To ensure that the current foldback warning level is never reached, IL.FOLDWTHRESH should be set well below the continuous current value for both the drive and the motor. You can also set the IL.FOLDFTHRESH (→ p. 894) value to zero.

## **Related Topics**

14.3 Current Loop

## 25.25.14 IL.FRICTION

General Information	
Type	R/W Parameter
Description	Sets friction compensation value.
Units	A
Range	0 to the minimum of user positive current limit (IL.LIMITP) and motor peak current (MOTOR.IPEAK).IL.LIMITP (→ p. 921)
Default Value	0
Data Type	Float
See Also	IL.FF
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3422h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2221	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	442	No	32 bit	No	M_01-03-00-000

### Description

Position command derivative sign is multiplied by this value to be injected to the current command.

#### NOTE

IL.FRICTION is active in Position and Velocity modes (DRV.OPMODE = 1, 2),

**NOTE**

but not active in Torque mode ( $DRV.OPMODE = 0$ ).

## Related Topics

14.3 Current Loop

## 25.25.15 IL.IFOLD

General Information	
Type	R/O Parameter
Description	Reads the overall foldback current limit.
Units	A
Range	0 to 2,147,483.647 A
Default Value	N/A
Data Type	Float
See Also	Foldback
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3425h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2222	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	444	No	32 bit	No	M_01-03-00-000

### Description

Two current foldback algorithms run in parallel in the drive: the drive foldback algorithm and the motor foldback algorithm. Each algorithm uses different sets of parameters.

Each algorithm has its own foldback current limit, IL.DIFOLD and IL.MIFOLD. The overall foldback current limit is the minimum of the two at any given moment.

$$IL.IFOLD = \min (IL.DIFOLD, IL.MIFOLD) .$$

IL.DIFOLD is an artificial current, which can be higher or lower than the drive or motor peak current. When IL.IFOLD becomes lower than the existing current limit (such as IL.LIMITP (→ p. 921)), it becomes the active current limit.

## Related Topics

14.3 Current Loop

## 25.25.16 IL.IUFB

General Information	
Type	R/O Parameter
Description	Reads the sigma-delta measured current in the u-winding of the motor.
Units	A
Range	± Drive peak current (DRV.IPEAK)
Default Value	N/A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2223	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	446	No	32 bit	Yes	M_01-03-00-000

### Description

This parameter displays the measured current in the u-winding of the motor.

### Related Topics

Current Loop (→ p. 140)

## 25.25.17 IL.IVFB

General Information	
Type	R/O Parameter
Description	Sets the sigma-delta measured current in the u-winding of the motor.
Units	A
Range	± Drive peak current (DRV.IPEAK)
Default Value	0 A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2224	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	448	No	32 bit	Yes	M_01-03-00-000

### Description

IL.IVFB is an offset value that is added to the measured current in the u-winding of the motor. This value is used for compensating for an error in the current measurement. The drive measures 256 times the current in the u-winding when powering-up the drive. Afterwards, the drive calculates the average value of the measured current and uses this value for the offset value.

### Related Topics

Current Loop (→ p. 140)

## 25.25.18 IL.KACCFF

General Information	
Type	R/W Parameter
Description	Sets current loop acceleration feedforward gain value
Units	mArms/(rad/s <sup>2</sup> )
Range	0 to 39113.288 mArms/(rad/s <sup>2</sup> )
Default Value	0 mArms/(rad/s <sup>2</sup> )
Data Type	Float
See Also	IL.FF (→ p. 892)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3426h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2225	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	450	No	32 bit	Yes	M_01-03-00-000

### Description

This value sets the gain for the acceleration feedforward (a scaled second derivative of the position command is added to the current command value).

This parameter is valid only in the position mode (DRV.OPMODE = 2).

### Related Topics

### 14.3 Current Loop

## 25.25.19 IL.KBUSFF

General Information	
Type	NV Parameter
Description	Current loops fieldbus injected feed-forward gain
Units	NA
Range	0 to 2
Default Value	0
Data Type	Float
See Also	IL.FF (→ p. 892), IL.BUSFF (→ p. 879)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2226	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	452	No	32 bit	No	M_01-03-00-000

### Description

This parameter scales the feedforward term added by the fieldbus to the current command. The nominal feedforward value can be multiplied by this gain value.

This parameter is only used in the position mode (DRV.OPMODE = 2).

### Related Topics

Current Loop (→ p. 140)

## 25.25.20 IL.KP

General Information	
Type	NV Parameter
Description	Sets the proportional gain of the q-component of the PI regulator.
Units	V/A
Range	0 to 2,000 V/A
Default Value	Read from the motor or, if no memory, 50.009 V/A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3598h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2227	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	454	No	16 bit	No	M_01-03-00-000

### Description

IL.KP is used to modify the proportional gain of the PI-loop that controls the q-component of the current.

### Related Topics

14.3 Current Loop

## 25.25.21 IL.KPDRATIO

General Information	
Type	NV Parameter
Description	Sets the proportional gain of the d-component current PI-regulator as a percentage of IL.KP
Units	N/A
Range	0 to 100
Default Value	1
Data Type	Float
See Also	IL.KP (→ p. 909)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3596h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2228	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	456	No	32 bit	No	M_01-03-00-000

### Description

This parameter modifies the proportional gain of the PI-loop, which controls the d-component of the current.

## **Related Topics**

14.3 Current Loop

## 25.25.22 IL.KPLOOKUPINDEX

General Information	
Type	R/W Parameter
Description	Sets the index into the Current Loop Gain Scheduling Table.
Units	N/A
Range	0 to 255
Default Value	0
Data Type	Integer
See Also	IL.KPLOOKUPVALUE (→ p. 914)IL.KPLOOKUPVALUES (→ p. 916)IL.KP (→ p. 909)
Start Version	M_01-04-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2613	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1226	No	16 bit	No

### Description

This parameter sets the index into the Current Loop Gain Scheduling Table. The table is 256 records long, spanning 0 A to 1.62 \* DRV.IPEAK.

To determine the level of current that corresponds to a table index, use the following equation:

$$IL.CMD = (\text{Table Index} / 157) * DRV.IPEAK$$

### Related Topics

Current Loop (→ p. 140)

## 25.25.23 IL.KPLOOKUPVALUE

General Information	
Type	R/W if motor memory not supported. R/O if motor memory supported.
Description	Sets the value of the current loop gain scheduling index.
Units	%
Range	0 to 100.000%
Default Value	0
Data Type	Float
See Also	IL.KPLOOKUPINDEX (→ p. 912), IL.KPLOOKUPVALUES (→ p. 916), IL.KP (→ p. 909)
Start Version	M_01-04-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2614	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1228	No	32 bit	No

### Description

This parameter sets the value at the current index into the Current Loop Gain Scheduling Table. The table is 256 records long, spanning 0 A to 1.62 \* DRV.IPEAK. The value can range from 0% to 100% and determines what percentage of IL.KP will be applied to the current loop.

If the feedback device supports motor memory (FB1.MEMVER >= 0.03 and MOTOR.AUTOSSET = 1) this parameter is read only. Each index value is automatically calculated and set. This calculation depends on the value of MOTOR.LISAT (→ p. 993).

If the feedback device does not support motor memory, this parameter is read/write. Each index value must be entered manually. Use the following equation to determine what level of current corresponds to a table index:

$$\text{IL.CMD} = (\text{Table Index}/157) * \text{DRV.IPEAK}$$

## Example

Assume:

DRV.IPEAK = 9 A

IL.KPLOOKUPINDEX = 100

IL.KPLOOKUPVALUE = 50

IL.KP = 240

When IL.CMD =  $100/157 * 9 = 5.73$  A, IL.KP will not be 240, but will be  $50\% * 240 = 120$ .

## Related Topics

Current Loop (→ p. 140)

## 25.25.24 IL.KPLOOKUPVALUES

General Information	
Type	R/W Parameter
Description	Gets the Current Loop Gain Scheduling Table.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Table
See Also	IL.KPLOOKUPINDEX (→ p. 912), IL.KPLOOKUPVALUE (→ p. 914), IL.KP (→ p. 909)
Start Version	M_01-04-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

Retrieves the Current Loop Gain Scheduling Table in a comma delimited table.

This table is 256 records long, and the table will return values in the following format:

```
-->IL.KPLOOKUPVALUES
```

```
Index Value
```

```
0, 100.000
```

```
1, 100.000
```

```
2, 100.000
```

```
3, 100.000
```

```
4, 100.000
```

```
5, 100.000
```

```
6, 100.000
```

```
7, 100.000
```

8, 100.000

9, 100.000

10, 100.000

## **Related Topics**

Current Loop (→ p. 140)

## 25.25.25 IL.KVFF

General Information	
Type	R/W
Description	Current loop velocity feed-forward gain.
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Float
See Also	IL.FF (→ p. 892)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2229	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	458	No	32 bit	Yes	M_01-03-00-000

### Description

This parameter sets the gain for the velocity loop feedforward. The nominal feedforward value can be multiplied by this gain value.

This parameter is only used in position mode (DRV.OPMODE (→ p. 682) = 2).

### Related Topics

Current Loop (→ p. 140)

## 25.25.26 IL.LIMITN

General Information	
Type	NV Parameter
Description	Sets the negative user (application-specific) current limit.
Units	A
Range	Negative drive peak current (DRV.IPEAK) to 0 A
Default Value	Negative drive peak current (DRV.IPEAK)
Data Type	Float
See Also	IL.LIMITP (→ p. 921)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	356Fh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2230	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	460	No	32 bit	Yes	M_01-03-00-000

### Description

This parameter sets the negative user limit clamp value of the torque-producing q-component current command (IL.CMD (→ p. 880)). The current command is additionally limited by the motor peak current setting (MOTOR.IPEAK (→ p. 986)) and by the present value of the foldback I<sup>2t</sup> peak motor current protection.

**NOTE**

This current limit is overwritten by MT.FIXEDSTOPCURRENT while a fixed stop motion task is running in a negative direction. Once the motion task is complete, the limit is restored to the previous IL.LIMITN value.

## Related Topics

14.3 Current Loop

## 25.25.27 IL.LIMITP

General Information	
Type	NV Parameter
Description	Sets the positive user (application-specific) current limit.
Units	A
Range	0 A to drive peak current (DRV.IPEAK)
Default Value	Drive peak current (DRV.IPEAK)
Data Type	Float
See Also	IL.LIMITN (→ p. 919)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	356Eh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2231	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	462	No	32 bit	Yes	M_01-03-00-000

### Description

This parameter sets the positive user limit clamp value of the torque-producing q-component current command (IL.CMD (→ p. 880)). The current command is additionally limited by the motor peak current setting (MOTOR.IPEAK (→ p. 986)) and by the present value of the foldback I<sup>2t</sup> peak motor current protection.

**NOTE**

This current limit is overwritten by MT.FIXEDSTOPCURRENT while a fixed stop motion task is running in a position direction. Once the motion task is complete, the limit is restored to the previous IL.LIMITP value.

## Related Topics

14.3 Current Loop

## 25.25.28 IL.MFOLDD

General Information	
Type	R/O Parameter
Description	Sets the motor foldback maximum time at motor peak current.
Units	s
Range	0.1 to 2400 s
Default Value	10 s
Data Type	Float
See Also	Foldback
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2232	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	464	No	32 bit	No	M_01-03-00-000

### Description

IL.MFOLDD sets the maximum time allowed for the motor to remain at peak current before starting to fold towards the motor continuous current. When at motor peak current, IL.MFOLDD is the amount of time before the foldback algorithm starts to reduce the current.

### Related Topics

Current Loop (→ p. 140)

## 25.25.29 IL.MFOLDR

General Information	
Type	R/O Parameter
Description	Sets the motor foldback recovery time.
Units	s
Range	0.1 to 65,535 s
Default Value	Calculated from other foldback parameters.
Data Type	Float
See Also	Foldback
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2233	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	466	No	32 bit	No	M_01-03-00-000

### Description

IL.MFOLDR sets the recovery time for the motor foldback algorithm. If 0 current is applied for at least the recovery time duration, it is possible to apply motor peak current for the duration of IL.MFOLDD time.

The IL.MFOLDR value is automatically calculated from other foldback parameters.

### Related Topics

Current Loop (→ p. 140)

## 25.25.30 IL.MFOLDT

General Information	
Type	R/O Parameter
Description	Sets the motor foldback time constant of the exponential current drop (foldback).
Units	s
Range	0.1 to 2,400 s
Default Value	10 s
Data Type	Float
See Also	Foldback
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2234	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	468	No	32 bit	No	M_01-03-00-000

### Description

IL.MFOLDT sets the time constant of the exponential drop (foldback) of the current towards motor continuous current.

### Related Topics

Current Loop (→ p. 140)

## 25.25.31 IL.MI2T

General Information	
Type	R/O parameter
Description	Motor I2t load.
Units	%
Range	0 to 100%
Default Value	N/A
Data Type	Float
See Also	IL.MIMODE, IL.MI2TWTRESH (→ p. 927)
Start Version	M_01-04-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2592	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1184	No	16 bit	No

### Description

This parameter returns the motor I2t load in percent. The supplied current will be limited by IL.MIFOLD to MOTOR.ICONT case that the load reaches a value of 100%. The current limit IL.MIFOLD will be restored to MOTOR.IPEAK in case that the load falls under 95%.

## 25.25.32 IL.MI2TWTRESH

General Information	
Type	NV Parameter
Description	Motor I2t load warning threshold.
Units	%
Range	0 to 100%
Default Value	N/A
Data Type	Integer
See Also	IL.MIMODE, IL.MI2T (→ p. 926)
Start Version	M_01-04-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2834	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1668	No	8-bits	No	M_01-06-03-000

### Description

This parameter defines a warning threshold for the IL.MI2T value. A warning n309 will be generated as soon as the IL.MI2T exceeds the IL.MI2TWTRESH value. The warning n309 will be cleared as soon as IL.MI2T falls below the threshold.

### Related Topics

Foldback (→ p. 88)

## 25.25.33 IL.MIFOLD

General Information	
Type	R/O Parameter
Description	Sets the motor foldback current limit.
Units	A
Range	0 to 2147483.647 A
Default Value	N/A
Data Type	Float
See Also	Foldback
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35A4h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2235	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	470	No	32 bit	No	M_01-03-00-000

### Description

IL.MIFOLD sets the output of the motor foldback algorithm. It is an artificial current, which can be higher or lower than the motor peak current. When IL.MIFOLD becomes lower than the existing current limit (IL.LIMITP (→ p. 921)) it becomes the active current limit.

IL.MIFOLD decreases when the actual current is higher than motor continuous current and increases (up to a certain level) when the actual current is lower than the motor continuous current.

## **Related Topics**

14.3 Current Loop

## 25.25.34 IL.MIMODE

General Information	
Type	NV parameter
Description	Motor protection mode.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
See Also	IL.MI2T (→ p. 926), IL.MI2TWTHRESH (→ p. 927)
Start Version	M_01-04-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1670	No	8-bits	No	M_01-06-03-000

### Description

This parameter determines the method of the motor protection.

0 – The motor foldback mechanism is responsible for protecting the motor from overload.

1 – The motor I2t mechanism is responsible for protecting the motor from overload.

### Related Topics

Foldback (→ p. 88)

## 25.25.35 IL.OFFSET

General Information	
Type	RW Parameter
Description	A constant current command added to compensate for gravity.
Units	A
Range	[IL.LIMITN (→ p. 919) to IL.LIMITP (→ p. 921)]
Default Value	0 A
Data Type	Float
See Also	IL.FF
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3423h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2236	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	472	No	32 bit	Yes	M_01-03-00-000

### Description

This value is added to the overall current loop feedforward value.

### Related Topics

14.3 Current Loop

## 25.25.36 IL.VCMD

General Information	
Type	R/O Parameter
Description	Reads the output of the q-component PI regulator.
Units	Vrms
Range	0 Vrms to bus voltage
Default Value	N/A
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2237	Word	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	474	No	16 bit	Yes	M_01-03-00-000

### Description

Reads the output of the current loop that controls the q-component of the current.

### Related Topics

Current Loop (→ p. 140)

## 25.25.37 IL.VUFB

General Information	
Type	R/O Parameter
Description	Reads the measured voltage on the u-winding of the motor.
Units	V
Range	-1200*VBusScale to +1200*VBusScale
Default Value	N/A
Data Type	Integer
See Also	IL.VVFB (→ p. 934)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2238	Word	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	476	No	16 bit	Yes	M_01-03-00-000

### Description

Reads the measured voltage on the u-winding of the motor.

### Related Topics

Current Loop (→ p. 140)

## 25.25.38 IL.VVFB

General Information	
Type	R/O Parameter
Description	Reads the measured voltage on the v-winding of the motor.
Units	V
Range	-1200*VBusScale to +1200*VBusScale
Default Value	N/A
Data Type	Integer
See Also	IL.VUFB (→ p. 933)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2239	Word	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	478	No	16 bit	Yes	M_01-03-00-000

### Description

The range for this parameter depends on whether the drive model is an MV/240 VAC or an HV/480 VAC.

The VBusScale parameter sets the drive model:

MV/240 VAC: VBusScale = 1

HV/480 VAC: VBusScale = 2

VBusScale is used for multiple parameter ranges that are model dependent, such as IL.KP.

## Related Topics

Current Loop (→ p. 140)

## 25.26 IP Parameters

This section describes the IP parameters.

---

<b>25.26.1 IP.ADDRESS</b> .....	<b>937</b>
<b>25.26.2 IP.GATEWAY</b> .....	<b>939</b>
<b>25.26.3 IP.MODE</b> .....	<b>941</b>
<b>25.26.4 IP.RESET</b> .....	<b>943</b>
<b>25.26.5 IP.SUBNET</b> .....	<b>945</b>

## 25.26.1 IP.ADDRESS

General Information	
Type	NV Parameter
Description	Gets/Sets the IP address of the drive.
Units	N/A
Range	0.0.0.0 to 255.255.255.255
Default Value	0.0.0.0
Data Type	IP Address
See Also	
Start Version	M_01-04-05-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This Parameter sets the IP address of the drive. If this parameter has not been set by the user, it will return 0.0.0.0.

By default, DHCP is active, and the drive will acquire an IP Address on its own. When the drive is in DHCP mode, IP.ADDRESS will return 0.0.0.0.

#### Notes:

- Even when the drive is in DHCP, the actual IP Address will not be returned using this command. The value the user has stored will be returned.
- IP.ADDRESS will only be used by the drive when IP.MODE = 1

If manually setting the IP.ADDRESS, the IP.SUBNET (→ p. 945) and IP.GATEWAY (→ p. 939) must be set up. After the IP.RESET (→ p. 943) command is issued, the new IP settings will be active only if IP.MODE (→ p. 941) has been set to 1.

#### Recovering communications with a drive on an un-reachable IP address

Sometimes a drive may be configured for an IP Address, and the drive needs to be taken off-line, and bench tested, or otherwise used outside of its saved IP Settings. If IP.MODE has been set to 1 (using

software defined static IP) the drive will boot up on an IP Address that may be unreachable with the host computer's settings.

If the IP address prevents communication the IP settings can be reset to default by the following procedure:

- Set both rotary switches to 0
- Hold down button B1 (top-side of drive) for 5 seconds.

The display will flash 0.0.0.0 and then attempt to discover an address by DHCP. Without removing logic power from the drive, use Workbench to connect to the drive, reconfigure the IP address settings as desired, and store the values to non-volatile memory.

## Related Topics

IP.GATEWAY (→ p. 939) | IP.RESET (→ p. 943) | IP.SUBNET (→ p. 945) | IP.MODE (→ p. 941)

## 25.26.2 IP.GATEWAY

General Information	
Type	NV Parameter
Description	Gets/Sets the gateway IP of the drive.
Units	N/A
Range	0.0.0.0 to 255.255.255.255
Default Value	0.0.0.0
Data Type	IP Address
See Also	Communicating with the Drive
Start Version	M_01-04-05-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This Parameter sets the Gateway IP of the drive. This parameter determines what IP the drive can communicate with outside of its current subnet.

By default, DHCP is active, and the drive will acquire an IP Address on its own. When the drive is in DHCP mode, IP.GATEWAY will return 0.0.0.0.

#### Notes:

- When the drive is in DHCP, the actual IP GATEWAY will not be returned using this command. The value the user has stored will be returned.
- IP.GATEWAY will only be used by the drive when IP.MODE = 1

If manually setting the IP.ADDRESS (→ p. 937), the IP.SUBNET (→ p. 945) and IP.GATEWAY must be set up. After the IP.RESET (→ p. 943) command is issued, the new IP settings will be active only if IP.MODE (→ p. 941) has been set to 1.

#### Recovering communications with a drive on an un-reachable IP address

Sometimes a drive may be configured for an IP Address, and the drive needs to be taken off-line, and bench tested, or otherwise used outside of its saved IP Settings. If IP.MODE has been set to 1 (using

software defined static IP) the drive will boot up on an IP Address that may be unreachable with the host computer's settings.

If the IP address prevents communication the IP settings can be reset to default by the following procedure:

- Set both rotary switches to 0
- Hold down button B1 (top-side of drive) for 5 seconds.

The display will flash 0.0.0.0 and then attempt to discover an address by DHCP. Without removing logic power from the drive, use Workbench to connect to the drive, reconfigure the IP address settings as desired, and store the values to non-volatile memory.

## Related Topics

IP.ADDRESS (→ p. 937) | IP.RESET (→ p. 943) | IP.SUBNET (→ p. 945) | IP.MODE (→ p. 941)

## 25.26.3 IP.MODE

General Information	
Type	NV Parameter
Description	Sets method of acquiring IP Address.
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-04-013-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2606	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1212	No	16 bit	No

### Description

This command determines which method of acquiring an IP Address the drive will take.

#### NOTE

Mode 0 and Mode 1 contain multiple methods of acquiring an IP Address. In these modes each method will be implemented in the order they are listed below until an IP Address is acquired

The drive will attempt to acquire a new IP Address as soon as the IP.RESET (→ p. 943) command is issued.

IP Mode	Mode of Acquiring IP Address
---------	------------------------------

0	Rotary Switches, DHCP, Auto IP
1	IP.ADDRESS, IP.SUBNET, IP.GATEWAY
2	DHCP, Auto IP

### Recovering communications with a drive on an un-reachable IP address

Sometimes a drive may be configured for an IP Address, and the drive needs to be taken off-line, and bench tested, or otherwise used outside of its saved IP Settings. If IP.MODE has been set to 1 (using software defined static IP), the drive will boot up on an IP Address that may be unreachable with the host computer's settings.

If the IP address prevents communication the IP settings can be reset to default by the following procedure:

- Set both rotary switches to 0
- Hold down button B1 (top-side of drive) for 5 seconds.

The display will flash 0.0.0.0 and then attempt to discover an address by DHCP. Without removing logic power from the drive, use Workbench to connect to the drive, reconfigure the IP address settings as desired, and store the values to non-volatile memory.

### Related Topics

IP.ADDRESS (→ p. 937)

IP.GATEWAY (→ p. 939)

IP.RESET (→ p. 943)

IP.SUBNET (→ p. 945)

## 25.26.4 IP.RESET

General Information	
Type	Command
Description	Implements new IP settings.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	Communicating with the Drive
Start Version	M_01-04-05-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2836	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1672	No	Command	No	M_01-06-03-000

### Description

When this command is issued a new IP will be acquired using IP.MODE (→ p. 941) to select what method is used.

#### Notes:

- When issuing this command, it is likely the connection to the drive will be severed, and a new connection will need to be made.

- IP.RESET will return an error if issued while the drive is enabled. IP.RESET is allowed when drive is disabled, or in dynamic braking mode.
- Ensure all values of IP.ADDRESS (→ p. 937), IP.SUBNET (→ p. 945), and IP.GATEWAY (→ p. 939) are configured if using IP.MODE 1

### **Recovering communications with a drive on an un-reachable IP address**

Sometimes a drive may be configured for an IP Address, and the drive needs to be taken off-line, and bench tested, or otherwise used outside of its saved IP Settings. If IP.MODE has been set to 1 (using software defined static IP), the drive will boot up on an IP Address that may be unreachable with the host computer's settings.

If the IP address prevents communication the IP settings can be reset to default by the following procedure:

- Set both rotary switches to 0
- Hold down button B1 (top-side of drive) for 5 seconds.

The display will flash 0.0.0.0 and then attempt to discover an address by DHCP. Without removing logic power from the drive, use Workbench to connect to the drive, reconfigure the IP address settings as desired, and store the values to non-volatile memory.

### **Related Topics**

IP.ADDRESS (→ p. 937) | IP.GATEWAY (→ p. 939) | IP.SUBNET (→ p. 945) | IP.MODE

## 25.26.5 IP.SUBNET

General Information	
Type	NV Parameter
Description	Gets/Sets the IP subnet mask of the drive.
Units	N/A
Range	0.0.0.0 to 255.255.255.255
Default Value	0.0.0.0
Data Type	IP Address
See Also	
Start Version	M_01-04-05-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This parameter sets the IP subnet mask of the drive. This parameter determines what IP addresses the drive will be allowed to communicate with.

By default, DHCP is active, and the drive will acquire an IP address on its own. When the drive is in DHCP mode, IP.SUBNET will return 0.0.0.0.

**NOTE** The default value of the EtherNet/IP model is 255.255.254.000.

#### Notes:

- When the drive is in DHCP, the actual IP subnet mask will not be returned using this command. The value the user has stored will be returned.
- IP.SUBNET will only be used by the drive when IP.MODE = 1

If manually setting the IP.ADDRESS (→ p. 937), the IP.SUBNET and IP.GATEWAY (→ p. 939) must be set up. After the IP.RESET (→ p. 943) command is issued, the new IP settings will be active only if IP.MODE (→ p. 941) has been set to 1.

#### Recovering communications with a drive on an un-reachable IP address

Sometimes a drive may be configured for an IP Address, and the drive needs to be taken off-line, and bench tested, or otherwise used outside of its saved IP Settings. If IP.MODE has been set to 1 (using software defined static IP) the drive will boot up on an IP Address that may be unreachable with the host computer's settings.

If the IP address prevents communication the IP settings can be reset to default by the following procedure:

- Set both rotary switches to 0
- Hold down button B1 (top-side of drive) for 5 seconds.

The display will flash 0.0.0.0 and then attempt to discover an address by DHCP. Without removing logic power from the drive, use Workbench to connect to the drive, reconfigure the IP address settings as desired, and store the values to non-volatile memory.

## Related Topics

IP.ADDRESS (→ p. 937) | IP.GATEWAY (→ p. 939) | IP.RESET (→ p. 943) | IP.MODE (→ p. 941)

## 25.27 LOAD Parameters

This section describes the LOAD parameters.

---

<b>25.27.1 LOAD.INERTIA .....</b>	<b>948</b>
-----------------------------------	------------

## 25.27.1 LOAD.INERTIA

General Information	
Type	NV Parameter
Description	Sets the load inertia.
Units	kgcm <sup>2</sup> for rotary motors kg for linear motors
Range	1 to 1,000,000 kgcm <sup>2</sup> or kg
Default Value	0 kgcm <sup>2</sup> or kg
Data Type	Float
See Also	N/A
Start Version	M_01-03-06-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2607	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1214	No	32 bit	No

### Description

LOAD.INERTIA sets the load inertia.

### Related Topics

Motor (→ p. 70)

## 25.28 MODBUS Parameters

This section describes the MODBUS parameters.

---

<b>25.28.1 MODBUS.CLRERRORS</b> .....	<b>950</b>
<b>25.28.2 MODBUS.ERRORMODE</b> .....	<b>951</b>
<b>25.28.3 MODBUS.ERRORS</b> .....	<b>952</b>
<b>25.28.4 MODBUS.PIN</b> .....	<b>954</b>
<b>25.28.5 MODBUS.POUT</b> .....	<b>956</b>
<b>25.28.6 MODBUS.PSCALE</b> .....	<b>958</b>
<b>25.28.7 MODBUS.SCALING</b> .....	<b>960</b>

## 25.28.1 MODBUS.CLRERRORS

General Information	
Type	Command
Description	Clears all errors stored in MODBUS.ERRORS.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-08-03-001

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2879	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1758	No	Command	No

### Description

Clears all errors stored in MODBUS.ERRORS. Error count is set to 0.

### Related Topics

MODBUS.ERRORS (→ p. 952) | MODBUS.ERRORMODE (→ p. 951)

## 25.28.2 MODBUS.ERRORMODE

General Information	
Type	R/W
Description	Enable/disable Modbus error response messages.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-08-03-001

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2878	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1756	No	8 bit	No

### Description

Enables or disables error response messages.

Value	Description
0	Send error response messages (default).
1	Do not send error response messages.

### Related Topics

MODBUS.CLRERRORS (→ p. 950) | MODBUS.ERRORS (→ p. 952)

## 25.28.3 MODBUS.ERRORS

General Information	
Type	R/O
Description	Returns a list of up to 125 Modbus errors.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-08-03-001

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

Lists up to 125 Modbus errors. Each entry contains the Modbus address and the error code of the failed Modbus request.

If more than 125 errors occur, the oldest error is dropped and the new error is stored at the end of this list. All modbus errors are stored regardless of the state of the error mode (MODBUS.ERRORMODE).

#### Access Through Telnet

Telnet or the WorkBench terminal will display the entire list:

```
-->MODBUS.ERRORS
Error count: 2
[00384] 6 : Argument lower than minimum.
[00390] 109 : Invalid Register address.
```

#### Access Through Modbus

In Modbus the error list starts at register address 0x1102 (4354).

Modbus Address	Description
4354	Error count

Modbus Address	Description
4355	Error 1 : Register Address
4356	Error 1: Error Code
4357	Error 2 : Register Address
4358	Error 2 : Error Code
...	...
4603	Error 125 : Register Address
4604	Error 125 : Error Code

## Related Topics

MODBUS.ERRORMODE (→ p. 951) | MODBUS.CLRERRORS (→ p. 950)

## 25.28.4 MODBUS.PIN

General Information	
Type	R/W
Description	Gets / Sets the Modbus User Units Input parameter.
Units	N/A
Range	1 to 4294967295
Default Value	1
Data Type	Integer
Start Version	M_01-04-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2487	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	974	No	32 bit	No

### Description

MODBUS.PIN and MODBUS.POUT (→ p. 956) are used to apply user specified units to the feedback values retrieved over Modbus.

To use this parameter correctly, first the MODBUS.PSCALE (→ p. 958) must be known, this value determines the resolution per revolution of the motor for Modbus. Then the ratio of MODBUS.POUT (→ p. 956)/MODBUS.PIN is applied to convert counts/rev into User Units/rev.

### Example

Use Modbus Scaling to return feedback in Radians

```
MODBUS.PSCALE = 16 (65536 counts/rev or pole pitch)
MODBUS.PIN = 5215189
MODBUS.POUT = 500000
```

If the motor is currently resting with a Modbus raw position 36,462 Counts (MODBUS.PSCALE (→ p. 958) is set to return 65,536 per rev) and the user requests the position using PL.FB over Modbus, the position will be returned as:

$$36,462 * 500000 / 5215189 = 3495 \text{ (Radians * 1000)}$$

Which equals 3.495 Radians

## Related Topics

MODBUS.PSCALE (→ p. 958)

MODBUS.POUT (→ p. 956)

## 25.28.5 MODBUS.POUT

General Information	
Type	R/W
Description	Gets / Sets the Modbus User Units Output parameter.
Units	N/A
Range	1 to 4294967295
Default Value	1
Data Type	Integer
Start Version	M_01-04-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2488	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	976	No	32 bit	No

### Description

MODBUS.PIN (→ p. 954) and MODBUS.POUT are used to apply User specified Units to the feedback values retrieved over Modbus.

To use this parameter correctly, first the MODBUS.PSCALE (→ p. 958) must be known. This value determines the resolution per revolution of the motor for Modbus. Then the ratio of MODBUS.POUT/MODBUS.PIN (→ p. 954) is applied to convert counts/rev into User Units/rev.

#### Example: Use Modbus Scaling to return feedback in Radians

```
MODBUS.PSCALE = 16 (65536 counts/rev or pole pitch)
MODBUS.PIN = 5215189
MODBUS.POUT = 500000
```

If the motor is currently resting with a Modbus raw position 36,462 Counts (MODBUS.PSCALE (→ p. 958) is set to return 65,536 per rev) and the user requests the position using PL.FB over Modbus, the position will be returned as:

$$36,462 * 500000 / 5215189 = 3495 \text{ (Radians * 1000)}$$

Which equals 3.495 Radians

## Related Topics

MODBUS.PSCALE (→ p. 958)

MODBUS.PIN (→ p. 954)

Encoder Emulation (→ p. 83)

## 25.28.6 MODBUS.PSCALE

General Information	
Type	R/W
Description	Gets/Sets the Feedback Resolution (per rev) over Modbus.
Units	
Range	10 to 31
Default Value	20
Data Type	Integer
See Also	N/A
Start Version	M_01-04-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2489	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	978	No	16 bit	No

### Description

This parameter determines the number of encoder counts per mechanical revolution reported over Modbus.

$$\text{Modbus Resolution} = 2^{(\text{MODBUS.PSCALE})}$$

#### Notes:

- This scaling affects Position, Velocity and Acceleration when reading values over Modbus. This scaling term does not affect units over any other communication.
- Additionally, see MODBUS.PIN (→ p. 954) and MODBUS.POUT (→ p. 956), as these are applied on top of MODBUS.PSCALE to allow for user customizable units.

## Related Topics

MODBUS.POUT (→ p. 956)

MODBUS.PIN (→ p. 954)

## 25.28.7 MODBUS.SCALING

General Information	
Type	NV Parameter
Description	Selects the scaling mode for Modbus values.
Units	N/A
Range	0 to 1
Default Value	1
Data Type	U8
Start Version	M_01-04-15-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2524	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1048	No	8 bit	No

### Description

Modbus has its own scaling algorithms. For some simple HMI's, it is desirable to use Workbench units instead of these Modbus-specific units. The parameter MODBUS.SCALING allows users to disable Modbus scaling and enable WB (Telnet) scaling.

Setting	Description
0	Modbus uses same scaling units as Workbench (set by UNIT parameters)
1	Modbus uses the Modbus-specific scaling units (set by MODBUS parameters)

### Related Topics

UNIT Parameters (→ p. 1217)

## 25.29 MOTOR Parameters

This section describes the MOTOR parameters.

---

25.29.1 MOTOR.AUOSET .....	964
25.29.2 MOTOR.BRAKE .....	966
25.29.3 MOTOR.BRAKEIMM .....	968
25.29.4 MOTOR.BRAKERLS .....	970
25.29.5 MOTOR.BRAKESTATE .....	972
25.29.6 MOTOR.CTF0 .....	973
25.29.7 MOTOR.ICONT .....	975
25.29.8 MOTOR.IDDATAVALID .....	977
25.29.9 MOTOR.IDMAX .....	979
25.29.10 MOTOR.IMID .....	980
25.29.11 MOTOR.IMTR .....	982
25.29.12 MOTOR.INERTIA .....	984
25.29.13 MOTOR.IPEAK .....	986
25.29.14 MOTOR.KE .....	988
25.29.15 MOTOR.KT .....	990
25.29.16 MOTOR.LDLL .....	992
25.29.17 MOTOR.LISAT .....	993
25.29.18 MOTOR.LQLL .....	994
25.29.19 MOTOR.NAME .....	996
25.29.20 MOTOR.PHASE .....	997
25.29.21 MOTOR.PHSADV1 .....	999
25.29.22 MOTOR.PHSADV2 .....	1000
25.29.23 MOTOR.PITCH .....	1001
25.29.24 MOTOR.POLES .....	1002
25.29.25 MOTOR.R .....	1004
25.29.26 MOTOR.RTYPE .....	1006
25.29.27 MOTOR.SUPPORTEDPARAMS .....	1008
25.29.28 MOTOR.TBRAKEAPP .....	1010
25.29.29 MOTOR.TBRAKERLS .....	1012
25.29.30 MOTOR.TBRAKETO .....	1014
25.29.31 MOTOR.TEMP .....	1016

---

<b>25.29.32 MOTOR.TEMPC</b> .....	<b>1018</b>
<b>25.29.33 MOTOR.TEMPFAULT</b> .....	<b>1019</b>
<b>25.29.34 MOTOR.TEMPWARN</b> .....	<b>1021</b>
<b>25.29.35 MOTOR.TYPE</b> .....	<b>1023</b>
<b>25.29.36 MOTOR.VMAX</b> .....	<b>1025</b>
<b>25.29.37 MOTOR.VOLTMAX</b> .....	<b>1027</b>
<b>25.29.38 MOTOR.VOLTMIN</b> .....	<b>1029</b>
<b>25.29.39 MOTOR.VOLTRATED</b> .....	<b>1031</b>
<b>25.29.40 MOTOR.VRATED</b> .....	<b>1033</b>

## 25.29.1 MOTOR.AUTOSSET

General Information	
Type	NV Parameter
Description	Determines which drive parameters are calculated automatically.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Boolean
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3451h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2240	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	480	No	8 bit	No	M_01-03-00-000

### Description

This parameter determines whether or not certain drive parameters (see lists below) are calculated automatically. When MOTOR.AUTOSSET = 1 these parameters are automatically calculated from the motor ID data (read from memory-supporting feedback devices). Parameters loaded from motor memory are then read-only and cannot be modified as long as MOTOR.AUTOSSET = 1. If

MOTOR.AUTOSSET = 0, parameters are not loaded from motor memory and must be configured by the user. Parameters which are not loaded from motor memory are always read-write.

Three conditions determine which parameters are calculated automatically by MOTOR.AUTOSSET = 1. See the lists below to determine which parameters will automatically be configured from the motor ID data.

The following parameters may be configured automatically when MOTOR.AUTOSSET = 1:

- MOTOR.BRAKE (→ p. 966)
- MOTOR.CTF0 (→ p. 973)
- MOTOR.ICONT (→ p. 975)
- MOTOR.INERTIA (→ p. 984)
- MOTOR.IPEAK (→ p. 986)
- MOTOR.KE (→ p. 988)
- MOTOR.KT (→ p. 990)
- MOTOR.LQLL (→ p. 994)
- MOTOR.NAME (→ p. 996)
- MOTOR.POLES (→ p. 1002)
- MOTOR.R (→ p. 1004)

If the motor's FB1.MEMVER > 0.01, AKD will also configure:

- MOTOR.PHASE (→ p. 997)
- MOTOR.TBRAKEAPP (→ p. 1010)
- MOTOR.PHASE (→ p. 997)
- MOTOR.VRATED (→ p. 1033)
- MOTOR.VOLTRATED (→ p. 1031)

For firmware versions 01-09-00-000 and later, AKD will also configure:

- MOTOR.RTYPE (→ p. 1006)
- MOTOR.TEMPFAULT (→ p. 1019)

## Related Topics

### 9.1 Motor

## 25.29.2 MOTOR.BRAKE

General Information	
Type	NV Parameter
Description	Sets the presence or absence of a motor brake.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Boolean
See Also	N/A
Start Version	M_01-00-00-000

AKD BASIC Information	
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3587h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2241	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	482	No	8 bit	No	M_01-03-00-000

### Description

The MOTOR.BRAKE parameter notifies the firmware whether a brake exists or not. It does not apply or release the brake. If a brake is found to be present, the firmware considers hardware indications regarding the brake circuits (such as open circuit or short circuit). If a brake does not exist, then the firmware ignores the hardware indications since they are irrelevant.

Value	Status
0	Motor brake does not exist.
1	Motor brake exists and brake hardware circuitry checks are enabled.

Enabling the MOTOR.BRAKE (value set to 1) when no motor brake exists creates a fault.

The motor brake is polled every 16 ms.

**NOTE**

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET=1.

## Related Topics

### 9.1 Motor

## 25.29.3 MOTOR.BRAKEIMM

General Information	
Type	NV Parameter
Description	Brake Immediately: in the case of a drive disable, apply the brake in all situations.
Units	N/A
Range	0 to 1
Default Value	0 (Inactive)
Data Type	Boolean
See Also	N/A
Start Version	M_01-05-11-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2616	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1232	No	8 bit	No

### Description

With the standard configuration, when the drive disables, the brake will not apply until velocity falls below CS.VTHRESH for CS.TO milliseconds. However, in some machines (such as a vertical axis) the brake should be applied immediately whenever the drive disables.

To ensure that the brake is applied immediately after any disable (due to fault, disable command, etc), set MOTOR.BRAKEIMM = 1.

### Related Topics

Motor (→ p. 70) | CS.VTHRESH (→ p. 534) | CS.TO (→ p. 532) | MOTOR.TBRAKETO (→ p. 1014) |  
DRV.DISTO (→ p. 624)

## 25.29.4 MOTOR.BRAKERLS

General Information	
Type	Command
Description	Allows a user to release or apply the motor brake.
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3450h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2242	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	484	No	8 bit	No	M_01-03-00-000

### Description

This command allows a user to release or apply the motor brake.

0 = Drive controls the brake.

1 = Brake is released.

2 = Brake is applied.

**NOTE**

A digital input mode is also used for the same purpose. The two mechanisms are independent.

**NOTE**

The CANopen-object 0x345A sub 1/2 can be used to control the brake state. See [CANopen manual](#) on kollmorgen.com. (Functionality starts with firmware 1.7.4.0)

## Related Topics

Motor (→ p. 70)

## 25.29.5 MOTOR.BRAKESTATE

General Information	
Type	R/O Parameter
Description	Reads the actual status of the motor brake.
Units	N/A
Range	Brake released or not present. Brake applied.
Default Value	Brake applied or not present.
Data Type	String
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter reads the actual status of the motor brake and can only show two states:

1 = Brake released or not present

2 = Brake applied

### Related Topics

Motor (→ p. 70)

## 25.29.6 MOTOR.CTF0

General Information	
Type	NV Parameter
Description	Sets the thermal constant of the motor coil.
Units	mHz
Range	0.265 to 16,000 mHz
Default Value	10 mHz
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3454h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2243	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	486	No	32 bit	No	M_01-03-00-000

### Description

This parameter is used to configure the thermal constant of the motor coil, which is the break frequency of a single-pole low-pass filter model of the thermal dynamics of the motor coil.

This parameter, together with MOTOR.IPEAK (→ p. 986) and MOTOR.ICONT (→ p. 975), determine the motor foldback parameters IL.MFOLDD (→ p. 923), IL.MFOLDT (→ p. 925), and IL.MFOLDR (→ p. 924).

### Calculating MOTOR.CTF0

Given a motor coil/winding thermal time constant T in seconds, then:

$$\text{MOTOR.CTF0} = 1 / (2\pi T)$$

**NOTE**

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET=1.

## Related Topics

### 9.1 Motor

## 25.29.7 MOTOR.ICONT

General Information	
Type	NV Parameter
Description	Sets the motor continuous current.
Units	A
Range	0.1 to 500 A
Default Value	1.0 A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

AKD BASIC Information	
Type	R/W

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	358Eh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2244	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	488	No	32 bit	No	M_01-03-00-000

### Description

This parameter is used to configure the motor continuous current.

**NOTE**

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSET=1.

## Related Topics

9.1 Motor

## 25.29.8 MOTOR.IDDATAVALID

General Information	
Type	R/O Parameter
Description	Reports the status of the motor memory.
Units	N/A
Range	N/A
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2245	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	490	No	8 bit	No	M_01-03-00-000

### Description

MOTOR.IDDATAVALID reports the status of the motor memory status.

The valid values for this keyword are the following:

Value	Description
0	Error in identification
1	Success in identification

Value	Description
2	Identification in process
3	Identification not started yet
4	Success recognizing feedback, but failed to varify OEM data integrity

## Related Topics

Motor (→ p. 70)

## 25.29.9 MOTOR.IDMAX

General Information	
Type	NV Parameter
Description	Maximum direct axis current.
Units	Arms
Range	0.2 to 1000
Default Value	0.5 * MOTOR.IPEAK
Data Type	Float
Start Version	M_01-11-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter is supported for IPM motors (MOTOR.TYPE = 6). MOTOR.IDMAX is the maximum motor winding current in the direct (non-torque producing) axis.

#### NOTE

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET = 1.

### Related Topics

9.1 Motor | MOTOR.IPEAK (→ p. 986)

## 25.29.10 MOTOR.IMID

General Information	
Type	R/W
Description	The direct-axis current set point used for induction machine closed-loop control.
Units	Arms
Range	0 to DRIVE.IPEAK
Default Value	0
Data Type	Float
Start Version	M_01-08-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2866	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1732	No	32-bit	No

### Description

The value of IL.IMID can be estimated using the motor name plate information.

The following rule should generally be used:

$$I_{d,rms} \cong I_R * \sqrt{1 - (\cos \varphi)^2} * 0.8$$

In which  $I_d$  is the value for IL.IMID, the preset rotor flux building current,  $I_r$  is the name plate phase current,  $\cos\phi$  is the name plate power factor at rated and operation, and  $0.8$  is an empirical factor (accounts for the angle error due to voltage drop on the leakage induction).

## Related Topics

Motor (→ p. 70)

## 25.29.11 MOTOR.IMTR

General Information	
Type	R/W
Description	Rotor time constant.
Units	Ms
Range	1 to 16,000
Default Value	100
Data Type	Integer
Start Version	M_01-08-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No


### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2864	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1728	No	16-bit	No

### Description

The rotor time constant is calculated as the ratio between rotor magnetizing inductance  $L_m$  and rotor resistance  $R_r$  from the following equivalent circuit of an induction machine.

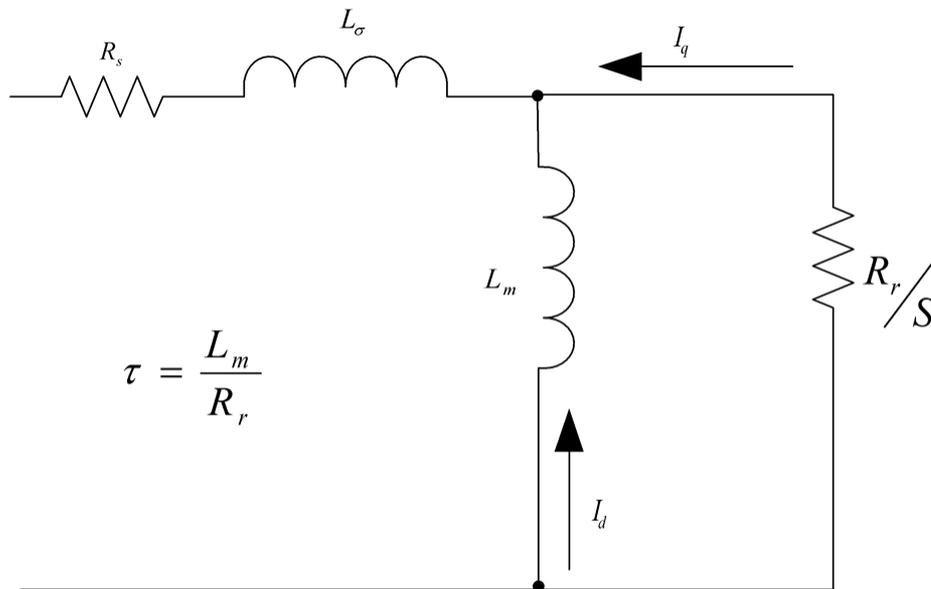

Alternatively, the rotor time constant can be estimated from the rated current, magnetizing current (MOTOR.IMID (→ p. 980)) and rated slip frequency as follows:

$$\tau = \frac{\sqrt{I_{s,rms}^2 - I_{d,rms}^2}}{I_{d,rms} * \omega_{slip}}$$

where  $I_{s,rms}$  is the rated current,  $I_{d,rms}$  is the rated magnetizing current, and  $\omega_{slip}$  is the rated slip frequency in rad/s.

**NOTE**  $\tau$  is in seconds for the above formulas. It needs to be converted to ms for the MOTOR.IMTR setting:  
 MOTOR.IMTR(ms) =  $\tau * 1000$

### Related Topics

Motor (→ p. 70)

## 25.29.12 MOTOR.INERTIA

General Information	
Type	NV Parameter
Description	Sets the motor inertia.
Units	kgcm <sup>2</sup> for rotary motors kg for linear motors
Range	1 to 200,000 kgcm <sup>2</sup> or kg
Default Value	100 kgcm <sup>2</sup> or kg
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35ABh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2246	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	492	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets the motor inertia.

#### NOTE

This parameter is automatically configured for Kollmorgen motors when

**NOTE** MOTOR.AUTOSET=1.

## Related Topics

9.1 Motor

## 25.29.13 MOTOR.IPEAK

General Information	
Type	NV Parameter
Description	Sets the motor peak current.
Units	mA
Range	0.200 to 1,000 A
Default Value	2.000 A
Data Type	Float
See Also	IL.LIMITP (→ p. 921), IL.LIMITN (→ p. 919)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	358Fh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2247	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	494	No	32 bit	No	M_01-03-00-000

### Description

This parameter configures the drive for the motor's peak, instantaneous-rated current. MOTOR.IPEAK is used to limit clamp the magnitude of the torque producing q-component current command (IL.CMD (→ p. 880)).

#### NOTE

This parameter is automatically configured for Kollmorgen motors when

**NOTE** MOTOR.AUTOSET=1.

## Related Topics

9.1 Motor

## 25.29.14 MOTOR.KE

General Information	
Type	NV Parameter
Description	Sets the motor back EMF constant.
Units	Vpeak/krpm for Rotary Motors Vpeak/m/s for Linear Motors
Range	0.0 to 100,000
Default Value	0
Data Type	Float
See Also	N/A
Start Version	M_01-03-06-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2608	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1216	No	32 bit	No

### Description

MOTOR.KE defines the back EMF constant for the motor. The back EMF constant defines how much voltage is generated at the motors coils. The relationship between MOTOR.KE and speed is described by the following equation:

$$\text{Coil Voltage} = \text{MOTOR.KE} * \text{VL.FB}$$

VL.FB is in units of krpm for rotary motors and in units of m/s for linear motors.

The maximum speed for interior permanent magnet motors (IPM) is determined by MOTOR.KE and VBUS.VALUE. An overspeed fault is generated if MOTOR.TYPE is set to 6 (IPM) and VL.FB \* MOTOR.KE exceeds VBUS.VALUE.

**NOTE**

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSET=1.

## Related Topics

Motor (→ p. 70) | VL.FB (→ p. 1269) | VBUS.VALUE (→ p. 1249)

## 25.29.15 MOTOR.KT

General Information	
Type	NV Parameter
Description	Sets the torque constant of the motor.
Units	Nm/A
Range	0.001 Nm/A to 1,000,000.000 Nm/A for rotary motors. 0.001 Nm/A to 1,000,000.000 N/A for linear motors.
Default Value	0.1 Nm/A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3593h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2248	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	496	No	32 bit	No	M_01-03-00-000

### Description

This parameter is the torque constant of the motor in Nm/A. The value can be online checked according to the following equation:

$$K_t = 60 \cdot \sqrt{3} \cdot U_i / (2 \cdot \pi \cdot n)$$

Where:

$U_i$  = induced voltage of the motor

$n$  = actual rotor velocity

**NOTE**

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET=1.

## Related Topics

9.1 Motor

## 25.29.16 MOTOR.LDLL

General Information	
Type	NV Parameter
Description	Motor line to line direct axis inductance.
Units	mH
Range	1 to 2 <sup>31</sup>
Default Value	17.000
Data Type	Float
Start Version	M_01-11-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter is the motor line to line direct axis inductance. It is supported for the IPM motor type (MOTOR.TYPE = 6).

#### NOTE

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSET = 1.

### Related Topics

9.1 Motor | MOTOR.LQLL (→ p. 994) | IL.KPDRATIO (→ p. 910)

## 25.29.17 MOTOR.LISAT

General Information	
Type	NV Parameter
Description	Motor quadrature axis inductance saturation characteristic.
Units	Arms
Range	0.2A to 2*DRV.IPEAK
Default Value	1000
Data Type	Float
Start Version	M_01-11-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Descriptio

This parameter is the quadrature axis inductance ( $L_{qll}$ ) saturation characteristic as a function of quadrature current ( $I_q$ ). It is used for q-axis current loop gain scheduling to maintain bandwidth and stability during q-axis inductance saturation. This value can also be used for q-axis flux estimation during field weakening, especially for IPM motors (MOTOR.TYPE = 6).

#### NOTE

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET = 1.

### Related Topics

9.1 Motor | MOTOR.LQLL (→ p. 994)

## 25.29.18 MOTOR.LQLL

General Information	
Type	NV Parameter
Description	Sets the line-to-line motor Lq.
Units	mH
Range	1 to 2 <sup>32</sup> mH
Default Value	17.000 mH
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3455h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2249	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	498	No	32 bit	No	M_01-03-00-000

### Description

This parameter is used to configure the motor line-to-line inductance.

#### NOTE

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET=1.

## **Related Topics**

9.1 Motor

## 25.29.19 MOTOR.NAME

General Information	
Type	NV Parameter
Description	Sets the motor name.
Units	N/A
Range	11 chars
Default Value	N/A
Data Type	String
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter is used to set the motor name.

#### NOTE

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET=1.

### Related Topics

Motor (→ p. 70)

## 25.29.20 MOTOR.PHASE

General Information	
Type	NV Parameter
Description	Sets the motor phase.
Units	Electrical degrees
Range	0 to 360°
Default Value	0°
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	359Ch/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2250	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	500	No	16 bit	No	M_01-03-00-000

### Description

This parameter sets the motor phase.

#### NOTE

If MOTOR.AUTOSSET = 1 and FB1.MEMVER > 0.01, this parameter will be automatically configured for Kollmorgen motors.

## **Related Topics**

9.1 Motor

## 25.29.21 MOTOR.PHSADV1

General Information	
Type	NV Parameter
Description	First order phase advance polynomial coefficient.
Units	N/A
Range	-1.0 to 1.0
Default Value	0
Data Type	Float
Start Version	M_01-11-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter is supported for IPM motors (MOTOR.TYPE = 6). MOTOR.PHSADV1 is the first order polynomial coefficient used to determine the direct axis current command for commutation phase advance, according to the equation:

$$I_{dCmd}(I_p) = PHSADV2 * I_p^2 + PHSADV1 * I_p$$

where  $I_p$  is the magnitude of the motor phase current:

$$I_p = \sqrt{I_d^2 + I_q^2}$$

#### NOTE

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET=1.

### Related Topics

9.1 Motor | MOTOR.PHSADV2 (→ p. 1000)

## 25.29.22 MOTOR.PHSADV2

General Information	
Type	NV Parameter
Description	Second order phase advance polynomial coefficient.
Units	N/A
Range	-1.0 to 1.0
Default Value	0
Data Type	Float
Start Version	M_01-11-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter is supported for IPM motors (MOTOR.TYPE = 6). MOTOR.PHSADV2 is the second order polynomial coefficient used to determine the direct axis current command for commutation phase advance, according to the equation:

$$I_{dCmd}(I_p) = PHSADV2 * I_p^2 + PHSADV1 * I_p$$

where  $I_p$  is the magnitude of the motor phase current:

$$I_p = \sqrt{I_d^2 + I_q^2}$$

#### NOTE

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET=1.

### Related Topics

9.1 Motor | MOTOR.PHSADV1 (→ p. 999)

## 25.29.23 MOTOR.PITCH

General Information	
Type	NV Parameter
Description	Sets the motor pitch.
Units	µm
Range	1,000 to 1,000,000 µm
Default Value	1.000 µm
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2251	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	502	No	32 bit	No	M_01-03-00-000

### Description

This parameter defines the pole-to-pair pitch for the linear motor in micrometers.

### Related Topics

Motor (→ p. 70)

## 25.29.24 MOTOR.POLES

General Information	
Type	NV Parameter
Description	Sets the number of motor poles.
Units	N/A
Range	0 to 128
Default Value	6
Data Type	Integer
See Also	FB1.POLES (→ p. 754)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	359Dh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2252	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	504	No	16 bit	No	M_01-03-00-000

### Description

MOTOR.POLES sets the number of motor poles. This command is used for commutation control and represents the number of individual magnetic poles of the motor (not pole pairs). The division value of motor poles (MOTOR.POLES) and feedback poles (FB1.POLES) must be an integer when setting drive to enable, otherwise a fault is issued.

**NOTE**

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET=1.

## Related Topics

9.1 Motor

## 25.29.25 MOTOR.R

General Information	
Type	NV Parameter
Description	Sets the stator winding resistance phase-phase in ohms.
Units	$\Omega$
Range	0.001 to 650 $\Omega$
Default Value	10 $\Omega$
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3456h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2253	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	506	No	32 bit	No	M_01-03-00-000

### Description

MOTOR.R sets the stator winding resistance phase-to-phase in ohms.

#### NOTE

This parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET=1.

## Related Topics

9.1 Motor

## 25.29.26 MOTOR.RTYPE

General Information	
Type	NV Parameter
Description	Defines the type of thermal resistor inside the motor.
Units	N/A
Range	0 to 1 For firmware version 01-10-02-000 and later, range is 0 to 255.
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2254	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	508	No	8 bit	No	M_01-03-00-000

### Description

This parameter defines the type of thermal resistor used inside of the motor to measure motor temperature.

For firmware versions prior to 01-10-02-000, parameter range is 0 to 1.

0 = PTC

1 = NTC

For firmware versions 01-10-02-000 and later, parameter range is 0 to 255.

0 = Single PTC Thermistor

- 1 = Single NTC Thermistor
- 2 = KTY83-110 Thermistor
- 3 = KTY84-130 Thermistor
- 4 = PTC + KTY83-110 Thermistors
- 5 = Thermal switch
- 255 = No thermal sensor in the motor

**NOTE**

For firmware versions 01-09-00-000 and later, this parameter is automatically configured for Kollmorgen motors when MOTOR.AUTOSSET = 1.

## Related Topics

Motor (→ p. 70)

## 25.29.27 MOTOR.SUPPORTEDPARAMS

General Information	
Type	R/O Parameter
Description	Lists MOTOR parameters supported by configured motor type.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Start Version	M_01-11-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter lists all the MOTOR parameters that are supported for the motor type selected by the MOTOR.TYPE parameter.

### Example

The following output is produced for surface permanent magnet motors (MOTOR.TYPE = 0).

→ MOTOR.SUPPORTEDPARAMS

```
MOTOR.CTF0
MOTOR.ICONT
MOTOR.INERTIA
MOTOR.IPEAK
MOTOR.KE
MOTOR.KT
MOTOR.LISAT
MOTOR.LQLL
MOTOR.PHASE
MOTOR.POLES
MOTOR.R
MOTOR.VMAX
MOTOR.VOLTMAX
```

## Related Topics

9.1 Motor | MOTOR.TYPE (→ p. 1023)

## 25.29.28 MOTOR.TBRAKEAPP

General Information	
Type	NV Parameter
Description	The delay time used for applying the motor brake.
Units	ms
Range	0 to 1,000 ms
Default Value	75 ms
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	366Eh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2255	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	510	No	16 bit	No	M_01-03-00-000

### Description

This parameter is used to configure the mechanical delay when applying the motor brake. MOTOR.TBRAKEAPP is a time delay that is applied when a brake exists and the drive is disabled at the end of a controlled stop. This delay lasts from the time that the brake is commanded to apply until the time that the drive is disabled.

This feature allows you to disable the drive and apply the brake on a vertical application without the load falling. Without this time delay, if you immediately disable the drive, then the load falls during the time needed for the brake to mechanically apply.

**NOTE**

If MOTOR.AUTOSET = 1 and FB1.MEMVER > 0.01, this parameter will be automatically configured for Kollmorgen motors.

## Related Topics

### 9.1 Motor

## 25.29.29 MOTOR.TBRAKERLS

General Information	
Type	NV Parameter
Description	The delay time used for releasing the motor brake.
Units	ms
Range	0 to 1,000 ms
Default Value	75 ms
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	366Fh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2256	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	512	No	16 bit	No	M_01-03-00-000

### Description

This parameter is used to configure the mechanical delay when releasing the motor brake. MOTOR.TBRAKERLS is a time delay that is applied when a brake exists and the drive is enabled. When the drive is enabled, the brake is commanded to release and, during the MOTOR.TBRAKERLS period of time, the drive does not accept a motion command. This delay allows the brake to fully release before the drive begins a new motion.

**NOTE**

If MOTOR.AUTOSET = 1 and FB1.MEMVER > 0.01, this parameter will be automatically configured for Kollmorgen motors.

## Related Topics

9.1 Motor

## 25.29.30 MOTOR.TBRAKETO

General Information	
Type	NV Parameter
Description	Brake apply timeout for vertical axis.
Units	Milliseconds
Range	-1 to 30,000
Default Value	-1 (function disabled)
Data Type	Integer
See Also	CS.VTHRESH (→ p. 534), CS.TO (→ p. 532), DRV.DISTO (→ p. 624)
Start Version	01-05-07-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2495	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	990	No	32 bit	Yes

### Description

When a drive is disabled (due to user command, digital input, or fault), the brake will normally not be applied until velocity has fallen below CS.VTHRESH (→ p. 534). In some instances, such as a vertical axis, it may be desirable to apply the brake regardless of velocity.

MOTOR.TBRAKETO sets the maximum time allowed to pass between drive disable and application of the motor brake. After this time, the brake will be applied even if velocity is higher than CS.VTHRESH (→ p. 534).

To disable the timer, set the value to -1.

#### NOTE

Prior to version 01-05-07-000, this timeout was only applied when the Hardware

**NOTE**

Enable was deactivated and the default was 30,000. From 01-05-07-000 on this timeout is applied in all conditions and the default is -1.

## 25.29.31 MOTOR.TEMP

General Information	
Type	R/O Parameter
Description	Reads the motor temperature represented as the resistance of the motor PTC or NTC.
Units	$\Omega$
Range	0 to $2^{32} \Omega$
Default Value	N/A
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3612h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2257	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	514	No	32 bit	No	M_01-03-00-000

### Description

This parameter returns the motor temperature, which is represented as the resistance of the motor's PTC or NTC.

### Related Topics

Motor (→ p. 70) | MOTOR.RTYPE (→ p. 1006)

## 25.29.32 MOTOR.TEMPC

General Information	
Type	R/O Parameter
Description	Reads the motor temperature in degrees Celsius.
Units	Degrees Celsius
Range	$-2^{15}$ to $2^{15}$
Default Value	N/A
Data Type	Integer
Start Version	M_01-10-04-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

When the motor has a thermistor with linear characteristics (MOTOR.RTYPE = 2, 3 or 4), MOTOR.TEMPC returns the motor temperature in degrees Celsius, which is calculated from the resistance of the motor thermistor.

There is no algorithm to convert from resistance to degrees Celsius for non-linear thermistors. In this case, MOTOR.TEMPC returns -32,768 which is an invalid temperature.

### Related Topics

9.1 Motor | MOTOR.TEMP (→ p. 1016) | MOTOR.RTYPE (→ p. 1006)

## 25.29.33 MOTOR.TEMPFAULT

General Information	
Type	NV Parameter
Description	Sets the motor temperature fault level.
Units	$\Omega$
Range	0 to 2,000,000,000 $\Omega$
Default Value	0 $\Omega$ = switched off
Data Type	Integer
See Also	MOTOR.TEMP (→ p. 1016)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3586h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2258	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	516	No	32 bit	No	M_01-03-00-000

### Description

This parameter is used to configure the motor temperature fault level as a resistance threshold of the motor thermal sensor.

A zero value prevents any fault from being issued.

#### NOTE

For firmware versions 01-09-00-000 and later, this parameter is automatically

**NOTE**

configured for Kollmorgen motors when MOTOR.AUTOSET = 1.

## Related Topics

9.1 Motor

## 25.29.34 MOTOR.TEMPWARN

General Information	
Type	NV Parameter
Description	Sets the motor temperature warning level.
Units	$\Omega$
Range	0 to 2,000,000,000 $\Omega$
Default Value	0 $\Omega$ = switched off
Data Type	Integer
See Also	MOTOR.TEMP (→ p. 1016)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3453h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2259	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	518	No	32 bit	No	M_01-03-00-000

### Description

This parameter is used to configure the motor temperature warning level as a resistance threshold of the motor PTC.

A zero value prevents any warning from being created.

### Related Topics

## 9.1 Motor

## 25.29.35 MOTOR.TYPE

General Information	
Type	NV Parameter
Description	Sets the motor type.
Units	N/A
Range	0, 1, 2, 4, 8
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2260	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	520	No	8 bit	No	M_01-03-00-000

### Description

MOTOR.TYPE sets the drive control algorithms to different motor types as follows:

0 = Rotary motor

1 = Linear motor

2 = Induction Motor V/f Open Loop Control

4 = Induction Motor Closed Loop Control

8 = Rotary brush motor

The following table shows which MOTOR parameters must be configured for either permanent magnet, induction motor v/f open loop, or induction motor closed loop motor types.

**NOTE**

ECCN 3A255 imposes special limitations on operating speed for induction motors. See ECCN 3A225 Limitations for Induction Motors (→ p. 74).

Keyword	Permanent Magnet	Induction Motor v/f Open Loop	Induction Motor Closed Loop
MOTOR.NAME (→ p. 996)	Yes	Yes	Yes
MOTOR.TYPE	Yes	Yes	Yes
MOTOR.AUTOSSET (→ p. 964)	Yes	No	Yes
MOTOR.IPEAK (→ p. 986)	Yes	Yes	Yes
MOTOR.ICONT (→ p. 975)	Yes	Yes	Yes
MOTOR.INERTIA (→ p. 984)	Yes	Yes	Yes
MOTOR.KT (→ p. 990)	Yes	No	No
MOTOR.LQLL (→ p. 994)	Yes	No	Yes
MOTOR.POLES (→ p. 1002)	Yes	Yes	Yes
MOTOR.VMAX (→ p. 1025)	Yes	Yes	Yes
MOTOR.R (→ p. 1004)	Yes	Yes	Yes
MOTOR.VOLTMAX (→ p. 1027)	Yes	Yes	Yes
MOTOR.PHASE (→ p. 997)	Yes	No	No
MOTOR.CTF0 (→ p. 973)	Yes	Yes	Yes
MOTOR.KE (→ p. 988)	Yes	No	No
MOTOR.IMTR (→ p. 982)	No	No	Yes
MOTOR.IMID (→ p. 980)	No	No	Yes
MOTOR.VOLTRATED (→ p. 1031)	No	Yes	No
MOTOR.VRATED (→ p. 1033)	No	Yes	No
MOTOR.VOLTMIN (→ p. 1029)	No	Yes	No

## Related Topics

Motor (→ p. 70)

## 25.29.36 MOTOR.VMAX

General Information	
Type	NV Parameter
Description	Sets the maximum motor speed.
Units	rpm
Range	100 to 40,000 rpm
Default Value	3,000 rpm
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35A3h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2261	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	522	No	16 bit	No	M_01-03-00-000

### Description

This parameter sets the maximum motor mechanical speed. The value  $1.2 \times \text{MOTOR.VMAX}$  becomes the overall overspeed fault threshold (VL.VFTHRESH) if it is less than the user overspeed fault threshold (VL.THRESH), and for MOTOR.TYPE = 6 if it is less than the motor back EMF overspeed threshold  $((1.02 \times 1000 \times \text{VBUS.OVFTHRESH}) / (\text{MOTOR.KE} \times \text{sqrt}(2)))$ .

### Related Topics

9.1 Motor | VL.THRESH (→ p. 1296) | VL.VFTHRESH (→ p. 1298)

## 25.29.37 MOTOR.VOLTMAX

General Information	
Type	NV Parameter
Description	Sets the motor maximum voltage.
Units	Vrms
Range	110 to 900 Vrms
Default Value	230 Vrms
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3452h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2262	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	524	No	16 bit	No	M_01-03-00-000

### Description

This parameter sets the maximum permissible motor voltage. For instance, if a motor that is rated for a 400 V supply is connected to the drive, then the MOTOR.VOLTMAX setting is 400. This value also sets regen resistor and over voltage thresholds in the drive to acceptable values for the motor so that the motor windings are not damaged.

## **Related Topics**

9.1 Motor

## 25.29.38 MOTOR.VOLTMIN

General Information	
Type	NV Parameter
Description	Sets the minimum voltage for V/f control.
Units	%
Range	0 to 100%
Default Value	2%
Data Type	U16
See Also	MOTOR.VRATED (→ p. 1033), MOTOR.VOLTRATED (→ p. 1031)
Start Version	

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3457h/3	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2837	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1674	No	16-bit	No	M_01-06-03-000

### Description

This parameter configures the drive for the induction motor's minimum voltage at standstill. It is given as a percentage (%) of the motor's rated voltage. MOTOR.VOLTMIN is used to calculate the constant volts per Hertz characteristics of the drive and motor and should be set to a value that generates a current of about 40% of the rated current at standstill.

## Related Topics

9.1 Motor

## 25.29.39 MOTOR.VOLTRATED

General Information	
Type	NV Parameter
Description	Sets the motor rated voltage.
Units	V
Range	50 to 1,000 V
Default Value	230 V
Data Type	U16
See Also	MOTOR.VRATED (→ p. 1033), MOTOR.VOLTMIN (→ p. 1029)
Start Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3457h/2	M_01-03-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2838	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1676	No	16-bit	No	M_01-06-03-000

### Description

This parameter configures the drive for the induction motor's rated voltage as indicated on the name-plate.

MOTOR.VOLTRATED is used to calculate the constant Volts per Hertz characteristics of the drive and motor.

**NOTE**

If MOTOR.AUTOSET = 1 and FB1.MEMVER > 0.01, this parameter will be automatically configured for Kollmorgen motors.

## Related Topics

Motor (→ p. 70)

## 25.29.40 MOTOR.VRATED

General Information	
Type	NV Parameter
Description	Sets the motor rated velocity (not maximum velocity)
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, custom units/s, rad/s Linear: counts/s, mm/s, µm/s, custom units/s
Range	Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 deg/s 0.000 to 1,250.000 custom units/s 0.000 to 1,570.796 rad/s Linear: 0.000 to 1,073,741,824,000.000 counts/s 0.000 to 8,000.000 mm/s 0.000 to 8,000,000.000 µm/s 0.000 to 1,250.000 custom units/s
Default Value	0 rpm
Data Type	U16
See Also	MOTOR.VOLTRATED (→ p. 1031), MOTOR.VOLTMIN (→ p. 1029)
Start Version	M_01-03-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3457h/1	M_01-03-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2839	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1678	Yes	64-bit	Yes	M_01-06-03-000

## Description

This parameter configures the drive for the rated velocity of the induction motor as indicated on the nameplate. MOTOR.VRATED is used to calculate the constant volts per Hertz characteristics of the drive and motor.

### NOTE

If MOTOR.AUTOSET = 1 and FB1.MEMVER > 0.01, this parameter will be automatically configured for Kollmorgen motors.

## Related Topics

Motor (→ p. 70)

## 25.30 MT Parameters and Commands

This section describes the MT parameters and commands.

---

<b>25.30.1 MT.ACC</b> .....	<b>1036</b>
<b>25.30.2 MT.CLEAR</b> .....	<b>1038</b>
<b>25.30.3 MT.CNTL</b> .....	<b>1040</b>
<b>25.30.4 MT.CONTINUE</b> .....	<b>1044</b>
<b>25.30.5 MT.DEC</b> .....	<b>1045</b>
<b>25.30.6 MT.EMERGMT</b> .....	<b>1047</b>
<b>25.30.7 MT.FEEDRATE</b> .....	<b>1049</b>
<b>25.30.8 MT.FIXEDSTOPCURRENT</b> .....	<b>1050</b>
<b>25.30.9 MT.FIXEDSTOPFOLLOWINGERROR</b> .....	<b>1051</b>
<b>25.30.10 MT.FIXEDSTOPMONITORWINDOW</b> .....	<b>1052</b>
<b>25.30.11 MT.LIST</b> .....	<b>1053</b>
<b>25.30.12 MT.LOAD</b> .....	<b>1054</b>
<b>25.30.13 MT.MOVE</b> .....	<b>1056</b>
<b>25.30.14 MT.MTNEXT</b> .....	<b>1058</b>
<b>25.30.15 MT.NUM</b> .....	<b>1060</b>
<b>25.30.16 MT.P</b> .....	<b>1061</b>
<b>25.30.17 MT.PARAMS</b> .....	<b>1063</b>
<b>25.30.18 MT.SET</b> .....	<b>1064</b>
<b>25.30.19 MT.TNEXT</b> .....	<b>1066</b>
<b>25.30.20 MT.TNUM</b> .....	<b>1068</b>
<b>25.30.21 MT.TNVSAVE</b> .....	<b>1070</b>
<b>25.30.22 MT.TPOSWND</b> .....	<b>1071</b>
<b>25.30.23 MT.TVELWND</b> .....	<b>1073</b>
<b>25.30.24 MT.V</b> .....	<b>1074</b>
<b>25.30.25 MT.VCMD</b> .....	<b>1077</b>

## 25.30.1 MT.ACC

General Information	
Type	R/W Parameter
Description	Specifies motion task acceleration; active in opmode 2 (position) only.
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rps/s, rpm/s, deg/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup> , rad/s <sup>2</sup> Linear: counts/s <sup>2</sup> , mm/s <sup>2</sup> , μm/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup>
Range	Rotary: 0.002 to 833,333.333 rps/s 0.112 to 50,000,000.000 rpm/s 0.009 to 300,000,000.000 deg/s <sup>2</sup> 0.155 to 4,166,666.752 (Custom Units (→ p. 100))/s <sup>2</sup> 0.012 to 5,235,987.968 rad/s <sup>2</sup> Linear: 16,000.000 to 3,579,139,408,000.000 counts/s <sup>2</sup> 0.031*MOTOR.PITCH (→ p. 1001) to 833,333.333*MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 30.994*MOTOR.PITCH (→ p. 1001) to 833,333,333.333*MOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 0.155 to 4,166,666.667 (Custom Units (→ p. 100))/s <sup>2</sup>
Default Value	Rotary: 166.669 rps/s 10,000.000 rpm/s 60,000.000 deg/s <sup>2</sup> 833.333 (Custom Units (→ p. 100))/s <sup>2</sup> 1,047.2 rad/s <sup>2</sup> Linear: 715,840,000.000 counts/s <sup>2</sup> 166.714*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 166,714.191*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) μm/s <sup>2</sup> 833.571 (Custom Units (→ p. 100))/s <sup>2</sup>
Data Type	Float
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes

Variant	Supported
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	6083h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2263	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	526	Yes	64 bit	No	M_01-03-00-000

## Description

MT.ACC specifies the motion task acceleration and is used by the MT.SET (→ p. 1064) and MT.LOAD (→ p. 1054) command. This parameter is a temporary value, since a motion task is only set after a MT.SET (→ p. 1064) command. The motion task acceleration is further limited by the maximum allowed acceleration DRV.ACC

A value of 0 for MT.ACC should not be used when setting a motion task via MT.SET (→ p. 1064) because this value causes a validity check of the MT.SET (→ p. 1064) command to fail.

A value of 0 for MT.ACC after an MT.LOAD (→ p. 1054) command displays an empty (not initialized) motion task.

## Related Topics

Motion Tasks (→ p. 162)

## 25.30.2 MT.CLEAR

General Information	
Type	Command
Description	Clears motion tasks from the drive; active in opmode 2 (position) only.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC (→ p. 1036), MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2265	Word	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	530	No	16 bit	Yes	M_01-03-00-000

### Description

MT.CLEAR clears a motion task from the drive. This command needs one argument in order to clear a motion task. A motion task consists of the following parameters: MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC (→ p. 1036), MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066)

A value of -1 clears all motion tasks in the drive (MT.CLEAR -1).

## Example

MT.CLEAR 5: Clear motion task number 5.

After performing a command such as MT.PARAMS 5, the drive displays the following:

```
5  0.000 Counts  0.000 rpm  0  0.000 rpm/s  0.000 rpm/s  0
0  0 ms
```

A value of 0 for velocity, acceleration, or deceleration displays motion task as uninitialized.

## Related Topics

Motion Tasks (→ p. 162)

## 25.30.3 MT.CNTL

General Information	
Type	R/W Parameter
Description	Sets motion task control word; active in opmode 2 (position) only.
Units	N/A
Range	0 to 4,294,967,295
Default Value	0
Data Type	Integer
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.ACC (→ p. 1036) MT.V (→ p. 1074), MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058) MT.MTNEXT (→ p. 1058), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35AFh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2266	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	532	No	32 bit	No	M_01-03-00-000

### Description

MT.CNTL specifies the motion task control word, which is used by the MT.SET (→ p. 1064) and MT.LOAD (→ p. 1054) commands. The control word describes the behavior of the motion task. This

parameter is a temporary value, since a motion task is only set after an MT.SET (→ p. 1064) command is issued.

Since this parameter is read bitwise, it can combine multiple functions into a single word. The meaning of each bit is described in the tables below.

**Table 1: Motion Task (MT) Bit Descriptions**

Bit	Meaning	Description
0	0x00001	See Table 2: MT Type.
1	0x00002	
2	0x00004	
3	0x00008	
4	0x00010	If this bit is 0, then the next MT is not executed. If this bit is 1, then the next MT is executed.
5	0x00020	See Table 3: Next MT Start Type.
6	0x00040	
7	0x00080	
8	0x00100	
9	0x00200	
10	0x00400	
11	0x00800	
12	0x01000	Deprecated as of firmware version 01-11-02-000. In previous versions of firmware this bit enabled the feedrate for homing (see HOME.FEEDRATE (→ p. 857)).
13	0x02000	If this bit is 0, then an attempt to trigger any new motion task will be accepted while this motion task is currently running. If this bit is 1, then an attempt to trigger any new motion task will be denied while this motion task is currently running.
14	0x04000	If this bit is set, the motion task that is supposed to be started cannot be started from velocity 0. The motion can be started if a motion task already running will be interrupted.
15	0x08000	<b>Reserved.</b>
16	0x10000	The motion task target velocity will be taken from an external source such as an analog input signal (see AIN.MODE (→ p. 400) for further details).
17	0x20000	Fixed stop detection.

**Table 2: MT Type**

Bits 0, 1, 2, 3	Description
0000	Absolute. The target position is defined by the MT.P value.
1000	Reserved.
0001	Relative to Command Position. The target position is defined as: Target position = PL.CMD (→ p. 1084) + MT.P (→ p. 1061)
0011	Relative to Previous Target Position. The target position is defined as: Target position = Target position of the last motion task + MT.P

Bits 0, 1, 2, 3	Description
0101	Relative to External Start Position. The target position is defined as: Target position = External start position + MT.P
0111	Relative to Feedback Position. The target position is defined as: Target position = PL.FB (→ p. 1094) + MT.P (→ p. 1061)

**Table 3: Next MT Start Type**

Bits 5, 6, 7, 8, 9	Description
00000	Switches over to next MT after stopping. After an MT ends, the next MT starts immediately.
00001	Switches over to next MT after stopping and delay. After an MT ends, the MT following time (MT.TNEXT (→ p. 1066)) elapse in order to start the next MT.
00010	Switches over to next MT after stopping and external event. After an MT ends, an external event (such as a high digital input) must occur in order to start the next MT.
00011	Switches over to next MT after stopping, delay, and external event. After an MT ends, the MT.TNEXT (→ p. 1066) must elapse and an external event (such as a high digital input) must occur in order to start the next MT.
00111	Switches over to next MT after stopping, then delay or external event. After an MT ends, the MT.TNEXT (→ p. 1066) must elapse or an external event (such as a high digital input) must occur in order to start the next MT.
10000	Switches over to the next MT at present MT speed (change on the fly). After reaching the target position of an MT, the next MT starts. The drive then accelerates with the adjusted acceleration ramp of this next MT to the target velocity of this next MT. The MT.TNEXT (→ p. 1066) setting is ignored.
11000	Switches over to the next MT at next MT speed (change on the fly). When the target position of an MT is reached, the drive has already accelerated with the acceleration ramp of the next MT to the target velocity of the next MT. Thus, the drive begins the next MT at the next MT target velocity. The MT.TNEXT (→ p. 1066) setting is ignored if adjusted.

**Table 4: MT Acceleration Type**

Bits 10, 11	Description
00	Trapezoidal acceleration and deceleration.
01	1:1 motion profile table motion task. The drive follows the customer motion profile table without inserting a constant velocity phase between the acceleration and deceleration process. This setting allows the usage of nonsymmetric velocity profiles. The MT.TNUM parameter defines which table to use for the 1:1 profile handling.
11	Standard motion profile table motion task. The drive accelerates according to the shape of the motion profile table by stepping through the first half of the customer table. Then the drive inserts a constant velocity phase until the brake point is reached. Finally, the drive decelerates by stepping through the second half of the customer profile table. The MT.TNUM parameter defines which table to use for the 1:1 profile handling. This mode allows also a change on the fly between motion tasks (see Table 3 above). See "AKD Customer Profile Application Note" on the Kollmorgen web site ( <a href="http://www.kollmorgen.com">www.kollmorgen.com</a> ) for additional details.

## Related Topics

Motion Tasks (→ p. 162)

Fixed Stop (→ p. 167)

## 25.30.4 MT.CONTINUE

General Information	
Type	Command
Description	Continues a stopped motion task; active in opmode 2 (position) only.
Units	N/A
Range	N/A
Default Value	0
Data Type	N/A
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC (→ p. 1036) MT.V (→ p. 1074), MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058) MT.MTNEXT (→ p. 1058), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2267	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	534	No	Command	No	M_01-03-00-000

### Description

MT.CONTINUE continues a motion task that has been stopped by the DRV.STOP command.

### Related Topics

Motion Tasks (→ p. 162)

## 25.30.5 MT.DEC

General Information	
Type	R/W Parameter
Description	Sets motion task deceleration; active in opmode 2 (position) only.
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rps/s, rpm/s, deg/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup> , rad/s <sup>2</sup> Linear: counts/s <sup>2</sup> , mm/s <sup>2</sup> , µm/s <sup>2</sup> , (Custom Units (→ p. 100))/s <sup>2</sup>
Range	Rotary: 0.002 to 833,333.333 rps/s 0.112 to 50,000,000.000 rpm/s 0.009 to 300,000,000.000 deg/s <sup>2</sup> 0.155 to 4,166,666.752 (Custom Units (→ p. 100))/s <sup>2</sup> 0.012 to 5,235,987.968 rad/s <sup>2</sup> Linear: 16,000.000 to 3,579,139,408,000.000 counts/s <sup>2</sup> 0.031*MOTOR.PITCH (→ p. 1001) to 833333.333*MOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 30.994*MOTOR.PITCH (→ p. 1001) to 833333333.333*MOTOR.PITCH (→ p. 1001) µm/s <sup>2</sup> 0.155 to 4166666.667 (Custom Units (→ p. 100))/s <sup>2</sup>
Default Value	Rotary: 166.669 rps/s 10,000.000 rpm/s 60,000.000 deg/s <sup>2</sup> 833.333 (Custom Units (→ p. 100))/s <sup>2</sup> 1,047.2 rad/s <sup>2</sup> Linear: 715,840,000.000 counts/s <sup>2</sup> 166.714*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) mm/s <sup>2</sup> 166,714.191*MOTOR.PITCHMOTOR.PITCH (→ p. 1001) µm/s <sup>2</sup> 833.571 (Custom Units (→ p. 100))/s <sup>2</sup>
Data Type	Float
See Also	MT.ACC (→ p. 1036), MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes

Variant	Supported
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	6084h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2268	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	536	Yes	64 bit	No	M_01-03-00-000

## Description

MT.DEC specifies the motion task deceleration and is used by the MT.SET (→ p. 1064) and MT.LOAD (→ p. 1054) commands. This parameter is a temporary value, since a motion task is only set after an MT.SET command is issued. The motion task deceleration is further limited by the maximum allowed acceleration, DRV.DEC.

A value of 0 for MT.DEC should not be used when setting a motion task via MT.SET because this value causes a validity check of the MT.SET command to fail.

A value of 0 for MT.DEC after an MT.LOAD (→ p. 1054) command displays an empty (not initialized) motion task.

## Related Topics

Motion Tasks (→ p. 162)

## 25.30.6 MT.EMERGMT

General Information	
Type	R/W Parameter
Description	Selects a motion task to be triggered after an emergency stop procedure; active in opmode 2 (position) only.
Units	N/A
Range	1 to 128
Default Value	0
Data Type	N/A
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC, MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2270	Word	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	540	No	16 bit	Yes	M_01-03-00-000

### Description

MT.EMERGMT selects the motion task to be triggered after an emergency stop procedure.

A value of -1 shows that no motion task must be started after a ramp-down procedure in a closed position loop mode of operation.

## **Related Topics**

Motion Tasks (→ p. 162)

## 25.30.7 MT.FEEDRATE

General Information	
Type	R/W Parameter
Description	Sets the motion tasking velocity scale. This can be set while a motion task is running (on the fly).
Units	Percent
Range	0.001 to 100
Default Value	100
Data Type	Float
Start Version	M_01-11-02-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

Use MT.FEEDRATE to dynamically change the speed of motion tasks while they are in motion. This is useful in applications like machine tooling where a manual over-ride may be present that can slow down or speed up a movement without stopping the machine, or stopping a sequence.

When the feedrate is changed, *only* velocity is scaled. Acceleration and deceleration are not scaled and maintain the value entered into the motion task.

### Related Topics

Motion Tasks (→ p. 162)

## 25.30.8 MT.FIXEDSTOPCURRENT

General Information	
Type	R/W Parameter
Description	Sets the current (torque) applied to the axis once a fixed stop is reached.
Units	Arms
Range	+ - Drive Peak Current (DRV.IPEAK)
Default Value	0
Data Type	Float
Start Version	M_01-13-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

Sets the current (torque) applied to the axis once a fixed stop has been reached. While a fixed stop motion task is running, the current limit (IL.LIMITP or IL.LIMITN depending on direction) will be overwritten by the value of MT.FIXEDSTOPCURRENT. Once the motion task has completed, the current limit is restored to its previous value.

If the fixed stop current is not reached when the fixed stop condition is met (position loop error (PL.ERR) equals MT.FIXEDSTOPFOLLOWINGERROR) warning 178 is generated.

### Related Topics

Motion Tasks (→ p. 162)

Fixed Stop (→ p. 167)

MT.FIXEDSTOPMONITORWINDOW (→ p. 1052)

MT.FIXEDSTOPFOLLOWINGERROR (→ p. 1051)

## 25.30.9 MT.FIXEDSTOPFOLLOWINGERROR

General Information	
Type	R/W Parameter
Description	Sets the following error the axis must reach to determine that it has reached a fixed stop.
Units	Depends onUNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225).
Range	N/A
Default Value	0
Data Type	Float
Start Version	M_01-13-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

MT.FIXEDSTOPFOLLOWINGERROR sets a Motion Task to stop at a fixed stop. The following error argument specifies the position error the axis has to reach before the drive determines it has reached a fixed stop.

### Related Topics

Motion Tasks (→ p. 162)

Fixed Stop (→ p. 167)

MT.FIXEDSTOPMONITORWINDOW (→ p. 1052)

MT.FIXEDSTOPCURRENT (→ p. 1050)

## 25.30.10 MT.FIXEDSTOPMONITORWINDOW

General Information	
Type	R/W
Description	Sets the position window around the fixed stop which monitors whether the fixed stop has broken off or slipped.
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225).
Range	N/A
Default Value	0
Data Type	Float
Start Version	M_01-13-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

MT.FIXEDSTOPMONITORWINDOW specifies the window in position units within which the axis should remain. If the axis reaches a position outside this window, the fixed stop has either broken off or the fixed stop has slipped or moved (a part being milled moves). Fault 176 is triggered when the position is outside the window. Configure [FAULT176.ACTION](#) to determine whether the fault returns a fault, warning, or whether the fault is ignored. After a fault or warning the axis will return to normal position loop control.

### Related Topics

Motion Tasks (→ p. 162)

Fixed Stop (→ p. 167)

MT.FIXEDSTOPFOLLOWINGERROR (→ p. 1051)

MT.FIXEDSTOPCURRENT (→ p. 1050)

## 25.30.11 MT.LIST

General Information	
Type	Command
Description	Lists all initialized motion tasks in the drive; active in opmode 2 (position) only.
Units	N/A
Range	0
Default Value	N/A
Data Type	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC, MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
See Also	M_01-00-00-000
Start Version	N/A

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

MT.LIST reads every initialized motion task from the drive. A motion task consists of the following parameters: MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC, MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), and MT.TNEXT (→ p. 1066).

A motion task is considered as initialized as soon as MT.V (→ p. 1074), MT.ACC, and MT.DEC (→ p. 1045) of that specific motion task have values not equal to 0.

### Related Topics

Motion Tasks (→ p. 162)

## 25.30.12 MT.LOAD

General Information	
Type	Command
Description	Reads/loads a motion task number from the drive; active in opmode 2 (position) only.
Units	N/A
Range	N/A
Default Value	0
Data Type	N/A
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC, MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2271	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	542	No	Command	No	M_01-03-00-000

### Description

MT.LOAD (→ p. 1054) reads out a motion task number MT.NUM (→ p. 1060) from the drive. A motion task consists of the following parameters: MT.NUM, MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC, MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066). These parameters belong to the motion task number MT.NUM and are refreshed by MT.LOAD.

## **Related Topics**

Motion Tasks (→ p. 162)

## 25.30.13 MT.MOVE

General Information	
Type	Command
Description	Starts a motion task; active in opmode 2 (position) only.
Units	N/A
Range	N/A
Default Value	0
Data Type	N/A
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC, MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2272	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	544	No	Command	No	M_01-03-00-000

### Description

MT.MOVE starts a motion task. This command needs one argument in order to start a motion task. The drive must be homed, otherwise the motion task will not start (see also HOME commands).

### Example

MT.MOVE 3 -> Start motion task number 3.

## Related Topics

Motion Tasks (→ p. 162)

Digital Inputs and Outputs (→ p. 104) in Digital Inputs and Outputs (→ p. 104) (see also **Modes 3: Motion Task Select Bit** and **Mode 4: Motion Task Start Selected** in this topic)

## 25.30.14 MT.MTNEXT

General Information	
Type	R/W Parameter
Description	Specifies following motion task number; active in opmode 2 (position) only.
Units	N/A
Range	0 to 128
Default Value	0
Data Type	Integer
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC, MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35BCh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2273	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	546	No	8 bit	No	M_01-03-00-000

### Description

MT.MTNEXT specifies the number of the following motion task and is used by the MT.SET (→ p. 1064) and MT.LOAD (→ p. 1054) command. This parameter is a temporary value. A motion task is only set after an MT.SET (→ p. 1064) command.

The motion task control word can be selected so that a following motion task is executed after a first motion task. This parameter displays which motion task should be started after the first motion task.

## **Related Topics**

Motion Tasks (→ p. 162)

## 25.30.15 MT.NUM

General Information	
Type	R/W Parameter
Description	Sets the motion task number; active in opmode 2 (position) only.
Units	N/A
Range	0 to 128
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	365Bh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2274	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	548	No	8 bit	No	M_01-03-00-000

### Description

MT.NUM (→ p. 1060) specifies the motion task number, which is used by the MT.SET (→ p. 1064) and MT.LOAD (→ p. 1054) commands. This parameter is a temporary value. A motion task is only set after an MT.SET (→ p. 1064) command is issued.

### Related Topics

Motion Tasks (→ p. 162)

## 25.30.16 MT.P

General Information	
Type	R/W Parameter
Description	Sets the motion task position; active in opmode 2 (position) only.
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR
Range	N/A
Default Value	0
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	607Ah/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2275	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	550	Yes	64 bit	Yes	M_01-03-00-000

### Description

MT.P specifies the motion task position, which is used by the MT.SET (→ p. 1064) and MT.LOAD (→ p. 1054) command. Depending on the motion task control word (MT.CNTL), the MT.P command can either be the target position of the motion task or a relative distance. This parameter is a temporary value. A motion task is only set after an MT.SET (→ p. 1064) command.

### Related Topics

Motion Tasks (→ p. 162)

## 25.30.17 MT.PARAMS

General Information	
Type	Command
Description	Shows a motion task; active in opmode 2 (position) only.
Units	N/A
Range	N/A
Default Value	0
Data Type	N/A
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC, MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

MT.PARAMS displays a motion task. This command needs one argument in order to show a motion task. If you enter MT.PARAMS without an argument, the drive returns the current or last active motion task.

### Example

MT.PARAMS 5

The drive responds as follows:

```
7 5222.000 Counts 135.000 rpm 1 550.746 rpm/s 654.458
rpm/s 0 0 0 ms
```

### Related Topics

Motion Tasks (→ p. 162)

## 25.30.18 MT.SET

General Information	
Type	Command
Description	Sets the motion task in the drive; active in opmode 2 (position) only.
Units	N/A
Range	N/A
Default Value	0
Data Type	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3431h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2277	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	554	No	Command	No	M_01-03-00-000

### Description

MT.SET sends a motion task to the drive. A motion task consists of the following parameters: MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC, MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), and MT.TNEXT (→ p. 1066).

The motion task number (MT.NUM (→ p. 1060)) with the parameters above is sent to the drive only after the MT.SET command.

## **Related Topics**

Motion Tasks (→ p. 162)

## 25.30.19 MT.TNEXT

General Information	
Type	R/W Parameter
Description	Specifies following motion task time; active in opmode 2 (position) only.
Units	ms
Range	0 to 65,535 ms
Default Value	0 ms
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35BDh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2278	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	556	No	16 bit	No	M_01-03-00-000

### Description

MT.TNEXT specifies the time that must elapse before starting a following motion task. This value is used by the MT.SET (→ p. 1064) and MT.LOAD (→ p. 1054) command. This parameter is a temporary value. A motion task is only set after an MT.SET (→ p. 1064) command.

The motion task control word can be selected so that a following motion task is executed after a first motion task and this additional delay time.

## **Related Topics**

Motion Tasks (→ p. 162)

## 25.30.20 MT.TNUM

General Information	
Type	R/W Parameter
Description	Sets the motion task customer table number; active in opmode 2 (position) only.
Units	N/A
Range	0 to 7
Default Value	0
Data Type	Integer
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.V (→ p. 1074), MT.CNTL (→ p. 1040), MT.ACC, MT.DEC (→ p. 1045), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2279	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	558	No	8 bit	No	M_01-03-00-000

### Description

MT.TNUM (→ p. 1068) specifies the customer profile table and is used by the MT.SET (→ p. 1064) and MT.LOAD (→ p. 1054) command. This parameter is a temporary value. A motion task is only set after an MT.SET (→ p. 1064) command.

The drive can have up to eight customer specific profile tables. The drive performs an S-curve acceleration with these profile tables. The shapes of these tables have an impact on the shape of the motion

task acceleration and deceleration. The motion task control word specifies if a customer profile table is used or not.

This parameter has no impact when a trapezoidal motion task acceleration and deceleration profile is selected (see Table 4: MT Acceleration Type (→ p. 1042) in the MT.CNTL description).

## **Related Topics**

Motion Tasks (→ p. 162)

## 25.30.21 MT.TNVSAVE

General Information	
Type	Command
Description	Saves the motion profile tables to the nonvolatile memory.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-04-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This command saves all motion profile tables, which are used for motion tasking, to the nonvolatile memory. The nonvolatile memory for these tables can be cleared by triggering this command while no motion profile table is available in the volatile memory (empty array in the volatile memory). The nonvolatile memory for these tables can be deleted as follows:

```
-->MT.TDWNLDS 1
-->MT.TDWNLDS 2
-->MT.TNVSAVE
```

The first two commands are needed in order to delete all motion profile tables in the volatile memory. The following MT.TNVSAVE command detects that there is no data available in the volatile memory and therefore deletes the nonvolatile memory sector.

WorkBench also uses this command for the firmware download procedure.

## 25.30.22 MT.TPOSWND

General Information	
Type	R/W Parameter
Description	Sets the motion task target position window; active in opmode 2 (position) only.
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225) Rotary: counts, rad, deg, Custom Units (→ p. 100), 16-bit counts Linear: counts, mm, µm, Custom Units (→ p. 100), 16-bit counts
Range	N/A
Default Value	0.5 rev
Data Type	Float
See Also	DRV.MOTIONSTAT (→ p. 672)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35C6h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2280	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	560	Yes	64 bit	Yes	M_01-03-00-000

### Description

Within DRV.MOTIONSTAT, MT.TPOSWND is used to indicate that the target position of a motion task has been reached. DRV.MOTIONSTAT displays a "Target Position Reached" bit as soon as the following statement becomes true:

$\text{abs}(\text{actual\_position} - \text{target\_position}) < \text{MT.TPOSWND}$

**NOTE**

Digital output modes 3 and 17 (MT in Position) are almost identical. Mode 17 will trigger as soon as the load is in the position window, whereas Mode 3 will wait until the trajectory is complete before monitoring the window. Mode 17 may signal faster because of this, and can also potentially bounce out of the window temporarily.

**Related Topics**

Motion Tasks (→ p. 162)

## 25.30.23 MT.TVELWND

General Information	
Type	R/W Parameter
Description	Sets the motion task target velocity window; active in opmode 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, Custom Units (→ p. 100)/s, rad/s Linear: Counts/s, mm/s, µm/s, Custom Units (→ p. 100)/s
Range	Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 deg/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s 0.000 to 1,570.796 rad/s Linear: 0.000 to 1,073,741,824,000.000 counts/s 0.000 to 250.000*MOTOR.PITCH (→ p. 1001) mm/s 0.000 to 250,000.000*MOTOR.PITCH (→ p. 1001) µm/sec 0.000 to 1,250.000 Custom Units (→ p. 100)/s
Default Value	Rotary: 60.000 rpm 1.000 rps 359.999 deg/s 5.000 Custom Units (→ p. 100)/s 6.283 rad/s Linear: 0.001 counts/s 1.000*MOTOR.PITCH (→ p. 1001) mm/s 999.998*MOTOR.PITCH (→ p. 1001) µm/sec 5.000 Custom Units (→ p. 100)/s
Data Type	Float
See Also	DRV.MOTIONSTAT
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes

Variant	Supported
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3856h/0	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	MT.TVELWND_32	2282	DWord	No
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	564	No	32 bit	No	M_01-03-00-000

## Description

Within DRV.MOTIONSTAT (→ p. 672), MT.TVELWND is used to indicate that the target velocity of a motion task has been reached. DRV.MOTIONSTAT (→ p. 672) displays a "Target Velocity Reached" bit as soon as the following statement becomes true:

$(\text{target velocity} - \text{MT.TVELWND}) < \text{actual velocity} < (\text{target velocity} + \text{MT})$

## Related Topics

Motion Tasks (→ p. 162)

## 25.30.24 MT.V

General Information	
Type	R/W Parameter
Description	Sets the motion task velocity; active in opmode 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, Custom Units (→ p. 100)/s, rad/s Linear: counts/s, mm/s, µm/s, Custom Units (→ p. 100)/s
Range	Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 deg/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s 0.000 to 1,570.796 rad/s Linear: 0.000 to 1,073,741,824,000.000 counts/s 0.000 to 250.000*MOTOR.PITCH (→ p. 1001) mm/s 0.000 to 250,000.000*MOTOR.PITCH (→ p. 1001) µm/sec 0.000 to 1,250.000 Custom Units (→ p. 100)/s

General Information	
Default Value	0
Data Type	Float
See Also	MT.NUM (→ p. 1060), MT.P (→ p. 1061), MT.CNTL (→ p. 1040), MT.ACC (→ p. 1036), MT.DEC (→ p. 1045), MT.TNUM (→ p. 1068), MT.MTNEXT (→ p. 1058), MT.TNEXT (→ p. 1066), MT.SET (→ p. 1064), MT.LOAD (→ p. 1054)
Start Version	M_01-00-00-000

## Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	6081h/0	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	MT.V_32	2283	DWord	No
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	566	Yes	Low 32 bit word	No	M_01-03-00-000

## Description

MT.V specifies the motion task velocity, which is used by the MT.SET (→ p. 1064) and MT.LOAD (→ p. 1054) command. This parameter is a temporary value. A motion task is only set after an MT.SET (→ p. 1064) command. The motion task velocity is furthermore limited by VL.LIMITP or VL.LIMITN depending on the direction of the motion task.

A value of 0 should not be used when setting a motion task via MT.SET (→ p. 1064) because this value causes a validity check of the MT.SET (→ p. 1064) command to fail.

A value of 0 after an MT.LOAD (→ p. 1054) command displays an empty (not initialized) motion task.

## Related Topics

Motion Tasks (→ p. 162)

## 25.30.25 MT.VCMD

General Information	
Type	R/O Parameter
Description	Reads the derivative of PL.CMD; active in opmode 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231)
Range	N/A
Default Value	N/A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	MT.VCMD_32	2284	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	568	Yes	Low 32 bit word	Yes	M_01-03-00-000

### Description

MT.VCMD returns the derivative of the position loop trajectory (PL.CMD), which is therefore a velocity. MT.VCMD is updated while the drive is in DRV.OPMODE 2 and is processing the following motion types:

- Motion tasking
- Homing
- Electronic gearing

- Service motion
- External trajectory coming from a fieldbus
- External trajectory calculated from an analog input signal

## **Related Topics**

Motion Tasks (→ p. 162)

## 25.31 NSD Parameters

This section describes the NSD parameters.

---

<b>25.31.1 NSD.CPSMACADDRESS</b> .....	<b>1080</b>
<b>25.31.2 NSD.NODEID</b> .....	<b>1081</b>
<b>25.31.3 NSD.STRINGID</b> .....	<b>1082</b>

## 25.31.1 NSD.CPSMACADDRESS

General Information	
Type	R/O Parameter
Description	Returns the connected CPS's MAC address to the NSD's terminal.
Units	N/A
Range	N/A
Default Value	00-00-00-00-00
Data Type	String
Start Version	M_01-09-05-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	Yes
AKD-C	No

### Description

This parameter returns the connected CPS's MAC address to the NSD's terminal.

### Related Topics

The AKD-N Family of Digital Drives (→ p. 33) | NSD.NODEID (→ p. 1081) | NSD.NODEID (→ p. 1081)

## 25.31.2 NSD.NODEID

General Information	
Type	R/O Parameter
Description	Returns the Node ID of the NSD on the given CPS string.
Units	N/A
Range	1 to 8
Default Value	1
Data Type	Integer
Start Version	M_01-09-05-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	Yes
AKD-C	No

### Description

This parameter returns the Node ID of the NSD. This gives the relationship of where the NSD is to other NSDs on a given CPS String. A maximum of 8 NSDs can be placed on a CPS String.

### Related Topics

The AKD-N Family of Digital Drives (→ p. 33) | NSD.CPSMACADDRESS (→ p. 1080) | NSD.STRINGID (→ p. 1082)

## 25.31.3 NSD.STRINGID

General Information	
Type	R/O Parameter
Description	Returns the String ID of the NSD.
Units	N/A
Range	1 to 2
Default Value	1
Data Type	Integer
Start Version	M_01-09-05-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	Yes
AKD-C	No

### Description

This parameter returns the String ID of the NSD. Each CPS can have two strings. Each CPS string can have up to eight NSDs placed on it.

### Related Topics

The AKD-N Family of Digital Drives (→ p. 33) | NSD.NODEID (→ p. 1081) | NSD.CPSMACADDRESS (→ p. 1080)

## 25.32 PL Parameters

This section describes the PL parameters.

---

<b>25.32.1 PL.CMD</b> .....	<b>1084</b>
<b>25.32.2 PL.ERR</b> .....	<b>1086</b>
<b>25.32.3 PL.ERRFTHRESH</b> .....	<b>1088</b>
<b>25.32.4 PL.ERRMODE</b> .....	<b>1090</b>
<b>25.32.5 PL.ERRWTHRESH</b> .....	<b>1092</b>
<b>25.32.6 PL.FB</b> .....	<b>1094</b>
<b>25.32.7 PL.FBSOURCE</b> .....	<b>1096</b>
<b>25.32.8 PL.FILTERTIME</b> .....	<b>1098</b>
<b>25.32.9 PL.INTINMAX</b> .....	<b>1099</b>
<b>25.32.10 PL.INTOUTMAX</b> .....	<b>1101</b>
<b>25.32.11 PL.KI</b> .....	<b>1103</b>
<b>25.32.12 PL.KP</b> .....	<b>1105</b>
<b>25.32.13 PL.MODP1</b> .....	<b>1107</b>
<b>25.32.14 PL.MODP2</b> .....	<b>1109</b>
<b>25.32.15 PL.MODPDIR</b> .....	<b>1111</b>
<b>25.32.16 PL.MODPEN</b> .....	<b>1113</b>

## 25.32.1 PL.CMD

General Information	
Type	R/O Parameter
Description	Reads the position command directly from the entry to the position loop.
Units	Depends on UNIT.PLINEAR (→ p. 1225) or UNIT.PROTARY (→ p. 1229) Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, μm, (custom units), 16-bit counts
Range	N/A
Default Value	N/A
Data Type	Float
See Also	PL.FB (→ p. 1094)
Start Version	M_01-00-00-000

AKD BASIC Information	
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2285	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	570	Yes	64 bit	No	M_01-03-00-000

### Description

PL.CMD reads the position command as it is received in the position loop entry.

### Related Topics

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090) |  
PL.ERRWTHRESH (→ p. 1092)

14.5 Position Loop

## 25.32.2 PL.ERR

General Information	
Type	R/O Parameter
Description	Reads the position error present when the drive is controlling the position loop.
Units	counts, rad, deg, (custom units)
Range	N/A
Default Value	N/A
Data Type	Float
See Also	PL.FB (→ p. 1094)
Start Version	M_01-00-00-000

AKD BASIC Information	
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35C5h/0 60F4h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2287	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	574	Yes	64 bit	No	M_01-03-00-000

### Description

PL.ERR reads the position error present when the drive is controlling the position loop. PL.ERR is the difference between the actual position of the motor shaft (PL.FB (→ p. 1094)) and the commanded position of the drive (PL.CMD (→ p. 1084)). If the drive is not in the position operating mode (DRV.OPMODE (→ p. 682) = 2), then the PL.ERR value is not generated by the drive and this parameter is read as 0.

## AKD BASIC Notes

### NOTE

When you enable the position error interrupt (by setting INTR.PL.ERR=1), the Position Error fault is disabled. In situations where it would have occurred, a position error interrupt is generated instead.

## Related Topics

PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090) | PL.ERRWTHRESH (→ p. 1092)

14.5 Position Loop

## 25.32.3 PL.ERRFTHRESH

General Information	
Type	NV Parameter
Description	Sets the maximum position error.
Units	Depends UNIT.ACCROTARY (→ p. 1220) on or UNIT.ACCLINEAR (→ p. 1218) Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, µm, (custom units), 16-bit counts
Range	Rotary: 0.000 to 5,123,372,000,000,005.000 counts 0.000 to 7,495,067.136 rad 0.000 to 429,436,076.032 deg 0.000 to 5,964,389.888 (custom units) 0.000 to 78,176,452,636.718 16-bit counts Linear: 0.000 to 5,123,372,000,000,005.000 counts 0.000 to 1,192,877.952*MOTOR.PITCH (→ p. 1001) mm 0.000 to 1,192,878,014.464*MOTOR.PITCH (→ p. 1001) µm 0.000 to 5,964,389.888 (custom units) 0.000 to 78,176,452,636.718 16-bit counts
Default Value	Rotary: 42,949,672,960.000 counts 62.832 rad 3,600.000 deg 50.000 (custom units) 655,360.000 16-bit counts Linear: 42,949,672,960.000 counts 10.000*MOTOR.PITCHMOTOR.PITCH (→ p. 1001)mm 10,000.000*MOTOR.PITCH µm 50.000 (custom units) 655,360.000 16-bit counts
Data Type	Float
See Also	PL.ERR
Start Version	M_01-00-00-000

### AKD BASIC Information

Data Type	Integer
-----------	---------

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes

Variant	Supported
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35C7h/0 6065h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2290	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	580	Yes	64 bit	No	M_01-03-00-000

## Description

This parameter sets the maximum position error. If the position error PL.ERR (→ p. 1086) is larger than PL.ERRFTHRESH the drive generates a fault. If PL.ERRFTHRESH is set to 0, the maximum position error is ignored.

## Example

Set position rotary units to 2 (degrees). Setting PL.ERRFTHRESH to 1000 states that if the position error is larger than 1000 degrees, the drive will generate a fault.

```
UNIT.PROTARY 2
```

```
PL.ERRFTHRESH 1000
```

## Related Topics

PL.ERR (→ p. 1086) | PL.ERRMODE (→ p. 1090) | PL.ERRWTHRESH (→ p. 1092)

14.5 Position Loop

## 25.32.4 PL.ERRMODE

General Information	
Type	NV Parameter
Description	Sets the type of following error warning and fault usage.
Units	0- Standard following error 1-Enhanced following error
Range	0 to 1
Default Value	0
Data Type	Boolean
See Also	PL.ERR (→ p. 1086), PL.ERRFTHRESH (→ p. 1088), PL.ERRWTHRESH (→ p. 1092)
Start Version	M_01-02-09-000

AKD BASIC Information	
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2289	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	578	No	8 bit	No	M_01-03-00-000

### Description

PL.ERRMODE sets the type of following error warning and fault usage.

**Mode 0 - following error magnitude fault**

In Mode 0, the values of PL.ERRFTHRESH and PL.ERRWTHRESH are compared against the value of PL.ERR. If the absolute value of PL.ERR is larger than PL.ERRWTHRESH, then a warning is generated. If the absolute value of PL.ERR is larger than PL.ERRFTHRESH, then a fault is generated.

#### **Mode 1 - deviation from predicted trajectory fault**

In Mode 1, the values of PL.ERRFTHRESH and PL.ERRWTHRESH are compared against the following value:

$$\text{<error>} = \text{abs}(\text{PL.ERR} - [ (\text{VL.CMD} - 1 * \text{VL.FF}) / \text{PL.KP} ] )$$

If the absolute value of <error> is larger than PL.ERRWTHRESH for a consecutive period of 100 ms, then a warning is generated. If the absolute value of <error> is larger than PL.ERRFTHRESH for a consecutive period of 100 ms, then a fault is generated.

In mode 1, if PL.KI is not 0 then the following error prediction mechanism is turned off. When the drive is disabled, the following error limit tests are turned off and the warnings are cleared. A value of 0 in PL.ERRFTHRESH or PL.ERRWTHRESH disables the respective functionality.

### **Example**

Assuming

PL.ERRMODE = 0, PL.ERRFTHRESH=1.2, PL.ERRWTHRESH=1, then PL.ERR reads 1.1.

In this case the warning is generated, but the fault is not.

Assuming PL.ERRMODE = 0, PL.ERRFTHRESH=1.2, PL.ERRWTHRESH=1, then PL.ERR reads 1.3.

In this case the warning is generated, as well as the fault.

### **Related Topics**

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRWTHRESH (→ p. 1092)

Position Loop (→ p. 145)

## 25.32.5 PL.ERRWTHRESH

General Information	
Type	NV Parameter
Description	Sets the position error warning level.
Units	Depends on UNIT.PLINEAR (→ p. 1225) or UNIT.PROTARY (→ p. 1229) Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, µm, (custom units), 16-bit counts
Range	Rotary: 0.000 to 5,123,372,000,000,005.000 counts 0.000 to 7,495,067.136 rad 0.000 to 429,436,076.032 deg 0.000 to 5,964,389.888 (custom units) 0.000 to 78,176,452,636.718 16-bit counts Linear: 0.000 to 5,123,372,000,000,005.000 counts 0.000 to 1,192,877.952*MOTOR.PITCH (→ p. 1001) mm 0.000 to 1,192,878,014.464*MOTOR.PITCH (→ p. 1001) µm 0.000 to 5,964,389.888 (custom units) 0.000 to 78,176,452,636.718 16-bit counts
Default Value	0.000 deg
Data Type	Float
See Also	PL.ERR (→ p. 1086)
Start Version	M_01-00-00-000

### AKD BASIC Information

Data Type	Integer
-----------	---------

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3483h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2292	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	584	Yes	64 bit	No	M_01-03-00-000

## Description

If this value is not equal 0 and the position error PL.ERR (→ p. 1086) is larger than this value, the drive will generate a warning.

If PL.ERRWTHRESH is set to 0 the warning is not issued.

## Example

Set position rotary units to 2 degrees. If you set PL.ERRWTHRESH to 100 and the position error is larger than 100 degrees, then the drive will generate a warning.

UNIT.PROTARY 2

PL.ERRWTHRESH 100

## Related Topics

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090)

14.5 Position Loop

## 25.32.6 PL.FB

General Information	
Type	R/O Parameter
Description	Reads the position feedback value.
Units	Depends on UNIT.PLINEAR (→ p. 1225) or UNIT.PROTARY (→ p. 1229) Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, µm, (custom units), 16-bit counts
Range	N/A
Default Value	N/A
Data Type	Float
See Also	FB1.OFFSET
Start Version	M_01-00-00-000

AKD BASIC Information	
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	6064h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2294	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	588	Yes	64 bit	Yes	M_01-03-00-000

## Description

PL.FB returns the position feedback value.

Note that this value is not the pure feedback value read from the feedback device, but also includes the value of the FB1.OFFSET and an internal offset set automatically by the FW when a homing switch is actuated.

## AKD BASIC Note

Note that this value is not the pure feedback value read from the feedback device, but also includes the value of the FB1.OFFSET and an internal offset set by the user. If a new value is written to MOVE.POSCOMMAND then PL.FB will be automatically changed such that PL.ERROR (the difference between them) is unchanged.

## Related Topics

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090) |

PL.ERRWTHRESH (→ p. 1092)

14.5 Position Loop

## 25.32.7 PL.FBSOURCE

General Information	
Type	NV Parameter
Description	Sets the feedback source for the position loop.
Units	N/A
Range	Range will differ depending on drive model. 0 to 1 (for AKD-x-xxxxx-NAxx-xxxx) 0 to 2 (for AKD-x-xxxxx-NBxx-xxxx)
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2296	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	592	No	8 bit	No	M_01-03-00-000

### Description

This parameter determines the feedback source that the position loop uses. A value of 0 for this parameter selects the primary feedback, a value of 1 selects the secondary feedback. If you use the secondary feedback as the source for the position loop, then FB2.MODE mode should be set as 0 (A/B signals). A/B signals are the only supported feedback type as secondary feedback into the position loop. Other settings for FB2.MODE are intended as pulse inputs or a gearing command when PL.FBSOURCE remains 0.

0	Primary Feedback connected to X10.
1	Secondary Feedback (DRV.HANDWHEEL) connected to X7 or X9.
2	Tertiary Feedback connected to X9 (only supported with AKD-x-xxxxx-NBxx-xxxx).

## Related Topics

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090) |

PL.ERRWTHRESH (→ p. 1092)

Position Loop (→ p. 145)

## 25.32.8 PL.FILTERTIME

General Information	
Type	R/W Parameter
Description	Sets the position command filter period.
Units	Milliseconds
Range	0, 0.5, 1, 2, 4, 8, 16, 32, 64, 128, 256, 512
Default Value	0
Data Type	Float
Start Version	M_01-08-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

PL.FILTERTIME sets the period of a "boxcar" moving average filter on the position command. When PL.FILTERTIME is greater than zero, the filter is active.

The moving average filter is applied to all Command Source types, but only active when the AKD is in Position mode.

This feature is typically used for smoothing abrupt changes in position command, or filtering coarse command steps from low resolution controllers, or electronic gearing.

#### NOTE

When the filter is on (PL.FILTERTIME > 0), total motion commanded will be delayed by the period the filter is set to.

### Related Topics

Electronic Gearing (→ p. 121)

## 25.32.9 PL.INTINMAX

General Information	
Type	NV Parameter
Description	Limits the input of the position loop integrator by setting the input saturation.
Units	Depends on UNIT.PLINEAR (→ p. 1225) or UNIT.PROTARY (→ p. 1229) Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, µm, (custom units), 16-bit counts
Range	Rotary: 0.000 to 18,446,744,073,709.000 counts 0.000 to 26,986.052 rad 0.000 to 1,546,188.288 deg 0.000 to 21,474.836 (custom units) 0.000 to 281,474,976.710 16-bit counts Linear: 0.000 to 18,446,744,073,709.000 counts 0.000 to 4,294.968*MOTOR.PITCH (→ p. 1001) mm 0.000 to 4,294,967.296*MOTOR.PITCH (→ p. 1001) µm 0.000 to 21,474.836 (custom units) 0.000 to 281,474,976.710 16-bit counts
Default Value	Rotary: 3,999,989,760.000 counts 5.852 rad 335.275 deg 4.657 (custom units) 61,035.000 16-bit counts Linear: 3,999,989,760.000 counts 0MOTOR.PITCH (→ p. 1001) mm 9MOTOR.PITCH (→ p. 1001) µm 4.657 (custom units) 61,035.000 16-bit counts
Data Type	Float
See Also	PL.FB
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes

Variant	Supported
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3481h/1	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2297	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	594	Yes	64 bit	No	M_01-03-00-000

## Description

PL.INTINMAX limits the input of the position loop integrator by setting the input saturation. When used in concert with PL.INSATOUT, this variable allows you to make the position loop integrator effective near the target position. Far from the target position, however, the integrator is not dominant in the loop dynamics.

## Related Topics

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090) | PL.ERRWTHRESH (→ p. 1092)

14.5 Position Loop

## 25.32.10 PL.INTOUTMAX

General Information	
Type	NV Parameter
Description	Limits the output of the position loop integrator by setting the output saturation.
Units	Depends on UNIT.PLINEAR (→ p. 1225) or UNIT.PROTARY (→ p. 1229) Rotary: counts, rad, deg, (custom units), 16-bit counts Linear: counts, mm, μm, (custom units), 16-bit counts
Range	Rotary: 0.000 to 18,446,744,073,709.000 counts 0.000 to 26,986.052 rad 0.000 to 1,546,188.288 deg 0.000 to 21,474.836 (custom units) 0.000 to 281,474,976.710 counts 16 bit Linear: 0.000 to 18,446,744,073,709.000 counts 0.000 to 4,294.968*MOTOR.PITCH (→ p. 1001) mm 0.000 to 4,294,967.296*MOTOR.PITCH μm 0.000 to 21,474.836 (custom units) 0.000 to 281,474,976.710 16-bit counts
Default Value	Rotary: 3,999,989,760.000 counts 5.852 rad 335.275 deg 4.657 (custom units) 61,035.000 16-bit counts Linear: 3,999,989,760.000 counts 0MOTOR.PITCH (→ p. 1001) mm 9MOTOR.PITCH (→ p. 1001) μm 4.657 (custom units) 61,035.000 16-bit counts
Data Type	Float
See Also	PL.INTINMAX
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes

Variant	Supported
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3481h/2	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2299	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	598	Yes	64 bit	No	M_01-03-00-000

## Description

PL.INTOUTMAX limits the output of the position loop integrator by setting the output saturation.

When used in concert with PL.INTINMAX, this variable allows you to make the position loop integrator effective near the target position. Far from the target position, however, the integrator is not dominant in the loop dynamics.

## Related Topics

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090) |  
 PL.ERRWTHRESH (→ p. 1092)

14.5 Position Loop

## 25.32.11 PL.KI

General Information	
Type	NV Parameter
Description	Sets the integral gain of the position loop.
Units	Hz
Range	0 to 250 Hz
Default Value	0 Hz
Data Type	Float
See Also	PL.KP, PL.KD
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3480h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2301	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	602	No	32 bit	No	M_01-03-00-000

### Description

PL.KI sets the integral gain of the position regulator PID loop.

### Related Topics

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090) |  
PL.ERRWTHRESH (→ p. 1092)

14.5 Position Loop

## 25.32.12 PL.KP

General Information	
Type	NV Parameter
Description	Sets the proportional gain of the position regulator PID loop.
Units	(rev/s)/rev
Range	0 to 2,147,483.008 (rev/s)/rev
Default Value	100 rps/rev
Data Type	Float
See Also	PL.KI (→ p. 1103),
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3542h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2302	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	604	No	32 bit	No	M_01-03-00-000

### Description

PL.KP sets the proportional gain of the position regulator PID loop.

### Related Topics

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090) |  
PL.ERRWTHRESH (→ p. 1092)

14.5 Position Loop

## 25.32.13 PL.MODP1

General Information	
Type	R/W parameter
Description	Sets modulo range parameter.
Units	Depends on UNIT.PROTARY (→ p. 1229) and UNIT.PLINEAR (→ p. 1225)
Range	N/A
Default Value	N/A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

AKD BASIC Information	
Type	R/O
Range	0

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3637h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2303	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	604	Yes	64 bit	Yes	M_01-03-00-000

### Description

This parameter is either the beginning or the end of the modulo range, depending on whether this value is smaller or larger than PL.MODP2. If you set PL.MODP1 equal to PL.MODP2, an error message occurs.

Condition	Beginning of the modulo-range	End of the modulo-range
PL.MODP1 < PL.MODP2	PL.MODP1	PL.MODP2
PL.MODP2 < PL.MODP1	PL.MODP2	PL.MODP1

## Related Topics

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090) |

PL.ERRWTHRESH (→ p. 1092)

Position Loop (→ p. 145)

## 25.32.14 PL.MODP2

General Information	
Type	R/W Parameter
Description	Sets the beginning or end modulo range parameter.
Units	Depends on UNIT.PROTARY (→ p. 1229) and UNIT.PLINEAR (→ p. 1225)
Range	N/A
Default Value	N/A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

AKD BASIC Information	
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3638h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2305	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	610	Yes	64 bit	Yes	M_01-03-00-000

### Description

This parameter is either the beginning or the end of the modulo range, depending on whether this value is smaller or larger than PL.MODP1 (→ p. 1107).

Condition	Beginning of the modulo range	End of the modulo range
PL.MODP1 < PL.MODP2	PL.MODP1	PL.MODP2
PL.MODP2 < PL.MODP1	PL.MODP2	PL.MODP1

## Related Topics

PL.ERR (→ p. 1086) | PL.ERRFTHRESH (→ p. 1088) | PL.ERRMODE (→ p. 1090) |

PL.ERRWTHRESH (→ p. 1092)

14.5 Position Loop

## 25.32.15 PL.MODPDIR

General Information	
Type	R/W Parameter
Description	Sets the direction for absolute motion tasks.
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3430h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2307	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	614	No	8 bit	No	M_01-03-00-000

### Description

This parameter defines the direction of an absolute motion task when the modulo position has been activated. For more details about absolute motion tasks, see .. For absolute motion tasks, you can only select a target position within the modulo range.

#### PL.MODPDIR Settings

Value	Motion	Description
0	Inside Range	The motor moves in a negative direction if the target position of the absolute motion task is less than the current position. The motor moves in positive direction if the target position of the absolute motion task is greater than the current position.
1	Positive	The motor always moves in a positive direction relative to the target position of the absolute motion task.
2	Negative	The motor always moves in a negative direction relative to the target position of the absolute motion task.
3	Shortest Distance	The motor always moves the shortest distance in order to reach the target position within the modulo-range.

## 25.32.16 PL.MODPEN

General Information	
Type	R/W Parameter
Description	Enables the modulo position.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35CFh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2308	Byte	No
sercos <sup>®</sup> III		2 Octets	


Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	616	No	8 bit	No	M_01-03-00-000

### Description

A value of 0 disables the modulo-position and a value of 1 enables the modulo-position feature. The modulo-position feature can be used for circular applications such as round tables.

The position loop of the drive uses always a linear position variable but the data-exchange between the user and the drive uses the modulo-position calculation in order to convert values from linear format into modulo format and vice versa.

The following figure shows the interface between the user and the drive for PL.MODPEN=1:

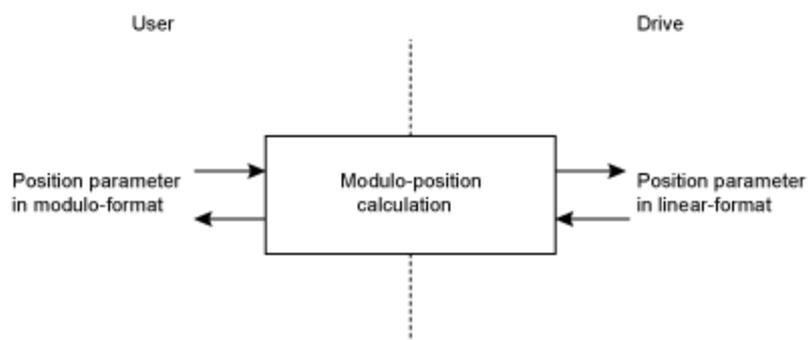

## Related Topics

Position Loop (→ p. 145)

## 25.33 PLS Parameters

This section describes the PLS parameters.

---

<b>25.33.1 PLS.EN</b> .....	<b>1116</b>
<b>25.33.2 PLS.MODE</b> .....	<b>1118</b>
<b>25.33.3 PLS.P1 TO PLS.P8</b> .....	<b>1120</b>
<b>25.33.4 PLS.RESET</b> .....	<b>1122</b>
<b>25.33.5 PLS.STATE</b> .....	<b>1124</b>
<b>25.33.6 PLS.T1 TO PLS.T8</b> .....	<b>1126</b>
<b>25.33.7 PLS.UNITS</b> .....	<b>1128</b>
<b>25.33.8 PLS.WIDTH1 TO PLS.WIDTH8</b> .....	<b>1131</b>

## 25.33.1 PLS.EN

General Information	
Type	R/W Parameter
Description	Enables programmable limit switch (PLS).
Units	N/A
Range	0 to 255
Default Value	0
Data Type	Integer
See Also	PLS.MODE (→ p. 1118), PLS.RESET, PLS.STATE, PLS.UNITS, PLS.P1 to PLS.P8, PLS.WIDTH1 to PLS.WIDTH8, PLS.T1 to PLS.T8
Start Version	M_01-02-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	34A3h/1	M_01-02-03-000

Fieldbus	Address	Attributes	Signed?
Profinet	2309	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	618	No	16 bit	No	M_01-03-00-000

### Description

PLS.EN is a bit variable which determines the mode of an individual PLS. Eight PLSs are available in the drive.

## Example

Bit Value	Behavior
Bit 0 = 0	Disables PLS 1
Bit 0 = 1	Enables PLS 1
Bit 7 = 0	Disables PLS 8
Bit 7 = 1	Enables PLS 8

## Related Topics

Programmable Limit Switch (→ p. 126)

## 25.33.2 PLS.MODE

General Information	
Type	R/W Parameter
Description	Selects programmable limit switch mode.
Units	N/A
Range	0 to 255
Default Value	0
Data Type	Integer
See Also	PLS.EN, PLS.RESET, PLS.STATE, PLS.UNITS, PLS.P1 to PLS.P8, PLS.WIDTH1 to PLS.WIDTH8, PLS.T1 to PLS.T8
Start Version	M_01-02-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	34A3h/3	M_01-02-03-000

Fieldbus	Address	Attributes	Signed?
Profinet	2310	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	620	No	16 bit	No	M_01-03-00-000

### Description

PLS.MODE is a bit variable which determines the mode of an individual PLS. Eight PLSs are available in the drive.

## Example

Bit Value	Behavior
Bit 0 = 0	PLS 1 is monitored continuously.
Bit 0 = 1	PLS 1 is monitored until it is triggered once (single-shot method). The PLS observation can be re-armed using the PLS.RESET command.
Bit 7 = 0	PLS 8 is monitored continuously.
Bit 7 = 1	PLS 8 is monitored until it is triggered once (single-shot method). The PLS observation can be re-armed using the PLS.RESET command.

## Related Topics

Programmable Limit Switch (→ p. 126)

## 25.33.3 PLS.P1 TO PLS.P8

General Information	
Type	R/W Parameter
Description	Sets the trigger point for programmable limit switches.
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225)
Range	N/A
Default Value	0
Data Type	Float
See Also	UNIT.PROTARY (→ p. 1229)
Start Version	M_01-02-03-000

AKD BASIC Information	
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	34A0h/1	PLS.P1	M_01-02-03-000
	34A0h/2	PLS.P2	
	34A0h/3	PLS.P3	
	34A0h/4	PLS.P4	
	34A0h/5	PLS.P5	
	34A0h/6	PLS.P6	
	34A0h/7	PLS.P7	
	34A0h/8	PLS.P8	

Parameter	Fieldbus	Address	Attributes	Signed?
PLS.P1	Profinet	2311	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
PLS.P2	Profinet	2313	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
PLS.P3	Profinet	2315	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
PLS.P4	Profinet	2317	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
PLS.P5	Profinet	2319	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
PLS.P6	Profinet	2321	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
PLS.P7	Profinet	2323	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
PLS.P8	Profinet	2325	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version	
Modbus	622	PLS.P1	Yes	64 bit	Yes	M_01-03-00-000
	626	PLS.P2				
	630	PLS.P3				
	634	PLS.P4				
	638	PLS.P5				
	642	PLS.P6				
	646	PLS.P7				
	650	PLS.P8				

## Description

PLS.P1 to PLS.P8 define the trigger point of the PLS. For further information about how these parameters affect PLS behavior, see the PLS.UNITS parameter description.

## Related Topics

Programmable Limit Switch (→ p. 126)

## 25.33.4 PLS.RESET

General Information	
Type	R/O Parameter
Description	Resets programmable limit switch.
Units	N/A
Range	0 to 255
Default Value	N/A
Data Type	Integer
See Also	PLS.EN, PLS.MODE, PLS.STATE, PLS.UNITS, PLS.Px (x=1...8), PLS.WIDTHx (x=1...8), PLS.Tx (x=1...8)
Start Version	M_01-02-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	34A3h/2	M_01-02-03-000

Fieldbus	Address	Attributes	Signed?
Profinet	2327	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	654	No	16 bit	No	M_01-03-00-000

### Description

This parameter is a bit variable and is used in order to re-arm the corresponding PLS.STATE observation for another single-shot PLS use (see also PLS.MODE).

## Example

Bit Value	Behavior
Bit 0 = 0	The PLS 1 observation (PLS.STATE bit 0) is not re-armed.
Bit 0 = 1	The PLS 1 observation (PLS.STATE bit 0) is re-armed.
Bit 7 = 0	The PLS 8 observation (PLS.STATE bit 7) is not re-armed.
Bit 7 = 1	The PLS 8 observation (PLS.STATE bit 7) is re-armed.

## Related Topics

Programmable Limit Switch (→ p. 126)

## 25.33.5 PLS.STATE

General Information	
Type	R/O Parameter
Description	Reads the programmable limit switch state.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
See Also	PLS.EN, PLS.RESET, PLS.UNITS, PLS.MODE, PLS.P1 TO PLS.P8, PLS.WIDTH1 TO PLS.WIDTH8, PLS.T1 TO PLS.T8
Start Version	M_01-02-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	34A3h/4	M_01-02-03-000

Fieldbus	Address	Attributes	Signed?
Profinet	2328	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	656	No	16 bit	No	M_01-03-00-000

### Description

This parameter is a bit variable and displays the current status of the individual programmable limit switches.

## Example

Bit 0 = 0: Programmable Limit Switch 1 (PLS 1) is not active.

Bit 0 = 1: Programmable Limit Switch 1 (PLS 1) is active.

Bit 7 = 0: Programmable Limit Switch 8 (PLS 8) is not active.

Bit 7 = 1: Programmable Limit Switch 8 (PLS 8) is not active.

## Related Topics

Programmable Limit Switch (→ p. 126)

## 25.33.6 PLS.T1 TO PLS.T8

General Information	
Type	R/W parameter
Description	Sets programmable limit switch time
Units	ms
Range	0 to 65,536 ms
Default Value	500 ms
Data Type	Integer
See Also	PLS.EN, PLS.RESET, PLS.STATE, PLS.UNITS, PLS.MODE, PLS.WIDTH1 TO PLS.WIDTH8, PLS.P1 TO PLS.P8
Start Version	M_01-02-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	34A2h/1	PLS.T1	M_01-02-03-000
	34A2h/2	PLS.T2	
	34A2h/3	PLS.T3	
	34A2h/4	PLS.T4	
	34A2h/5	PLS.T5	
	34A2h/6	PLS.T6	
	34A2h/7	PLS.T7	
	34A2h/8	PLS.T8	

Parameter	Fieldbus	Address	Attributes	Signed?
PLS.T1	Profinet	2329	Word	No
	sercos <sup>®</sup> III		2 Octets	
PLS.T2	Profinet	2330	Word	
	sercos <sup>®</sup> III		2 Octets	
PLS.T3	Profinet	2331	Word	
	sercos <sup>®</sup> III		2 Octets	
PLS.T4	Profinet	2332	Word	
	sercos <sup>®</sup> III		2 Octets	
PLS.T5	Profinet	2333	Word	
	sercos <sup>®</sup> III		2 Octets	
PLS.T6	Profinet	2334	Word	
	sercos <sup>®</sup> III		2 Octets	
PLS.T7	Profinet	2335	Word	
	sercos <sup>®</sup> III		2 Octets	
PLS.T8	Profinet	2336	Word	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version	
Modbus	658	PLS.T1	No	16 bit	No	M_01-03-00-000
	660	PLS.T2				
	662	PLS.T3				
	664	PLS.T4				
	666	PLS.T5				
	668	PLS.T6				
	670	PLS.T7				
	672	PLS.T8				

## Description

These parameters define the time of the PLS pulse for time-based PLS handling.

For further information about the PLS functionality, especially the meaning of the PLS.T1 to PLS.T8 parameter, refer to the PLS.UNITS parameter.

## Related Topics

Programmable Limit Switch (→ p. 126)

## 25.33.7 PLS.UNITS

General Information	
Type	R/W parameter
Description	Sets programmable limit switch (PLS) units.
Units	N/A
Range	0 to 255
Default Value	0
Data Type	Integer
See Also	PLS.EN (→ p. 1116), PLS.RESET (→ p. 1122), PLS.STATE (→ p. 1124), PLS.MODE (→ p. 1118), PLS.P1 TO PLS.P8 (→ p. 1120) PLS.WIDTH1 TO PLS.WIDTH8 (→ p. 1131), PLS.T1 TO PLS.T8 (→ p. 1126)
Start Version	M_01-02-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	34A4h/0	M_01-02-03-000

Fieldbus	Address	Attributes	Signed?
Profinet	2337	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	674	No	8 bit	No	M_01-03-00-000

### Description

PLS.UNITS is a bit variable which determines the behavior of the eight PLSs available in the drive. This parameter is used to select the units for the PLS pulse.

## Examples

Bit Value	Behavior
Bit 0 = 0 Position-based PLS handling.	The PLS.STATE parameter displays an active PLS 1 when the position is within the range of PLS.P1 + PLS.WIDTH1 ( $PLS.P1 \leq PL.FB \leq PLS.P1 + PLS.WIDTH1$ ). When the parameter PLS.WIDTH1 has been set to the value of 0, this bit will be activated as soon as $PLS.FB \geq PL.P1$ .
Bit 0 = 1 Time-based PLS handling.	After PLS.P1 is crossed, the PLS.STATE parameter displays an active PLS 1 for a PLS.T1 ms period of time.
Bit 7 = 0 Position-based PLS handling.	The PLS.STATE parameter displays an active PLS 8 when the position is within the range of PLS.P8 + PLS.WIDTH8 ( $PLS.P8 \leq PL.FB \leq PLS.P8 + PLS.WIDTH8$ ). When the parameter PLS.WIDTH8 has been set to the value of 0, this bit will be activated as soon as $PLS.FB \geq PL.P8$ .
Bit 7 = 1 Time-based PLS handling.	After PLS.P8 has been crossed, the PLS.STATE parameter displays an active PLS 8 for a PLS.T8 ms period of time.

### Continuous position-based PLS handling

PLS.P1 = 720

PLS.WIDTH1 = 360

PLS.UNITS bit 0 (for PLS 1) = low; PLS.T1 is not considered.

PLS.EN bit 0 (for PLS 1) = high

PLS.MODE bit 0 (for PLS 1) = low



### Time-based PLS handling


PLS.P1 = 720

PLS.T1 = 10

PLS.UNITS bit 0 (for PLS 1) = low; PLS.WIDTH1 is not considered.

PLS.EN bit 0 (for PLS 1) = high

PLS.MODE bit 0 (for PLS 1) = low

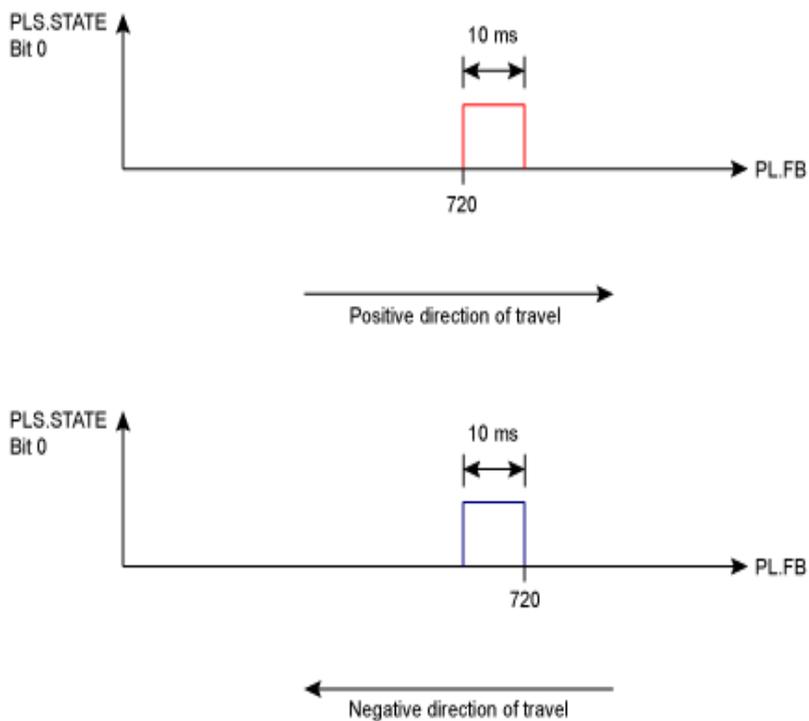

## Related Topics

Programmable Limit Switch (→ p. 126)

## 25.33.8 PLS.WIDTH1 TO PLS.WIDTH8

General Information	
Type	R/W parameter
Description	Programmable Limit Switch Width
Units	Depends on UNIT.PROTARY (→ p. 1229) or UNIT.PLINEAR (→ p. 1225)
Range	N/A
Default Value	0
Data Type	Float
See Also	PLS.EN, PLS.RESET, PLS.STATE, PLS.UNITS, PLS.MODE, PLS.P1 TO PLS.P8, PLS.T1 TO PLS T8
Start Version	M_01-02-03-000

AKD BASIC Information	
Data Type	Integer

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	34A1h/1	PLS.WIDTH1	M_01-02-03-000
	34A1h/2	PLS.WIDTH2	
	34A1h/3	PLS.WIDTH3	
	34A1h/4	PLS.WIDTH4	
	34A1h/5	PLS.WIDTH5	
	34A1h/6	PLS.WIDTH6	
	34A1h/7	PLS.WIDTH7	
	34A1h/8	PLS.WIDTH8	

Parameter	Fieldbus	Address	Attributes	Signed?
PLS.WIDTH1	Profinet	2338	DWord	Yes
	sercos <sup>®</sup> III		8 Octets	
PLS.WIDTH2	Profinet	2340	DWord	
	sercos <sup>®</sup> III		8 Octets	
PLS.WIDTH3	Profinet	2342	DWord	
	sercos <sup>®</sup> III		8 Octets	
PLS.WIDTH4	Profinet	2344	DWord	
	sercos <sup>®</sup> III		8 Octets	
PLS.WIDTH5	Profinet	2346	DWord	
	sercos <sup>®</sup> III		8 Octets	
PLS.WIDTH6	Profinet	2348	DWord	
	sercos <sup>®</sup> III		8 Octets	
PLS.WIDTH7	Profinet	2350	DWord	
	sercos <sup>®</sup> III		8 Octets	
PLS.WIDTH8	Profinet	2352	DWord	
	sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	676	PLS.WIDTH1	Yes	64 bit	Yes	M_01-03-00-000
	680	PLS.WIDTH2				
	684	PLS.WIDTH3				
	688	PLS.WIDTH4				
	692	PLS.WIDTH5				
	696	PLS.WIDTH6				
	700	PLS.WIDTH7				
	704	PLS.WIDTH8				

## Description

These parameter define the width of the PLS pulse for position-based PLS handling. For further information about the PLS functionality, especially the meaning of the PLS.WIDTH1 to PLS.WIDTH8 parameter, refer to the PLS.UNITS parameter.

## Related Topics

Programmable Limit Switch (→ p. 126)

## 25.34 REC Parameters

This section describes the REC parameters.

---

25.34.1 REC.ACTIVE .....	1134
25.34.2 REC.CH1 to REC.CH6 .....	1135
25.34.3 REC.DONE .....	1136
25.34.4 REC.GAP .....	1137
25.34.5 REC.NUMPOINTS .....	1138
25.34.6 REC.OFF .....	1139
25.34.7 REC.RECPRMLIST .....	1140
25.34.8 REC.RETRIEVE .....	1141
25.34.9 REC.RETRIEVEDATA .....	1142
25.34.10 REC.RETRIEVEFRMT .....	1144
25.34.11 REC.RETRIEVEHDR .....	1146
25.34.12 REC.RETRIEVESIZE .....	1147
25.34.13 REC.STOPTYPE .....	1148
25.34.14 REC.TRIG .....	1149
25.34.15 REC.TRIGPARAM .....	1150
25.34.16 REC.TRIGPOS .....	1151
25.34.17 REC.TRIGPRMLIST .....	1153
25.34.18 REC.TRIGSLOPE .....	1154
25.34.19 REC.TRIGTYPE .....	1155
25.34.20 REC.TRIGVAL .....	1157

## 25.34.1 REC.ACTIVE

General Information	
Type	R/O Parameter
Description	Indicates if data recording is in progress (active).
Units	N/A
Range	0 to 1
Default Value	N/A
Data Type	Integer
See Also	REC.DONE (→ p. 1136), REC.OFF (→ p. 1139)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2354	Byte	No
sercos <sup>®</sup> III		2 Octets	

### Description

REC.ACTIVE indicates whether or not data recording is in progress. Recording is in progress if the trigger was met and the recorder is recording all data.

### Related Topics

Scope (→ p. 236)

## 25.34.2 REC.CH1 to REC.CH6

General Information	
Type	R/W Parameter
Description	Sets recording channels 1 to 6.
Units	N/A
Range	N/A
Default Value	CH1 = IL.FB CH2 = IL.CMD CH3 = VL.FB CH4 = Empty CH5 = Empty CH6 = Empty
Data Type	String
See Also	REC.TRIG (→ p. 1149)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

REC.CHx specifies the recording channels.

There are 3 options to set the recording channels values:

- Set 0, CLR, or CLEAR. This setting clears the recording channel.
- Set one of the recordable commands. The list of recordable commands can be obtain by executing REC.RECPRMLIST (→ p. 1140).
- Set an internal value or variable of the drive (same as for DRV.MEMADDR (→ p. 669) input).

### Related Topics

Scope (→ p. 236)

## 25.34.3 REC.DONE

General Information	
Type	R/O Parameter
Description	Checks whether or not the recorder has finished recording.
Units	N/A
Range	0 to 1
Default Value	N/A
Data Type	Integer
See Also	REC.ACTIVE, REC.OFF
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2355	Byte	No
sercos <sup>®</sup> III		2 Octets	

### Description

REC.DONE indicates that the recorder has finished recording. This value is reset to 0 when the recorder trigger is set. The drive also resets this value when the recording has finished or when REC.OFF is executed.

### Related Topics

Scope (→ p. 236)

## 25.34.4 REC.GAP

General Information	
Type	R/W Parameter
Description	Specifies the gap between consecutive samples.
Units	N/A
Range	1 to 65,535
Default Value	1
Data Type	Integer
See Also	REC.TRIG (→ p. 1149)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2356	Word	No
sercos <sup>®</sup> III		2 Octets	

### Description

REC.GAP specifies the gap between consecutive samples. The recording base rate is 16 kHz, thus a gap of 1 means that a sample is recorded every 62.5  $\mu$ s.

### Related Topics

Scope (→ p. 236)

## 25.34.5 REC.NUMPOINTS

General Information	
Type	R/W Parameter
Description	Sets the number of points to record.
Units	N/A
Range	1 to 65,535
Default Value	1,000
Data Type	Integer
See Also	REC.TRIG (→ p. 1149)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2357	Word	No
sercos <sup>®</sup> III		2 Octets	

### Description

REC.NUMPOINTS specifies the number of points (samples) to record.

### Related Topics

Scope (→ p. 236)

## 25.34.6 REC.OFF

General Information	
Type	R/W Parameter
Description	Turns the recorder OFF.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	REC.ACTIVE, REC.DONE
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2358	Command	No
sercos <sup>®</sup> III			

### Description

REC.OFF turns the recorder off. In order to set the recorder again, the recorder must first be armed and then a trigger set.

### Related Topics

Scope (→ p. 236)

REC.READY

## 25.34.7 REC.RECPRMLIST

General Information	
Type	R/O Parameter
Description	Reads the list of recordable parameters.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	REC.CH1 to REC.CH6 (→ p. 1135)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This command returns the list of recordable parameters. You can use a recordable parameter as an input to any of the recording channels.

Note that an internal address or a registered variable can be used as input to any of the channels in addition to the list.

### Related Topics

Scope (→ p. 236)

## 25.34.8 REC.RETRIEVE

General Information	
Type	R/O Parameter
Description	Transfers all the recorded data to the communication channel.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

REC.RETRIEVE causes the drive to transfer all the recorded data to the communication channel.

### Example

The following format is the retrieve reply format (for N samples, G sample gap, and M parameters, where  $M \leq 6$ ):

```
Recording
<N>, <G>
<parameter name 1> ... <parameter name M>
Value11 ... Value1M
Value N1 ... ValueNM
```

### Related Topics

Scope (→ p. 236)

## 25.34.9 REC.RETRIEVEDATA

General Information	
Type	R/W Parameter
Description	Retrieves the recorded data without the header.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	REC.RETRIEVE, REC.RETRIEVEHDR, REC.RETRIEVESIZE
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

REC.RETRIEVEDATA retrieves a section of recorded data according to REC.RETRIEVESIZE from the received index; if no index is received, the drive retrieves the data from next section. An index is supplied to enable multiple retrieves and to give better control on the buffer in case of overflow. If no index or a negative value is present, then the index is ignored.

WorkBench uses this parameter to retrieve the data continuously for real time recoding.

The size of the data returned by this command depends on the number set by REC.RETRIEVESIZE.

Use REC.RETRIEVE for complete recording information view.

Notes:

- If REC.RETRIEVESIZE is larger than the buffer size, then it simply returns the whole buffer (no error).
- If the index is received, the data will be continuously returned starting from the given index (default starting index is 0).
- If the index is out of the bounds of the buffer, then it will be ignored.
- If recorder is active and REC.STOPTYPE==0, then this parameter returns an error.

- If REC.STOPTYPE==1, then this parameter returns the next section of data in the buffer (even if it reached the end of the buffer, it will return to the beginning of the buffer and add the data from index 0.)
- If REC.STOPTYPE==1 and the retrieve is too slow (gets overrun by the recorder), an overflow error message is returned instead of the retrieved data.
- If REC.STOPTYPE==0 and no index is received, continuously send the sections of data until the end of the buffer is reached. Then, return to the beginning of buffer and continue.
- A new REC.TRIG (→ p. 1149) command automatically sets the index to 0.

## Example

The following example retrieves data from index 100 in the size of 10 (hence places 100 to 109 in the buffer)

```
REC.NUMPOINTS 1000  
REC.RETRIVESIZE 10  
REC.TRIG  
REC.RETRIEVEDATA 100
```

## Related Topics

Scope (→ p. 236)

## 25.34.10 REC.RETRIEVEFRMT

General Information	
Type	R/W Parameter
Description	Sets the format for recorded data output.
Units	N/A
Range	0 to 1; 0 = Standard format, 1 = Internal format (high speed)
Default Value	1
Data Type	Integer
See Also	REC.RETRIEVE (→ p. 1141), REC.RETRIEVEDATA (→ p. 1142)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

Recorded data is transferred to the communication channel in one of two formats: standard or internal high speed. The standard (slower) format cannot be used for continuous recording, but is more easily read. The high speed format allows continuous data recording (needed for autotuning). WorkBench supports both formats.

### Example

The following recorder data is in standard format:

```
10,1
IL.FB,VL.CMD,VL.FB
-0.086,0.000,2.661
0.000,0.000,3.605
0.029,0.000,-0.486
```

The following recorder data is in internal format:

10,1

IL.FB,VL.CMD,VL.FB

F3-0x56,F30x0,F30xA65

F30x0,F30x0,F30xE15

F30x1D,F30x0,F3-0x1E6

## Related Topics

Scope (→ p. 236)

## 25.34.11 REC.RETRIEVEHDR

General Information	
Type	R/O Parameter
Description	Retrieves the recorded header without the data.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	REC.RETRIEVE, REC.RETRIEVEDATA
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This command retrieves the recorded header without the data of the recording.

WorkBench uses this parameter to retrieve the header once before continuously reading the data for RT recoding.

Use REC.RETRIEVE for complete recording information view.

### Related Topics

Scope (→ p. 236)

## 25.34.12 REC.RETRIEVESIZE

General Information	
Type	R/W Parameter
Description	Sets the number of samples that REC.RETRIEVEDATA returns.
Units	recorder samples
Range	0 to 65,535 recorder samples
Default Value	1,000 recorder samples
Data Type	Integer
See Also	REC.RETRIEVEDATA (→ p. 1142), REC.RETRIEVEHDR (→ p. 1146)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This parameter sets the number of samples that REC.RETRIEVEDATA (→ p. 1142) returns.

WorkBench also uses this parameter to set the number of samples returned when retrieving the data continuously for RT recoding.

Use REC.RETRIEVE (→ p. 1141) for the complete recording information view.

### Related Topics

Scope (→ p. 236)

## 25.34.13 REC.STOPTYPE

General Information	
Type	R/W Parameter
Description	Sets the recorder stop type.
Units	N/A
Range	0 or 1
Default Value	0
Data Type	Integer
See Also	REC.RETRIEVEDATA, REC.RETRIEVESIZE
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2359	Byte	No
sercos <sup>®</sup> III		2 Octets	

### Description

This parameter sets the stop type for the recording.

0 = Recorder fills in the buffer once.

1 = Recorder runs, continuously filling the recording circular buffer.

To stop RT recording, execute REC.OFF.

### Related Topics

Scope (→ p. 236)

## 25.34.14 REC.TRIG

General Information	
Type	Command
Description	Triggers the recorder.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	REC.RETRIEVE, REC.OFF
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2360	Command	No
sercos <sup>®</sup> III			

### Description

REC.TRIG starts the trigger according to the trigger type defined by REC.TRIGTYPE.

REC.TRIG sets the value of REC.DONE to 0.

After calling REC.TRIG, the data that was recorded by previous recording is deleted and cannot be retrieved.

No REC parameters can be set after a call to REC.TRIG until the recorder has finished or until REC.OFF is executed.

### Related Topics

Scope (→ p. 236)

## 25.34.15 REC.TRIGPARAM

General Information	
Type	R/W Parameter
Description	Sets the parameter that triggers the recorder.
Units	N/A
Range	N/A
Default Value	IL.FB
Data Type	String
See Also	REC.TRIG
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

REC.TRIGPARAM sets the parameter on which the recorder triggers.

This parameter is only used when REC.TRIGTYPE = 2.

Input values are:

1. One of the set drive parameters list that can be set as a trigger. The available parameters for trigger are: PL.ERR (→ p. 1086), PL.CMD, PL.FB, VL.CMD, VL.FB, IL.CMD, and IL.FB.
2. Internal value or variable of the drive (same as for DRV.MEMADDR input).

### Related Topics

Scope (→ p. 236)

## 25.34.16 REC.TRIGPOS

General Information	
Type	R/W Parameter
Description	Sets the trigger position in the recording buffer.
Units	%
Range	1 to 100%
Default Value	10%
Data Type	Integer
See Also	REC.TRIG (→ p. 1149), REC.NUMPOINTS (→ p. 1138)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2361	Byte	No
sercos <sup>®</sup> III		2 Octets	

### Description


REC.TRIGPOS sets the trigger position in the recording buffer. The recording buffer size is defined by REC.NUMPOINTS. The input value is a percentage of the buffer (that is, a value of 25 means saving 25% of the buffer data before the trigger occurs and 75% after it occurs). This parameter is only used when REC.TRIGTYPE = 2 or 3.

#### Trigger Position

Trigger position (REC.TRIGPOS) allows you to collect data that occurs before the trigger occurs. In some instances, you may want to see the conditions prior to the trigger. Trigger position lets you control how much signal is collected before the trigger condition occurred.

Trigger position is specified in units of percent (%). If you specify a trigger position of x% , then x% of the data is before 0 ms in the data time and 100-x% (the rest of the data) is at or greater than 0 ms. In the figure below, the trigger position is set to 25% (REC.TRIGPOS 25).

In the WorkBench scope, the 0 time point is clear. When collecting the data using REC.RETRIEVE or similar commands, the time is not returned, so some caution should be used when the trigger point is important to understand.

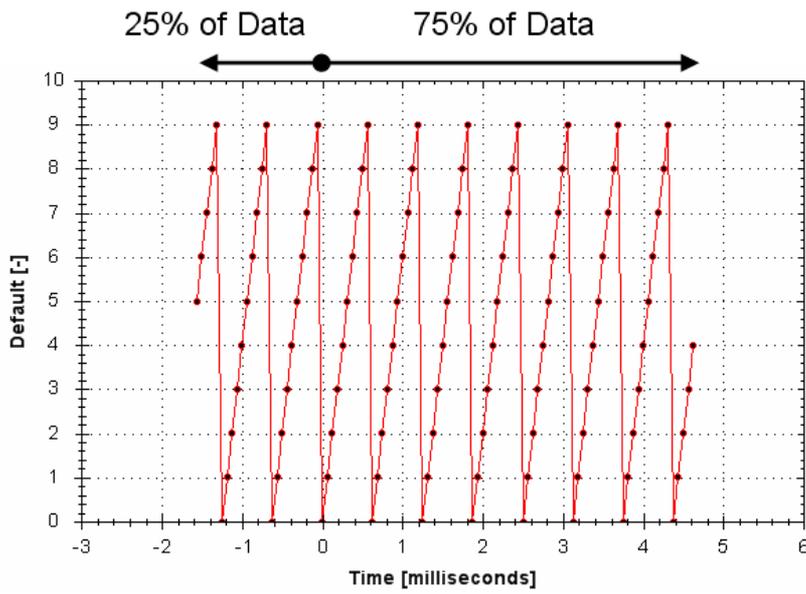

## Related Topics

Scope (→ p. 236)

## 25.34.17 REC.TRIGPRMLIST

General Information	
Type	R/O Parameter
Description	Reads the list of possible trigger parameters.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	REC.TRIGPARAM
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Description

This command returns the list of trigger parameters. Each one of those parameters can serve as the trigger parameter (input to REC.TRIGPARAM).

Note that an internal address or a registered variable can be used as input to REC.TRIGPARAM in addition to the list that this parameter returns.

### Related Topics

Scope (→ p. 236)

## 25.34.18 REC.TRIGSLOPE

General Information	
Type	R/W Parameter
Description	Sets the trigger slope.
Units	0 = Negative 1 = Positive
Range	0 to 1
Default Value	0
Data Type	Integer
See Also	REC.TRIG, REC.NUMPOINTS
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2363	Byte	No
sercos <sup>®</sup> III		2 Octets	

### Description

REC.TRIGSLOPE sets the recorder trigger slope. This parameter is only used when REC.TRIGTYPE = 2 or 3.

### Related Topics

Scope (→ p. 236)

## 25.34.19 REC.TRIGTYPE

General Information	
Type	R/W Parameter
Description	Sets the trigger type.
Units	0 = immediate 1 = command 2 = parameter 3 = boolean
Range	0 to 2
Default Value	0
Data Type	Integer
See Also	REC.TRIG (→ p. 1149), REC.TRIGPARAM, REC.TRIGVAL, REC.TRIGSLOPE REC.TRIGPOS
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2364	Byte	No
sercos <sup>®</sup> III		2 Octets	

### Description

REC.TRIGTYPE sets the type of trigger.

Input values are as follows:

Value	Description
0	Recording starts immediately

Value	Description
1	Recording starts on the next command executed through the TCP/IP. The trigger location in the buffer is set according to REC.TRIGPOS.
2	Recording starts per the values of REC.TRIGPARAM, REC.TRIGVAL, REC.TRIGSLOPE, and REC.TRIGPOS.
3	Recording starts when the value of REC.TRIGPARAM is 0 for REC.TRIGSLOPE = 0 or 1 for REC.TRIGSLOPE = 1

## Related Topics

Scope (→ p. 236)

## 25.34.20 REC.TRIGVAL

General Information	
Type	R/W Parameter
Description	Sets the trigger value.
Units	The units of the parameter are chosen according to the unit type.
Range	0 to 2
Default Value	0
Data Type	Integer
See Also	REC.TRIG (→ p. 1149), REC.TRIGPARAM, REC.TRIGVAL, REC.TRIGSLOPE, REC.TRIGPOS
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2365	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

### Description

REC.TRIGVAL is the value that must be met by REC.TRIGPARAM for the trigger to occur. The units of this parameter are set according to the units of REC.TRIGPARAM.

### Related Topics

Scope (→ p. 236)

## 25.35 REGEN Parameters

This section describes the REGEN parameters.

---

<b>25.35.1 REGEN.POWER</b> .....	<b>1159</b>
<b>25.35.2 REGEN.POWERFILTERED</b> .....	<b>1161</b>
<b>25.35.3 REGEN.REXT</b> .....	<b>1163</b>
<b>25.35.4 REGEN.TEXT</b> .....	<b>1164</b>
<b>25.35.5 REGEN.TYPE</b> .....	<b>1166</b>
<b>25.35.6 REGEN.WATTEXT</b> .....	<b>1168</b>

## 25.35.1 REGEN.POWER

General Information	
Type	R/O parameter
Description	Reads regen resistor's calculated power.
Units	Watt
Range	N/A
Default Value	N/A
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3416h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2367	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	734	Yes	64 bit	No	M_01-03-00-000

### Description

This parameter reads regen resistor's calculated power, which is determined as follows:

$$(V^2 / R) * DutyCycle$$

### Related Topics

## 8.4 Regeneration

## 25.35.2 REGEN.POWERFILTERED

General Information	
Type	R/O parameter
Description	Returns a filtered version of REGEN.POWER .
Units	Watt
Range	0 to REGEN.WATTEXT
Default Value	0
Data Type	Integer
Start Version	M_01-07-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2868	DWord	No
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1736	Yes	64-bit	No

### Description

This parameter returns a filtered value of REGEN.POWER. A single order lowpass of 1/REGEN.TEXT Hz is applied to generate REGEN.POWERFILTERED.

If REGEN.POWERFILTERED exceeds the value of REGEN.WATTEXT, Fault 521 (Regen over-power) will be generated.

This keyword may be recorded in the scope screen for analysis.

### Example

REGEN.TEXT = 10 (seconds)

Lowpass Filter Frequency = 1/10 seconds = 0.1 Hz

REGEN.POWERFILTERED = REGEN.POWER \* 0.1Hz lowpass

### **Related Topics**

REGEN.POWER (→ p. 1159) | REGEN.TEXT (→ p. 1164) | REGEN.WATTEXT (→ p. 1168)

## 25.35.3 REGEN.REXT

General Information	
Type	NV Parameter
Description	Sets the external, user-defined regen resistor resistance.
Units	$\Omega$
Range	0 to 255 $\Omega$
Default Value	0 $\Omega$
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35C2h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2369	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	738	No	16 bit	No	M_01-03-00-000

### Description

REGEN.REXT sets the external user-defined regen resistor resistance. This variable is needed for the regen resistor temperature estimation algorithm.

### Related Topics

8.4 Regeneration

## 25.35.4 REGEN.TEXT

General Information	
Type	R/W Parameter
Description	Sets the external regen resistor thermal protection time constant.
Units	Seconds
Range	0.1 to 1,200 Seconds
Default Value	100 Seconds
Data Type	Float
See Also	REGEN.WATTEXT (→ p. 1168), REGEN.REXT (→ p. 1163)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3415h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2370	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	740	No	32 bit	No	M_01-03-00-000

### Description

REGEN.TEXT is the time-to-fault when input power steps from 0 to 150% of REGEN.WATTEXT. REGEN.TEXT sets the thermal time constant of the algorithm used to protect the regeneration resistor from overheating and failing. The drive's regen resistor protection algorithm continuously calculates the power dissipated in the resistor and processes that power value through a single pole low pass filter to model the regen resistor's thermal inertia. When the filtered regen power on the output of

the filter (REGEN.POWERFILTERED) exceeds REGEN.WATTEXT, a fault occurs.

REGEN.TEXT sets the time constant of this thermal inertial filter = (REGEN.TEXT/1.1).

REGEN.TEXT can often be found directly on power resistor data sheets. On the data sheet find the peak overload curve and then find the safe allowed time to be at 150% of the regen resistor's continuous power rating. Set REGEN.TEXT to this value in seconds. Another way regen resistor peak overload capability is often specified is by giving the energy rating in joules of the resistor. If you have the energy rating joule limit E then:

$REGEN.TEXT = (1.1) * (E \text{ in joules}) / REGEN.WATTEXT$

## Example

The external regen resistor is rated for 250 W continuous, is 33 ohm, and has a joule rating of 500 joules. To use this resistor, the drive settings become:

REGEN.TYPE = -1 (External Regen)

REGEN.REXT = 33

REGEN.WATTEXT = 250

$REGEN.TEXT = (1.1) * (500 \text{ j}) / (250 \text{ W}) = 2.2 \text{ sec}$

## Related Topics

8.4 Regeneration

## 25.35.5 REGEN.TYPE

General Information	
Type	NV Parameter
Description	Sets the regen resistor type.
Units	N/A
Range	-1 to 0
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3412h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2371	Byte	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	742	No	8 bit	Yes	M_01-03-00-000

### Description

You can specify a user-defined external regen resistor, select an internal regen resistor, or choose from a list of predefined regen resistors. The values for REGEN.TYPE are shown below:

Type	Description
-1	External user-defined regen resistor
0	Internal regen resistor

If you specify a user-defined regen resistor, then you must also define this resistor's resistance (REGEN.REXT), heatup time (REGEN.REXT), and power (REGEN.WATTEXT).

## Related Topics

### 8.4 Regeneration

## 25.35.6 REGEN.WATTEXT

General Information	
Type	R/W parameter
Description	Sets the regen resistor's power fault level for an external regen resistor.
Units	W
Range	0 to 62,000 W
Default Value	1000 W
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3414h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2372	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	744	No	16 bit	No	M_01-03-00-000

### Description

Sets the regen resistor's power fault level for an external regen resistor (when REGEN.TYPE = -1). Above this fault level, the regen resistor's PWM will be 0 and a fault will be issued.

### Related Topics

## 8.4 Regeneration

## 25.36 S3 Parameters

This section describes the sercos<sup>®</sup> III parameters.

---

<b>25.36.1 S3.ADDRESS</b> .....	<b>1171</b>
---------------------------------	-------------

## 25.36.1 S3.ADDRESS

General Information	
Type	NV Parameter
Description	Sets and reads the sercos <sup>®</sup> slave address.
Units	N/A
Range	0 to 511
Default Value	1
Data Type	Integer
Start Version	M_01-09-03-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Description

Sets and reads the sercos<sup>®</sup> slave address.

## 25.37 SD Commands

This section describes commands for SD Card functions.

---

<b>25.37.1 SD.LOAD</b> .....	<b>1173</b>
<b>25.37.2 SD.SAVE</b> .....	<b>1174</b>
<b>25.37.3 SD.STATUS</b> .....	<b>1175</b>

## 25.37.1 SD.LOAD

General Information	
Type	Command
Description	Loads the drive state (BASIC program and NV parameters) from the SD card to the AKD (AKDs equipped with IO option card only).
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with an SD Card slot.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1684	No	Command	No	M_01-06-03-000

### Description

SD.LOAD will load the drive state from the SD card (if one exists) to the AKD. The files loaded to the drive include the BASIC binary file (program.bin) and the NV parameter file (drive.akd). These files must have these exact names or the drive will not recognize them.

Note that this command can only be executed when the drive is in the idle state (i.e. a program is not running) and the drive is disabled.

If a computer is not connected to the drive, the SD.LOAD command can also be issued using the rotary switches S1 and S2.

To load the SD drive state onto the AKD:

1. Set S1 to position 1
2. Set S2 to position 0
3. Hold down the B1 button on the top of the drive for 5 seconds.

#### NOTE

While the load operation is completing the LED display will flash **Sd**. If an error occurs, the letter E followed by three numbers will flash on the display. See for a description of SD Errors.

### Related Topics

SD.SAVE (→ p. 1174)

## 25.37.2 SD.SAVE

General Information	
Type	Command
Description	Saves the drive state (BASIC program and NV parameters) to the SD card (AKDs equipped with IO option card only).
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with an SD Card slot.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1686	No	Command	No	M_01-06-03-000

### Description

SD.SAVE will copy the state of a BASIC drive to the SD card (if one exists). The state of the drive consists of the BASIC binary file and NV parameters. Before an SD.Save is performed, the drive will perform a DRV.NVLOAD and return all of the drive parameters to their NV state. The DRV.NVLOAD is necessary in order to capture the NV parameter states for the parameter file(drive.akd). The files saved to the SD card include the BASIC binary file (program.bin) and the NV parameter file (drive.akd). In order for a drive to recognize and load these files, they must be named program.bin and drive.akd.

#### NOTE

This command can only be executed when the drive is in the idle state (i.e. a program is not running) and the drive is disabled.

If a computer is not connected to the drive, the SD.SAVE command can also be issued using the rotary switches S1 and S2.

To save the drive state onto the SD card using rotary switches:

1. Set S1 to position 1
2. Set S2 to position 1
3. Hold down the B1 button on the top of the drive for 5 seconds.

#### NOTE

While the load operation is completing the LED display will flash **Sd**. If an error occurs, the letter E followed by three numbers will flash on the display. See for a description of SD Errors.

### Related Topics

SD.LOAD (→ p. 1173)

## 25.37.3 SD.STATUS

General Information	
Type	R/O
Description	Reads the status of the SD card.
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Integer
Start Version	M_01-06-03-000

### Variants Supported

Supported by any AKD with an SD Card slot.

### Fieldbus Information

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1688	No	8-bit	No	M_01-06-03-000

### Description

This parameter reads the status of the SD card.

Status	Description
0	Ready – an SD card is inserted into the drive and you can read and write to it.
1	Read Only – an SD card is inserted into the drive and the write protection tab on the card prohibits writes.
2	Not Inserted – an SD card is not inserted into the drive.

### Related Topics

SD.LOAD (→ p. 1173) | SD.SAVE (→ p. 1174)

## 25.38 SM Parameters

This section describes the SM parameters.

---

<b>25.38.1 SM.I1</b> .....	<b>1177</b>
<b>25.38.2 SM.I2</b> .....	<b>1178</b>
<b>25.38.3 SM.MODE</b> .....	<b>1179</b>
<b>25.38.4 SM.MOVE</b> .....	<b>1182</b>
<b>25.38.5 SM.T1</b> .....	<b>1183</b>
<b>25.38.6 SM.T2</b> .....	<b>1184</b>
<b>25.38.7 SM.V1</b> .....	<b>1185</b>
<b>25.38.8 SM.V2</b> .....	<b>1187</b>

## 25.38.1 SM.I1

General Information	
Type	NV Parameter
Description	Sets service motion current 1; active in opmode 0 (torque) only.
Units	A
Range	–Drive peak current to +Drive peak current
Default Value	0.025 · Drive peak current
Data Type	Float
See Also	SM.ACCTYPE, SM.I2, SM.MODE, SM.MOVE, SM.T1, SM.T2, SM.V1, SM.V2, SM.VPM1, SM.VPM2
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2373	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	746	No	32 bit	Yes	M_01-03-00-000

### Description

SM.I1 defines the current that is used in service motion modes 0 and 1 (see SM.MODE (→ p. 1179)).

### Related Topics

Service Motion (→ p. 171)

## 25.38.2 SM.I2

General Information	
Type	NV Parameter
Description	Sets service motion current 2; active in opmode 0 (torque) only.
Units	A
Range	–Drive peak current to +Drive peak current
Default Value	0.025 · Drive peak current
Data Type	Float
See Also	SM.ACCTYPE, SM.I1, SM.MODE, SM.MOVE, SM.T1, SM.T2, SM.V1, SM.V2, SM.VPM1, SM.VPM2
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2374	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	748	No	32 bit	Yes	M_01-03-00-000

### Description

SM.I2 defines the current that is used in service motion mode 1 (see SM.MODE (→ p. 1179)).

### Related Topics

Service Motion (→ p. 171)

## 25.38.3 SM.MODE

General Information	
Type	NV Parameter
Description	Sets the service motion mode.
Units	N/A
Range	0 to 2
Default Value	0
Data Type	Integer
See Also	SM.I1 (→ p. 1177), SM.I2 (→ p. 1178), SM.MOVE (→ p. 1182), SM.T1 (→ p. 1183) SM.T2 (→ p. 1184), SM.V1 (→ p. 1185), SM.V2 (→ p. 1187), DRV.ACC (→ p. 593) DRV.DEC (→ p. 611)
Start Version	M_01-01-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2375	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	750	No	16 bit	No	M_01-03-00-000

### Description

SM.MODE defines the mode of service motion for each loop. Two types of service motion are available :

- A constant motion in one direction (endless or for a certain amount of time).

- An alternating motion.


The possible modes for this parameter are described in the following table:

SM.MODE	Description	Requirements
0	<p>Constant motion in closed current loop mode of operation.</p> <ul style="list-style-type: none"> <li>• DRV.OPMODE 0: The drive generates a constant current command value (SM.I1) for a certain amount of time (if SM.T1&gt;0) or endless (if SM.T1=0). The drive will not generate any ramps in this mode of operation.</li> <li>• DRV.OPMODE 1 or 2: The drive generates a constant velocity command value (SM.V1) for a certain amount of time (if SM.T1&gt;0) or endless (if SM.T1=0). The drive generates acceleration and deceleration ramps according to the DRV.ACC and DRV.DEC setting in this mode of operation.</li> </ul> <p>The service motion can be stopped by using the DRV.STOP command.</p>	<p>DRV.OPMODE = 0, 1, or 2 DRV.CMDSOURCE = 0</p>
1	<ul style="list-style-type: none"> <li>• DRV.OPMODE 0: The drive generates a current command value (SM.I1) for a certain amount of time (SM.T1). Afterwards the drive generates a current command value (SM.I2) for another certain amount of time (SM.T2). This sequence is repeated as long as a DRV.STOP command occurs. The drive will not generate any ramps in this mode of operation.</li> <li>• DRV.OPMODE 1 or 2: The drive generates a velocity command value (SM.V1) for a certain amount of time (SM.T1). Afterwards the drive generates a velocity command value (SM.V2) for another certain amount of time (SM.T2). This sequence is repeated as long as a DRV.STOP command occurs. The drive will generate an acceleration and deceleration ramps according to the DRV.ACC and DRV.DEC setting in this mode of operation.</li> </ul>	<p>DRV.OPMODE = 0, 1, or 2 DRV.CMDSOURCE = 0</p>
2	<p>This mode executes the same service motion as mode 0. However, the motion is described by SM.I2, SM.T2 and SM.V2. This enables a change on the fly and is mostly used under fieldbus control.</p>	<p>DRV.OPMODE = 0, 1, or 2 DRV.CMDSOURCE = 0</p>


## Ramps

The drive uses DRV.ACC and DRV.DEC for the ramps in DRV.OPMODE 1 (closed velocity) and 2 (closed position). The drive does not generate any ramps in service motion mode 0 and 1.

### Service Motion for DRV.OPMODE 0 and SM.MODE 1

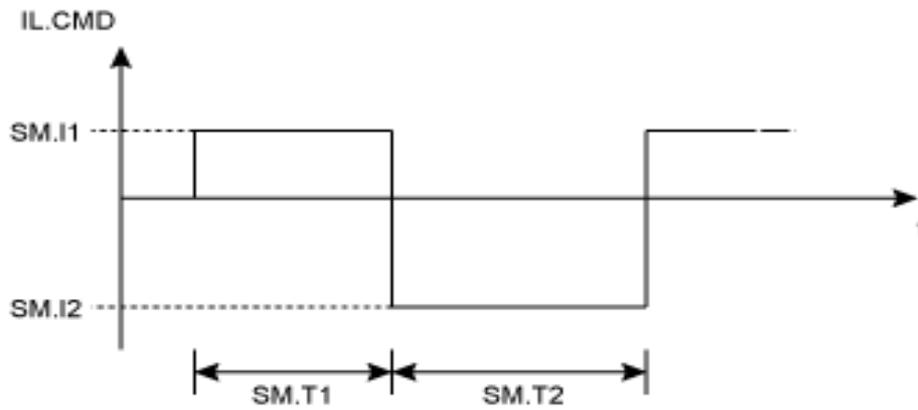

**Service motion for DRV.OPMODE 1 or 2 and SM.MODE 1**

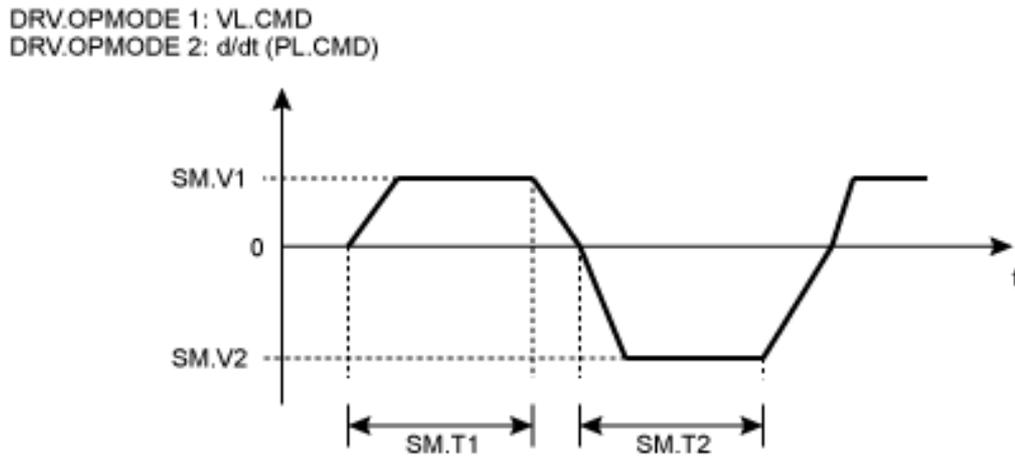

The deceleration process from SM.V1 or SM.V2 to 0 is not included in SM.T1 and SM.T2, respectively. SM.T1 and SM.T2 start as soon as the command value has reached the velocity 0.

**Related Topics**

Service Motion (→ p. 171)

## 25.38.4 SM.MOVE

General Information	
Type	Command
Description	Starts the service motion.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	SM.MODE
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2376	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	752	No	Command	No	M_01-03-00-000

### Description

This command starts the service motion that has been selected by the SM.MODE parameter.

### Related Topics

Service Motion (→ p. 171)

## 25.38.5 SM.T1

General Information	
Type	NV Parameter
Description	Sets the service motion time 1.
Units	ms
Range	0 to 65,535 ms
Default Value	500 ms
Data Type	Integer
See Also	SM.I1, SM.I2, SM.MODE, SM.MOVE, SM.T2, SM.V1, SM.V2, SM.VPM1, SM.VPM2
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2377	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	754	No	16 bit	No	M_01-03-00-000

### Description

SM.T1 defines the time of the service motion that is used in all service motion modes (see SM.MODE). For an alternating service motion mode, SM.T1 may not be set to 0.

### Related Topics

Service Motion (→ p. 171)

## 25.38.6 SM.T2

General Information	
Type	NV Parameter
Description	Sets the service motion time 2.
Units	ms
Range	0 to 65,535 ms
Default Value	500 ms
Data Type	Integer
See Also	SM.I1, SM.I2, SM.MODE, SM.MOVE, SM.T1, SM.V1, SM.V2, SM.VPM1, SM.VPM2
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2378	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	756	No	16 bit	No	M_01-03-00-000

### Description

SM.T2 defines the time of the service motion that is used in service motion modes 1, 3, and 5 (see SM.MODE).

### Related Topics

Service Motion (→ p. 171)

## 25.38.7 SM.V1

General Information	
Type	NV Parameter
Description	Sets service motion velocity 1; active in opmode 1 (velocity) and 2 (position).
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rpm, rps, deg/s, custom units/s, rad/s Linear: Counts/s, mm/s, µm/s, custom units/s
Range	Rotary: -15,000.000 to 15,000.000 rpm -250.000 to 250.000 rps -90,000.000 to 90,000.000 deg/s -1,250.000 to 1,250.000 custom units/s -1,570.796 to 1,570.796 rad/s Linear: -1,073,741,824,000.000 to 1,073,741,824,000.000 counts/s -250.000*MOTOR.PITCH (→ p. 1001) to 250.000*MOTOR.PITCH (→ p. 1001) mm/s -250,000.000*MOTOR.PITCH (→ p. 1001) to 250,000.000*MOTOR.PITCH (→ p. 1001) µm/s -1,250.000 to 1,250.000 custom units/s
Default Value	Rotary: 60.000 rpm 1.000 rps 359.999 deg/s 5.000 custom units/s 6.283 rad/s Linear: 0.001 Counts/s 1.000*MOTOR.PITCH (→ p. 1001) mm/s 999.998*MOTOR.PITCH (→ p. 1001) µm/sec 5.000 custom units/s
Data Type	Float
See Also	SM.I1, SM.I2, SM.MODE, SM.MOVE, SM.T1, SM.T2, SM.V2
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes

Variant	Supported
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	SM.V1_32	2379	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	758	Yes	Low 32 bit word	Yes	M_01-03-00-000

## Description

SM.V1 defines the velocity that is used in service motion modes 0 and 1 (see SM.MODE (→ p. 1179)) in the closed velocity and position mode of operation.

## Related Topics

15.3 Service Motion

## 25.38.8 SM.V2

General Information	
Type	NV Parameter
Description	Sets service motion velocity 2; active in opmode 1 (velocity) and 2 (position).
Units	Depends on UNIT.ACCROTARY (→ p. 1220) or UNIT.ACCLINEAR (→ p. 1218) Rotary: rpm, rps, deg/s, custom units/s, rad/s Linear: counts/s, mm/s, µm/s, custom units/s
Range	Rotary: -15,000.000 to 15,000.000 rpm -250.000 to 250.000 rps -90,000.000 to 90,000.000 deg/s -1,250.000 to 1,250.000 custom units/s -1,570.796 to 1,570.796 rad/s Linear: -1,073,741,824,000.000 to 1,073,741,824,000.000 counts/s -250.000*MOTOR.PITCH (→ p. 1001) to 250.000*MOTOR.PITCH (→ p. 1001) mm/s -250,000.000*MOTOR.PITCH (→ p. 1001) to 250,000.000*MOTOR.PITCH (→ p. 1001) µm/s -1,250.000 to 1,250.000 custom units/s
Default Value	Rotary: -60.000 rpm -1.000 rps -359.999 deg/s -5.000 custom units/s -6.283 rad/s Linear: -0.001 counts/s -1.000*MOTOR.PITCH (→ p. 1001) mm/s -999.998*MOTOR.PITCH (→ p. 1001) µm/sec -5.000 custom units/s
Data Type	Float
See Also	SM.I1, SM.I2, SM.MODE, SM.MOVE, SM.T1, SM.T2, SM.V1
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes

Variant	Supported
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	SM.V2_32	2380	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	760	Yes	Low 32 bit word	Yes	M_01-03-00-000

## Description

SM.V2 defines the velocity that is used in service motion mode 1 (see SM.MODE) in the closed velocity and position mode of operation.

## Related Topics

15.3 Service Motion

## 25.39 STO Parameters

This section describes the STO parameters.

---

<b>25.39.1 STO.STATE .....</b>	<b>1190</b>
--------------------------------	-------------

## 25.39.1 STO.STATE

General Information	
Type	R/O Parameter
Description	Returns the status of the safe torque off.
Units	N/A
Range	0 to 1 for drives with only one STO (AKD-x003 up to AKD-x024) 0 to 3 for drives that support STO2 (AKD-x048 )
Default Value	N/A
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2381	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	762	No	8 bit	No	M_01-03-00-000

### Description

STO.STATE returns the status of the safe torque off.

#### AKD-x003 up to AKD-x024 (one STO channel)

Value	Description
1	Safe torque on (no STO fault/warning)
0	Safe torque off (STO fault and warning are present)

1 - Safe torque on (no safe torque off fault/warning).

0 - Safe torque off (safe torque off fault/warning).

When STO.STATE = 1, the drive can be enabled.

#### **AKD-x048 (two STO channels)**

An STO fault and warning are generated when either STO1 or STO2 are not on. Use STO.STATE to determine the source (STO1 or STO2) of the STO fault. WorkBench also displays the status of both STO1 and STO2 at the bottom of the screen.

Value	Description
3	STO1 and STO2 are on (no STO fault/warning)
2	STO1 is off, and STO2 is on (STO fault and warning are present)
1	STO1 is on, and STO2 is off (STO fault and warning are present)
0	STO1 and STO2 are off (STO fault and warning are present)

### **Related Topics**

Safe Torque Off (STO) (→ p. 136)

13.6 Limits

## 25.40 STRING Parameters

This section describes the STRING parameters.

---

<b>25.40.1 STRING1.DRIVEENABLED to STRING2.DRIVEENABLED .....</b>	<b>1193</b>
<b>25.40.2 STRING1.NODECOUNT to STRING2.NODECOUNT .....</b>	<b>1194</b>

## 25.40.1 STRING1.DRIVEENABLED to STRING2.DRIVEENABLED

General Information	
Type	R/O Parameter
Description	Reads drive enabled from the NSDs connected to CPS string x.
Units	N/A
Range	0000000000000000 to 1111111111111111
Default Value	N/A
Data Type	String
Start Version	M_01-09-03-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

STRINGx.DRIVEENABLED reads the drive enabled status of the NSDs connected to CPS string x. The leftmost bit represents the first NSD on a string. The rightmost bit represents the sixteenth NSD.

#### NOTE

The value will always show 16 bits even if less than sixteen NSDs are connected to the string.

### Related Topics

The AKD-C Central Power Supply (→ p. 31) | STRING1.NODECOUNT to STRING2.NODECOUNT (→ p. 1194)

## 25.40.2 STRING1.NODECOUNT to STRING2.NODECOUNT

General Information	
Type	R/O Parameter
Description	Reads the amount of NSDs which are connected to CPS string x.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	U8
Start Version	M_01-09-03-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

Reads the amount of NSDs which are connected to CPS string x.

### Related Topics

The AKD-C Central Power Supply (→ p. 31) | STRING1.DRIVEENABLED to STRING2.DRIVEENABLED (→ p. 1193)

## 25.41 STRINGS Parameters

This section describes the STRINGS parameters.

---

<b>25.41.1 STRINGS.I2TFTHRESH</b> .....	<b>1196</b>
<b>25.41.2 STRINGS.I2TVALUE</b> .....	<b>1197</b>
<b>25.41.3 STRINGS.I2TWITHRESH</b> .....	<b>1198</b>
<b>25.41.4 STRINGS.IFTHRESH</b> .....	<b>1199</b>
<b>25.41.5 STRINGS.IVALUE</b> .....	<b>1200</b>
<b>25.41.6 STRINGS.IWITHRESH</b> .....	<b>1201</b>
<b>25.41.7 STRINGS.STOSTATE</b> .....	<b>1202</b>
<b>25.41.8 STRINGS.VVALUE</b> .....	<b>1203</b>

## 25.41.1 STRINGS.I2TFTHRESH

General Information	
Type	R/O Parameter
Description	Reads the combined strings' fault level of the I2T value in a percentage.
Units	percent
Range	0 to 100
Default Value	N/A
Data Type	Integer
Start Version	M_01-09-08-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

STRINGS.I2TFTHRESH reads the combined strings' fault level of the I2T value in a percentage.

### Related Topics

The AKD-C Central Power Supply (→ p. 31)

## 25.41.2 STRINGS.I2TVALUE

General Information	
Type	R/O Parameter
Description	Reads the total current I2T value of both strings combined.
Units	percent
Range	0 to 100
Default Value	N/A
Data Type	Integer
Start Version	M_01-09-08-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

STRINGS.I2TVALUE reads the total current I2T value of both strings combined.

### Related Topics

The AKD-C Central Power Supply (→ p. 31)

## 25.41.3 STRINGS.I2TWTHRESH

General Information	
Type	R/W Parameter
Description	Reads and writes both strings' warning level of the I2T value in a combined percentage.
Units	percent
Range	0 to 100
Default Value	N/A
Data Type	Integer
Start Version	M_01-09-08-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

STRINGS.I2TWTHRESH reads and writes both strings' warning level of the I2T value in a combined percentage.

### Related Topics

The AKD-C Central Power Supply (→ p. 31)

## 25.41.4 STRINGS.IFTHRESH

General Information	
Type	R/O Parameter
Description	Reads the fault level of the combined strings' current.
Units	Arms
Range	0 to 34.512
Default Value	N/A
Data Type	Float
Start Version	M_01-09-08-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

STRINGS.IFTHRESH reads the fault level of the combined strings' current.

### Related Topics

The AKD-C Central Power Supply (→ p. 31)

## 25.41.5 STRINGS.IVALUE

General Information	
Type	R/O Parameter
Description	Reads the combined current of both strings.
Units	Arms
Range	N/A
Default Value	N/A
Data Type	Float
Start Version	M_01-09-08-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

STRINGS.IVALUE reads the combined current of both strings.

### Related Topics

The AKD-C Central Power Supply (→ p. 31)

## 25.41.6 STRINGS.IWTHRESH

General Information	
Type	R/O Parameter
Description	Reads the warning level of both strings' combined current.
Units	percent
Range	0 to 100
Default Value	N/A
Data Type	Integer
Start Version	M_01-09-08-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

STRINGS.I2TFTHRESH reads the warning level of both strings' combined current.

### Related Topics

The AKD-C Central Power Supply (→ p. 31)

## 25.41.7 STRINGS.STOSTATE

General Information	
Type	R/O Parameter
Description	Reads the state of safe torque off for each of the strings on the AKD-C.
Units	N/A
Range	0 to 3
Default Value	N/A
Data Type	Integer
Start Version	M_01-09-03-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

STRINGS.STOSTATE returns the state of the safe torque signal for each of an AKD-C device's strings. Bit 0 represents the first string, and bit 1 represents the second string. If a bit is 1 then the safe torque signal is present and drives on that string can be enabled.

Value	Description
0	No signal on any string
1	A signal is present on only the first string. Drives on the first string can be enabled.
2	A signal is present on only the second string. Drives on the second string can be enabled.
3	A signal is present on both strings. All drives on both strings can be enabled.

### Related Topics

The AKD-C Central Power Supply (→ p. 31)

## 25.41.8 STRINGS.VVALUE

General Information	
Type	R/O Parameter
Description	Reads the current voltage on string 1.
Units	[V]
Range	N/A
Default Value	N/A
Data Type	Integer
Start Version	M_01-09-03-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos <sup>®</sup> III	No
AKD-N	No
AKD-C	Yes

### Description

STRINGS.VVALUE reads the current voltage on string 1.

### Related Topics

The AKD-C Central Power Supply (→ p. 31)

## 25.42 SWLS Parameters

This section describes the SWLS parameters.

---

<b>25.42.1 SWLS.EN</b> .....	<b>1205</b>
<b>25.42.2 SWLS.LIMIT0</b> .....	<b>1207</b>
<b>25.42.3 SWLS.LIMIT1</b> .....	<b>1209</b>
<b>25.42.4 SWLS.STATE</b> .....	<b>1211</b>

## 25.42.1 SWLS.EN

General Information	
Type	NV Parameter
Description	Enables and disables software travel limit switches.
Units	N/A
Range	0 to 3
Default Value	0
Data Type	U8
See Also	25.14.51 DRV.MOTIONSTAT
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2382	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	764	No	16 bit	No	M_01-03-00-000

### Description

This parameter enables the software travel limit switches. The software limit switches are only active if the axis is homed.

Value	Description
0	Disables both limit switches.
1	Enables limit switch 0.
2	Enables limit switch 1.

Value	Description
3	Enables limit switch 0 and limit switch 1.

If SWLS.EN = 3, then whichever limit switch is set to a greater value will be used as the upper limit switch. For all other values of SWLS.EN, use SWLS.LIMIT0 for the lower limit switch, and SWLS.LIMIT1 for the upper limit switch.

## Example

Bit 0 = 0: Disable SWLS.LIMIT0

Bit 0 = 1: Enable SWLS.LIMIT0

Bit 1 = 0: Disable SWLS.LIMIT1

Bit 1 = 1: Enable SWLS.LIMIT1

## Related Topics

13.6 Limits

## 25.42.2 SWLS.LIMIT0

General Information	
Type	NV Parameter
Description	Sets the position of the software travel limit switch 0.
Units	Position units
Range	-9,007,199,254,740,992 to 9,007,199,254,740,991
Default Value	0
Data Type	S64
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	607Dh/1	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2383	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	766	Yes	64 bit	Yes	M_01-03-00-000

### Description

This parameter sets the compare register for the software limit switch 0. This value can be either the lower or the upper software limit switch register, depending on the configuration of the software limit switches:

- If only one limit switch is enabled (SWLS.EN = 1 or 2), then SWLS.LIMIT0 is the lower limit, and SWLS.LIMIT1 is the upper limit.

- If both limit switches are enabled (SWLS.EN = 3), then whichever switch is set to a larger value is the upper limit switch. The other switch becomes the lower limit switch.

These switches can be used in addition to hardware limit switches. The software limit switches are only active if the axis is homed. For more information about homing, please refer to the HOME Parameters and DRV.MOTIONSTAT.

## **Related Topics**

13.6 Limits

## 25.42.3 SWLS.LIMIT1

General Information	
Type	NV Parameter
Description	Sets the position of the software travel limit switch 0.
Units	Position units
Range	-9,007,199,254,740,992 to 9,007,199,254,740,991
Default Value	1,048,576.000 counts, 16-bit (firmware versions M_01-02-00-000 and above) 68,719,476,736 counts (for firmware version M_01-01-00-000)
Data Type	S64
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	607Dh/2	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2385	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	770	Yes	64 bit	Yes	M_01-03-00-000

### Description

This parameter sets the compare register for the software limit switch 1. This value can be either the lower or the upper software limit switch register, depending on the configuration of the software limit switches:

- If only one limit switch is enabled (SWLS.EN = 1 or 2), then SWLS.LIMIT0 is the lower limit, and SWLS.LIMIT1 is the upper limit.
- If both limit switches are enabled (SWLS.EN = 3), then whichever switch is set to a larger value is the upper limit switch. The other switch becomes the lower limit switch.

These switches can be used in addition to hardware limit switches. The software limit switches are only active if the axis is homed. For more information about homing, please refer to the HOME Parameters and DRV.MOTIONSTAT.

## Related Topics

13.6 Limits

25.14.51 DRV.MOTIONSTAT

## 25.42.4 SWLS.STATE

General Information	
Type	R/O Parameter
Description	Reads the actual status of software limit switches.
Units	N/A
Range	0 to 3
Default Value	0
Data Type	U8
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2387	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	774	No	16 bit	No	M_01-03-00-000

### Description

This parameter reads the status word of the software limit switches. The status word indicates the result of the compare between the software limit switch compare register and the actual position of the position loop.

### Example

Bit 0 = 0: SWLS.LIMIT0 (→ p. 1207) is not active.

Bit 0 = 1: SWLS.LIMIT0 is active.

Bit 1 = 0: SWLS.LIMIT1 (→ p. 1209) is not active.

Bit 1 = 1: SWLS.LIMIT1 is active.

Bits 2 to 7 are currently not in use.

## **Related Topics**

13.6 Limits

## 25.43 TEMP Parameters

This section describes the TEMP parameters.

---

<b>25.43.1 TEMP.CONTROL .....</b>	<b>1214</b>
<b>25.43.2 TEMP.POWER1 to TEMP.POWER3 .....</b>	<b>1215</b>

## 25.43.1 TEMP.CONTROL

General Information	
Type	R/O Parameter
Description	Reads the temperature of the control board temperature sensor.
Units	Degrees Celsius
Range	-127 to 128
Default Value	N/A
Data Type	Integer
Start Version	M_01-09-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2874	Word	Yes
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1748	No	16-bit	Yes

### Description

Reads the temperature of the control board temperature sensor.

### Related Topics

DRV.TEMPERATURES (→ p. 692) | TEMP.POWER1 to TEMP.POWER3 (→ p. 1215)

## 25.43.2 TEMP.POWER1 to TEMP.POWER3

General Information	
Type	R/O Parameter
Description	Reads the temperature of the power board(s) temperature sensor (s).
Units	Degrees Celsius
Range	-127 to 128
Default Value	N/A
Data Type	Integer
Start Version	M_01-09-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Parameter	Fieldbus	Address	Attributes	Signed?
TEMP.POWER1	Profinet	2875	Word	Yes
	sercos <sup>®</sup> III		2 Octets	
TEMP.POWER2	Profinet	2876	Word	
	sercos <sup>®</sup> III		2 Octets	
TEMP.POWER3	Profinet	2877	Word	
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Parameter	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	TEMP.POWER1	1750	No	16-bit	Yes
	TEMP.POWER2	1752			
	TEMP.POWER3	1753			

### Description

Reads the temperature of the power board(s) temperature sensor(s). Most AKDs have only one power board sensor which is read by TEMP.POWER1.

### **Related Topics**

DRV.TEMPERATURES (→ p. 692) | TEMP.CONTROL (→ p. 1214)

## 25.44 UNIT Parameters

This section describes the UNIT parameters.

---

<b>25.44.1 UNIT.ACCLINEAR</b> .....	<b>1218</b>
<b>25.44.2 UNIT.ACCROTARY</b> .....	<b>1220</b>
<b>25.44.3 UNIT.LABEL</b> .....	<b>1222</b>
<b>25.44.4 UNIT.PIN</b> .....	<b>1223</b>
<b>25.44.5 UNIT.PLINEAR</b> .....	<b>1225</b>
<b>25.44.6 UNIT.POUT</b> .....	<b>1227</b>
<b>25.44.7 UNIT.PROTARY</b> .....	<b>1229</b>
<b>25.44.8 UNIT.VLINEAR</b> .....	<b>1231</b>
<b>25.44.9 UNIT.VROTARY</b> .....	<b>1233</b>

## 25.44.1 UNIT.ACCLINEAR

General Information	
Type	NV Parameter
Description	Sets the linear acceleration/deceleration units.
Units	N/A
Range	0 to 3
Default Value	0
Data Type	Integer
See Also	DRV.ACC (→ p. 593), DRV.DEC (→ p. 611), MOTOR.TYPE (→ p. 1023)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2388	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	776	No	8 bit	No	M_01-03-00-000

### Description

UNIT.ACCLINEAR sets the units type for the acceleration and deceleration parameters, when the motor type (MOTOR.TYPE (→ p. 1023)) is linear.

Type	Description
0	[Custom Units (→ p. 100)]/s <sup>2</sup>
1	millimeters per second squared (mm/s <sup>2</sup> )

Type	Description
2	micrometers per second squared ( $\mu\text{m}/\text{s}^2$ )
3	Feedback counts/ $\text{s}^2$

## Related Topics

Selecting Units for Your Application (→ p. 99)

## 25.44.2 UNIT.ACCROTARY

General Information	
Type	NV Parameter
Description	Sets the rotary acceleration/deceleration units.
Units	rpm/s, rps/s, deg/s <sup>2</sup> , [Custom Units (→ p. 100)] /s <sup>2</sup>
Range	0 to 3 rpm/s
Default Value	0 rpm/s
Data Type	Integer
See Also	DRV.ACC (→ p. 593), MOTOR.TYPE (→ p. 1023)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3659h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2389	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	778	No	8 bit	No	M_01-03-00-000

### Description

UNIT.ACCROTARY sets the acceleration/deceleration units when the motor type (MOTOR.TYPE (→ p. 1023)) is rotary.

Type	Description
0	rpm/s
1	rps/s
2	deg/s <sup>2</sup>
3	(Custom Units (→ p. 100)) /s <sup>2</sup>

### Related Topics

Selecting Units for Your Application (→ p. 99)

"DRV.DEC " (→ p. 611)

## 25.44.3 UNIT.LABEL

General Information	
Type	NV Parameter
Description	Sets user-defined name for user-defined position units.
Units	N/A
Range	Maximum 16 characters, no spaces
Default Value	Custom Units (→ p. 100)
Data Type	String
See Also	UNIT.PLINEAR (→ p. 1225), UNIT.POUT (→ p. 1227)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

If you define a special position unit with UNIT.PLINEAR (→ p. 1225) and UNIT.POUT (→ p. 1227), then you can give this unit a descriptive name. You can name the unit anything you wish, as long as the name is limited to 16 characters and includes no spaces. The label used for velocity and acceleration are in terms of this descriptive name.

This parameter is descriptive only and does not influence drive internal functions in any way.

### Related Topics

Selecting Units for Your Application (→ p. 99)

## 25.44.4 UNIT.PIN

General Information	
Type	NV Parameter
Description	Sets gear IN for the unit conversion.
Units	User units
Range	0 to 4,294,967,295
Default Value	100
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35CAh/0 6092h/1	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2390	Dword	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	780	No	32 bit	No	M_01-03-00-000

### Description

UNIT.PIN is used in conjunction with UNIT.POUT (→ p. 1227) to set application specific units. This parameter is used as follows in the drive unit conversion:

- For position, this parameter sets the units as [Custom Units (→ p. 100)]/rev.
- For velocity, this parameter sets the units as [Custom Units (→ p. 100)]/s.
- For acceleration/deceleration, this parameter sets the units as [Custom Units (→ p. 100)]/s<sup>2</sup>.

## Related Topics

Selecting Units for Your Application (→ p. 99)

## 25.44.5 UNIT.PLINEAR

General Information	
Type	NV Parameter
Description	Sets the linear position units.
Units	N/A
Range	0 to 4
Default Value	0
Data Type	Integer
See Also	PL.FB (→ p. 1094), PL.CMD (→ p. 1084), MOTOR.TYPE (→ p. 1023)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2391	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	782	No	8 bit	No	M_01-03-00-000

### Description

UNIT.PLINEAR sets the units type for the position parameters when the motor type (MOTOR.TYPE) is linear.

Type	Description
0	32-bit counts
1	Millimeters (mm)
2	Micrometers (µm)

Type	Description
3	(PIN/POUT) per revolution
4	16-bit counts

## Related Topics

Selecting Units for Your Application (→ p. 99)

## 25.44.6 UNIT.POUT

General Information	
Type	NV Parameter
Description	Sets gear out for the unit conversion.
Units	User units.
Range	0 to 4,294,967,295
Default Value	20
Data Type	Integer
See Also	UNIT.PLINEAR (→ p. 1225)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	35CBh/0 6092h/2	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2392	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	784	No	32 bit	No	M_01-03-00-000

### Description

UNIT.POUT is used with UNIT.PIN (→ p. 1223) to set application specific units in UNIT.POUT. This parameter is used as follows in the drive unit conversion:

- For position, this parameter sets the units as [Custom Units (→ p. 100)]/rev.
- For velocity, this parameter sets the units as [Custom Units (→ p. 100)]/s.
- For acceleration/deceleration, this parameter sets the units as [Custom Units (→ p. 100)]/s<sup>2</sup>.

## Related Topics

Selecting Units for Your Application (→ p. 99)

## 25.44.7 UNIT.PROTARY

General Information	
Type	NV Parameter
Description	Sets the position units when the motor type (MOTOR.TYPE (→ p. 1023)) is rotary.
Units	counts, rad, deg, Custom Units (→ p. 100), 16-bit counts
Range	0 to 4
Default Value	4 16-bit counts (for firmware versions M_01-02-00-000 and above) 0 counts (for firmware version M_01-01-00-000)
Data Type	Integer
See Also	PL.FB (→ p. 1094), PL.CMD (→ p. 1084), MOTOR.TYPE (→ p. 1023)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3660h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2393	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	786	No	8 bit	No	M_01-03-00-000

### Description

UNIT.PROTARY sets the position units when the motor type (MOTOR.TYPE (→ p. 1023)) is rotary.

Value	Units
0	counts
1	radians
2	degrees
3	Custom Units (→ p. 100)
4	16-bit counts

## Related Topics

Selecting Units for Your Application (→ p. 99)

## 25.44.8 UNIT.VLINEAR

General Information	
Type	NV Parameter
Description	Sets the linear velocity units.
Units	N/A
Range	0 to 3
Default Value	0
Data Type	Integer
See Also	VL.FB (→ p. 1269), VL.CMDU (→ p. 1265), VL.CMD (→ p. 1263), MOTOR.TYPE (→ p. 1023)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2394	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	788	No	8 bit	No	M_01-03-00-000

### Description

UNIT.VLINEAR sets the units type for the velocity parameters when the motor type (MOTOR.TYPE (→ p. 1023)) is linear.

Type	Description
0	(Custom Units (→ p. 100)) per second
1	Micrometers per second
2	Millimeters per second
3	Counts per second

### Related Topics

Selecting Units for Your Application (→ p. 99)

## 25.44.9 UNIT.VROTARY

General Information	
Type	NV Parameter
Description	Sets the velocity units when the motor type (MOTOR.TYPE (→ p. 1023)) is rotary.
Units	rpm, rps, deg/s, radian/s(Custom Units (→ p. 100))/s
Range	0 to 4
Default Value	0 rpm
Data Type	Integer
See Also	VL.FB (→ p. 1269), VL.CMDU (→ p. 1265), VL.CMD (→ p. 1263), MOTOR.TYPE (→ p. 1023)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	365Fh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2395	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	790	No	8 bit	No	M_01-03-00-000

### Description

UNIT.VROTARY sets the velocity units when the motor type (MOTOR.TYPE) is rotary.

Value	Units
0	rpm
1	rps
2	deg/s
3	(Custom Units (→ p. 100)) /s
4	radian/s

## Related Topics

Selecting Units for Your Application (→ p. 99)

## 25.45 USER Parameters

This section describes the USER parameters.

---

<b>25.45.1 USER.INT1 to USER.INT24 .....</b>	<b>1236</b>
--	-------------

## 25.45.1 USER.INT1 to USER.INT24

General Information	
Type	R/W Parameter
Description	Stores an integer value for future reference.
Units	N/A
Range	-2,147,483,648 to 2,147,483,647
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Paramter	Fieldbus	Address	Attributes	Signed?
USER.INT1	Profinet	2497	DWord	Yes
	sercos <sup>®</sup> III		4 Octets	
USER.INT2	Profinet	2498	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT3	Profinet	2499	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT4	Profinet	2500	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT5	Profinet	2501	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT6	Profinet	2502	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT7	Profinet	2503	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT8	Profinet	2504	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT9	Profinet	2505	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT10	Profinet	2506	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT11	Profinet	2507	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT12	Profinet	2508	DWord	
	sercos <sup>®</sup> III		4 Octets	

Paramter	Fieldbus	Address	Attributes	Signed?
USER.INT13	Profinet	2509	DWord	Yes
	sercos <sup>®</sup> III		4 Octets	
USER.INT14	Profinet	2510	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT15	Profinet	2511	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT16	Profinet	2512	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT17	Profinet	2513	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT18	Profinet	2514	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT19	Profinet	2515	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT20	Profinet	2516	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT21	Profinet	2517	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT22	Profinet	2518	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT23	Profinet	2519	DWord	
	sercos <sup>®</sup> III		4 Octets	
USER.INT24	Profinet	2520	DWord	
	sercos <sup>®</sup> III		4 Octets	

## Description

This parameter stores an integer value. To retain this value after a power-cycle, a "Save to Device" command must be performed from the Parameter Load/Save view in WorkBench.

## 25.46 VBUS Parameters

This section describes the VBUS parameters.

---

<b>25.46.1 VBUS.HALFVOLT</b> .....	<b>1240</b>
<b>25.46.2 VBUS.OVFTHRESH</b> .....	<b>1242</b>
<b>25.46.3 VBUS.OVWTHRESH</b> .....	<b>1243</b>
<b>25.46.4 VBUS.RMSLIMIT</b> .....	<b>1244</b>
<b>25.46.5 VBUS.UVFTHRESH</b> .....	<b>1245</b>
<b>25.46.6 VBUS.UVMODE</b> .....	<b>1246</b>
<b>25.46.7 VBUS.UVWTHRESH</b> .....	<b>1248</b>
<b>25.46.8 VBUS.VALUE</b> .....	<b>1249</b>

## 25.46.1 VBUS.HALFVOLT

General Information	
Type	NV Parameter
Description	Changes voltage thresholds for HV and MV Drives
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-04-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2609	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1218	No	8 bit	No

### Description

This parameter is used in order to change some specific voltage thresholds in order to allow HV (high voltage) drives working with MV (medium voltage) thresholds and to allow MV (medium voltage) drives working with LV (low voltage) thresholds.

When the VBUS.HALFVOLT value is changed, the revised thresholds take effect immediately.

The VBUS.HALFVOLT only affects HV and MV drives.

Value	Description
0	The original voltage thresholds are used for the functions mentioned below.

Value	Description
1	Setting the parameter to 1 on a HV Drive causes the AKD to use the voltage thresholds of an MV drive for the functions mentioned below. Setting the parameter to 1 on a MV drive causes the AKD to use the voltage thresholds of a LV drive for the functions mentioned below.

This parameter has an impact on the following voltage-thresholds:

1. DC-bus over-voltage threshold (see VBUS.OVFTHRESH (→ p. 1242)).
2. The regen-resistor enable/disable voltage thresholds.
3. The inrush-relay enable/disable voltage thresholds.

**NOTE**

The DC-bus under voltage fault threshold (see VBUS.UVFTHRESH (→ p. 1245)) is a user selectable command. It means that the user is responsible for setting the under voltage threshold to a proper value in case that the AKD is supplied with a lower DC-bus voltage than the rated voltage.

## 25.46.2 VBUS.OVFTHRESH

General Information	
Type	R/O Parameter
Description	Reads the over voltage fault level.
Units	VDC
Range	0 to 900 VDC
Default Value	N/A
Data Type	Integer
See Also	VBUS.UVFTHRESH
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2397	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	794	No	16 bit	No	M_01-03-00-000

### Description

VBUS.OVFTHRESH reads the over voltage fault level for the DC bus.

This value is read from the drive EEPROM and varies according to the drive type.

### Related Topics

Regeneration (→ p. 63)

## 25.46.3 VBUS.OVWTHRESH

General Information	
Type	NV Parameter
Description	Sets voltage level for over voltage warning.
Units	VDC
Range	0 to 900 VDC
Default Value	0 VDC (warning disabled)
Data Type	U16
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2398	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	796	No	16 bit	No	M_01-03-00-000

### Description

If VBUS.VALUE value exceeds VBUS.OVWTHRESH, then a warning is generated. The warning is removed if the voltage returns to below 97% (1/32) of the overvoltage warning level.

### Related Topics

Regeneration (→ p. 63)

## 25.46.4 VBUS.RMSLIMIT

General Information	
Type	R/O Parameter
Description	Reads the limit for the bus capacitors load.
Units	Vrms
Range	N/A
Default Value	N/A
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2399	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	798	No	8 bit	No	M_01-03-00-000

### Description

This parameter reads the limit of the bus capacitor load. When the bus capacitor loads exceeds this limit, the drive generates fault F503.

Excessive bus capacitor load may indicate a disconnected main supply phase.

### Related Topics

Regeneration (→ p. 63)

## 25.46.5 VBUS.UVFTHRESH

General Information	
Type	R/W Parameter
Description	Sets the under voltage fault level.
Units	VDC
Range	90 to 420 VDC
Default Value	90 VDC
Data Type	Integer
See Also	VBUS.OVFTHRESH
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2400	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	800	No	16 bit	No	M_01-03-00-000

### Description

VBUS.UVFTHRESH sets the undervoltage fault level of the DC bus.

The default value is read from the EEPROM, but can be modified by the user and stored on the NV RAM. This value varies according to drive type.

### Related Topics

Regeneration (→ p. 63)

## 25.46.6 VBUS.UVMODE

General Information	
Type	N/V Parameter
Description	Indicates undervoltage (UV) mode.
Units	N/A
Range	0 to 1
Default Value	1
Data Type	Integer
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2401	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	802	No	8 bit	No	M_01-03-00-000

### Description

This parameter indicates undervoltage (UV) mode.

When VBUS.UVMODE = 0, an undervoltage fault is issued whenever the DC bus goes below the undervoltage threshold.

When VBUS.UVMODE = 1, an undervoltage fault is issued whenever the DC bus goes below the under voltage threshold and the controller attempts to enable the drive (software or hardware enable).

### Related Topics

Regeneration (→ p. 63)

## 25.46.7 VBUS.UVWTHRESH

General Information	
Type	NV Parameter
Description	Sets voltage level for undervoltage warning.
Units	VDC
Range	0 to 900 VDC
Default Value	10 volts above the default value of the under voltage fault threshold (VBUS.UVFTHRESH). The default value of VBUS.UVFTHRESH is hardware dependent.
Data Type	U16
See Also	VBUS.UVFTHRESH (→ p. 1245)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2402	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	804	No	16 bit	No	M_01-03-00-000

### Description

If VBUS.VALUE value drops below VBUS.UVWTHRESH, then a warning is generated.

### Related Topics

Regeneration (→ p. 63)

## 25.46.8 VBUS.VALUE

General Information	
Type	R/O Parameter
Description	Reads DC bus voltage.
Units	VDC
Range	0 to 900 VDC
Default Value	N/A
Data Type	Float
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	Yes

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	361Ah/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2403	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	806	No	32 bit	No	M_01-03-00-000

### Description

VBUS.VALUE reads the DC bus voltage.

### Related Topics

8.4 Regeneration

## 25.47 VL Parameters

This section describes the VL parameters.

---

25.47.1 VL.ARPF1 TO VL.ARPF4 .....	1251
25.47.2 VL.ARPQ1 TO VL.ARPQ4 .....	1253
25.47.3 VL.ARTYPE1 TO VL.ARTYPE4 .....	1255
25.47.4 VL.ARZF1 TO VL.ARZF4 .....	1257
25.47.5 VL.ARZQ1 TO VL.ARZQ4 .....	1259
25.47.6 VL.BUSFF .....	1261
25.47.7 VL.CMD .....	1263
25.47.8 VL.CMDU .....	1265
25.47.9 VL.ERR .....	1267
25.47.10 VL.FB .....	1269
25.47.11 VL.FBFILTER .....	1271
25.47.12 VL.FBSOURCE .....	1273
25.47.13 VL.FBUNFILTERED .....	1274
25.47.14 VL.FF .....	1275
25.47.15 VL.GENMODE .....	1277
25.47.16 VL.KBUSFF .....	1279
25.47.17 VL.KI .....	1281
25.47.18 VL.KO .....	1283
25.47.19 VL.KP .....	1284
25.47.20 VL.KVFF .....	1286
25.47.21 VL.LIMITN .....	1288
25.47.22 VL.LIMITP .....	1290
25.47.23 VL.LMJR .....	1291
25.47.24 VL.MODEL .....	1293
25.47.25 VL.OBSBW .....	1294
25.47.26 VL.OBSMODE .....	1295
25.47.27 VL.THRESH .....	1296
25.47.28 VL.VFTHRESH .....	1298

## 25.47.1 VL.ARPF1 TO VL.ARPF4

General Information	
Type	R/W Parameter
Description	Sets the natural frequency of the pole (denominator) of anti-resonance (AR) filters 1, 2, 3, and 4; active in opmodes 1 (velocity) and 2 (position) only.
Units	Hz
Range	5 to 5,000 Hz
Default Value	500 Hz
Data Type	Float
See Also	VL.ARPQ1 TO VL.ARPQ4 (→ p. 1253), VL.ARZF1 TO VL.ARZF4 (→ p. 1257), Sets the Q of the zero (numerator) of anti-resonance filter #1; active in opmodes 1 (velocity) and 2 (position) only. (→ p. 1259)
Start Version	M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3406h/1	VL.ARPF1
	3406h/2	VL.ARPF2
	3406h/3	VL.ARPF3
	3406h/4	VL.ARPF4
		M_01-02-00-000

Parameter	Fieldbus	Address	Attributes	Signed?
VL.ARPF1	Profinet	2404	DWord	No
	sercos <sup>®</sup> III		4 Octets	
VL.ARPF2	Profinet	2405	DWord	No
	sercos <sup>®</sup> III		4 Octets	
VL.ARPF3	Profinet	2406	DWord	No
	sercos <sup>®</sup> III		4 Octets	
VL.ARPF4	Profinet	2407	DWord	No
	sercos <sup>®</sup> III		4 Octets	


Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	808	VL.ARPF1	No	32 bit	No	M_01-03-00-000
	810	VL.ARPF2				
	812	VL.ARPF3				
	814	VL.ARPF4				

## Description

VL.ARPF1 sets the natural frequency of the pole (denominator) of AR filter 1. This value is  $F_p$  in the approximate transfer function of the filter:

$$ARx(s) = [s^2 / (2\pi F_z)^2 + s / (Q_z 2\pi F_z) + 1] / [s^2 / (2\pi F_p)^2 + s / (Q_p 2\pi F_p) + 1]$$

The following block diagram describes the AR filter function; note that AR1 and AR2 are in the forward path, while AR3 and AR4 are applied to feedback:

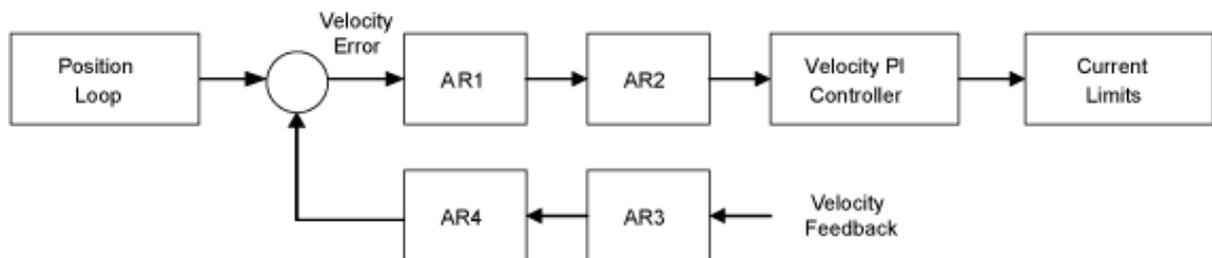

AR1, AR2, AR3, and AR4 are used in velocity and position mode, but are disabled in torque mode.

### Discrete time transfer function (applies to all AR filters)

The velocity loop compensation is actually implemented as a digital discrete time system function on the DSP. The continuous time transfer function is converted to the discrete time domain by a backward Euler mapping:

$$s \approx (1-z^{-1})/t, \text{ where } t = 62.5 \mu\text{s}$$

The poles are prewarped to  $F_p$  and the zeros are prewarped to  $F_z$ .

## Related Topics

Velocity Loop (→ p. 143)

## 25.47.2 VL.ARPQ1 TO VL.ARPQ4

General Information	
Type	R/W Parameter
Description	Sets the Q of the pole (denominator) of anti-resonance (AR) filter 1; active in opmodes 1 (velocity) and 2 (position) only.
Units	None
Range	0.2 to 20
Default Value	0.5
Data Type	Float
See Also	VL.ARPF1 TO VL.ARPF4 (→ p. 1251), VL.ARZF1 TO VL.ARZF4 (→ p. 1257), VL.ARZQ1 TO VL.ARZQ4 (→ p. 1259)
Start Version	M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3406h/5	VL.ARPQ1
	3406h/6	VL.ARPQ2
	3406h/7	VL.ARPQ3
	3406h/8	VL.ARPQ4
		M_01-02-00-000

Parameter	Fieldbus	Address	Attributes	Signed?
VL.ARPQ1	Profinet	2408	DWord	No
	sercos® III		4 Octets	
VL.ARPQ2	Profinet	2409	DWord	No
	sercos® III		4 Octets	
VL.ARPQ3	Profinet	2410	DWord	No
	sercos® III		4 Octets	
VL.ARPQ4	Profinet	2411	DWord	No
	sercos® III		4 Octets	


Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version	
Modbus	816	VL.ARPQ1	No	32 bit	No	M_01-03-00-000
	818					
	820					
	822					

## Description

VL.ARPQ1 sets the Q (quality factor) of the pole (denominator) of AR filter 1. This value is  $Q_p$  in the approximate transfer function of the filter:

$$AR_x(s) = [s^2 / (2\pi F_z)^2 + s / (Q_z 2\pi F_z) + 1] / [s^2 / (2\pi F_p)^2 + s / (Q_p 2\pi F_p) + 1]$$

The following block diagram describes the AR filter function; note that AR1 and AR2 are in the forward path, while AR3 and AR4 are applied to feedback:

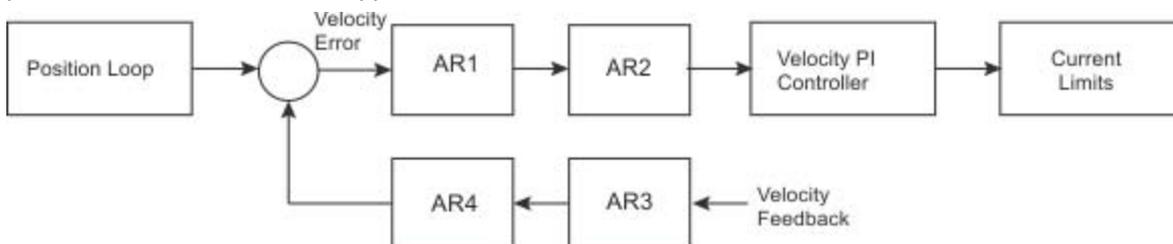

AR1, AR2, AR3, and AR4 are used in velocity and position mode, but are disabled in torque mode.

### Discrete time transfer function (applies to all AR filters)

The velocity loop compensation is actually implemented as a digital discrete time system function on the DSP. The continuous time transfer function is converted to the discrete time domain by a backward Euler mapping:

$$s \approx (1-z^{-1})/t, \text{ where } t = 62.5 \mu s$$

The poles are prewarped to  $F_p$  and the zeros are prewarped to  $F_z$ .

## Related Topics

Velocity Loop (→ p. 143)

## 25.47.3 VL.ARTYPE1 TO VL.ARTYPE4

General Information	
Type	NV Parameter
Description	Indicates the method used to calculate BiQuad coefficients; active in opmodes 1 (velocity) and 2 (position) only.
Units	N/A
Range	0
Default Value	0
Data Type	U8
See Also	N/A
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	3405h/1	VL.ARTYPE1	M_01-02-00-000
	3405h/2	VL.ARTYPE2	
	3405h/3	VL.ARTYPE3	
	3405h/4	VL.ARTYPE4	

Parameter	Fieldbus	Address	Attributes	Signed?
VL.ARTYPE1	Profinet	2412	Byte	No
	sercos <sup>®</sup> III		2 Octets	
VL.ARTYPE2	Profinet	2413	Byte	No
	sercos <sup>®</sup> III		2 Octets	
VL.ARTYPE3	Profinet	2414	Byte	No
	sercos <sup>®</sup> III		2 Octets	
VL.ARTYPE4	Profinet	2415	Byte	No
	sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	824	VL.ARTYPE1	No	8 bit	No	M_01-03-00-000
	826	VL.ARTYPE2				
	828	VL.ARTYPE3				
	830	VL.ARTYPE4				

## Description

These parameters indicate the method used to calculate the biquad coefficients VL.ARPFx, VL.ARPQx, VL.ARZFx, and VL.ARZQx. A value of 0 indicates that the coefficients are set directly. This parameter has no effect on the filter itself, but is only used to determine the original design parameters. Currently, only the value of 0 is supported.

## Related Topics

14.4 Velocity Loop

## 25.47.4 VL.ARZF1 TO VL.ARZF4

General Information	
Type	R/W Parameter
Description	Sets the natural frequency of the zero (numerator) of anti-resonance (AR)filter 1; active in opmodes 1 (velocity) and 2 (position) only.
Units	Hz
Range	5 to 5,000 Hz
Default Value	500 Hz
Data Type	Float
See Also	VL.ARPF1 TO VL.ARPF4 (→ p. 1251), VL.ARPQ1 TO VL.ARPQ4 (→ p. 1253), VL.ARZQ1 TO VL.ARZQ4 (→ p. 1259)
Start Version	M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	3406h/9	VL.ARZF1	M_01-02-00-000
	3406h/A	VL.ARZF2	
	3406h/B	VL.ARZF3	
	3406h/C	VL.ARZF4	

Parameter	Fieldbus	Address	Attributes	Signed?
VL.ARZF1	Profinet	2416	DWord	No
	sercos <sup>®</sup> III		4 Octets	
VL.ARZF2	Profinet	2417	DWord	No
	sercos <sup>®</sup> III		4 Octets	
VL.ARZF3	Profinet	2418	DWord	No
	sercos <sup>®</sup> III		4 Octets	
VL.ARZF4	Profinet	2419	DWord	No
	sercos <sup>®</sup> III		4 Octets	


Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version	
Modbus	832	VL.ARZF1	No	32 bit	No	M_01-03-00-000
	834	VL.ARZF2				
	836	VL.ARZF3				
	838	VL.ARZF4				

## Description

VL.ARZF1 sets the natural frequency of the zero (numerator) of AR filter 1. This value is  $F_z$  in the approximate transfer function of the filter:

$$ARx(s) = [s^2 / (2\pi F_z)^2 + s / (Q_z 2\pi F_z) + 1] / [s^2 / (2\pi F_p)^2 + s / (Q_p 2\pi F_p) + 1]$$

The following block diagram describes the AR filter function; note that AR1 and AR2 are in the forward path, while AR3 and AR4 are applied to feedback:

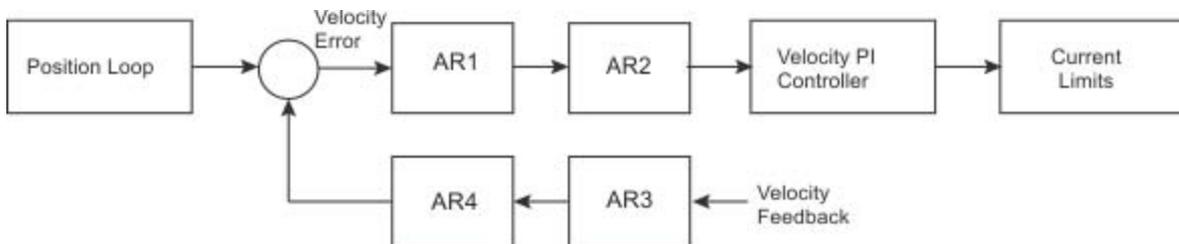

AR1, AR2, AR3, and AR4 are used in velocity and position mode, but are disabled in torque mode.

### Discrete time transfer function (applies to all AR filters)

The velocity loop compensation is actually implemented as a digital discrete time system function on the DSP. The continuous time transfer function is converted to the discrete time domain by a backward Euler mapping:

$$s \approx (1-z^{-1})/t, \text{ where } t = 62.5 \mu\text{s}$$

The poles are prewarped to  $F_p$  and the zeros are prewarped to  $F_z$ .

## Related Topics

Velocity Loop (→ p. 143)

## 25.47.5 VL.ARZQ1 TO VL.ARZQ4

General Information	
Type	R/W Parameter
Description	Sets the Q of the zero (numerator) of anti-resonance filter #1; active in opmodes 1 (velocity) and 2 (position) only.
Units	N/A
Range	0.1 to 5
Default Value	0.5
Data Type	Float
See Also	VL.ARPF1 TO VL.ARPF4 (→ p. 1251), VL.ARPQ1 TO VL.ARPQ4 (→ p. 1253), VL.ARZF1 TO VL.ARZF4 (→ p. 1257)
Start Version	M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex		Object Start Version
EtherCAT COE and CANopen	3406h/D	VL.ARZQ1	M_01-02-00-000
	3406h/E	VL.ARZQ2	
	3406h/F	VL.ARZQ3	
	3406h/10	VL.ARZQ4	

Parameter	Fieldbus	Address	Attributes	Signed?
VL.ARZQ1	Profinet	2420	DWord	No
	sercos <sup>®</sup> III		4 Octets	
VL.ARZQ2	Profinet	2421	DWord	No
	sercos <sup>®</sup> III		4 Octets	
VL.ARZQ3	Profinet	2422	DWord	No
	sercos <sup>®</sup> III		4 Octets	
VL.ARZQ4	Profinet	2423	DWord	No
	sercos <sup>®</sup> III		4 Octets	


Fieldbus	Index/Subindex		Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	840	VL.ARZQ1	No	32 bit	No	M_01-03-00-000
	842	VL.ARZQ2				
	844	VL.ARZQ3				
	846	VL.ARZQ4				

## Description

VL.ARZQ1 sets the Q (quality factor) of the zero (numerator) of AR filter 1. This value is  $Q_z$  in the approximate transfer function of the filter:

$$AR1(s) = [s^2 / (2\pi F_z)^2 + s / (Q_z 2\pi F_z) + 1] / [s^2 / (2\pi F_p)^2 + s / (Q_p 2\pi F_p) + 1]$$

The following block diagram describes the AR filter function; note that AR1 and AR2 are in the forward path, while AR3 and AR4 are applied to feedback:

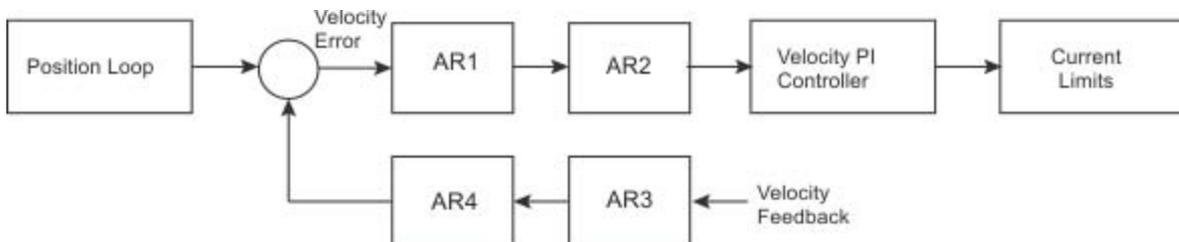

AR1, AR2, AR3 and AR4 are used in velocity and position mode, but are disabled in torque mode.

### Discrete time transfer function (applies to all AR filters)

The velocity loop compensation is actually implemented as a digital discrete time system function on the DSP. The continuous time transfer function is converted to the discrete time domain by a backward Euler mapping:

$$s \approx (1-z^{-1})/t, \text{ where } t = 62.5 \mu s.$$

The poles are prewarped to  $F_p$  and the zeros are prewarped to  $F_z$ .

## Related Topics

Velocity Loop (→ p. 143)

## 25.47.6 VL.BUSFF

General Information	
Type	R/O Parameter
Description	Displays the velocity loop feedforward value injected by the field-bus; active in opmodes 1 (velocity) and 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, (custom units)/s, rad/s Linear: counts/s, mm/s, μm/s, (custom units)/s
Range	0.0 to VL.LIMITP (→ p. 1290)
Default Value	0.0
Data Type	Float
See Also	VL.FF (→ p. 1275), VL.KBUSFF (→ p. 1279)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	60B1h/0	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	VL.BUSFF_32	2424	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	848	Yes	low 32 bit word	Yes	M_01-03-00-000

### Description

This parameter displays the velocity loop feedforward value injected by the fieldbus.

## **Related Topics**

14.4 Velocity Loop

## 25.47.7 VL.CMD

General Information	
Type	R/O Parameter
Description	Reads the actual velocity command; active in opmodes 1 (velocity) and 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, (custom units)/s, rad/s Linear: counts/s, mm/s, µm/s, (custom units)/s
Range	N/A
Default Value	N/A
Data Type	Float
See Also	VL.FB (→ p. 1269), VL.CMDU (→ p. 1265), VL.LIMITP (→ p. 1290), VL.LIMITN (→ p. 1288)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	606Bh/0	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	VL.CMD_32	2425	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	850	Yes	low 32 bit word	Yes	M_01-03-00-000

### Description

VL.CMD returns the actual velocity command as it is received in the velocity loop entry after all velocity limits (such as VL.LIMITN (→ p. 1288) and VL.LIMITP (→ p. 1290)). See velocity loop design diagram for more details.

## **Related Topics**

14.4 Velocity Loop

14.5 Position Loop

1 Block Diagrams

## 25.47.8 VL.CMDU

General Information	
Type	R/W Parameter
Description	Sets the user velocity command; active in opmodes 1 (velocity) and 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, custom units/s, rad/s Linear: counts/s, mm/s, μm/s, custom units/s
Range	Rotary -15,000.000 to 15,000.000 rpm -250.000 to 250.000 rps -90000.000 to 90000.000 deg/s -1250.000 to 1250.000 custom units/s -1570.796 to 1570.796 rad/s Linear -1,073,741,824,000.000 to 1,073,741,824,000.000 counts/s -8,000.000 to 8,000.000 mm/s -8,000,000.000 to 8,000,000.000 μm/s -1,250.000 to 1,250.000 custom units/s
Default Value	0
Data Type	Float
See Also	VL.FB (→ p. 1269), VL.CMD (→ p. 1263), DRV.OPMODE (→ p. 682), DRV.CMDSOURCE (→ p. 604), VL.LIMITN (→ p. 1288), VL.LIMITP (→ p. 1290)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	60FFh/0	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	VL.CMDU_32	2426	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	852	Yes	low 32 bit word	Yes	M_01-03-00-000

## Description

VL.CMDU sets the user velocity command. When DRV.OPMODE (→ p. 682) is set to 1 (velocity loop) and DRV.CMDSOURCE (→ p. 604) is set to 0 (TCP/IP channel), then setting this value when the drive is enabled will cause the drive to rotate at the required velocity.

## Related Topics

14.4 Velocity Loop

## 25.47.9 VL.ERR

General Information	
Type	R/O Parameter
Description	Sets the velocity error; active in opmodes 1 (velocity) and 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, (custom units)/s, rad/s Linear: counts/s, mm/s, µm/s, (custom units)/s
Range	N/A
Default Value	N/A
Data Type	Float
See Also	VL.CMD (→ p. 1263), VL.FB (→ p. 1269)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3407h/4	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	VL.ERR_32	2427	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	854	Yes	low 32 bit word	Yes	M_01-03-00-000

### Description

VL.ERR sets the velocity error. It is calculated in the velocity loop as the difference between VL.CMD (→ p. 1263) and VL.FB (→ p. 1269).

## **Related Topics**

14.4 Velocity Loop

## 25.47.10 VL.FB

General Information	
Type	R/O Parameter
Description	Reads the velocity feedback; active in opmodes 1 (velocity) and 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, (custom units)/s, rad/s Linear: counts/s, mm/s, µm/s, (custom units)/s
Range	N/A
Default Value	N/A
Data Type	Float
See Also	VL.CMDU (→ p. 1265)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3618h/0 606Ch/0	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	VL.FB_32	2428	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	856	Yes	low 32 bit word	Yes	M_01-03-00-000

### Description

VL.FB returns the velocity feedback as it is received in the velocity loop, after passing through Filter 3 and Filter 4.

## **Related Topics**

14.4 Velocity Loop

## 25.47.11 VL.FBFILTER

General Information	
Type	R/O Parameter
Description	Filters VL.FB (→ p. 1269) value; active in opmodes 1 (velocity) and 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, (custom units)/s, rad/s Linear: counts/s, mm/s, µm/s, (custom units)/s
Range	N/A
Default Value	N/A
Data Type	Float
See Also	VL.FB (→ p. 1269)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3407h/1	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	VL.FBFILTER_32	2429	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	858	Yes	low 32 bit word	Yes	M_01-03-00-000

### Description

This parameter returns the same value as VL.FB (→ p. 1269), filtered through a 10 Hz filter.

### Related Topics

## 14.4 Velocity Loop

## 25.47.12 VL.FBSOURCE

General Information	
Type	NV Parameter
Description	Sets feedback source for the velocity loop; active in opmodes 1 (velocity) and 2 (position) only.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
See Also	PL.FBSOURCE (→ p. 1096)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	No
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2430	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	860	No	8 bit	No	M_01-03-00-000

### Description

This parameter determines the feedback source to be used by the velocity loop. A value of 0 selects the primary feedback, and 1 selects the secondary feedback.

### Related Topics

Velocity Loop (→ p. 143)

## 25.47.13 VL.FBUNFILTERED

General Information	
Type	R/O Parameter
Description	Reads the velocity feedback.
Units	Depends on UNIT.VROTARY or UNIT.VLINEAR, UNIT.ACCLINEAR Rotary: rpm, rps, deg/s, (custom units)/s, rad/s Linear: counts/s, mm/s, µm/s, (custom units)/s
Range	N/A
Default Value	N/A
Data Type	Float
See Also	VL.FB (→ p. 1269), VL.FBFILTER (→ p. 1271)
Start Version	M_01-03-06-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2845	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1690	Yes	64-bit	Yes	M_01-06-03-000

### Description

VL.FBUNFILTERED reads the raw velocity feedback before any filters affect the value of this feedback.

### Related Topics

Velocity Loop (→ p. 143)

## 25.47.14 VL.FF

General Information	
Type	R/O Parameter
Description	Displays the velocity loop overall feedforward value; active in opmodes 1 (velocity) and 2 (position) only.
Units	Depends on or Rotary: rpm, rps, deg/s, (custom units)/s, rad/s Linear: counts/s, mm/s, µm/s, (custom units)/s
Range	0 to VL.LIMITP (→ p. 1290)
Default Value	0
Data Type	Float
See Also	VL.KBUSFF (→ p. 1279)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2431	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	862	Yes	low 32 bit word	Yes	M_01-03-00-000

### Description

This parameter displays the velocity loop overall feedforward value.

### Related Topics

14.4 Velocity Loop

VL.KVFF (→ p. 1286)

## 25.47.15 VL.GENMODE

General Information	
Type	NV Parameter
Description	Selects mode of velocity generation (Observer, d/dt); active in opmodes 1 (velocity) and 2 (position) only.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2432`	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	864	No	16 bit	No	M_01-03-00-000

### Description

This parameter is used to select the velocity generator mode.

Mode	Description
0	d/dt mode: The derivative of the mechanical angle of the drive is fed to a first order low pass.
1	Luenberger Observer mode

## **Related Topics**

Velocity Loop (→ p. 143)

## 25.47.16 VL.KBUSFF

General Information	
Type	R/W Parameter
Description	Sets the velocity loop acceleration feedforward gain value; active in opmodes 1 (velocity) and 2 (position) only.
Units	NA
Range	0.0 to 2.0
Default Value	0.0
Data Type	Float
See Also	VL.BUSFF (→ p. 1261)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3407h/3	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2433	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	866	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets the gain for the acceleration feedforward (a scaled second derivative of the position command is added to the velocity command value).

The nominal feedforward value can be multiplied by this gain value.

This will have affect only when using position mode (DRV.OPMODE (→ p. 682) = 2).

## **Related Topics**

14.4 Velocity Loop

## 25.47.17 VL.KI

General Information	
Type	NV Parameter
Description	Sets the velocity loop integral gain for the PI controller; active in opmodes 1 (velocity) and 2 (position) only.
Units	Hz
Range	0 to 1,000 Hz
Default Value	160 Hz
Data Type	Float
See Also	VL.KP (→ p. 1284)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	354Dh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2434	DWord	No
sercos <sup>®</sup> III		4 Octets	


Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	868	No	32 bit	No	M_01-03-00-000

### Description

VL.KI sets the integral gain of the velocity loop.

A factor of  $2\pi$  is included in the time calculation, therefore a PI velocity loop with a constant error of 1 rps in which VL.KI is set to 160 and VL.KP ( $\rightarrow$  p. 1284) is set to 1, will take  $(1000/160)*2\pi$  ms to increase the integral gain to 1. Therefore, the total gain is 2 at this time (see velocity loop structure below).

### Velocity Loop Structure

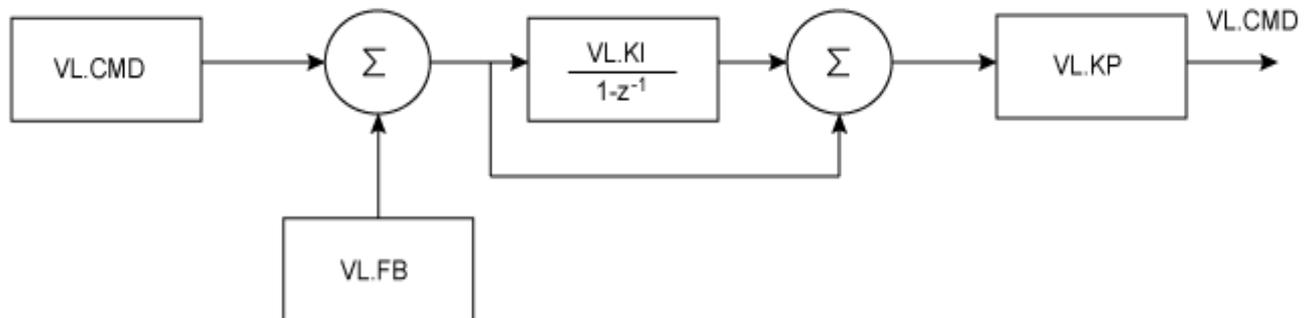

### Related Topics

Velocity Loop ( $\rightarrow$  p. 143)

## 25.47.18 VL.KO

General Information	
Type	R/W Parameter
Description	Scales the observer velocity signal; active in opmodes 1 (velocity) and 2 (position) only.
Units	Internal
Range	0 to 65,535
Default Value	0
Data Type	Float
See Also	VL.MODEL (→ p. 1293)
Start Version	M_01-00-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2435	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	870	No	32 bit	No	M_01-03-00-000

### Description

VL.KO is used to scale the observer model to match the load. When VL.KO is tuned properly, Reads the observer velocity signal; active in opmodes 1 (velocity) and 2 (position) only. (→ p. 1293) will match VL.FB (→ p. 1269), except when there is an unspecified offset between the two.

### Related Topics

Velocity Loop (→ p. 143)

## 25.47.19 VL.KP

General Information	
Type	NV Parameter
Description	Sets velocity loop proportional gain for the PI controller; active in opmodes 1 (velocity) and 2 (position) only.
Units	A/(rad/sec)
Range	0.001 to 2,147,483.008
Default Value	1
Data Type	Float
See Also	VL.KI (→ p. 1281)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3548h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2436	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	872	No	32 bit	No	M_01-03-00-000

### Description

VL.KP sets the proportional gain of the velocity loop.

The idealized velocity loop bandwidth in Hz is:

**Rotary motor:**

$$\text{Bandwidth (Hz)} = \text{VL.KP} * K_t / (2\pi * J_m)$$

Where:

$K_t$  = motor torque constant, in units of Nm/Arms

$J_m$  = motor inertia, in units of kg\*m<sup>2</sup>

**Linear motor:**

$$\text{Bandwidth (Hz)} = \text{VL.KP} * K_t / (\text{Motor Pitch (mm)} * J_m)$$


Where:

$K_t$  = motor torque constant, in units of Nm/Arms

$J_m$  = motor inertia, in units of kg

The drive uses the same control loop for both linear and rotary motors. VL.KP units are in Arms / (rad/s). If you want to tune in units of Arms/(mm/s), then you must manually convert the units.

The diagram below shows how linear motors are implemented at the control loop level.

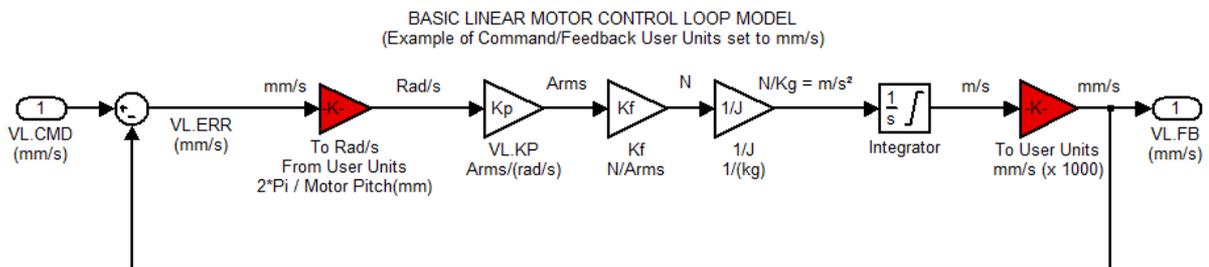

The red blocks are automatically handled at the drive level.

2π radians is the linear equivalent of one full mechanical revolution of a rotary motor - and is equal to the MOTOR.PITCH of a linear motor.

**Example**

To convert VL.KP = 0.320 Arms/(rad/s) to Arms/(mm/s), where MOTOR.PITCH is 32 mm:

$$\text{VL.KP} = 0.320 \text{ Arm /rad/s} * (2\pi \text{ rad} / 32\text{mm MOTOR.PITCH})$$

$$\text{VL.KP} = 0.32 * 2\pi / 32 = 0.063 \text{ Arms} / (\text{mm/s})$$

**Related Topics**

Velocity Controller Environment Block Diagram

## 25.47.20 VL.KVFF

General Information	
Type	R/W Parameter
Description	Sets the velocity loop velocity feedforward gain value; active in opmodes 1 (velocity) and 2 (position) only.
Units	NA
Range	0.0 to 2.0
Default Value	0.0
Data Type	Float
See Also	VL.FF (→ p. 1275)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3407h/2 354Bh/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2437	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	874	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets the gain for the velocity feedforward (a scaled derivative of the position command is added to the velocity command value). The nominal feedforward value can be multiplied by this gain value.

This parameter is only used in the position mode (DRV.OPMODE (→ p. 682) = 2).

## **Related Topics**

14.4 Velocity Loop

## 25.47.21 VL.LIMITN

General Information	
Type	NV Parameter
Description	Sets the velocity lower limit; active in opmodes 1 (velocity) and 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, custom units/s, rad/s Linear: counts/s, mm/s, µm/s, custom units/s
Range	Range may be limited by ECCN 3A225 Limitations for Induction Motors (→ p. 74) Rotary: -15,000.000 to 0.000 rpm -250.000 to 0.000 rps -90,000.000 to 0.000 deg/s -1,250.000 to 0.000 custom units/s -1570.796 to 0.000 rad/s Linear: -1,073,741,824,000.000 to 0.000 counts/s -250.000*MOTOR.PITCH (→ p. 1001) to 0.000 mm/s -250,000.000*MOTOR.PITCH (→ p. 1001) to 0.000 µm/sec -1,250.000 to 0.000 custom units/s
Default Value	Rotary: -3,000.000 rpm -50.000 rps -18,000.002 deg/s -250.000 (custom units)/s -314.159 rad/s Linear: -0.050 counts/s -50*MOTOR.PITCH (→ p. 1001) mm/s -50,000.004*MOTOR.PITCH µm/sec -250.000 custom units/s
Data Type	Float
See Also	VL.LIMITP (→ p. 1290), VL.CMD (→ p. 1263)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes

Variant	Supported
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3623h/0	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	VL.LIMITN_32	2438	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	876	Yes	low 32 bit word	Yes	M_01-03-00-000

## Description

VL.LIMITN sets the velocity command negative limit.

If the input to the velocity loop is lower than VL.LIMITN, then the actual velocity command VL.CMD (→ p. 1263) is limited by the value of VL.LIMITN.

### NOTE

ECCN 3A255 imposes special limitations on operating speed for induction motors. See ECCN 3A225 Limitations for Induction Motors (→ p. 74).

## Related Topics

14.4 Velocity Loop

## 25.47.22 VL.LIMITP

General Information	
Type	NV Parameter
Description	Sets the velocity high limit; active in opmodes 1 (velocity) and 2 (position) only.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, custom units/s, rad/s Linear: counts/s, mm/s, µm/s, custom units/s
Range	Range may be limited by ECCN 3A225 Limitations for Induction Motors (→ p. 74) Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 deg/s 0.000 to 1,250.000 custom units/s 0.000 to 1570.796 rad/s Linear: 0.000 to 1,073,741,824,000.000 counts/s 0.000 to 250.000*MOTOR.PITCH (→ p. 1001) mm/sec 0.000 to 250,000.000*MOTOR.PITCH (→ p. 1001) µm/s 0.000 to 1,250.000 custom units/s
Default Value	Rotary: 3,000.000 rpm 50.000 rps 18,000.002 deg/s 250.000 (custom units)/s 314.159 rad/s Linear: 0.050 counts/s 50.000*MOTOR.PITCH (→ p. 1001) mm/sec 50,000.004*MOTOR.PITCH µm/sec 250.000 custom units/s
Data Type	Float
See Also	VL.LIMITN (→ p. 1288), VL.CMD (→ p. 1263)
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes

Variant	Supported
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3622h/0	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	VL.LIMITP_32	2439	DWord	No
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	878	Yes	low 32 bit word	No	M_01-03-00-000

## Description

VL.LIMITP sets the velocity command positive limit.

If the input to the velocity loop is higher than VL.LIMITP, then the actual velocity command VL.CMD (→ p. 1263) is limited by the value of VL.LIMITP.

### NOTE

ECCN 3A255 imposes special limitations on operating speed for induction motors. See ECCN 3A225 Limitations for Induction Motors (→ p. 74).

## Related Topics

14.4 Velocity Loop

# 25.47.23 VL.LMJR

General Information	
Type	NV Parameter
Description	Sets the ratio of the estimated load moment of inertia relative to the motor moment of inertia; active in opmodes 1 (velocity) and 2 (position) only.
Units	NA
Range	0 to 100.0
Default Value	0
Data Type	Float
See Also	IL.FF (→ p. 892)
Start Version	M_01-00-00-000

## Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2440	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	880	No	32 bit	No	M_01-03-00-000

## Description

This parameter is used in the internal calculation of the current loop acceleration feed forward gain value.

## Related Topics

Velocity Loop (→ p. 143)

## 25.47.24 VL.MODEL

General Information	
Type	R/O Parameter
Description	Reads the observer velocity signal; active in opmodes 1 (velocity) and 2 (position) only.
Units	Depends on UNIT.VROTARY or UNIT.VLINEAR, UNIT.ACCLINEAR Rotary: rpm, rps, deg/s, (custom units)/s, rad/s Linear: counts/s, mm/s, µm/s, (custom units)/s
Range	N/A
Default Value	N/A
Data Type	Float
See Also	VL.FB (→ p. 1269), VL.KO (→ p. 1283)
Start Version	M_01-00-01-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	VL.MODEL_32	2441	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	882	Yes	low 32 bit word	Yes	M_01-03-00-000

### Description

VL.MODEL is the observer velocity output. When VL.KO (→ p. 1283) is tuned properly, VL.MODEL will match VL.FB (→ p. 1269), except when there is an unspecified offset between the two.

### Related Topics

14.4 Velocity Loop

## 25.47.25 VL.OBSBW

General Information	
Type	NV Parameter
Description	Sets the bandwidth of the observer in Hz.
Units	Hz
Range	10 to 4,000 Hz
Default Value	30 Hz
Data Type	Float
See Also	N/A
Start Version	M_01-03-00-004

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2442	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	884	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets the bandwidth of the observer in Hz. The observer passes the velocity feedback through a PID control loop that behaves like a low-pass filter with a bandwidth of VL.OBSBW.

### Related Topics

Velocity Loop (→ p. 143)

## 25.47.26 VL.OBSMODE

General Information	
Type	NV Parameter
Description	Sets the observer operating mode.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	Integer
See Also	N/A
Start Version	M_01-03-00-004

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2443	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	886	No	32 bit	No	M_01-03-00-000

### Description

This parameter sets the observer operating mode. When VL.OBSMODE = 0, the observer is not part of the control loop; that is, VL.FB is used as the velocity feedback signal to the velocity loop. When VL.OBSMODE = 1, the observer is part of the control loop; VL.MODEL is used as the velocity feedback signal.

### Related Topics

Velocity Loop (→ p. 143)

## 25.47.27 VL.THRESH

General Information	
Type	NV Parameter
Description	Sets the user over speed fault level.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) Rotary: rpm, rps, deg/s, custom units/s, rad/s Linear: counts/s, mm/s, µm/s, custom units/s
Range	Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 deg/s 0.000 to 1,250.000 custom units/s 0.000 to 1,570.796 rad/s Linear: 0.000 to 1,073,741,824,000.000 counts/s 0.000 to 250.000*MOTOR.PITCH (→ p. 1001) mm/s 0.000 to 250,000.000*MOTOR.PITCHMOTOR.PITCH (→ p. 1001)µm/s 0.000 to 1,250.000 custom units/s
Default Value	Rotary: 3,600 rpm 60 rps 21,600.000 deg/s 300.000 custom units/s 376.991 rad/s Linear: 0.060 counts/s 60.000*MOTOR.PITCH (→ p. 1001) mm/s 60,000.04*MOTOR.PITCHMOTOR.PITCH (→ p. 1001)µm/s 300.000 custom units/s
Data Type	Float
Start Version	M_01-00-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes

Variant	Supported
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

## Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3627h/0	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	VL.THRESH_32	2444	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	888	Yes	low 32 bit word	Yes	M_01-03-00-000

## Description

VL.THRESH sets the user overspeed fault threshold. This threshold becomes the overall overspeed fault threshold (VL.VFTHRESH) if it is less than the motor speed threshold ( $1.2 \times \text{MOTOR.VMAX}$ ), and for MOTOR.TYPE = 6 if it is less than the motor back EMF overspeed threshold ( $(1.02 \times 1000 \times \text{VBUS.OVFTHRESH}) / (\text{MOTOR.KE} \times \text{sqrt}(2))$ ).

The value is considered an absolute value, hence it applies for both negative and positive velocities.

## Example

VL.THRESH is set to 600 rpm. A velocity (VL.FB (→ p. 1269)) of 700 rpm will generate an over speed fault.

## Related Topics

14.4 Velocity Loop | VL.CMD (→ p. 1263) | VL.CMDU (→ p. 1265) | VL.VFTHRESH (→ p. 1298)

## 25.47.28 VL.VFTHRESH

General Information	
Type	R/O Parameter
Description	Reads the overall overspeed fault threshold.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Float
Start Version	M_01-10-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Description

This parameter reports the overall overspeed fault threshold. Whichever of the following thresholds has the smallest value is used as the overall overspeed fault threshold:

- User overspeed threshold (VL.THRESH).
- Motor mechanical overspeed threshold ( $1.2 \times \text{MOTOR.VMAX}$ )
- If  $\text{MOTOR.TYPE} = 6$ , the motor back EMF overspeed threshold ( $((1.02 \times 1000 \times \text{VBUS.OVFTHRESH}) / (\text{MOTOR.KE} \times \sqrt{2}))$ ).

### Related Topics

14.4 Velocity Loop | VL.THRESH (→ p. 1296) | MOTOR.VMAX (→ p. 1025)

## 25.48 WS Parameters

This section describes the WS parameters.

---

<b>25.48.1 WS.ARM</b> .....	<b>1300</b>
<b>25.48.2 WS.CHECKMODE</b> .....	<b>1302</b>
<b>25.48.3 WS.CHECKT</b> .....	<b>1304</b>
<b>25.48.4 WS.CHECKV</b> .....	<b>1305</b>
<b>25.48.5 WS.DISARM</b> .....	<b>1307</b>
<b>25.48.6 WS.DISTMAX</b> .....	<b>1308</b>
<b>25.48.7 WS.DISTMIN</b> .....	<b>1310</b>
<b>25.48.8 WS.FREQ</b> .....	<b>1312</b>
<b>25.48.9 WS.IMAX</b> .....	<b>1314</b>
<b>25.48.10 WS.MODE</b> .....	<b>1316</b>
<b>25.48.11 WS.NUMLOOPS</b> .....	<b>1318</b>
<b>25.48.12 WS.STATE</b> .....	<b>1319</b>
<b>25.48.13 WS.T</b> .....	<b>1321</b>
<b>25.48.14 WS.TDELAY1</b> .....	<b>1322</b>
<b>25.48.15 WS.TDELAY2</b> .....	<b>1324</b>
<b>25.48.16 WS.TDELAY3</b> .....	<b>1326</b>
<b>25.48.17 WS.TIRAMP</b> .....	<b>1328</b>
<b>25.48.18 WS.TSTANDSTILL</b> .....	<b>1329</b>
<b>25.48.19 WS.VTHRESH</b> .....	<b>1330</b>

## 25.48.1 WS.ARM

General Information	
Type	Command
Description	Sets wake and shake to start at the next drive enable.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	N/A
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3494h/6	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2445	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	890	No	Command	No	M_01-03-00-000

### Description

This command sets wake and shake to start at the next drive enable. Feedback type is not relevant for this command. If WS.STATE is 0 and the drive is disabled, then WS.STATE will change to 1 after issuing WS.ARM. With this command, wake and shake can be repeated if desired.

### Related Topics

Wake and Shake Overview (→ p. 76)

## 25.48.2 WS.CHECKMODE

General Information	
Type	R/W Parameter
Description	Select the type of commutation check to execute after Wake and Shake finds a new commutation angle.
Units	N/A
Range	0 to 2
Default Value	1
Data Type	Integer
Start Version	M_01-07-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2867	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1734	No	8-bit	No

### Description

AKD supports several options to confirm a valid commutation after Wake and Shake has determined a new commutation angle. In some mechanical situations, such as if motion is inhibited, it is possible for Wake and Shake to select an incorrect angle. Commutation checks are designed to prevent unexpected motion if this occurs.

#### 0 = No Commutation Check

If No Commutation Check is selected, neither passive nor active commutations checks will be executed.

**1 = Active Commutation Check (default)**

In the default Active Commutation Check mode, AKD will make a short torque move after an angle has been selected. If the motor fails to move in the expected direction, a fault will be generated.

**2 = Passive Commutation Check**

In the Passive Commutation Check mode, AKD will monitor torque commands and acceleration values for 10 revolutions after Wake and Shake has completed. During this time, a fault will be generated if unexpected motion is detected, such as if commanded torque and acceleration are in opposition directions. Note that this fault may also be reported if the motor experiences a large torque disturbance lasting longer than WS.CHECKT.

**Related Topics**

Wake and Shake Overview (→ p. 76) | WS.MODE (→ p. 1316)

## 25.48.3 WS.CHECKT

General Information	
Type	R/W Parameter
Description	Sets the amount of time a communication error must be present before an error is thrown.
Units	ms
Range	0 to 10,000
Default Value	N/A
Data Type	U16
Start Version	M_01-06-03-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2850	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1700	No	16-bit	No

### Description

This parameter sets the amount of time a communication error must be present before an error is thrown. Commutation monitoring is disabled when this parameter is set to 0.

### Related Topics

Wake and Shake Overview (→ p. 76) | WS.CHECKV (→ p. 1305)

## 25.48.4 WS.CHECKV

General Information			
Type	R/W Parameter		
Description	This parameter sets the velocity threshold which has to be exceeded to activate commutation monitoring.		
Units	Depends on UNIT.VROTARY or UNIT.VLINEAR.		
Range	Unit	Rotary	Linear
	0	0 to 15,000 rpm	0 to 6,7108,864 counts/s
	1	0 to 250 rps	0 to 8,000 mm/s
	2	0 to 90,000 deg/s	0 to 589934 um/s
	3	0 to 1250 PIN/POUT	0 to 1250 PIN/POUT
Default Value	N/A		
Data Type	S32		
Start Version	M_01-06-03-000		

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2851	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1702	Yes	64-bit	Yes

### Description

This parameter sets the velocity threshold which has to be exceeded to activate commutation monitoring.

## Related Topics

Wake and Shake Overview (→ p. 76) | WS.CHECKT (→ p. 1304) | UNIT.VROTARY (→ p. 1233) |  
UNIT.VLINEAR (→ p. 1231)

## 25.48.5 WS.DISARM

General Information	
Type	Command
Description	Cancels ARM requests and resets wake and shake to the IDLE state.
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
See Also	N/A
Start Version	M_01-04-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2847	Command	No
sercos <sup>®</sup> III			

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	1694	No	Command	No	M_01-06-03-000

### Description

This command disables wake and shake immediately. Feedback type is not relevant for this command. If WS.ARM (→ p. 1300) has been issued, the request to execute the wake and shake algorithm at the next enable is cancelled. WS.STATE (→ p. 1319) is set to IDLE.

### Related Topics

Wake and Shake Overview (→ p. 76)

## 25.48.6 WS.DISTMAX

General Information	
Type	R/W Parameter
Description	Sets maximum movement allowed for wake and shake.
Units	deg (position units)
Range	0 to 90 deg
Default Value	15 deg
Data Type	S64
See Also	N/A
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3494h/2	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2446	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	892	Yes	64 bit	Yes	M_01-03-00-000

### Description

This parameter sets the maximum movement that is allowed for finding commutation. If this value is too small, FF475 (→ p. 271), "Wake and Shake. Too much movement", may occur before wake and shake is finished. The bigger this value, the more movement is allowed for wake and shake. This value is application dependent.

## **Related Topics**

Wake and Shake Overview (→ p. 76)

## 25.48.7 WS.DISTMIN

General Information	
Type	R/W Parameter
Description	Sets the minimum movement required for wake and shake.
Units	Actual position units
Range	0 to 90 deg
Default Value	1 deg
Data Type	S64
See Also	N/A
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	36D1h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2448	DWord	Yes
sercos <sup>®</sup> III		8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	896	Yes	64 bit	Yes	M_01-03-00-000

### Description

This parameter sets the minimum movement that is required for commutation finding. If this value is too small, the the commutation finding might fail if too little current is used. The larger this value, the more movement is needed in order to avoid F473: "Wake and Shake: Too little movement".

### Related Topics

Wake and Shake Overview (→ p. 76)

## 25.48.8 WS.FREQ

General Information	
Type	R/W
Description	Sets the sine frequency of excitation for WS.MODE 2.
Units	Hz
Range	0.01 - 8000
Default Value	10
Data Type	Float
Start Version	M_01-05-10-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2848	DWord	No
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1696	No	32-bit	No

### Description

This keyword sets the excitation frequency for Wake and Shake mode 2.

The default setting of 10Hz will work for almost all systems.

In cases where the load attached to the motor is much higher than the motor inertia (200:1) it may be necessary to lower the value of WS.FREQ.

Effects of lowering WS.FREQ:

- Wake and Shake Mode 2 will take longer to complete.

- A higher magnitude of motion will be seen on the motor because the motor has current applied in the same direction for a longer period of time.

## **Related Topics**

WS.MODE (→ p. 1316)

## 25.48.9 WS.IMAX

General Information	
Type	R/W Parameter
Description	Sets maximum current used for wake and shake.
Units	Arms
Range	0 to (lower value of MOTOR.IPEAK and DRV.IPEAK) Arms
Default Value	(half of maximum) Arms
Data Type	U16
See Also	MOTOR.IPEAK (→ p. 986), DRV.IPEAK (→ p. 665)
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3494h/1	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2450	DWord	Yes
sercos <sup>®</sup> III		4 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	900	No	32 bit	Yes	M_01-03-00-000

### Description

This parameter defines the maximum current used for wake and shake. If the selected current is too low, the minimum required movement may not occur. If the selected current is too high, the movement may be too fast (overspeed) or too large (over maximum movement).

The maximum of this parameter is the lower value of MOTOR.IPEAK and DRV.IPEAK. The default value of this parameter is the half of its maximum. This value depends on the specific application.

## **Related Topics**

Wake and Shake Overview (→ p. 76)

## 25.48.10 WS.MODE

General Information	
Type	R/W Parameter
Description	Sets the method used for wake and shake.
Units	N/A
Range	0 to 1
Default Value	0
Data Type	U8
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Address	Attributes	Signed?
Profinet	2451	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	902	No	8 bit	No	M_01-03-00-000

### Description

This parameter sets the method used for finding commutation.

#### 0 = Standard wake and shake

Two iterations are used to find the correct angle in this mode. Coarse (current mode) and fine (velocity mode) iterations are done in a loop (WS.NUMLOOPS times). The average angle of all loops is calculated and used.

#### 1 = Commutation alignment by fixed commutation vector (Zero Method)

The motor poles are set to 0, current mode is activated, and WS.IMAX is applied. The angle in which the motor settles is used for commutation. Other settings are restored (such as motor poles and operation mode).

## **Related Topics**

Wake and Shake Overview (→ p. 76)

## 25.48.11 WS.NUMLOOPS

General Information	
Type	R/W Parameter
Description	Sets the number of repetitions for wake and shake.
Units	counts
Range	0 to 20 counts
Default Value	5 counts
Data Type	U8
See Also	N/A
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	36E2h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2452	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	904	No	8 bit	No	M_01-03-00-000

### Description

This parameter sets the maximum number of wake and shake repetitions. MOTOR.PHASE is calculated as mean value of all wake and shake repetitions.

### Related Topics

Wake and Shake Overview (→ p. 76)

## 25.48.12 WS.STATE

General Information	
Type	R/O Parameter
Description	Reads wake and shake status.
Units	N/A
Range	N/A
Default Value	Only valid before the first enable occurs. 11 - for feedback types that do not require wake and shake 1 - for feedback types that require wake and shake
Data Type	U8
See Also	N/A
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3494h/5	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2453	Byte	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	906	No	8 bit	No	M_01-03-00-000

### Description

WS switches different current vectors and records position feedback in order to establish commutation alignment.

WS.STATE 0 = wake and shake successful (DONE).

WS.STATE 1 = wake and shake configured and will be done at next enable (ARMED).

WS.STATE 2 = wake and shake running. (ACTIVE)

WS.STATE 10 = error occurred during wake and shake (ERROR).

WS.STATE 11 = wake and shake not required (IDLE).

## **Related Topics**

Wake and Shake Overview (→ p. 76)

## 25.48.13 WS.T

General Information	
Type	R/W Parameter
Description	Sets wake and shake current-vector appliance time.
Units	ms
Range	1 to 200 ms
Default Value	2 ms
Data Type	U8
See Also	WS.IMAX (→ p. 1314), WS.DISTMAX
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	36D0h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2454	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	908	No	16 bit	No	M_01-03-00-000

### Description

This parameter defines the duration for each different current-vector while the coarse angle calculation. The move distance is proportional to the WS.T and WS.IMAX value.

### Related Topics

Wake and Shake Overview (→ p. 76)

## 25.48.14 WS.TDELAY1

General Information	
Type	NV Parameter
Description	Delay for wake and shake timing.
Units	ms
Range	0 to 200 ms
Default Value	5 ms
Data Type	U8
See Also	N/A
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3683h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2455	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	910	No	16 bit	No	M_01-03-00-000

### Description

WS.TDELAY1 defines the delay time of the wake and shake function. This time is a delay time between the switching of different current vectors during the wake and shake procedure. This time should be increased in the case of movement interferences between single current vectors.

### Related Topics

Wake and Shake Overview (→ p. 76)

## 25.48.15 WS.TDELAY2

General Information	
Type	NV Parameter
Description	Sets the delay for wake and shake timing.
Units	ms
Range	0 to 200 ms
Default Value	50 ms
Data Type	U8
See Also	N/A
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3685h/0	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2456	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	912	No	16 bit	No	M_01-03-00-000

### Description

WS.TDELAY2 defines the delay between switching from coarse angle calculation to fine angle calculation during the wake and shake procedure. This time should be increased in the case of interferences between the coarse calculation done in current mode and the fine calculation done in velocity mode. Choosing too large a value increases the wake and shake duration.

## **Related Topics**

Wake and Shake Overview (→ p. 76)

## 25.48.16 WS.TDELAY3

General Information	
Type	NV Parameter
Description	Sets the delay for wake and shake between loops in mode 0.
Units	ms
Range	0 to 2,000 ms
Default Value	100 ms
Data Type	U16
See Also	N/A
Start Version	M_01-01-00-102, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3494h/3	M_01-00-00-000

Fieldbus	Address	Attributes	Signed?
Profinet	2457	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	914	No	16 bit	No	M_01-03-00-000

### Description

WS.TDELAY3 defines the delay between complete loops in mode 0 only. Decreasing this value makes the wake and shake procedure faster, but may lead to problems if the motor moves too long. Increasing this value will make wake and shake significantly longer.

### Related Topics

Wake and Shake Overview (→ p. 76)

## 25.48.17 WS.TIRAMP

General Information	
Type	R/W Parameter
Description	Sets the ramp time for the ramp up current in Wake & Shake mode 1.
Units	ms
Range	512 to 10,000
Default Value	512
Data Type	U16
Start Version	M_01-06-07-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
CANopen	0x535D/0	M_01-06-07-000

Fieldbus	Address	Attributes	Signed?
Profinet	2861	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1722	No	16-bit	No

### Description

In Wake & Shake mode 1, a maximum current of WS.IMAX is applied to the motor. WS.TIRAMP defines a time to reach this maximum current. Longer times are useful for big inertia motors or heavy loads.

### Related Topics

Wake and Shake Overview (→ p. 76) | WS.MODE (→ p. 1316) | WS.TSTANDSTILL (→ p. 1329)

## 25.48.18 WS.TSTANDSTILL

General Information	
Type	R/W Parameter
Description	Sets the calming time of the motor for Wake & Shake mode 1.
Units	ms
Range	100 to 20,000
Default Value	1000
Data Type	U16
Start Version	M_01-06-07-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
CANopen	0x535C/0	M_01-06-07-000

Fieldbus	Address	Attributes	Signed?
Profinet	2860	Word	No
sercos <sup>®</sup> III		2 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?
Modbus	1720	No	16-bit	No

### Description

In Wake & Shake mode 1, a maximum current of WS.IMAX is applied to the motor. WS.TSTANDSTILL defines a wait time, during which this maximum current is held, before detecting the commutation angle of the motor. Longer times are useful for big inertia motors or heavy loads.

### Related Topics

Wake and Shake Overview (→ p. 76) | WS.MODE (→ p. 1316) | WS.TIRAMP (→ p. 1328)

## 25.48.19 WS.VTHRESH

General Information	
Type	NV Parameter
Description	Defines the maximum allowed velocity for Wake & Shake.
Units	Depends on UNIT.VROTARY (→ p. 1233) or UNIT.VLINEAR (→ p. 1231) UNIT.ACCLINEAR (→ p. 1218) Rotary: rpm, rps, deg/s, Custom Units (→ p. 100)/s, rad/s Linear: counts/s, mm/s, µm/s, Custom Units (→ p. 100)/s
Range	Rotary: 0.000 to 15,000.000 rpm 0.000 to 250.000 rps 0.000 to 90,000.000 degree/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s 0.000 to 1,570.796 rad/s Linear: 0.000 to 1,073,741,824,000.000 counts/s 0.000 to 8,000.000 mm/s 0.000 to 8,000,000.000 µm/s 0.000 to 1,250.000 Custom Units (→ p. 100)/s
Default Value	100 rpm
Data Type	U16
See Also	N/A
Start Version	M_01-01-00-101, M_01-02-00-000

### Variants Supported

Variant	Supported
AKD Base	Yes
AKD with Position Indexer	Yes
AKD EtherCAT	Yes
AKD CANopen	Yes
AKD BASIC	Yes
AKD SynqNet	Yes
AKD EtherNet/IP	Yes
AKD Profinet	Yes
AKD sercos <sup>®</sup> III	Yes
AKD-N	Yes
AKD-C	No

### Fieldbus Information

Fieldbus	Index/Subindex	Object Start Version
EtherCAT COE and CANopen	3494h/4	M_01-00-00-000

Fieldbus	Parameter	Address	Attributes	Signed?
Profinet	WS.VTHRESH_32	2458	DWord	Yes
sercos <sup>®</sup> III			8 Octets	

Fieldbus	Index/Subindex	Is 64 bit?	Attributes	Signed?	Object Start Version
Modbus	916	Yes	low 32 bit word	Yes	M_01-03-00-000

## Description

This parameter defines the maximum allowed velocity that occurs while commutation finding is active. This supervision runs in real time, but only while wake and shake is active (WS.STATE 2 or greater, for Mode 0). If at any time while wake and shake is running a velocity higher than this value is detected, fault F478 (→ p. 271) is generated. Setting WS.VTHRESH to zero disables this feature. For Mode 1, WS.VTHRESH is only used after the initial phase-finding.

## Related Topics

Wake and Shake Overview (→ p. 76)

## 26 Record of document revisions

Revision	Remarks
6/2010	Combined User Guide and Parameter and Command Reference Guide (released in WorkBench only).
9/2010	Combined User Guide, CANopen, and EtherCAT manuals. Updated for Release 1.3.
11/2010, Rev A	Usability improvements, minor topic edits.
12/2010, Rev B	Document part number update.
05/2011, Rev C	Updated for release 1.4. Added Modbus, modulo, new homing modes, registration moves, W&S improved, new parameters, PLS enhanced, velocity unit changes, motion tasking revisions, switch bounce conditioning (DINx.FILTER), linear motor parameters.
10/2011, Rev D	Updated for release 1.5. Added Configuring with Linear Motors section. New parameters for EIP, DRV, MODBUS, VM, DIO, IP, FB3, IL, FB2, AIN. Improved description of rotary switch use, modbus scaling, homing.
03/2012, Rev E	Updated for release 1.6. Added chapter on Using AKD in a Vertical Axis. Updated parameters for FB1, FB2, FB3, CANOPEN. Updated Modbus Manual.
05/2012, Rev F	Updated for BASIC IO option card. Rotary switch functions updated. Option IO parameters in SD, AIN2, AOUT2, DIN, and DOUT parameter categories added.
08/2012, Rev G	Updated with new Wake and Shake chapters and parameters, new Z pulse digital output mode, and Motion Profile Table screens.
12/2012, Rev H	Updated with new parameters for induction motor support. Also added new parameters in FBUS, REGEN, and DRV. Added two new digital output modes, 20 and 21.
05/2013, Rev J	Updated with new FB1 and IL parameters. New motor temperature screen and motor derating.
09/2013, Rev K	Initial Position Check (→ p. 76) feature added. Feedback type "none" added. Capture Feedback Source added. Parameters added: GUI.DISPLAYS (→ p. 835), TEMP.POWER1 to TEMP.POWER3 (→ p. 1215), DRV.DOWNLOADALLOWED (→ p. 626) Motion profile table topics re-written (Motion Profile Table (→ p. 172)). Variant support information added to all parameters.
12/2013, Rev L	AKD-C Display Codes (→ p. 37) added. Digital Input Mode 26: Suspend Motion (→ p. 109) added. Program Memory Space (pg 1) added. The AKD-C Central Power Supply (→ p. 31) and The AKD-N Family of Digital Drives (→ p. 33) added. DRV.MOTIONDISSOURCES (→ p. 671), FB1.LASTIDENTIFIED (→ p. 739), and VL.VFTHRESH (→ p. 1298) added. MOTOR.IDMAX, MOTOR.LDLL, MOTOR.LISAT, MOTOR.PHSADV1, MOTOR.PHSADV2, MOTOR.SUPPORTEDPARAMS, MOTOR.TEMPC added (see MOTOR Parameters (→ p. 962)). CPS Parameters (→ p. 525), NSD Parameters (→ p. 1079), and STRING Parameters (→ p. 1192), STRINGS Parameters (→ p. 1195) added. FAULT564.ACTION, FAULT565.ACTION (→ p. 715) added.
05/2014, Rev M	MOTORPHASE and MOTORPOLES parameters added to FB1 Parameters (→ p. 717), FB2 Parameters (→ p. 771), and FB3 Parameters (→ p. 786). FB3.DIR (→ p. 787) added. MT.FEEDRATE (→ p. 1049) added. Using Custom Units with Feedback 2 (→ p. 101) section added. Modes 15, 16, and 17 added to Encoder Emulation (→ p. 83). Homing modes 14 and 15 added (HOME.MODE (→ p. 863)).

Revision	Remarks
12/2014, Rev N	Limitation for ECCN 3A225 Limitations for Induction Motors (→ p. 74). Fixed Stop (→ p. 167) added. Homing Mode 16: Find home input with dual edges (→ p. 162) added. Compare Engines (→ p. 124) and CMP Parameters (→ p. 497) added. Parameters DRV.CUSTOMIDENTIFIER (→ p. 607), DRV.FAULTDISPLAYMODE (→ p. 646), EIP.CMDMAP (→ p. 703), EIP.RSPMAP (→ p. 709), and FAULT570.ACTION (→ p. 716) added.

## 27 Index

### A

Acceleration ramp .....	593
AKD Family .....	31, 33
Analog inputs .....	317
Analog output .....	120
Analog setpoints .....	317
Anti-resonance filter .....	1259
Aux. supply 24V, interface .....	303

### B

Basic drive setup .....	35
Blink .....	597
Brake view .....	91

### C

Capture .....	92
Check communications .....	41
Command buffer .....	116
Command source .....	604
Connect to another drive .....	41
Connected and disconnected states .....	41
Connection Diagrams .....	299
B, P, T Variants .....	300
Controlled Stop .....	132
current loop .....	140
Current loop gain scheduling .....	141
CW/CCW Input .....	321

### D

DC bus link, interface .....	307
deceleration .....	611
Device Not Shown .....	44
Digital inputs .....	
all Variants .....	112
Digital Inputs and Outputs .....	104
Direct DC mains .....	61
Disable .....	618
Disconnected state .....	41
Display Codes .....	36-37
Document Revisions .....	1332
Downloading Firmware .....	294
Drive Motion Status .....	183
Dynamic Braking .....	134

### E

Electronic gearing .....	121
Emergency Messages .....	284
Emergency Off .....	135
Emergency Stop Function .....	135
emergency timeout .....	624
ENABLE .....	115
Enable/Disable .....	129

<b>encoder emulation</b> .....	<b>83</b>
<b>Error Messages</b>	
parameter and command .....	280
<b>F</b>	
<b>Fault messages</b> .....	<b>259</b>
<b>Faults</b> .....	<b>600</b>
clearing .....	279-280
<b>Feedback 1</b> .....	<b>74</b>
<b>Feedback 2</b> .....	<b>82</b>
<b>Feedback Connection</b> .....	<b>322</b>
<b>Foldback</b> .....	<b>88</b>
<b>H</b>	
<b>Homing</b> .....	<b>151</b>
<b>I</b>	
<b>I/O-Connection</b> .....	<b>312</b>
<b>Inputs</b>	
Analog .....	317
Digital all Variants .....	112
Enable .....	115
Programmable .....	115
<b>Invalid Firmware</b> .....	<b>296</b>
<b>J</b>	
<b>Jog Move</b> .....	<b>183</b>
<b>L</b>	
<b>Limits</b> .....	<b>123</b>
<b>M</b>	
<b>Macros</b> .....	<b>249</b>
<b>Mains supply, interface</b> .....	<b>309</b>
<b>master/slave</b> .....	<b>83</b>
<b>Modbus</b> .....	<b>327</b>
<b>Modbus Dynamic Mapping</b> .....	<b>330</b>
<b>Modulo position</b> .....	<b>146</b>
<b>Motion Tasks</b> .....	<b>162</b>
<b>Motor</b> .....	<b>70</b>
<b>Motor interface</b> .....	<b>303</b>
<b>Motor Power Connection</b> .....	<b>303</b>
<b>N</b>	
<b>Non-Plug and Play Feedback Devices</b> .....	<b>87</b>
<b>O</b>	
<b>Operating mode</b>	
parameters and commands active in .....	369
<b>Outputs</b>	
Analog .....	316

<b>Overview</b> .....	<b>56</b>
<b>P</b>	
<b>Parameter Comparer</b> .....	<b>253</b>
<b>Parameter Load/Save</b> .....	<b>253</b>
<b>Performance Servo Tuner</b> .....	<b>193</b>
advanced .....	196
<b>Position Loop</b> .....	<b>145</b>
<b>Power</b> .....	<b>61</b>
<b>Programmable Limit Switch</b> .....	<b>126</b>
<b>Pulse Direction, interface</b> .....	<b>320</b>
<b>R</b>	
<b>Regen resistor, interface</b> .....	<b>305</b>
<b>Regeneration</b> .....	<b>63</b>
<b>Registration moves</b> .....	<b>168</b>
<b>S</b>	
<b>Safe Torque Off (STO)</b> .....	<b>136</b>
<b>Save On Disconnect</b> .....	<b>187</b>
<b>Save On Exit</b> .....	<b>187</b>
<b>Save On Firmware Download</b> .....	<b>188</b>
<b>Save Options</b> .....	<b>186</b>
<b>scope</b> .....	<b>236</b>
channels .....	236
settings and presets .....	244
time-base .....	236
<b>Service Motion</b> .....	<b>171</b>
<b>Settings</b> .....	<b>58</b>
<b>Slider Tuning</b> .....	<b>192</b>
<b>Stop Function</b> .....	<b>135</b>
<b>T</b>	
<b>TCP/IP</b> .....	<b>47</b>
<b>Terminal</b> .....	<b>248</b>
<b>Trouble Shooting</b> .....	<b>292</b>
<b>Tuning</b> .....	<b>220</b>
<b>U</b>	
<b>Units</b> .....	<b>100</b>
<b>V</b>	
<b>Velocity Loop</b> .....	<b>143</b>
<b>W</b>	
<b>Wake and shake (WS)</b> .....	<b>77</b>
<b>Warnings</b> .....	<b>259</b>
<b>Watch</b> .....	<b>58</b>
<b>Wizard</b> .....	<b>38</b>

## About Kollmorgen

Kollmorgen is a leading provider of motion systems and components for machine builders. Through world-class knowledge in motion, industry-leading quality and deep expertise in linking and integrating standard and custom products, Kollmorgen delivers breakthrough solutions that are unmatched in performance, reliability and ease-of-use, giving machine builders an irrefutable marketplace advantage.

For assistance with your application needs, visit [www.kollmorgen.com](http://www.kollmorgen.com) or contact us at:

### North America KOLLMORGEN

203A West Rock Road  
Radford, VA 24141 USA

Internet [www.kollmorgen.com](http://www.kollmorgen.com)

E-Mail [support@kollmorgen.com](mailto:support@kollmorgen.com)

Tel.: +1 - 540 - 633 - 3545

Fax: +1 - 540 - 639 - 4162

### Europe

#### KOLLMORGEN Europe GmbH

Pempelfurtstraße 1  
40880 Ratingen, Germany

Internet [www.kollmorgen.com](http://www.kollmorgen.com)

E-Mail [technik@kollmorgen.com](mailto:technik@kollmorgen.com)

Tel.: +49 - 2102 - 9394 - 0

Fax: +49 - 2102 - 9394 - 3155

### Asia

#### KOLLMORGEN

Rm 2205, Scitech Tower, China  
22 Jianguomen Wai Street

Internet [www.kollmorgen.com](http://www.kollmorgen.com)

E-Mail [sales.asia@kollmorgen.com](mailto:sales.asia@kollmorgen.com)

Tel.: +86 - 400 666 1802

Fax: +86 - 10 6515 0263

**KOLLMORGEN**®

*Because Motion Matters™*