

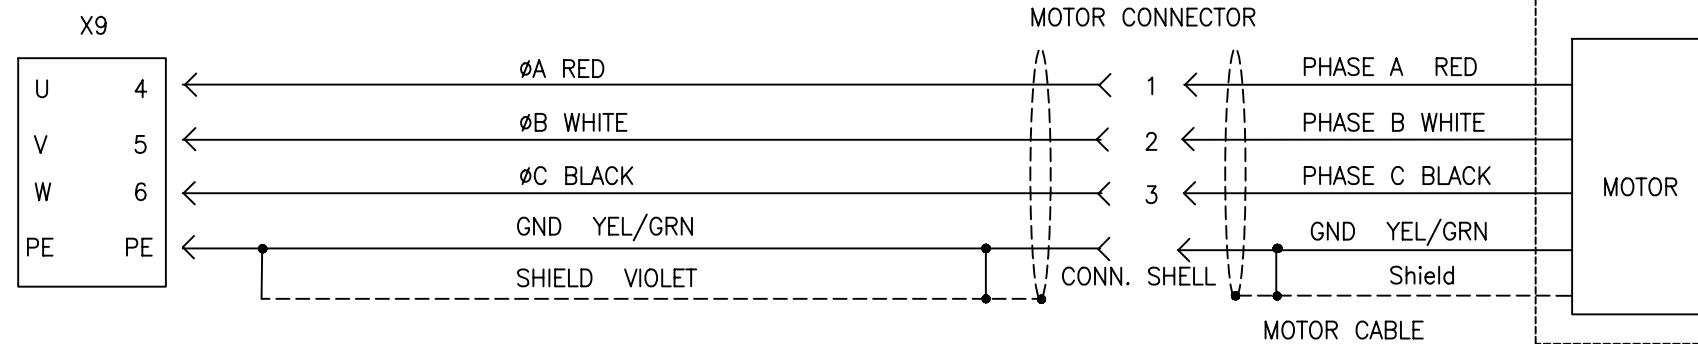
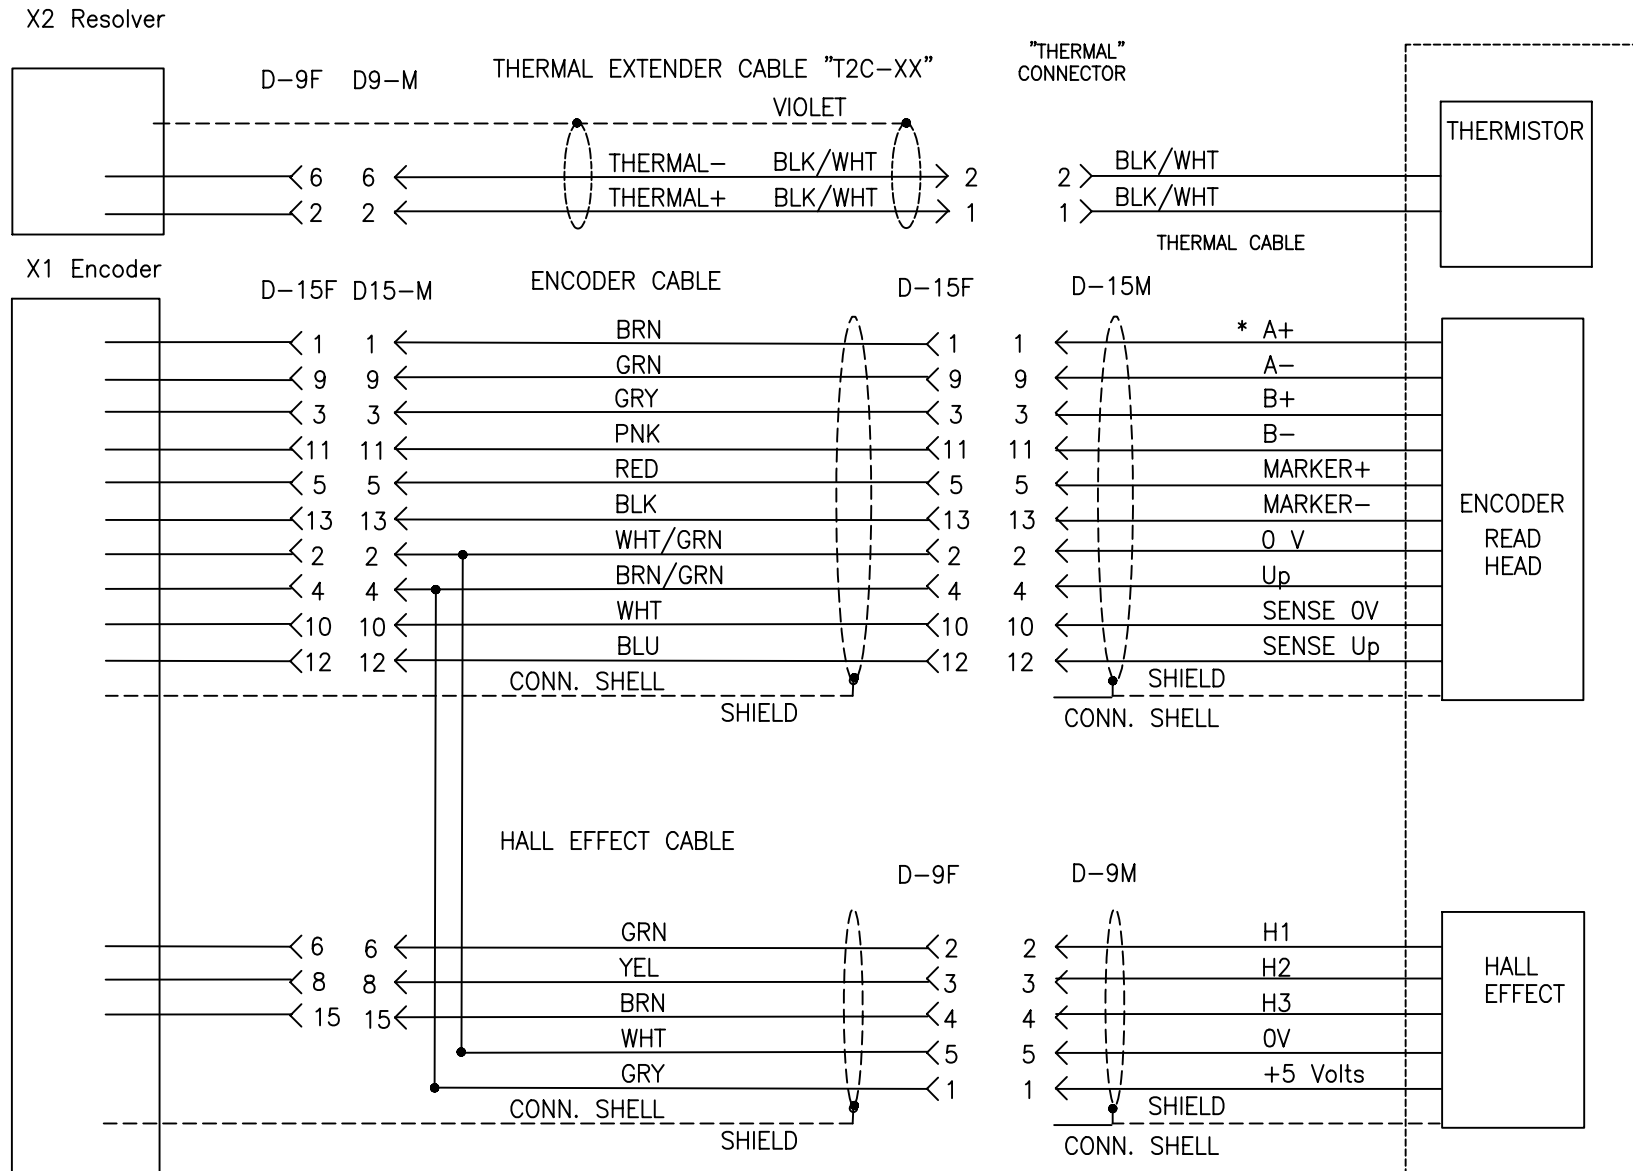
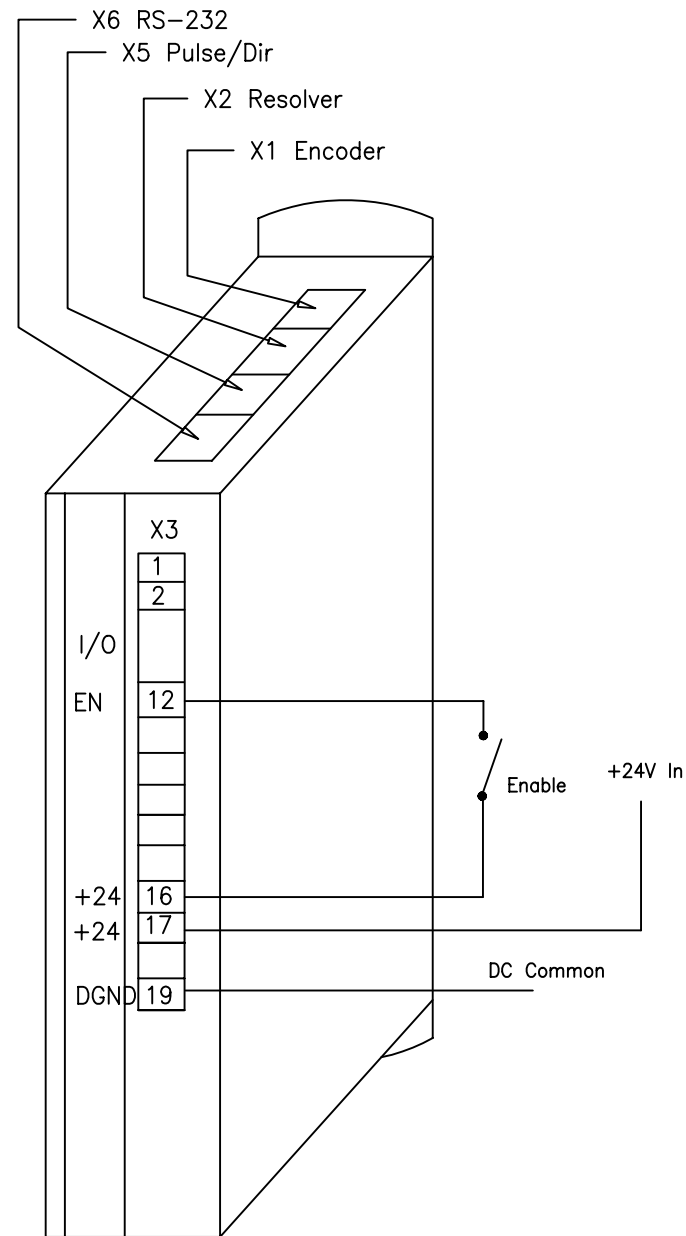


SERVO STAR 300

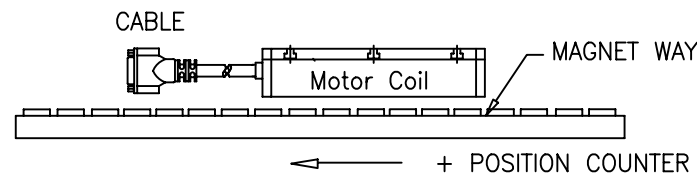

* ENCODER SIGNALS

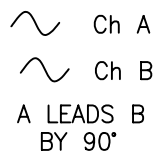

DIRECTION OF MOTOR

THE POSITION COUNTER MUST COUNT POSITIVE WHEN THE COIL ASSEMBLY IS MOVED IN DIRECTION OF THE CABLE EXIT, AS SHOWN TO THE LEFT
 FBTYPE = 5 sine encoder with Halls X1
 MPHASE = 240
 DIR = 1
 HALLDIR = 0

DR. BY	FL	KOLLMORGEN	
CHECKED			
ENG.		SERVO STAR 300	
APPD.		LINEAR SYSTEM WIRING DIAGRAM	
DATE: 7/05/2007		SIZE B	FILE:
		SCALE: NONE	SHEET: 1 of 1