

Kollmorgen Automation Suite

30 Minutes to Motion



Document Edition: V, December 2022

Valid for KAS Software Revision 4.00

Part Number: 959714



For safe and proper use, follow these instructions. Keep for future use.

1 Trademarks and Copyrights

Copyrights

Copyright © 2009-2022 Kollmorgen

Information in this document is subject to change without notice. The software package described in this document is furnished under a license agreement. The software package may be used or copied only in accordance with the terms of the license agreement.

This document is the intellectual property of Kollmorgen and contains proprietary and confidential information. The reproduction, modification, translation or disclosure to third parties of this document (in whole or in part) is strictly prohibited without the prior written permission of Kollmorgen.

Trademarks

- KAS and AKD are registered trademarks of [Kollmorgen](#).
- [Kollmorgen](#) is part of the [Altra Industrial Motion](#) Company.
- EnDat is a registered trademark of Dr. Johannes Heidenhain GmbH
- EtherCAT is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH
- Ethernet/IP is a registered trademark of ODVA, Inc.
- Ethernet/IP Communication Stack: copyright (c) 2009, Rockwell Automation
- HIPERFACE is a registered trademark of Max Stegmann GmbH
- PROFINET is a registered trademark of PROFIBUS and PROFINET International (PI)
- SIMATIC is a registered trademark of SIEMENS AG
- Windows is a registered trademark of Microsoft Corporation
- [PLCopen](#) is an independent association providing efficiency in industrial automation.
- Codemeter is a registered trademark of [WIBU-Systems AG](#).
- SyCon® is a registered trademark of [Hilscher GmbH](#).

Kollmorgen Automation Suite is based on the work of:

- [7-zip](#) (distributed under the terms of the LGPL and the BSD 3-clause licenses - [see terms](#))
- The [C++ Mathematical Expression Library](#) (distributed under [the MIT License](#))
- [curl](#) software library
- [JsonCpp](#) software (distributed under the MIT License - [see terms](#))
- [Mongoose](#) software (distributed under the MIT License - [see terms](#))
- [Qt](#) cross-platform SDK (distributed under the terms of the LGPL3; Qt source is available on KDN)
- [Qwt](#) project (distributed under the terms of the [Qwt License](#))
- [U-Boot](#), a universal boot loader is used by the AKD PDMM and PCMM (distributed under the [terms](#) of the GNU General Public License). The U-Boot source files, copyright notice, and readme are available on the distribution disk that is included with the AKD PDMM and PCMM.
- [Zlib](#) software library

All other product and brand names listed in this document may be trademarks or registered trademarks of their respective owners.

Disclaimer

The information in this document (Version V published on 12/7/2022) is believed to be accurate and reliable at the time of its release. Notwithstanding the foregoing, Kollmorgen assumes no responsibility for any damage or loss resulting from the use of this help, and expressly disclaims any liability or damages for loss of data, loss of use, and property damage of any kind, direct, incidental or consequential, in regard to or arising out of the performance or form of the materials presented herein or in any software programs that accompany this document.

All timing diagrams, whether produced by Kollmorgen or included by courtesy of the PLCopen organization, are provided with accuracy on a best-effort basis with no warranty, explicit or implied, by Kollmorgen. The user releases Kollmorgen from any liability arising out of the use of these timing diagrams.

2 Table of Contents

1 Trademarks and Copyrights	2
2 Table of Contents	3
3 Key Features	4
3.1 KAS IDE	4
3.2 Main Tools	4
4 Install KAS IDE	5
4.1 System Requirements	5
4.2 Download	5
4.3 Installation Procedure	6
4.3.1 User Data	7
5 Exploring KAS Workspace	8
5.1 Windows and Panels Overview	8
5.1.1 Main Window	8
5.1.2 Toolboxes	9
5.1.3 Project Explorer	9
5.1.4 Libraries	10
5.1.4.1 Function Blocks	10
5.1.4.2 Controls	10
5.1.4.3 Properties	10
5.1.5 Variables tab	11
5.1.6 Information and Logs	11
6 Create an Application	12
6.1 Create a Project	12
6.1.1 Add the Controller	13
6.1.2 Configure the Controller	14
6.2 Compile the Project	16
6.3 Start the KAS Simulator	16
6.4 Connect to the Controller	16
6.4.1 Actions to Prevent Compatibility Issues	16
6.5 Download the Project	17
6.5.1 Project Name - Same Name	17
6.5.1.1 Actions	17
6.5.2 Project Name - Different Name	17
6.5.2.1 Actions	18
6.6 Device Control	18
6.7 Operate the Control Panel	18
6.7.1 KAS Simulator Display	18
6.7.2 Exiting Simulation Mode	19
7 Support and Services	20

3 Key Features

Kollmorgen Automation Suite is a Kollmorgen all-in-one solution for designing, developing, and maintaining automation systems. It integrates these three main functionalities of a machine:

- Interface with machine operators (HMI)
- Logic handling of the machine (IEC 61131-3 Soft PLC)
- Precise control of all moving parts (Motion control)

3.1 KAS IDE

KAS comes with an Integrated Development Environment (IDE) used to:

- Create new application project using KAS predefined or custom application templates.
- Define the machine hardware architecture as well as the machine program.
- Develop PLC programs using the IEC 61131-3 programming languages (FBD, FFLD, IL, SFC, and ST) and KAS function block libraries dedicated to motion.
- Centrally manage all IEC 61131-3 variables with the KAS variable dictionary and map logical variables to physical inputs and outputs.
- Set up **HMI panels** and map graphical object to IEC 61131-3 variables.




3.2 Main Tools

Tool	Description
Cam Profile Editor	Used to create or modify a profile definition that describes the position evolution of the cam in a 2D graphical format.
Pipe Network Editor	Graphical tool describing the mechanical System into the logical world based on an one to one translation.
Simulator	Used to develop your application without any hardware available.
Softscope	Used to view in a two-dimensional graph one or more variable's evolution (vertical axis) across the time (horizontal axis).

4 Install KAS IDE

4.1 System Requirements

These are the minimum system requirements for the KAS IDE:

Element	Description
Operating System	Microsoft® Windows® 10 (32- or 64-bit). For optimal performance, verify the operating system is fully updated with the latest patches.
Processor Type	Intel® Pentium® M or equivalent processor at 1.5GHz or greater.
Memory	1GB RAM (for 32-bit) or 2GB RAM (for 64-bit) or greater (which is recommended for complex applications).
Storage	16GB (for 32-bit) or 20GB (for 64-bit) of free space on hard disk.
Display	WXGA+ (1440 x 900) or higher-resolution monitor with 24-bit color. See Note #1.
Connectivity	1 Ethernet port, at either 100MB or 1GB. See Note #2.
Web Browser	A modern web browser is required to access the web server and online help. We recommend Microsoft Edge  , Google Chrome  , Mozilla Firefox  .

NOTE

1. Better results are achieved with OpenGL and 3D cards.
2. A 100Mb network is required in order to allow the IDE to Runtime communication to work in all conditions.
The AKD WorkBench AutoTuner and Scope both require 100Mb of bandwidth to function properly.

TIP

See [Connect Remotely](#) for information about the ports used by the KAS IDE. The ports may need to be opened to support connecting from an external network.

4.2 Download

The latest version of the Kollmorgen Automation Suite is available from KDN.

See www.kollmorgen.com/en-us/developer-network/ to download the latest or older versions.

NOTE

This is a restricted community to which you must be given access based on having purchased KAS. If you do not have access, contact support.

4.3 Installation Procedure

CD/ DVD Information

After inserting the installation CD or DVD, a web browser automatically opens the installation start page.

TIP

If the installation start page does not automatically display, double-click the **Index.html** file.

To start the installation of Kollmorgen Automation Suite, click the corresponding link and confirm that you want to execute **KAS-Setup.exe**.

Follow this procedure to continue the KAS IDE software installation.

IMPORTANT

Installation of the KAS IDE can require you to change your firewall setting. If you do not have sufficient privileges to configure your firewall, you must stop the relevant Windows Service.

Once KAS has finished downloading, complete these installation steps:

1. Double-click the **KAS-Setup.exe** file to run the installation Wizard.

NOTE

A Security Warning dialog displays as a result of security certification. Do not be alarmed.

2. Click **Run** to start the installation Wizard.
3. While the setup is loading, wait for the setup splash screen to vanish after being displayed. The Welcome Wizard displays with the version and build number of the KAS IDE.
4. Click **Next** to continue.
5. Review the License Agreement and click **I Agree** to continue the installation.

NOTE

You must accept the agreement to install KAS.

6. Select the **Development Environment** installation type from the drop-down menu.

Installation Type	Description
Development Environment	This installation is typically used for creating and developing a new application. When you need to install the KAS IDE and the KAS Runtime Simulator, you can select Development Environment as the type of installation.
Custom	You can manually select the specific KAS components to install.

7. Click **Next** to access the destination folder.
8. Accept the recommended default location or Click **Browse** to specify a custom install directory.
9. When finished, click **Install** to continue.

TIP

Kollmorgen strongly recommends accepting the default destination folder under C:\Program Files\Kollmorgen\Kollmorgen Automation Suite\Kollmorgen Automation Suite 4.00.X.X.

10. The software installation begins. Wait until the installation process is complete.
11. Click **Finish**.

TIP

- Adding the **KAS IDE** application as an exception in your firewall settings is recommended to avoid security issues.

4.3.1 User Data

User-generated data such as log files, project sources, field bus configurations, function blocks, etc. are stored in the Windows User directory and are maintained between installations. This applies to files on AKD PDMMs, PCMMs, and Simulator files.

5 Exploring KAS Workspace

This section helps you become familiar with the KAS IDE.

5.1 Windows and Panels Overview


5.1.1 Main Window

The KAS IDE interface provides an all-in-one-window integrated workspace.

The main view in the Integrated Development Environment (IDE) is a Multiple Document Interface (MDI) environment. This provides an easy-to-use and customizable view, including the ability to hide, enlarge, or overlap windows in order to optimize visibility.

The main view is saved when you exit KAS IDE. This ensures that your workspace remains the same each time you open and use the KAS IDE.

The KAS IDE main window contains these items:

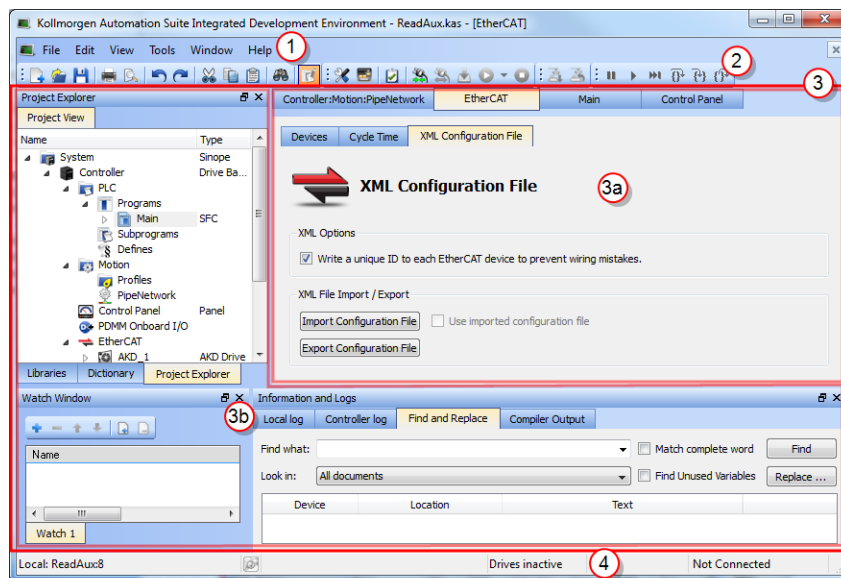

- 1 Menus
- 2 Toolbars
- 3 Workspace

3a - This is a specific area used for the workspace children windows.

3b - Several toolboxes A toolbox is a child window that provides you with some functions to perform specific tasks.

- 4 Status Bar - shows the current state of the target.


5.1.2 Toolboxes

These are the available toolboxes:

- [5.1.3 Project Explorer](#)
- [5.1.4 Libraries](#)
- [5.1.6 Information and Logs](#)


5.1.3 Project Explorer

The Project Explorer toolbox is a window that displays machine application information in a tree-structure representation. This window contains all the items used to design, implement, test, and document the application.

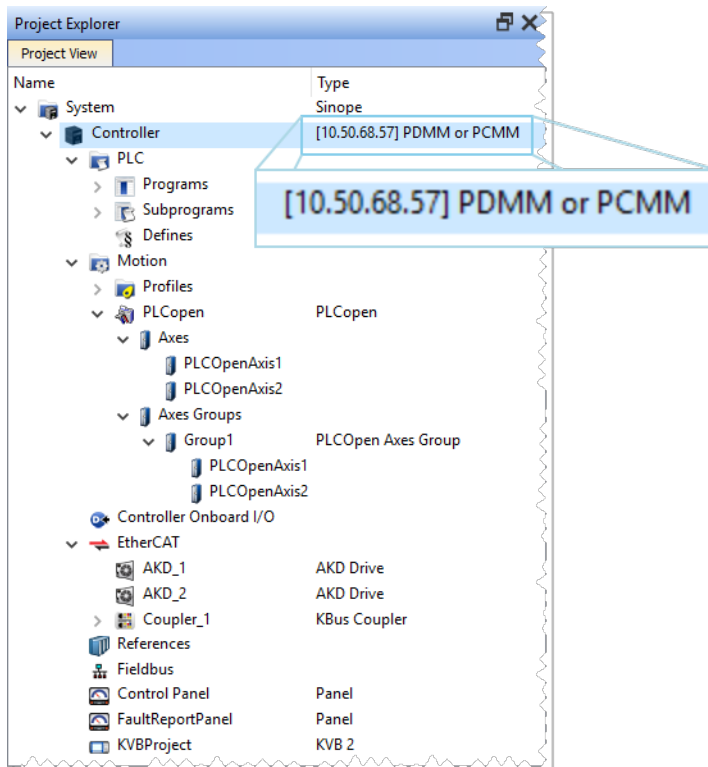

5.1.4 Libraries

This toolbox contains several tabs to access all the functions of the available libraries.

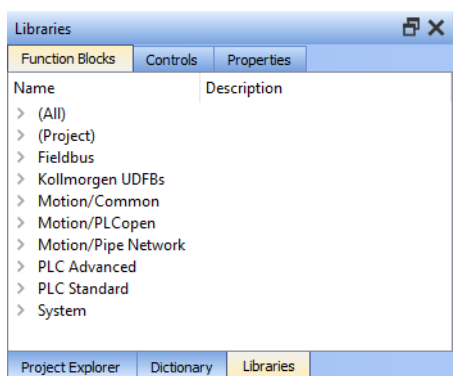

5.1.4.1 Function Blocks

This tab displays all the available libraries shown in a tree-structure representation and grouped by categories. Expand a library to access all its functions. A short description of each function is also available.

- Fieldbus Library
- Kollmorgen UDFBs
- Motion Library - Pipe Network
- Motion Library - PLCopen
- PLC Advanced Libraries
- PLC Standard Libraries
- System Library

5.1.4.2 Controls


This tab displays all the controls available for the HMI design.

5.1.4.3 Properties

This tab displays all the properties of an HMI control.

5.1.5 Variables tab

The Variables tab is used to show all the variables defined in the project. All the variable details are displayed in order to show the variable types, dimensions, attributes, etc.

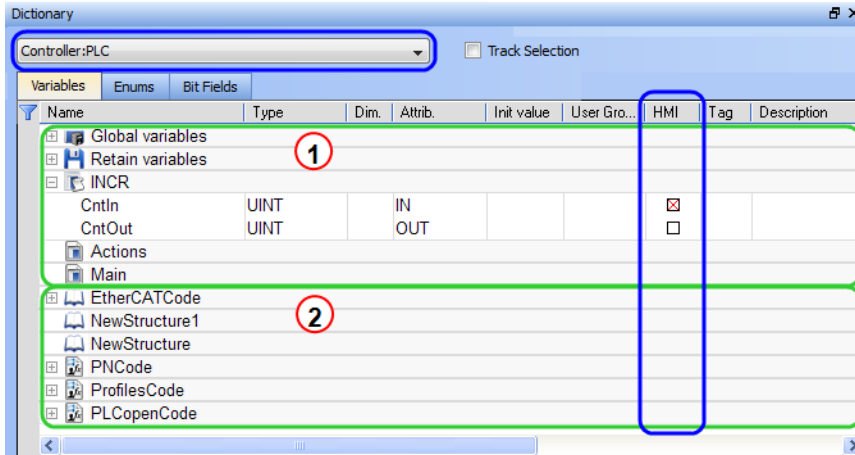

The list of variables is split into two parts:

- 1 - All the Variables at the top.
- 2 - All the Structures at the bottom.

Modify Parameters of a Variable

Mode	Description
One Parameter	Assuming you are in the cell edition mode, double-click on the parameter.
All the parameters are at the same time	Assuming you are in the row edition mode, double-click in any parameter to open the dialog box for variable configuration.

5.1.6 Information and Logs

The Information and Log window is used to identify current state status and can be used to identify operational errors, compilation errors, and also to quickly assist you in finding areas of the workspace or program variables.

This window contains different tabs that provide:

- Log messages (Local or Controller) including Log Messages Settings.
- A system search function.
- A list of breakpoints.
- A state report on the program compiler.

6 Create an Application

This exercise helps you become familiar with KAS application environment. The Control Panel is used to create a simulated motion on two axes.

In this exercise, you will perform these steps:

- "Create a Project" (→ p. 12)
- "Compile the Project" (→ p. 16)
- "Start the KAS Simulator" (→ p. 16)
- "Download the Project" (→ p. 17)
- Start the project using the "Device Control" (→ p. 18) buttons.
- "Operate the Control Panel" (→ p. 18) to observe the functions in the KAS Simulator.

6.1 Create a Project


Step	Description
1	To start your project, you have to add a controller, choose which motion engine your application is based on (Pipe Network or PLCopen), and set the properties of the controller.
2	Add all AKD drives being part of your EtherCAT network and define all their parameters.
3	Add all the IO couplers and slices being part of your EtherCAT network.
4	Configure EtherCAT motion bus by mapping all the devices and setting the cycle time.
5	Create programs with the five programming languages that comply with the IEC 61131-3 standard.
6	Create variables, which can also be arrays or complex structures, and monitor them with the Dictionary, or the variable editor.
7	Create functions and function blocks that can be called from your programs.
8	Use constant definitions to ease the maintenance of your code.
9	Use the functions available in the pre-defined libraries.
10	Create your custom libraries containing your PLC code that you can use afterwards in different projects.
11	Map digital or analog inputs and outputs, that are on the EtherCAT motion bus, to PLC variables.
12	Design motion with pipe blocks in the pipe network or with PLCopen axis.
13	Create Cam Profiles that you can associate to a cam pipe block.
14	Define the number of cycles between successive executions of the PLC programs, and configure the programs priority.
15	Add an HMI Device, design the KVB Panel, and map the variables.

ⓘ IMPORTANT


Each time the project is changed, recompile and download the new version to save the changes on the target.

6.1.1 Add the Controller

1. In the **File** menu, click **New** to start the Controller Creation Wizard.
2. Select the type of controller in the project.

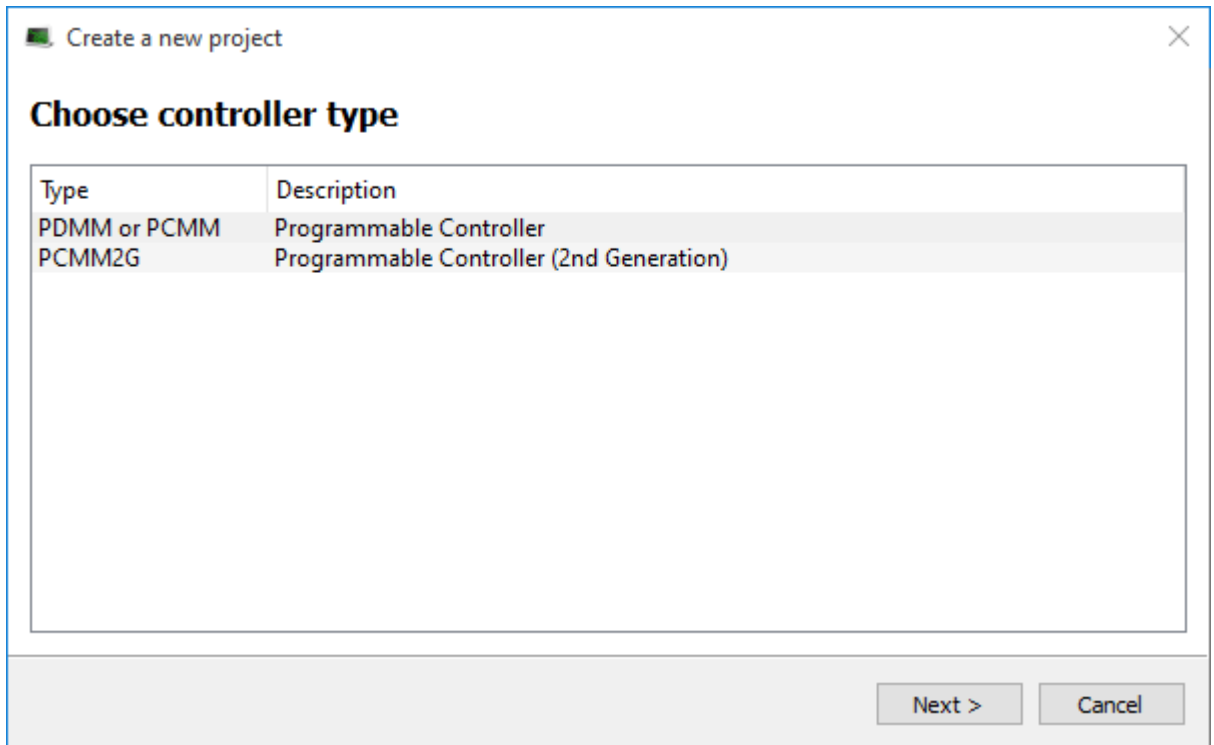


3. Choose the motion engine option and select the application template.

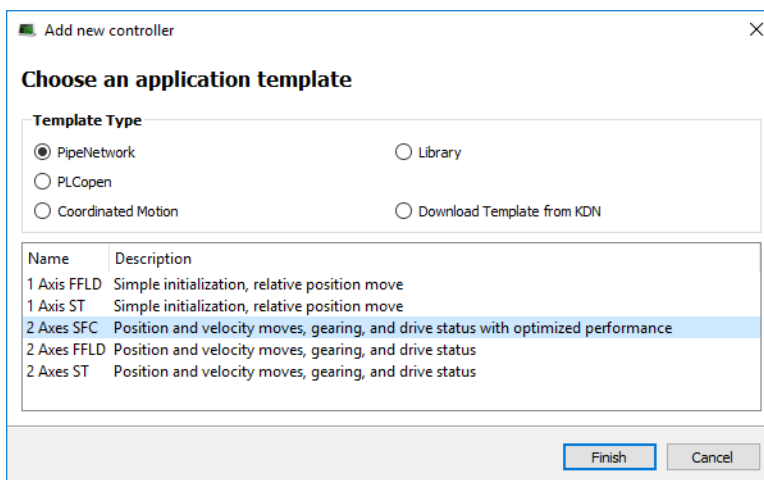

4. Click **Finish**.
5. In the **File** menu, click **Save As**.
6. Define the Project Name and its location.
7. Click **OK**.

6.1.2 Configure the Controller

The controller is configured using the **Controller Properties** dialog box.

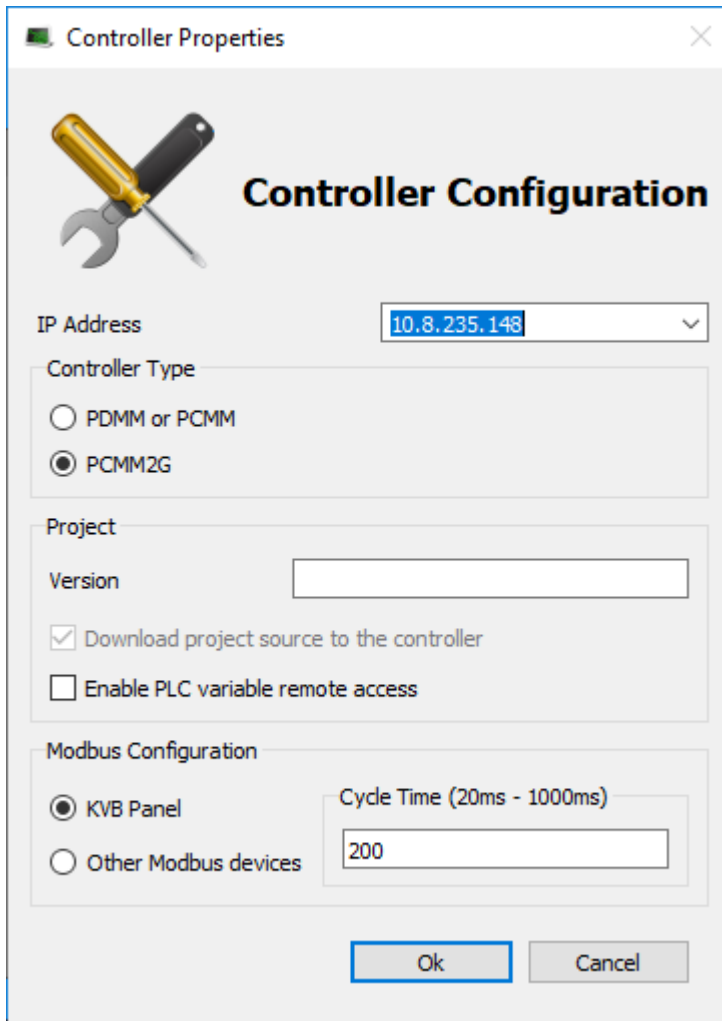

Procedure

1. In the Project Explorer, right-click the new controller to open the menu and click **Properties**.
2. Choose the Controller Type.

⚠ IMPORTANT

The correct Controller Type must be selected before compiling the application. This is because the PLC code generated for the AKD PDMM or PCMM controls and the PCMM2G have different **endianness**.
 AKD PDMM / PCMM files are **big endian**.
 PCMM2G files are **little endian**.
 A warning opens if the application is started with an incompatible controller type.

3. Define the IP Address.
4. Optional: Specify a version number (the string can be composed of any character).

🔧 TIP

Versioning is useful to make improvements to the application and if a version control system is needed.
 The version is saved in your project file.

5. Optional: Choose whether the project's source code should be downloaded to the controller. This is enabled by default and your preference is saved with the project.

Disabling this option means a comparison of source on the controller and in the IDE is not available.

6. Optional: Choose whether PLC variables may be read/written via an HTTP connection. This requires that the source be downloaded to the controller. By default this option is disabled so unauthorized changes may not be made.


TIP

Recompile the project before downloading it to the controller.


7. Select whether Modbus goes to a KVB Panel or is handled by another Modbus device.
8. Set the **Cycle Time** (i.e., the communication update frequency).

NOTE

- If KVB Panel is selected there will be no node to add a Modbus configuration in the Fieldbus Editor.

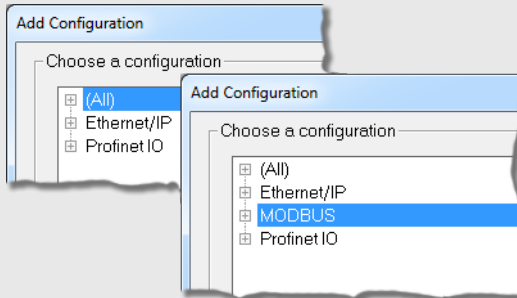


- If Other Modbus devices is selected then the KVB checkbox for Dictionary items will be hidden. Motion configuration will need to be added from the Fieldbus Editor.

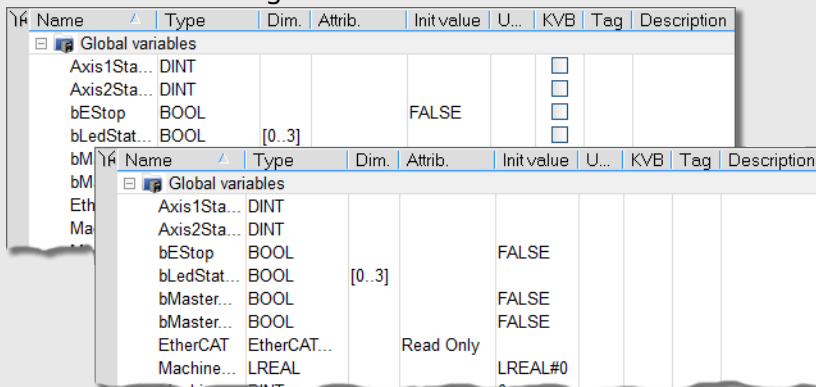

9. Click **OK**.

6.2 Compile the Project

After creating all the elements of your project, you are ready to compile it.

Use the Compile button () on the toolbar (**Ctrl+B** shortcut) to compile the project.

6.3 Start the KAS Simulator

Click the Simulator button in the toolbar to simulate your application.



Once the program opens, start the simulation using the Control Panel.

6.4 Connect to the Controller



NOTE

If a previous download failed (due to the disconnected Ethernet or the controller is turned off), the application cannot be started.

Additionally:

- No version information is shown in the web server or status bar.
- The Start, Cold Start, and Download buttons are not available on the web server.
- If the AKD PDMM or PCMM tries to auto-start, an E24 error is flashed on the 7-segment display.
Review the Controller logs for more information.

Verify the Simulated device mode is active (click the  button).

Click the **Connect Device** button () to establish the connection with the target controller.

6.4.1 Actions to Prevent Compatibility Issues

The software versions of the KAS IDE and the KAS Runtime have to match to avoid compatibility issues.



TIP

The software versions of the KAS IDE and the KAS Runtime are also available in the local log messages (the level for this message is INFO).

See "[Information and Logs](#)" ([→ p. 11](#)) for more information.

When another KAS IDE is already connected to the controller, a warning opens and the connection is discarded to prevent any conflict.

6.5 Download the Project


Click the **Compile and Download** () button (**Ctrl + F7**) or the **Download** () button. The application is compiled and downloaded or just downloaded to the controller.

An alert appears if:

- An attempt to Compile and Download is made without a connection to a controller.
- There is not sufficient space on the controller for the application.
 - Clearing the User Data is one method to create more space on a AKD PDMM or PCMM.
- In the **Controller Properties** dialog box, if the **Download Project Source in the controller** option is:
 - **Enabled** - the source code is copied to the controller. See "[Configure the Controller](#)" (→ p. 14).
 - **Disabled** - and the controller has project source loaded, a message appears.
 - The message is different based on whether the current project and the project on the controller have the same name or not.

6.5.1 Project Name - Same Name

If the Project Name is the same, the message is:

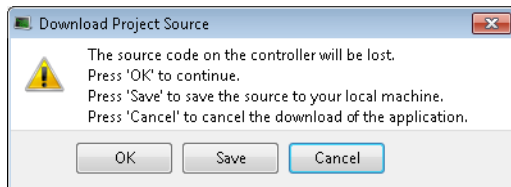


6.5.1.1 Actions

Click either:

- **OK:** Source on controller is deleted.
- **Save:** Source on controller is overwritten and is saved to "My Documents".
 - If that source file already exists in My Documents, a prompt appears to rename the source file, overwrite that file or not.
 - If the file is not renamed or overwritten, the download to the controller is canceled.
- **Cancel:** Download is stopped.

6.5.2 Project Name - Different Name

If the Project Name is different, the message is:

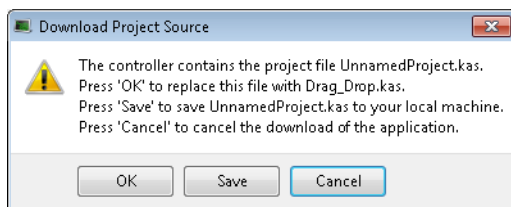

6.5.2.1 Actions

Click either:

- **OK:** Source on the controller is replaced.
- **Save:** Source on the controller is saved to "My Documents".
- **Cancel:** Download is stopped.

NOTE

The versions between the KAS IDE and the KAS Runtime must be the same to debug the application.



IMPORTANT

If the IDE version differs from the runtime after compiling an application, the function blocks defined in the IDE and those implemented in the virtual machine of the runtime can be different. To prevent this potential mismatch, compile and download the application again.

TIP

The project's source code can be downloaded to store the project.

6.6 Device Control


Start / stop the device with the buttons  and .

6.7 Operate the Control Panel

The Example program has a default control panel built-in to make it easy to start an application.

Use this procedure to operate the control panel:


1. Double-click on **Control Panel** in the Project Explorer to open the form

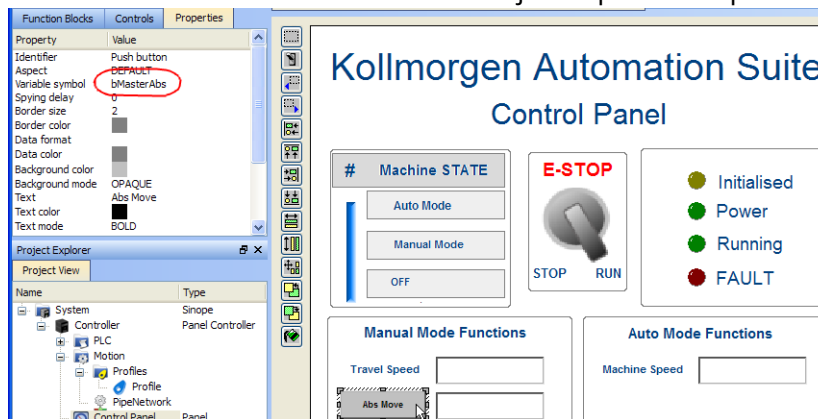

2. Start by moving the vertical slider bar to select the Machine STATE as **Manual Mode**.
3. In the Manual Mode Functions area, double-click the text box for the Travel Speed.
4. Enter the numeric value for the Travel Speed and press Enter.

6.7.1 KAS Simulator Display

The KAS Simulator displays the status and position of the axes. It also displays the log messages.

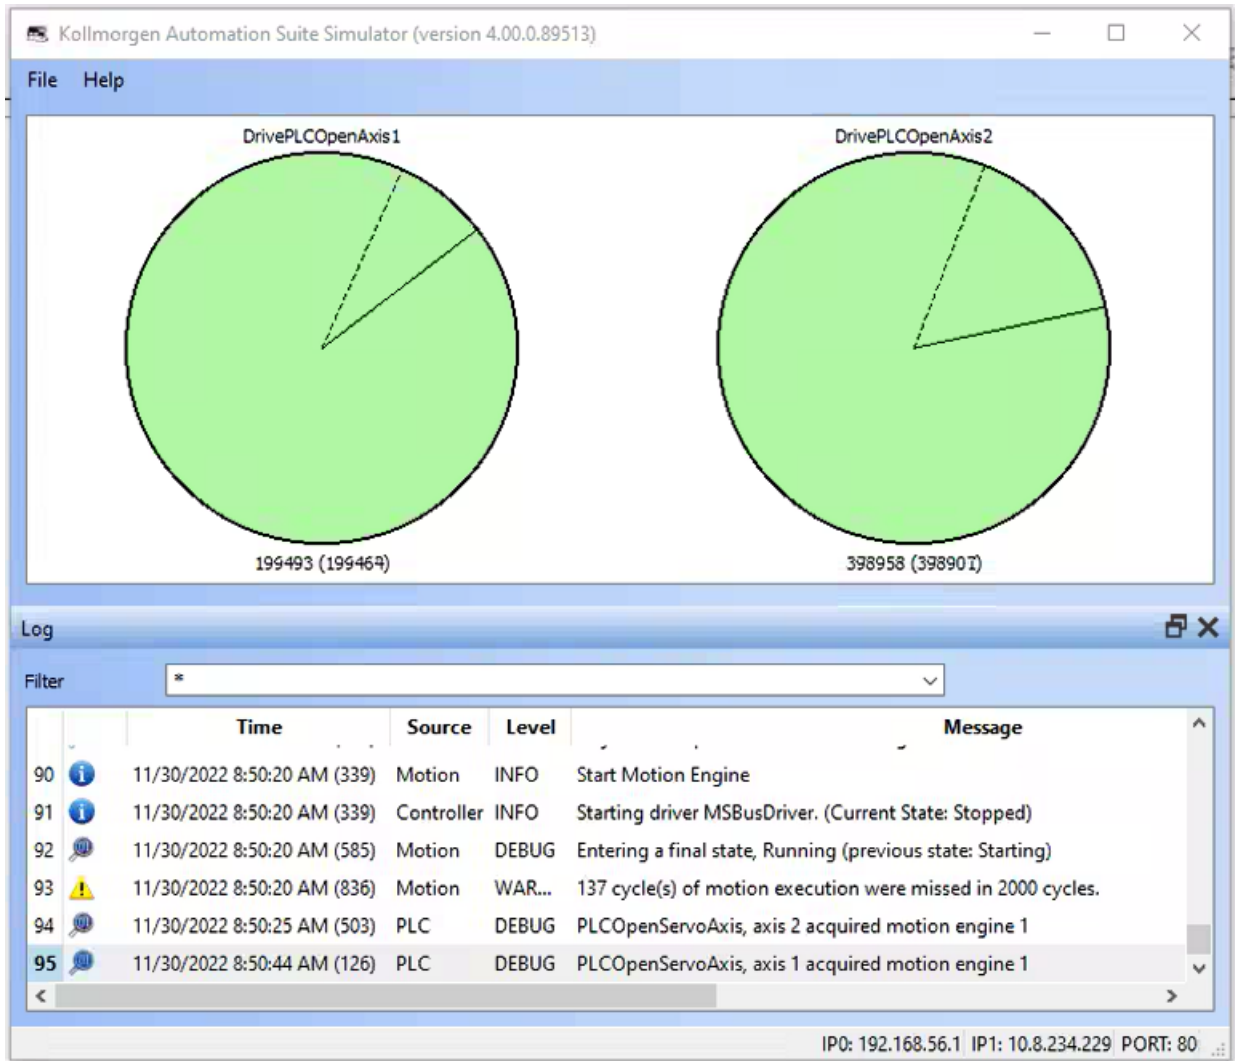

You can continue to use the Control Panel to:

- Experiment with the controls and observe the simulated output.
- Perform an absolute move by entering a position in the text box.
- Perform a relative move.

6.7.2 Exiting Simulation Mode

To exit Simulation mode, do as follows:

1. Click the **Stop Device** button .
2. Click the **Disconnect Device** button .

NOTE

For additional information about Kollmorgen Automation Suite, see this documentation:

- Getting Started
- User Manual
- Technical Reference - PLC Library
- Technical Reference - Motion Library
- Online Help

7 Support and Services

About KOLLMORGEN

Kollmorgen is a leading provider of motion systems and components for machine builders. Through world-class knowledge in motion, industry-leading quality and deep expertise in linking and integrating standard and custom products, Kollmorgen delivers breakthrough solutions that are unmatched in performance, reliability and ease-of-use, giving machine builders an irrefutable marketplace advantage.



Join the [Kollmorgen Developer Network](#) for product support. Ask the community questions, search the knowledge base for answers, get downloads, and suggest improvements.

North America
KOLLMORGEN
201 West Rock Road
Radford, VA 24141, USA

Web: www.kollmorgen.com
Mail: support@kollmorgen.com
Tel.: +1 - 540 - 633 - 3545
Fax: +1 - 540 - 639 - 4162

Europe
KOLLMORGEN Europe GmbH
Pempelfurtstr. 1
40880 Ratingen, Germany

Web: www.kollmorgen.com
Mail: technik@kollmorgen.com
Tel.: +49 - 2102 - 9394 - 0
Fax: +49 - 2102 - 9394 - 3155

South America
KOLLMORGEN
Avenida João Paulo Ablas, 2970
Jardim da Glória, Cotia - SP
CEP 06711-250, Brazil

Web: www.kollmorgen.com
Mail: contato@kollmorgen.com
Tel.: +55 11 4615-6300

China and SEA
KOLLMORGEN
Room 302, Building 5, Lihpao Plaza,
88 Shenbin Road, Minhang District,
Shanghai, China.

Web: www.kollmorgen.cn
Mail: sales.china@kollmorgen.com
Tel.: +86 - 400 668 2802
Fax: +86 - 21 6248 5367